 
 


Assembly Instructions

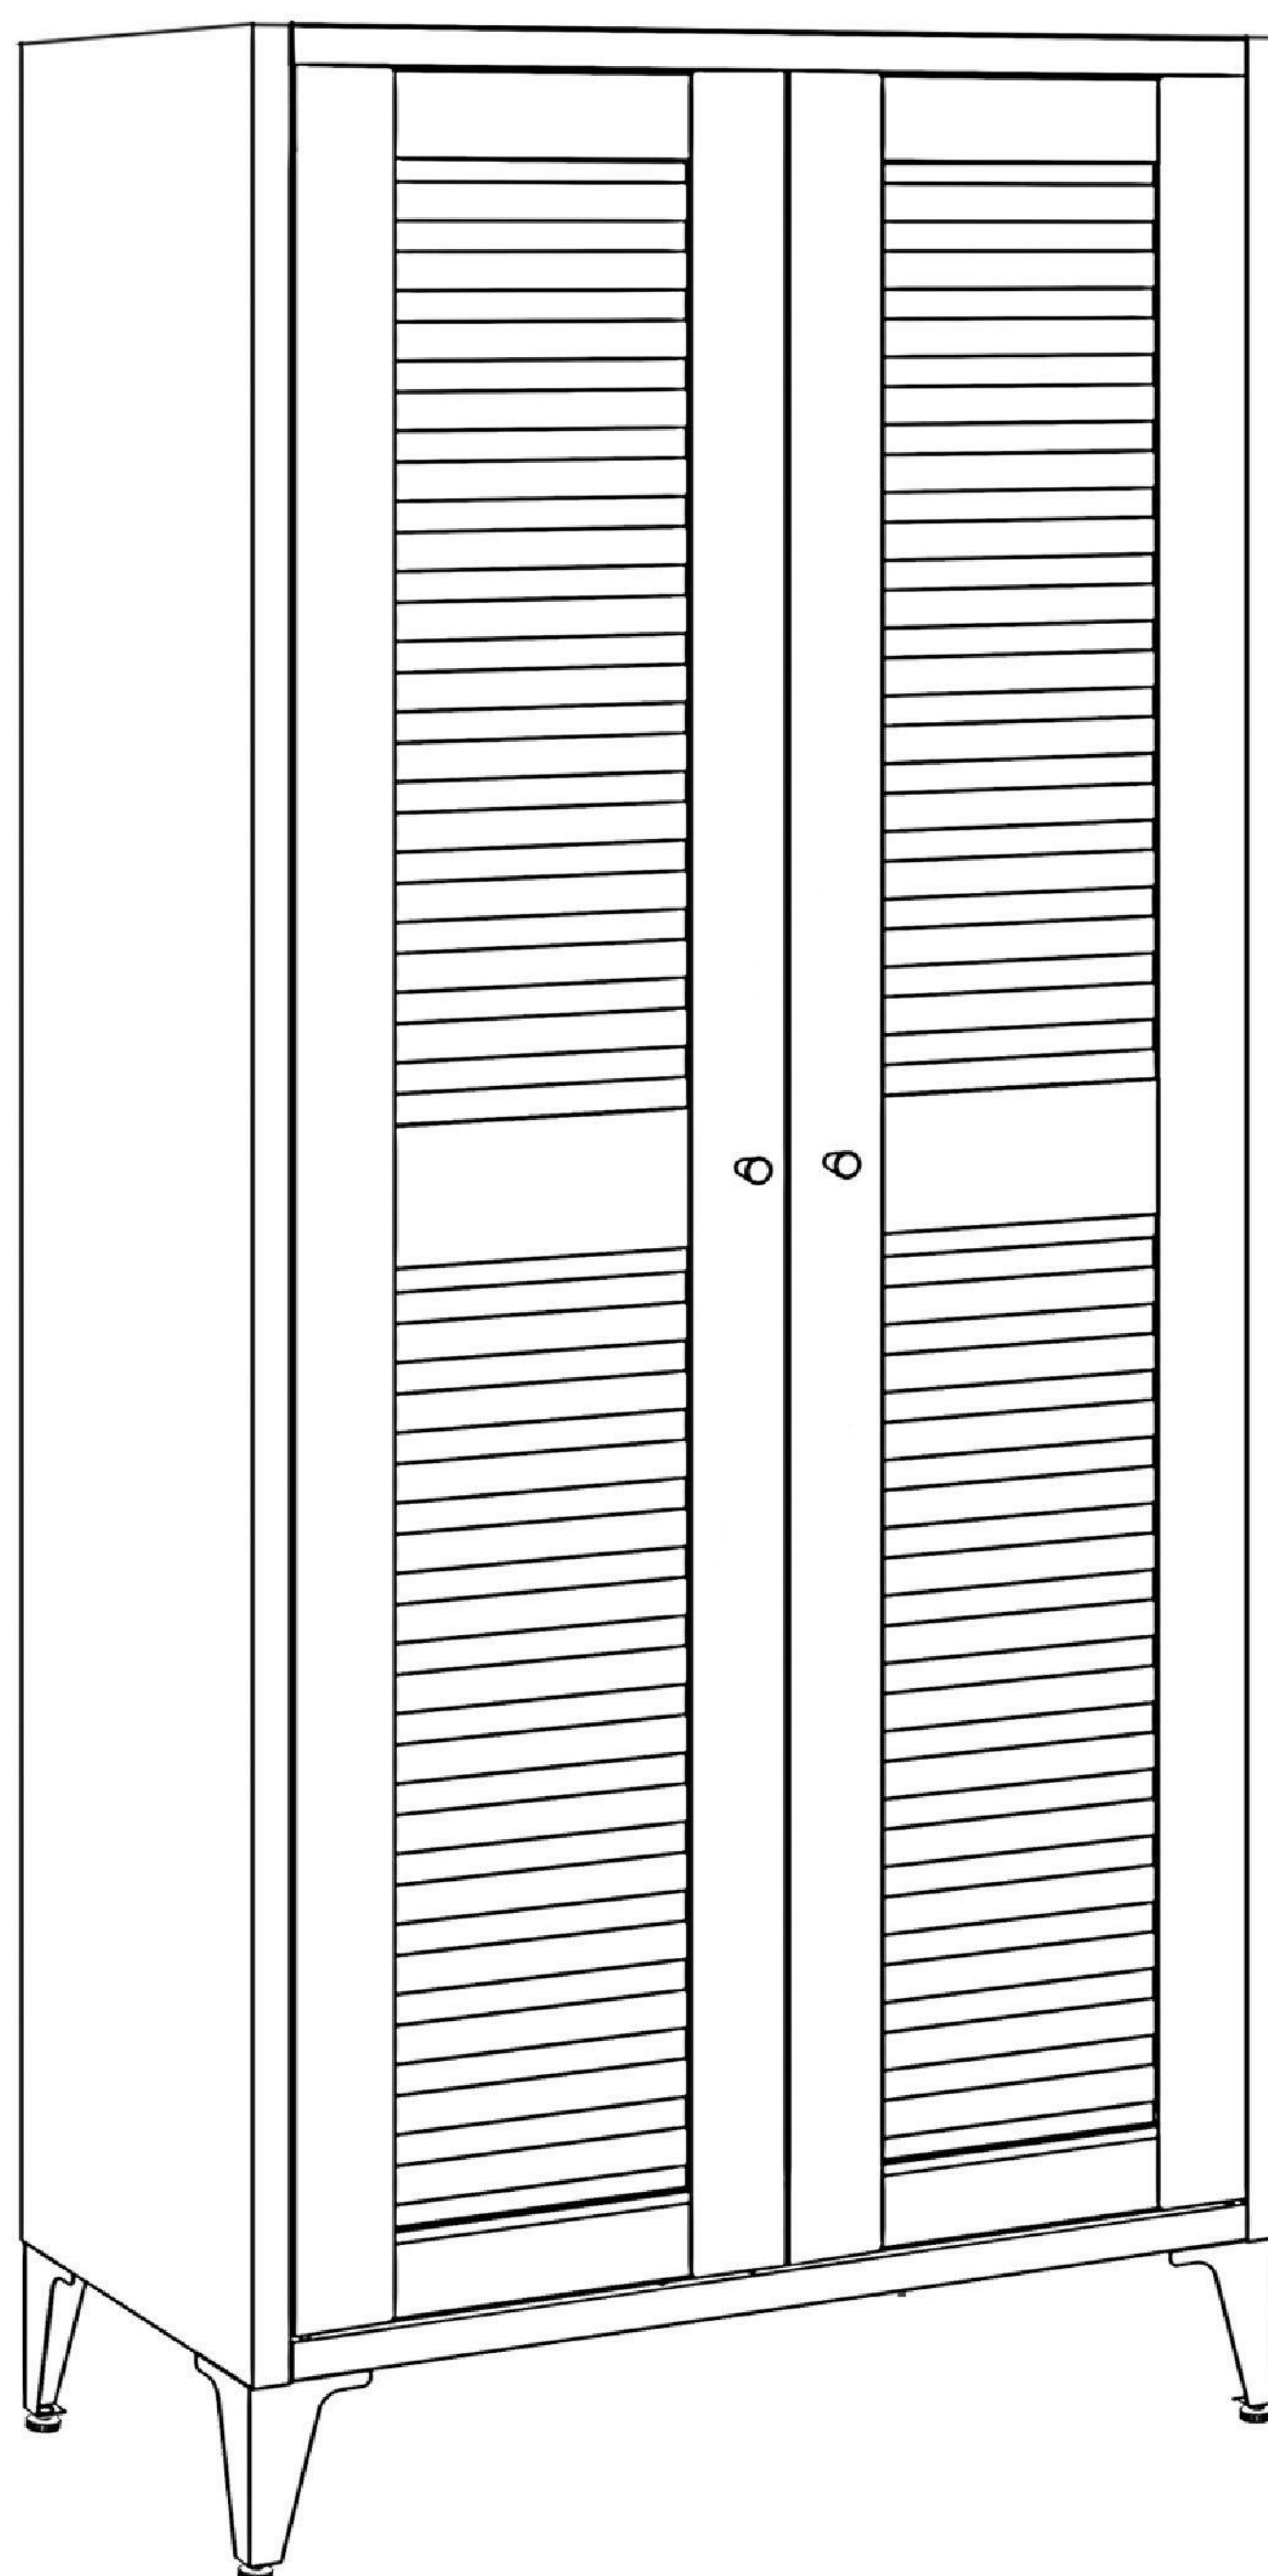

 
 
 
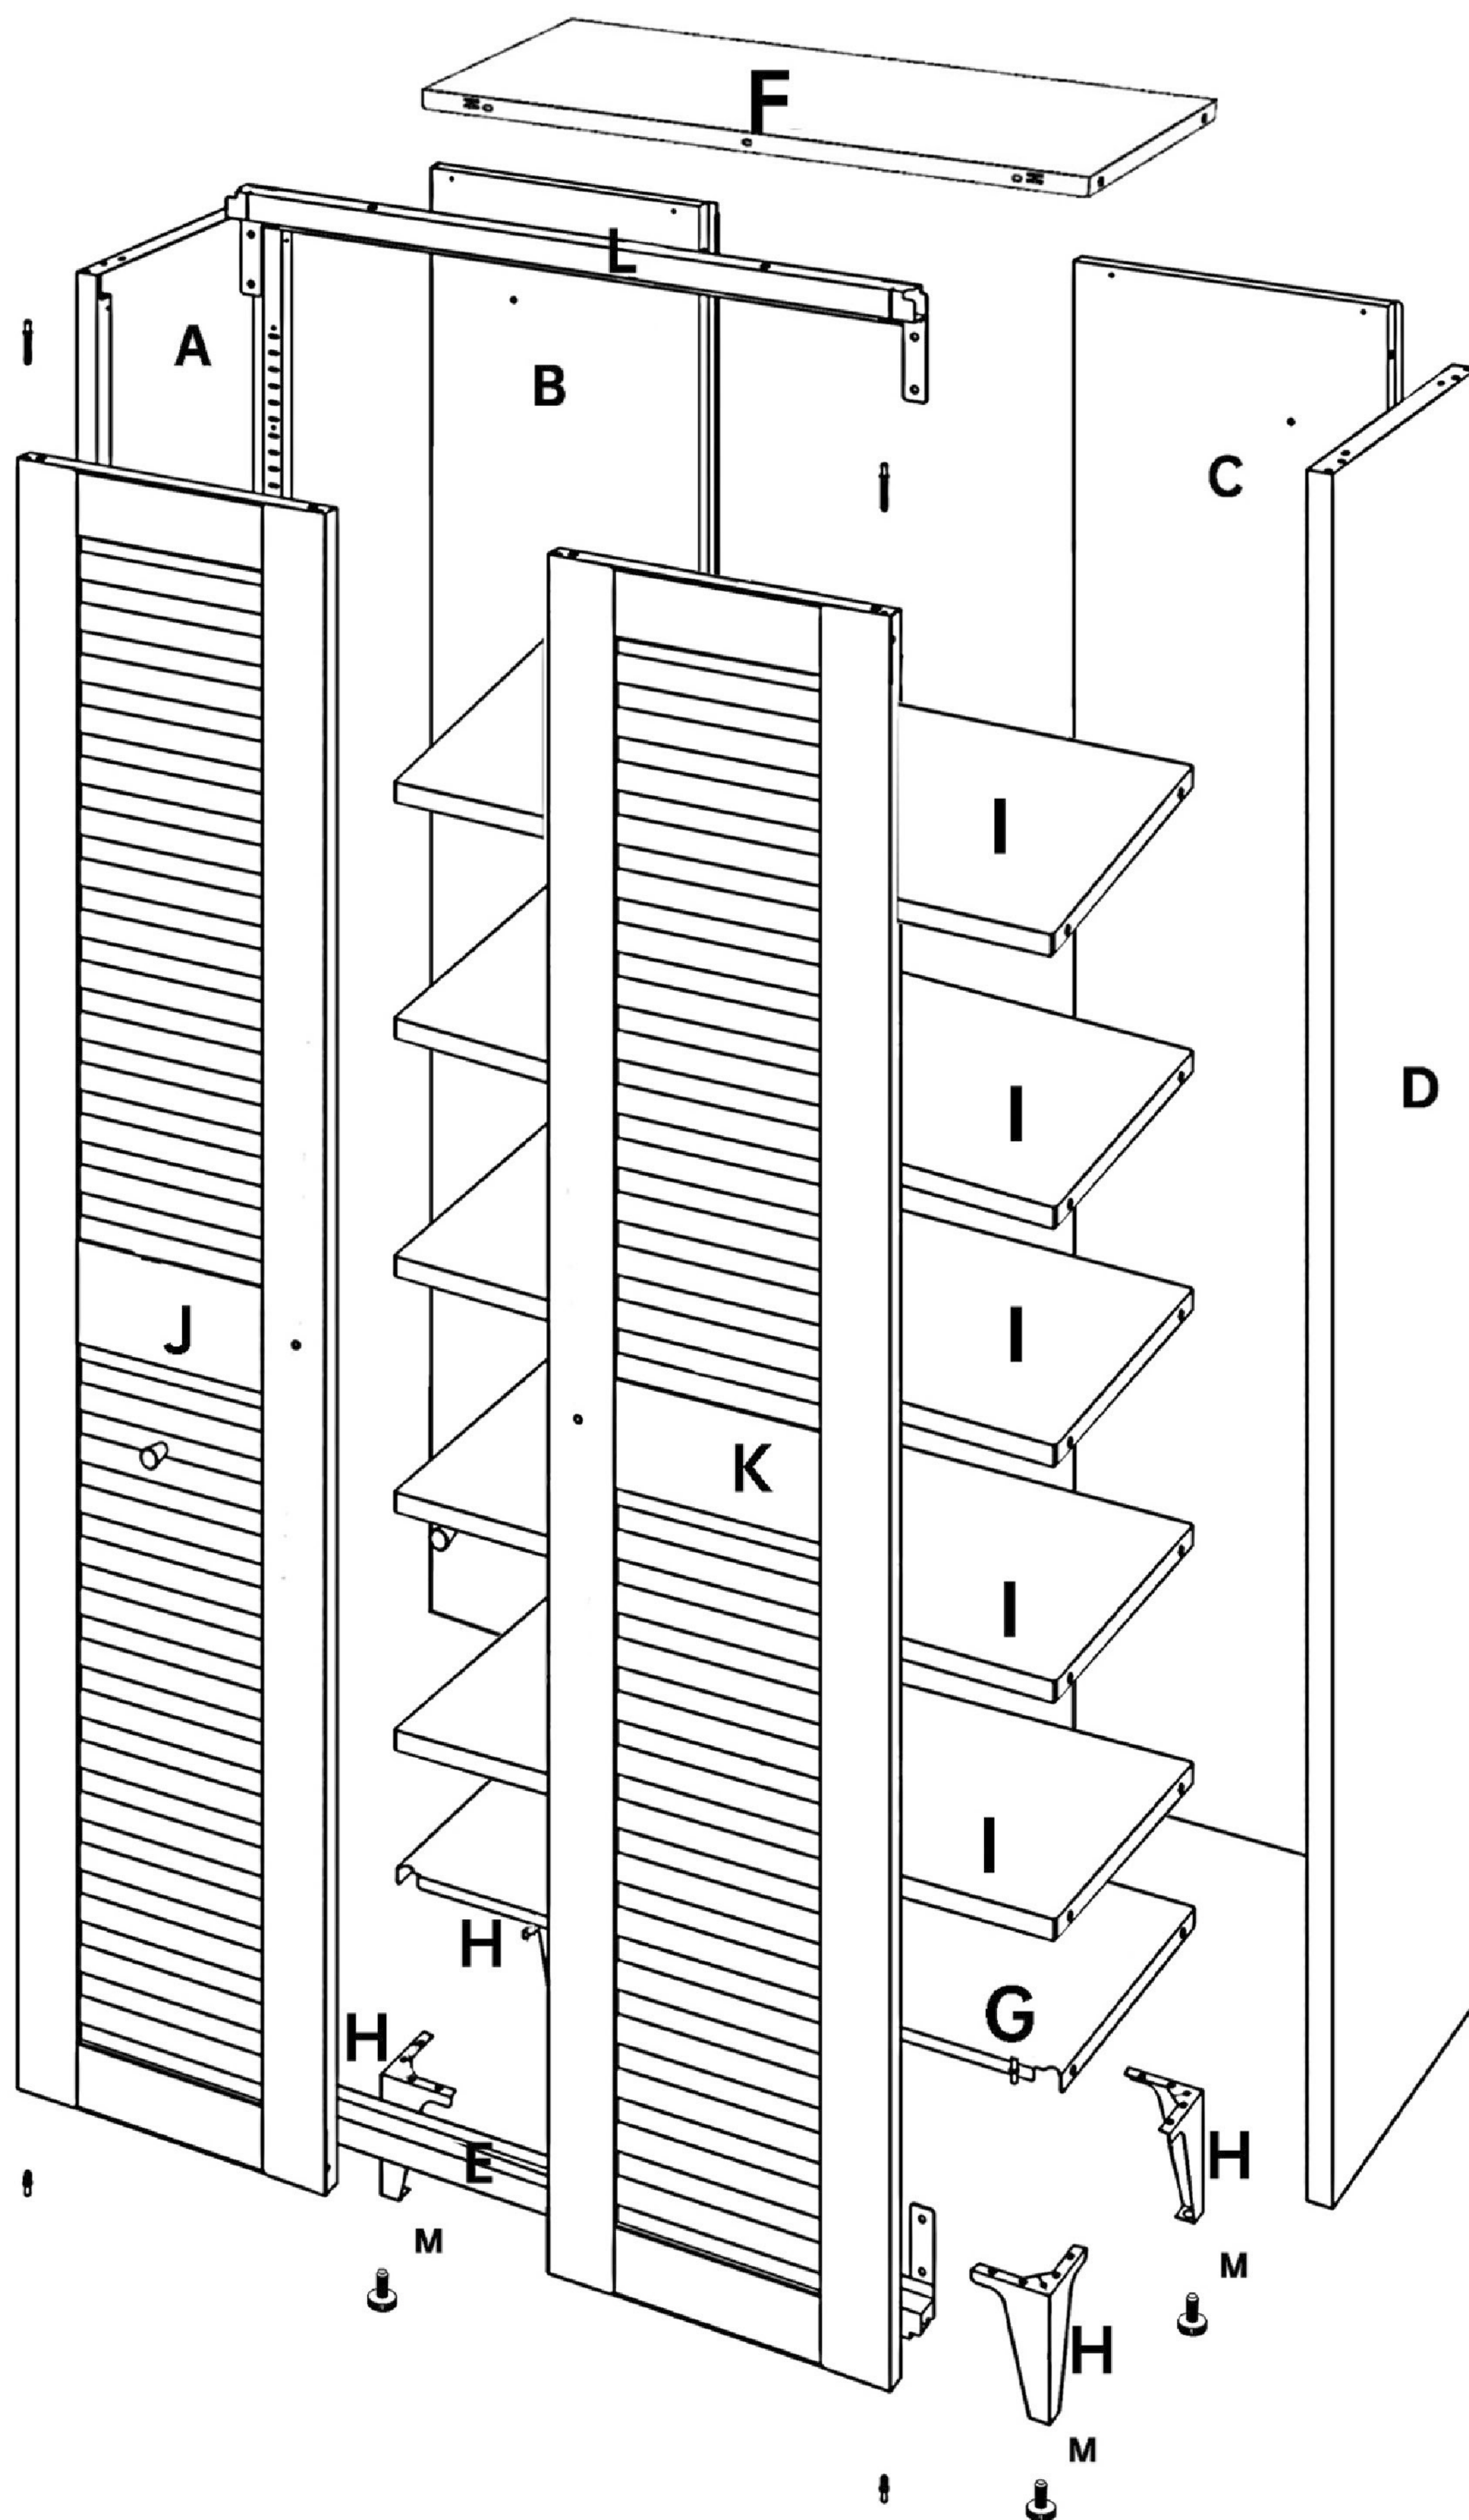 


CAUTION





An assistant is required

CUSTOMER FIRST, SERVICE FOREMOST!
Questions? Issues?
CONTACT US
REPLY WITHIN 24 HOURS IN BUSINESS DAYS






Accessories

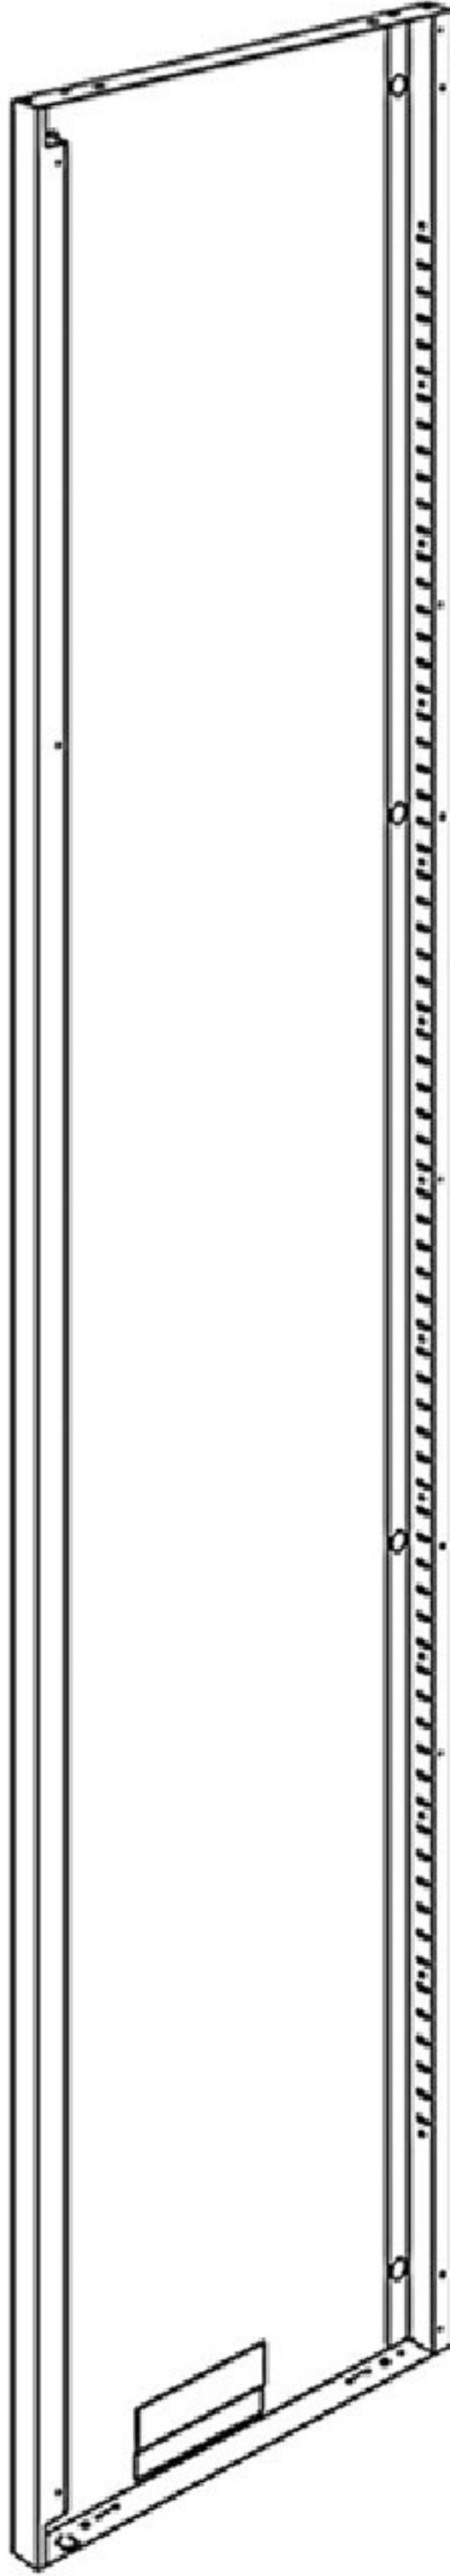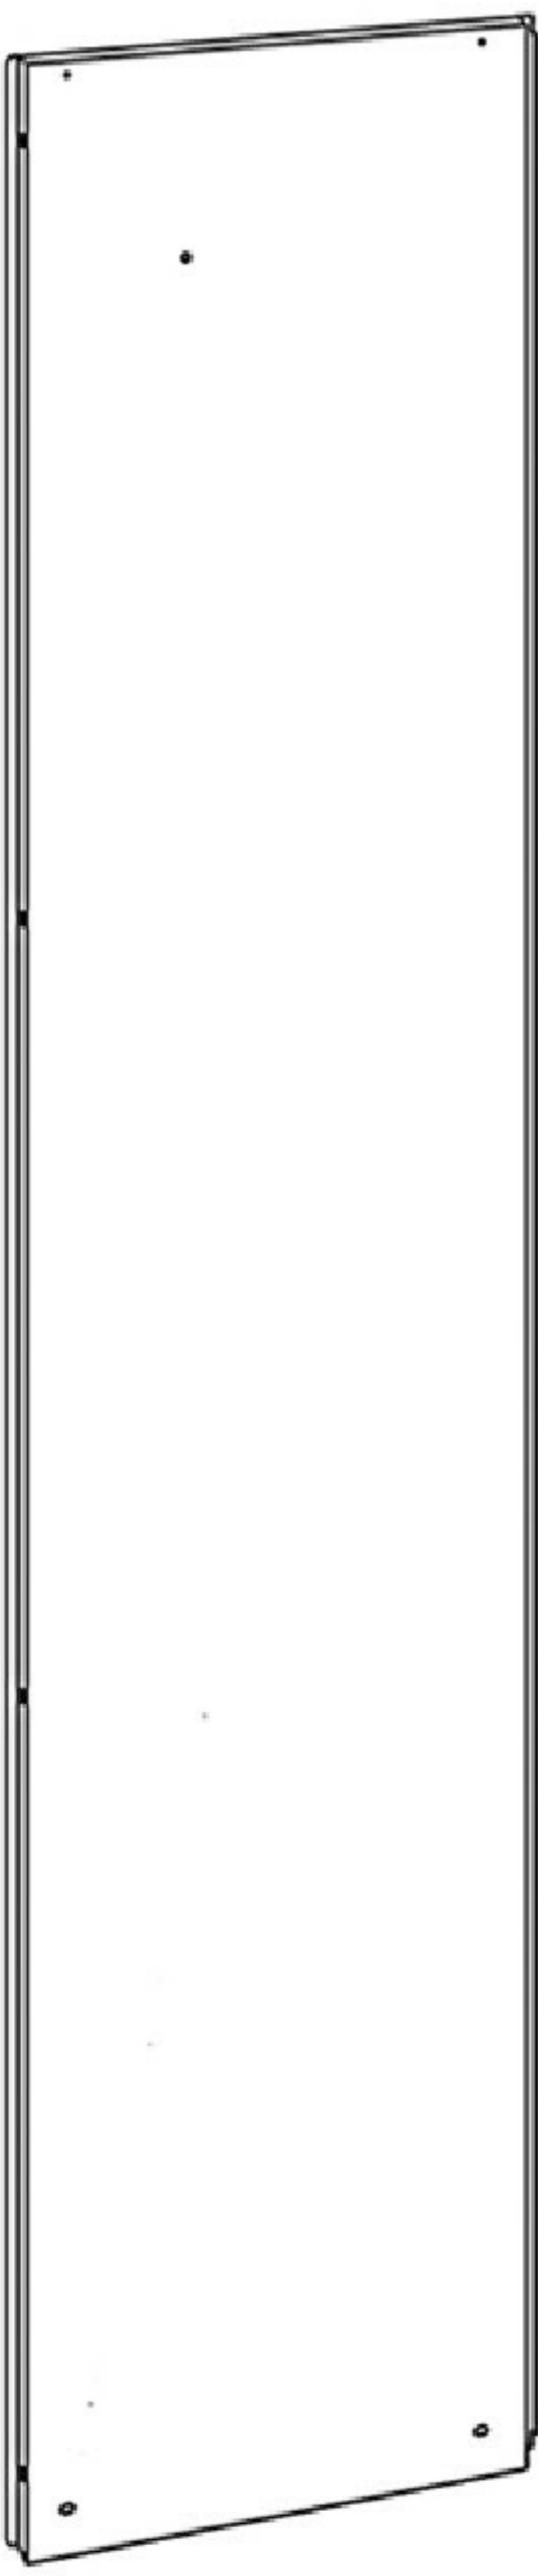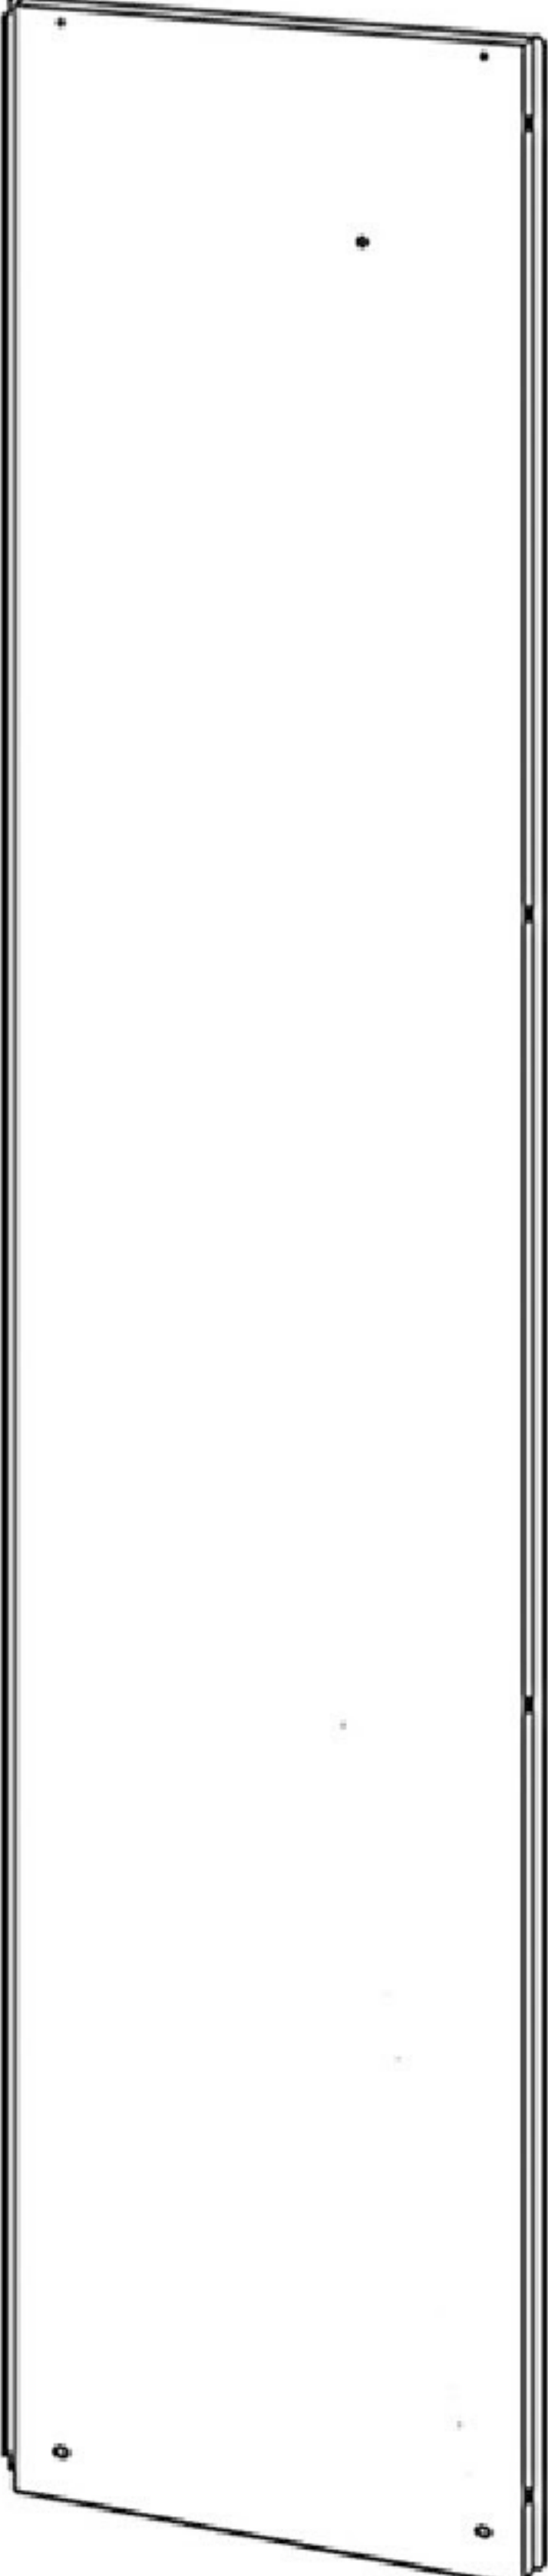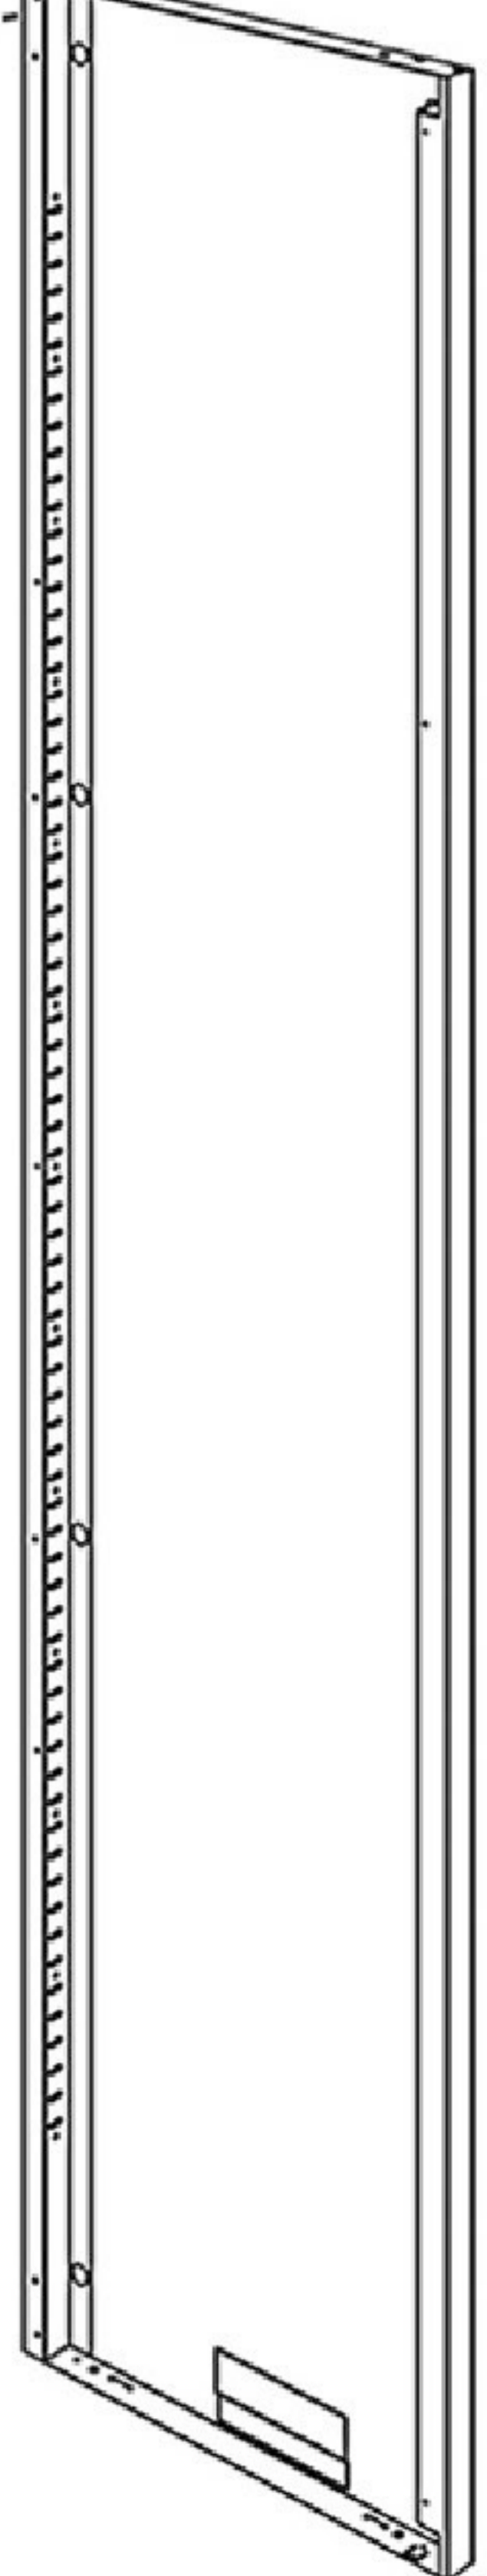A-Left Side Panel	1PC	B-Left Back Panel	1PC
 A vertical rectangular panel with a textured surface. A circular inset shows a close-up of the top corner joint, highlighting the internal structure and a small circular feature.		 A vertical rectangular panel with a smooth surface. A circular inset shows a close-up of the top corner joint, highlighting the internal structure and a small circular feature.	
C-Right Back Panel	1PC	D-Right Side Panel	1PC
 A vertical rectangular panel with a smooth surface. A circular inset shows a close-up of the top corner joint, highlighting the internal structure and a small circular feature.		 A vertical rectangular panel with a textured surface. A circular inset shows a close-up of the top corner joint, highlighting the internal structure and a small circular feature.	







 
 
 
 
Accessories

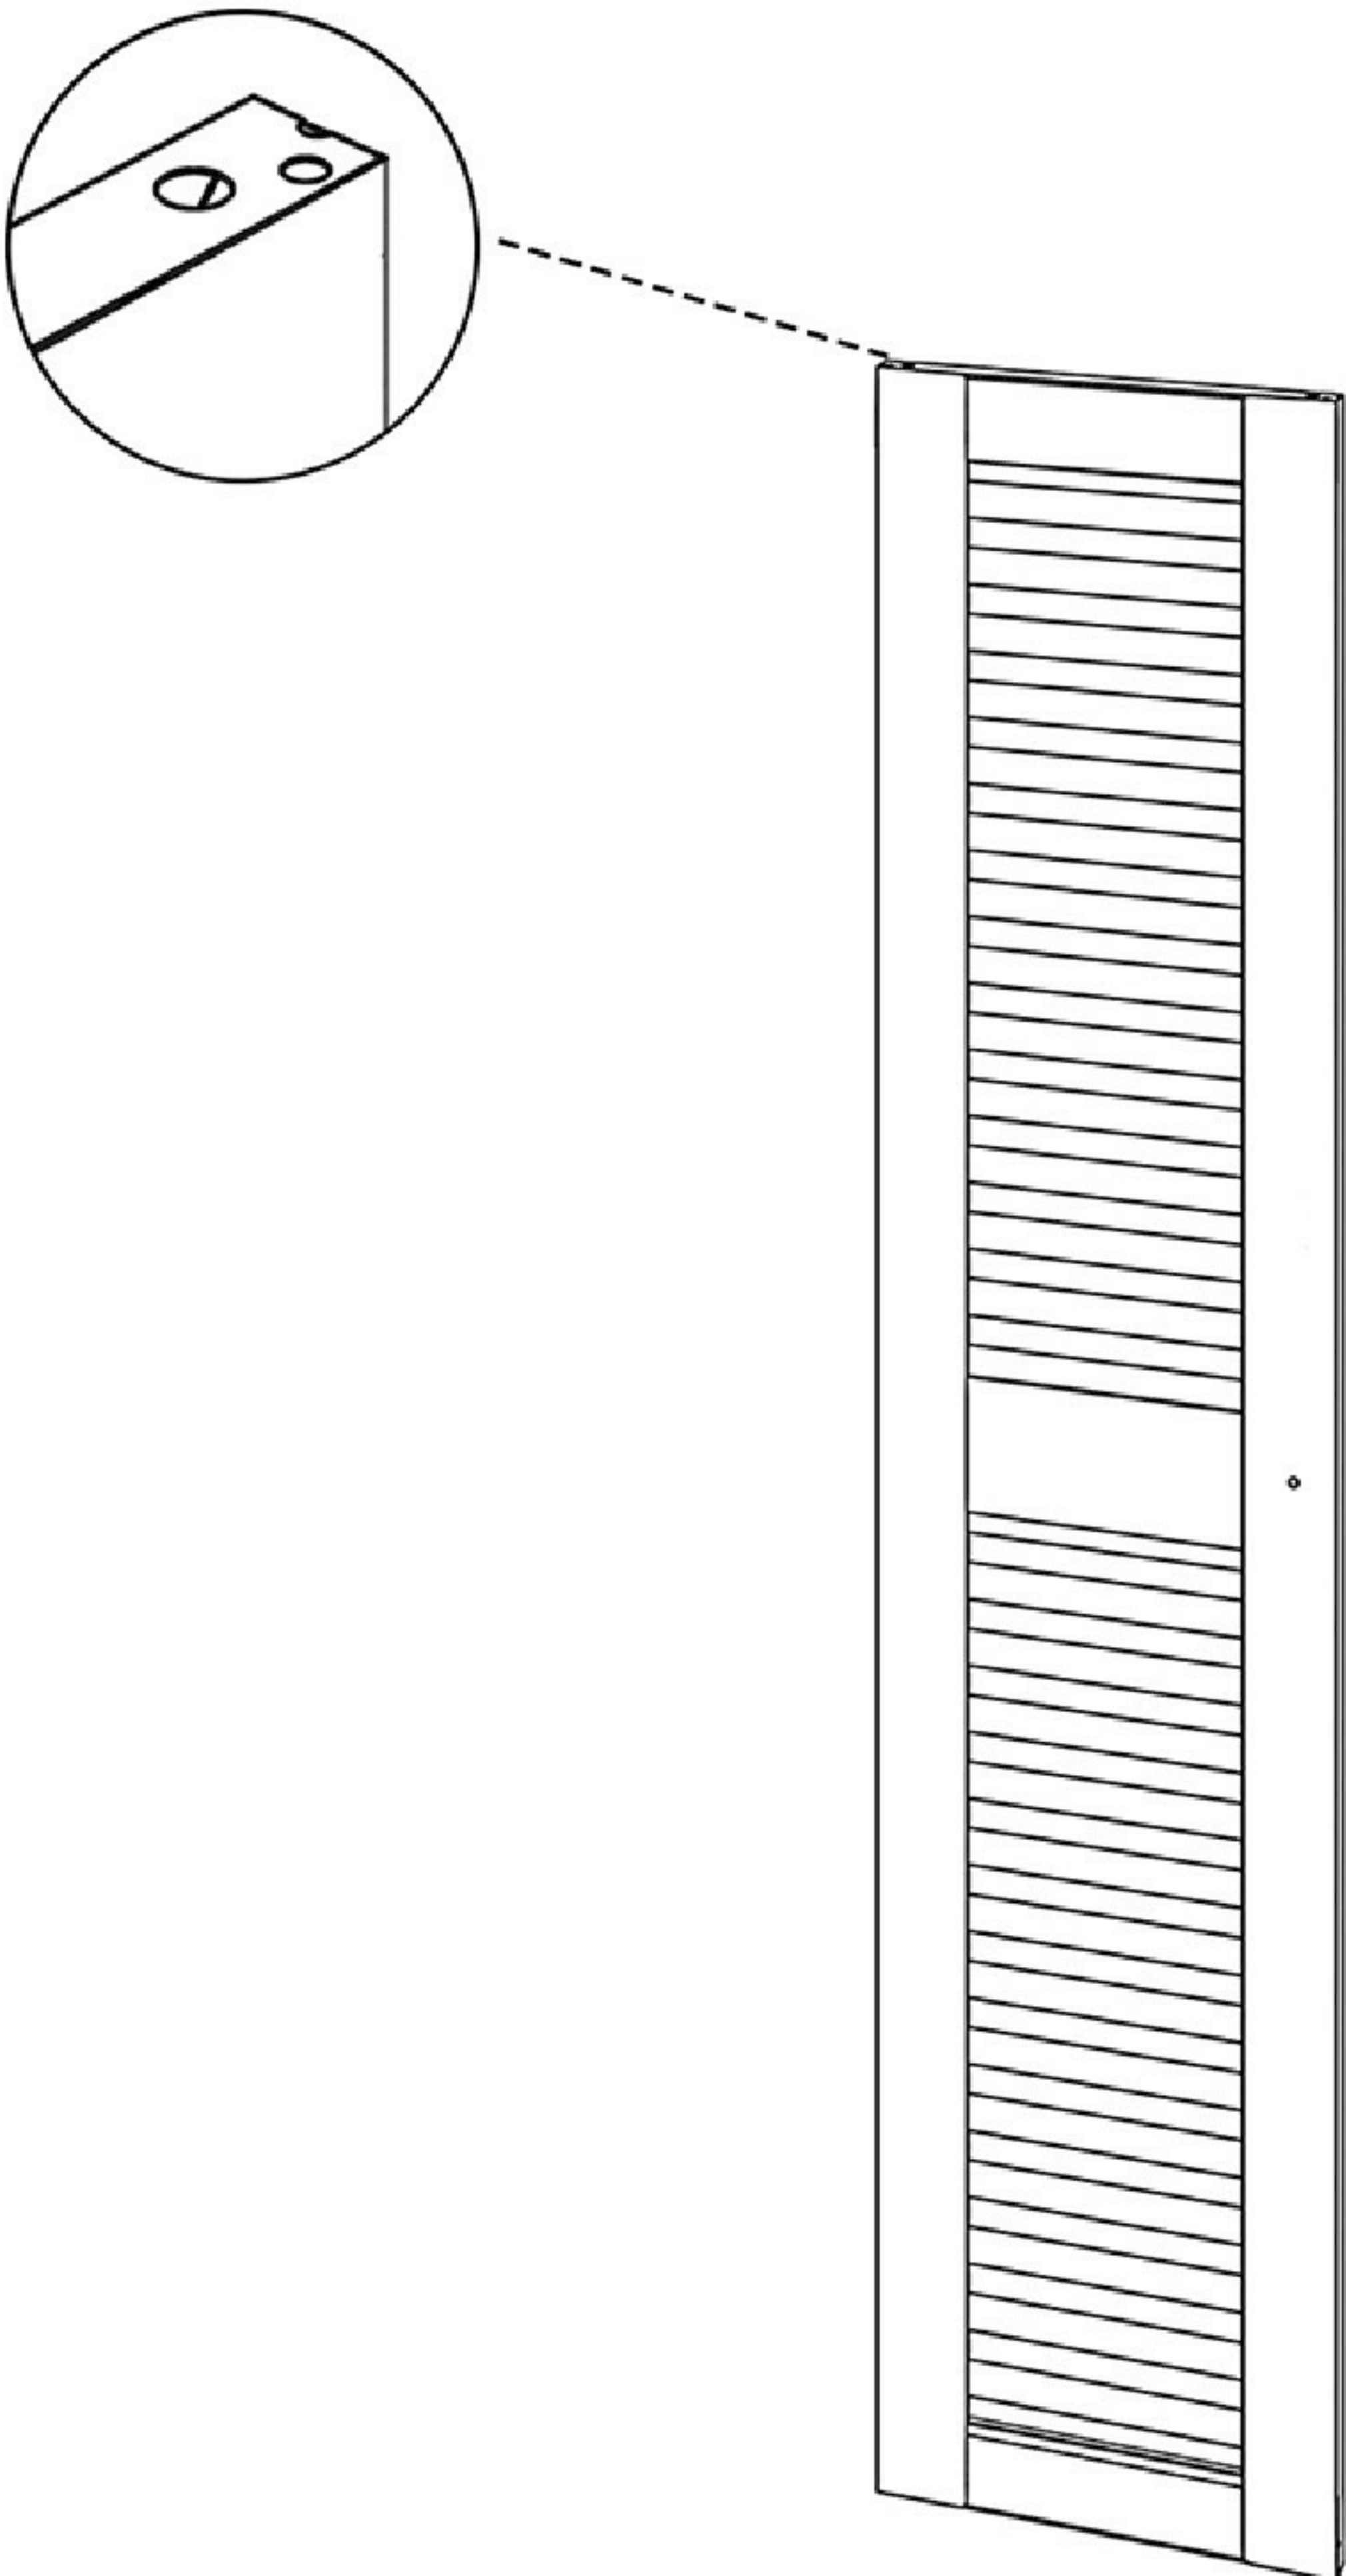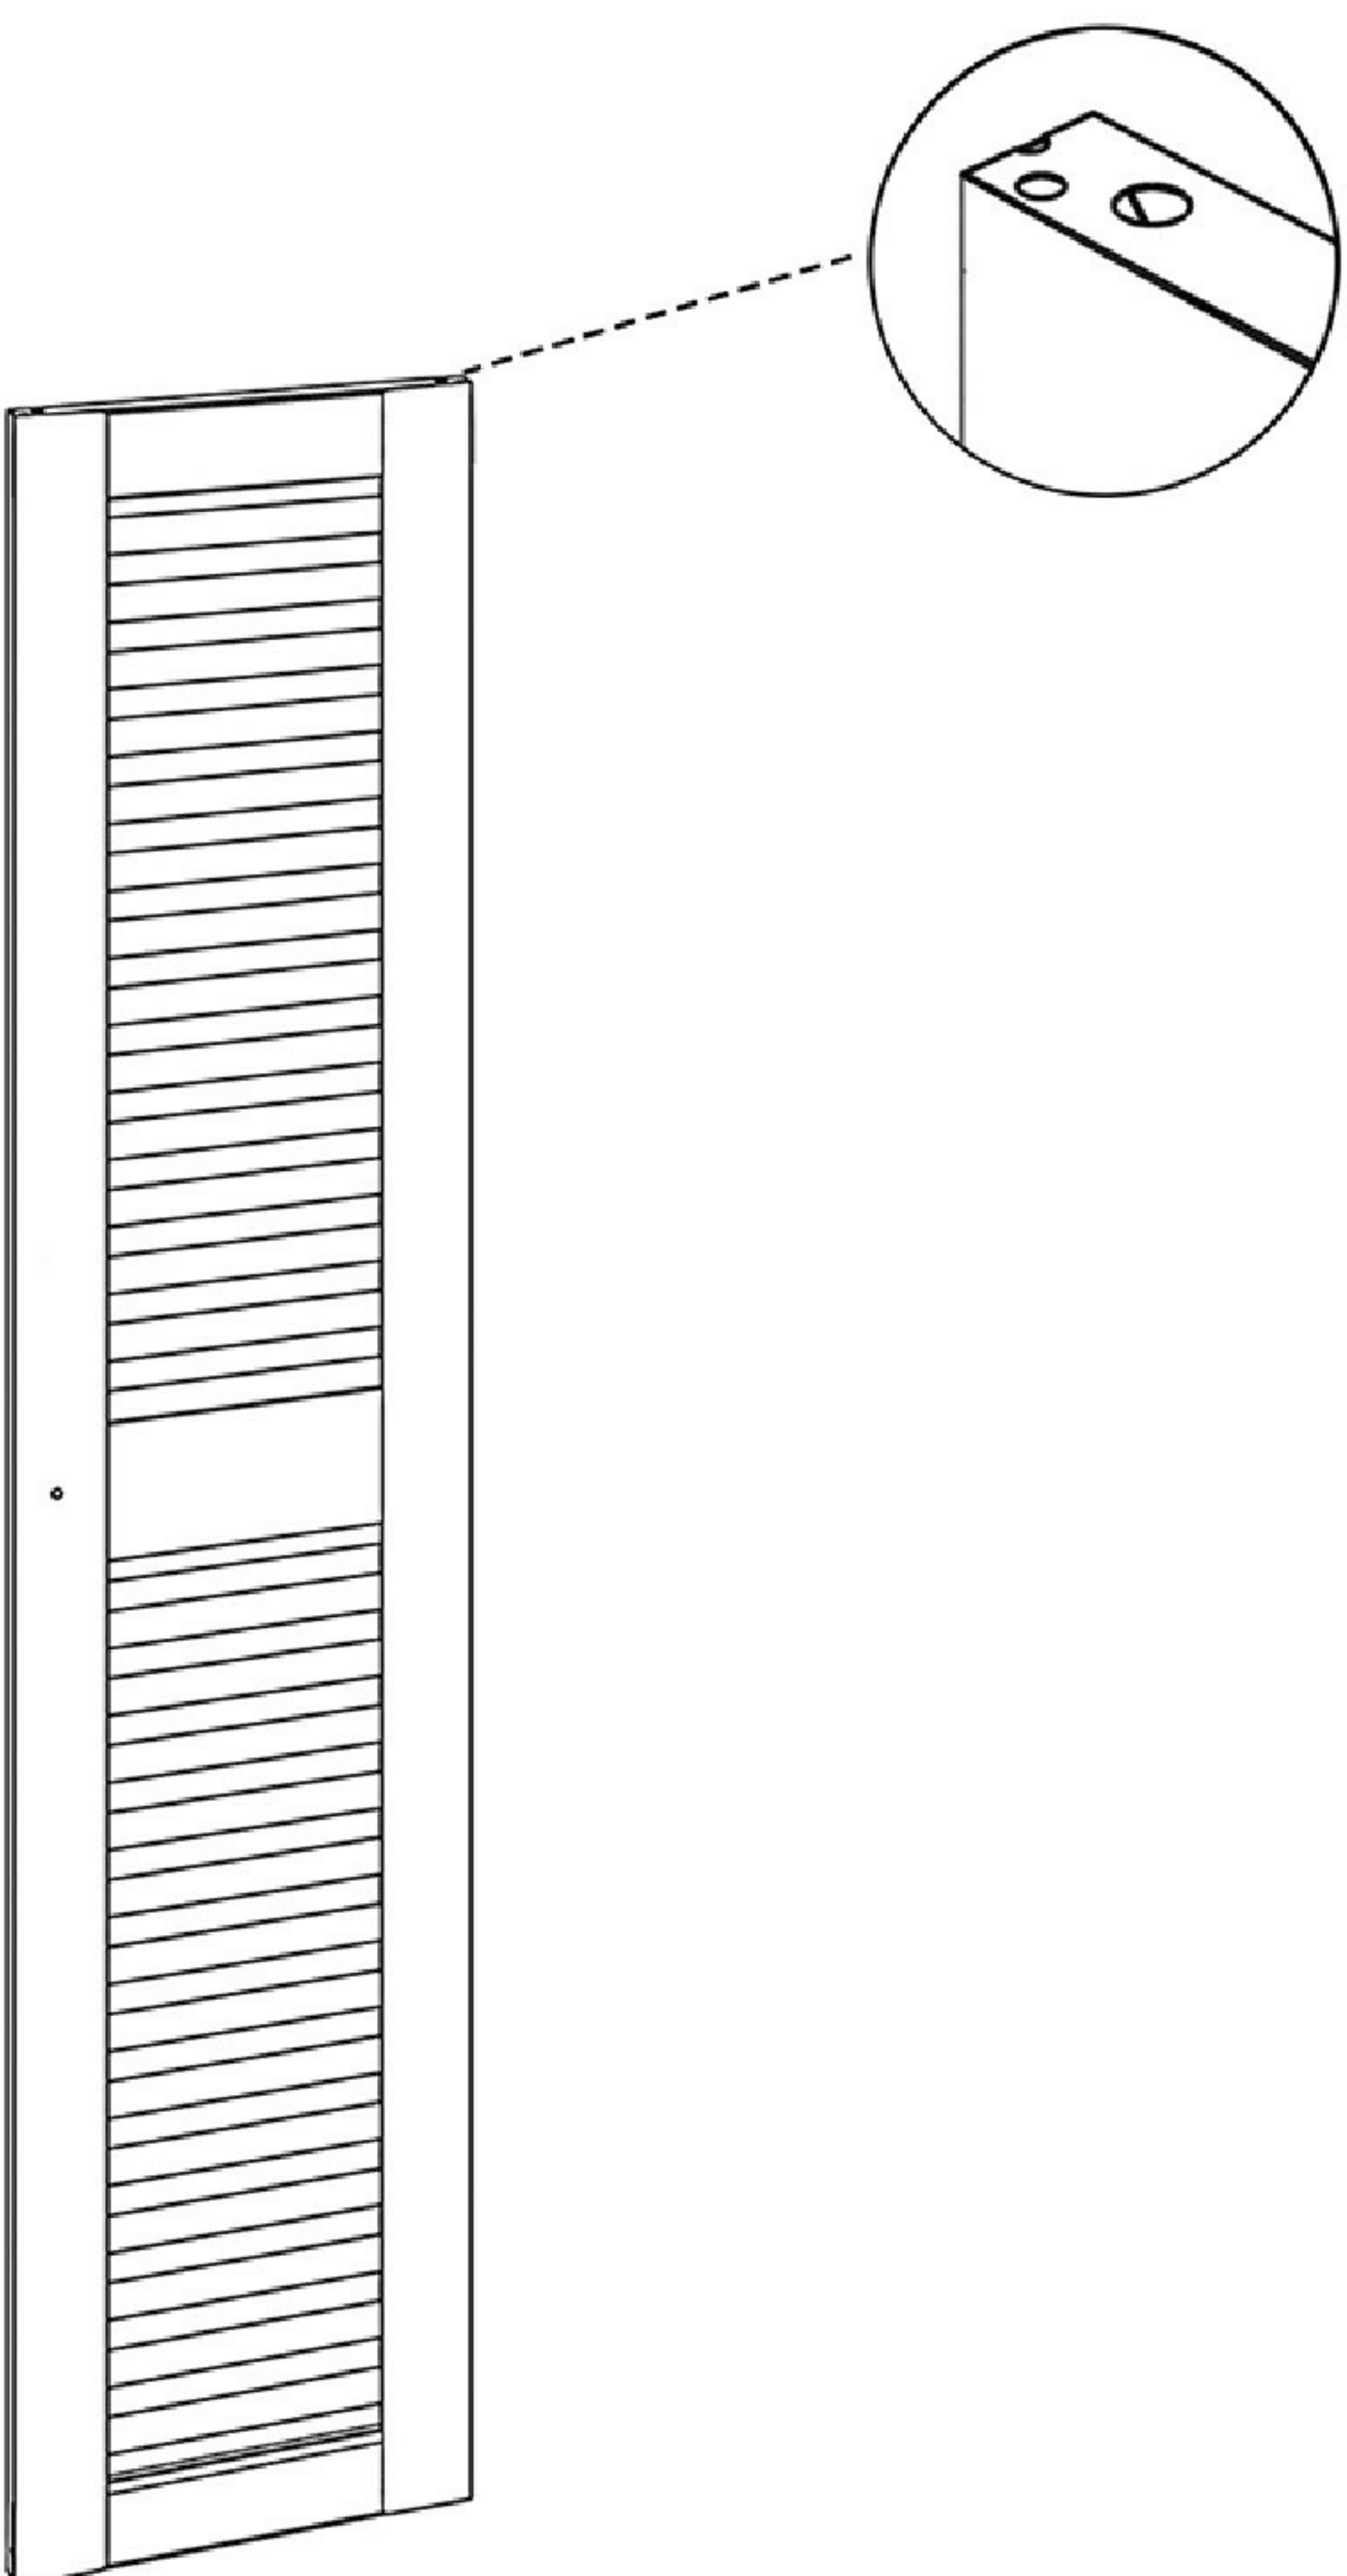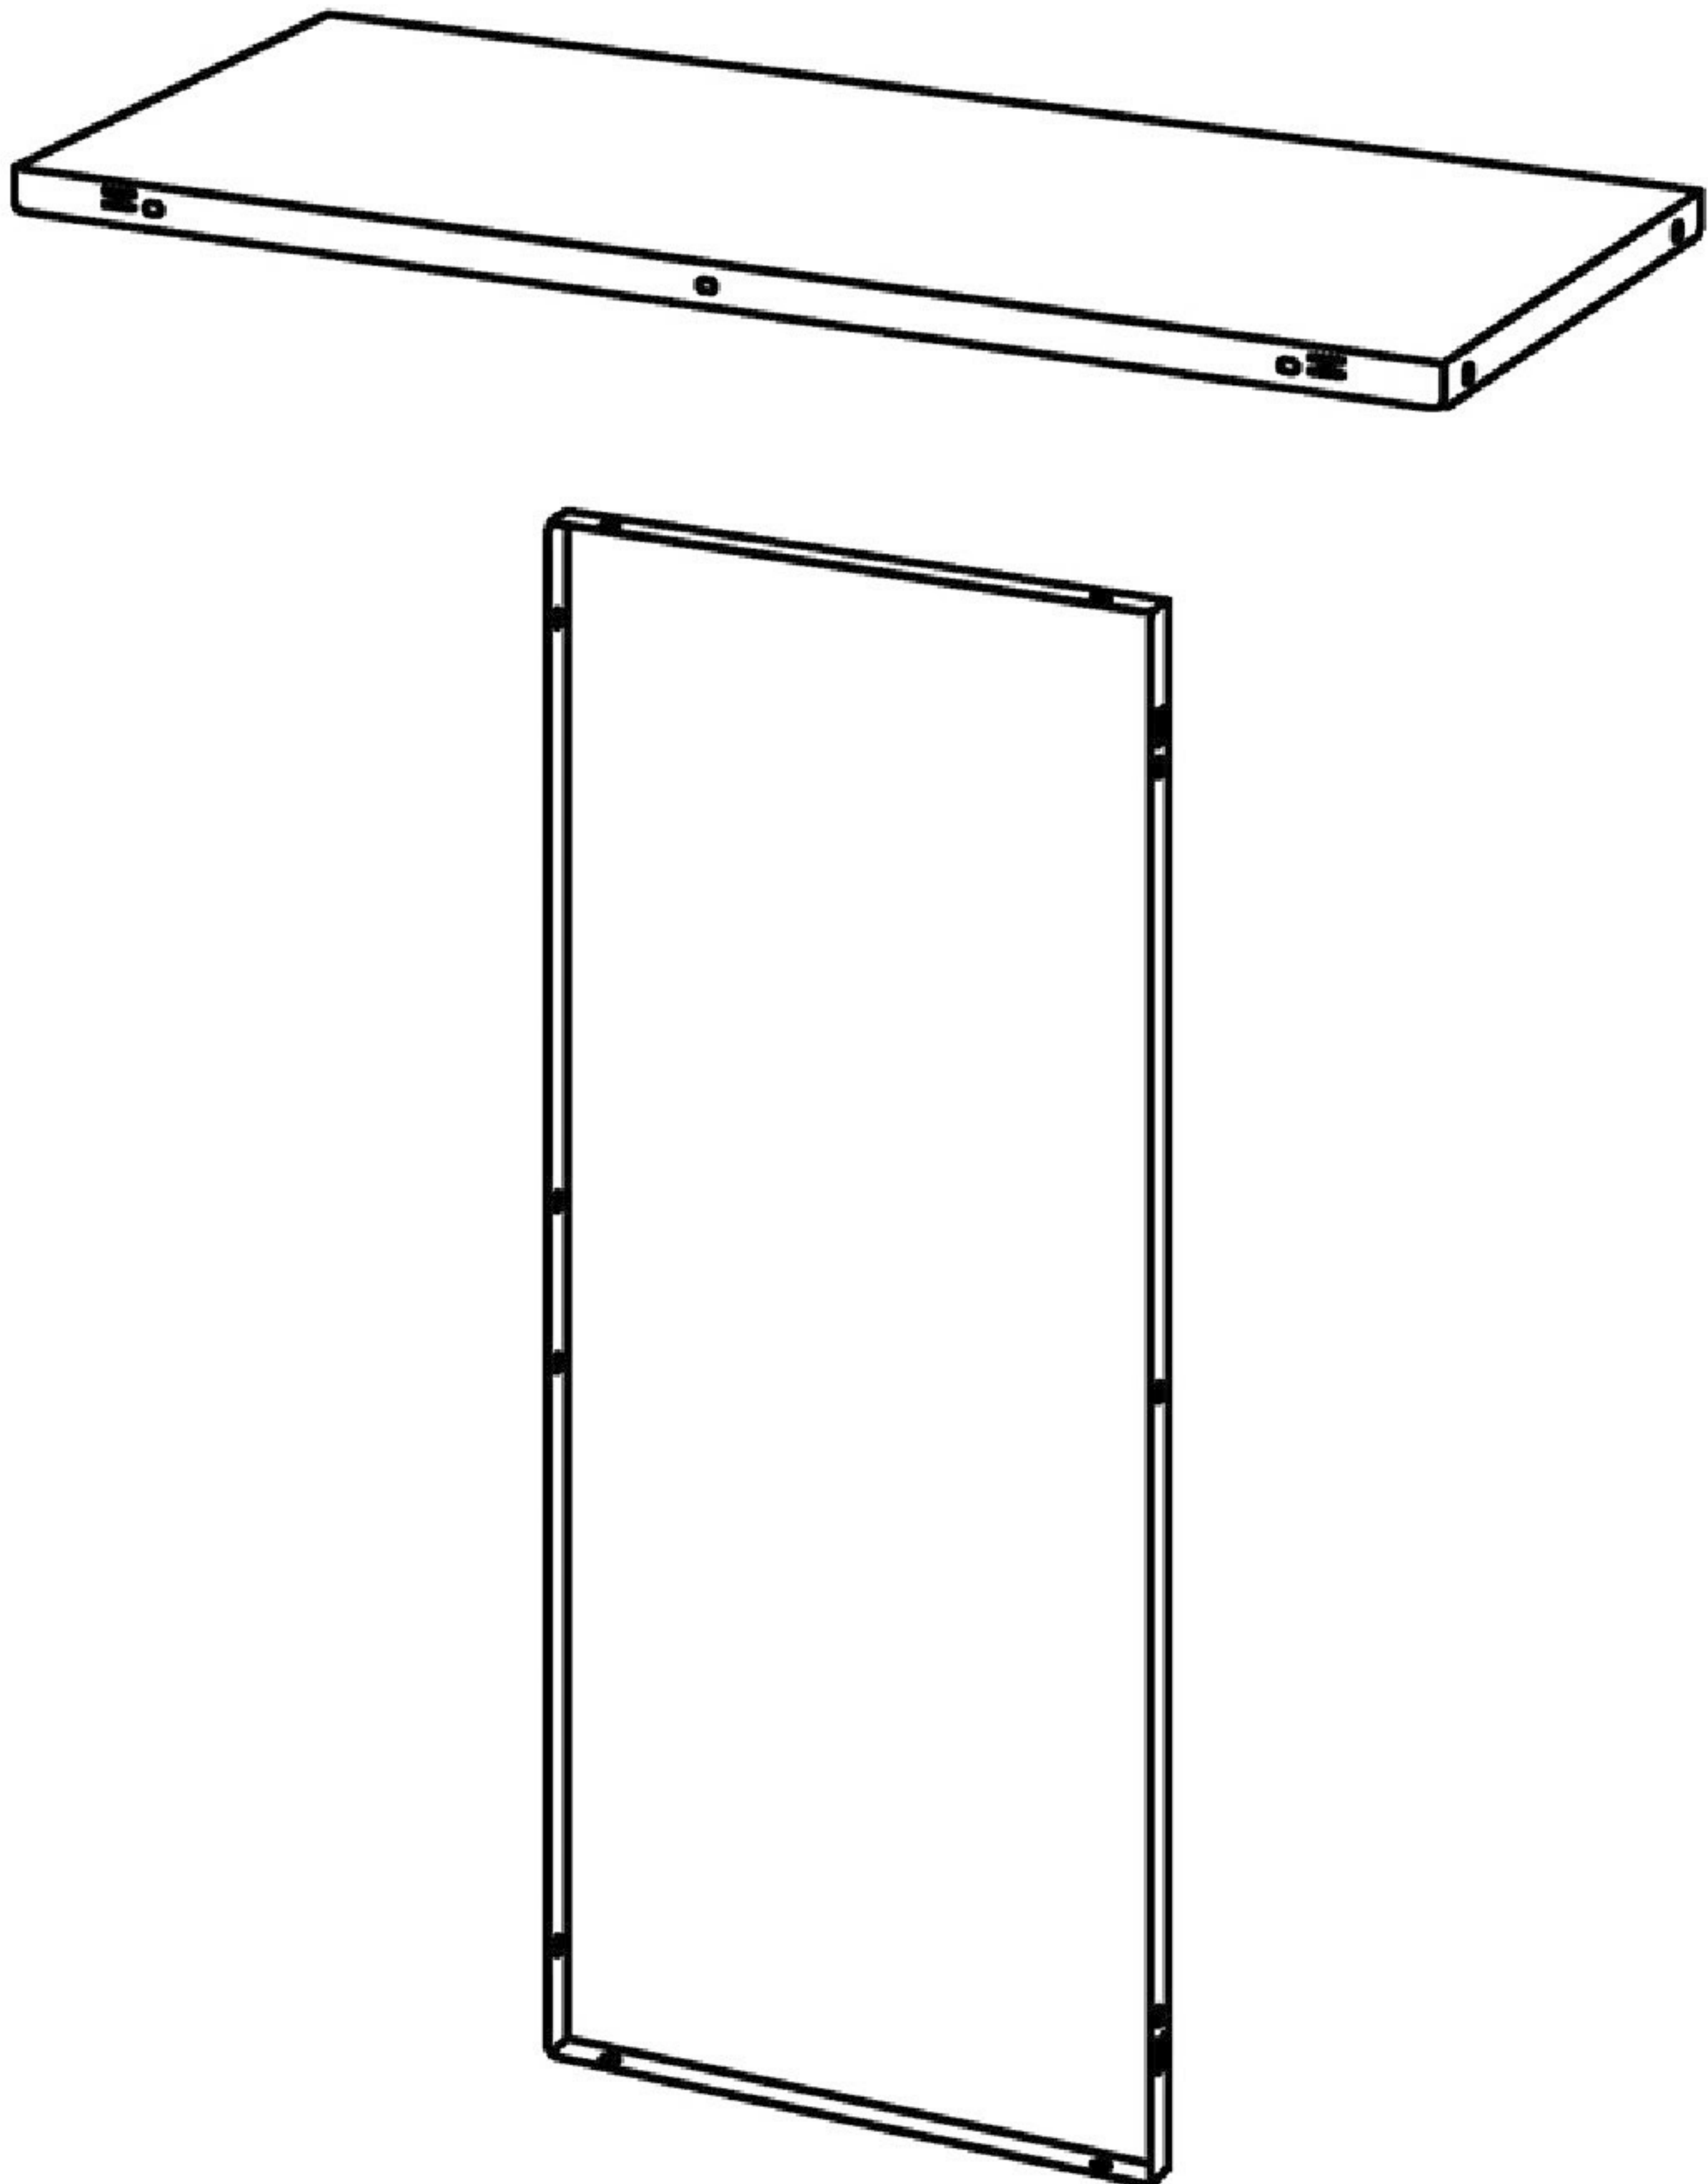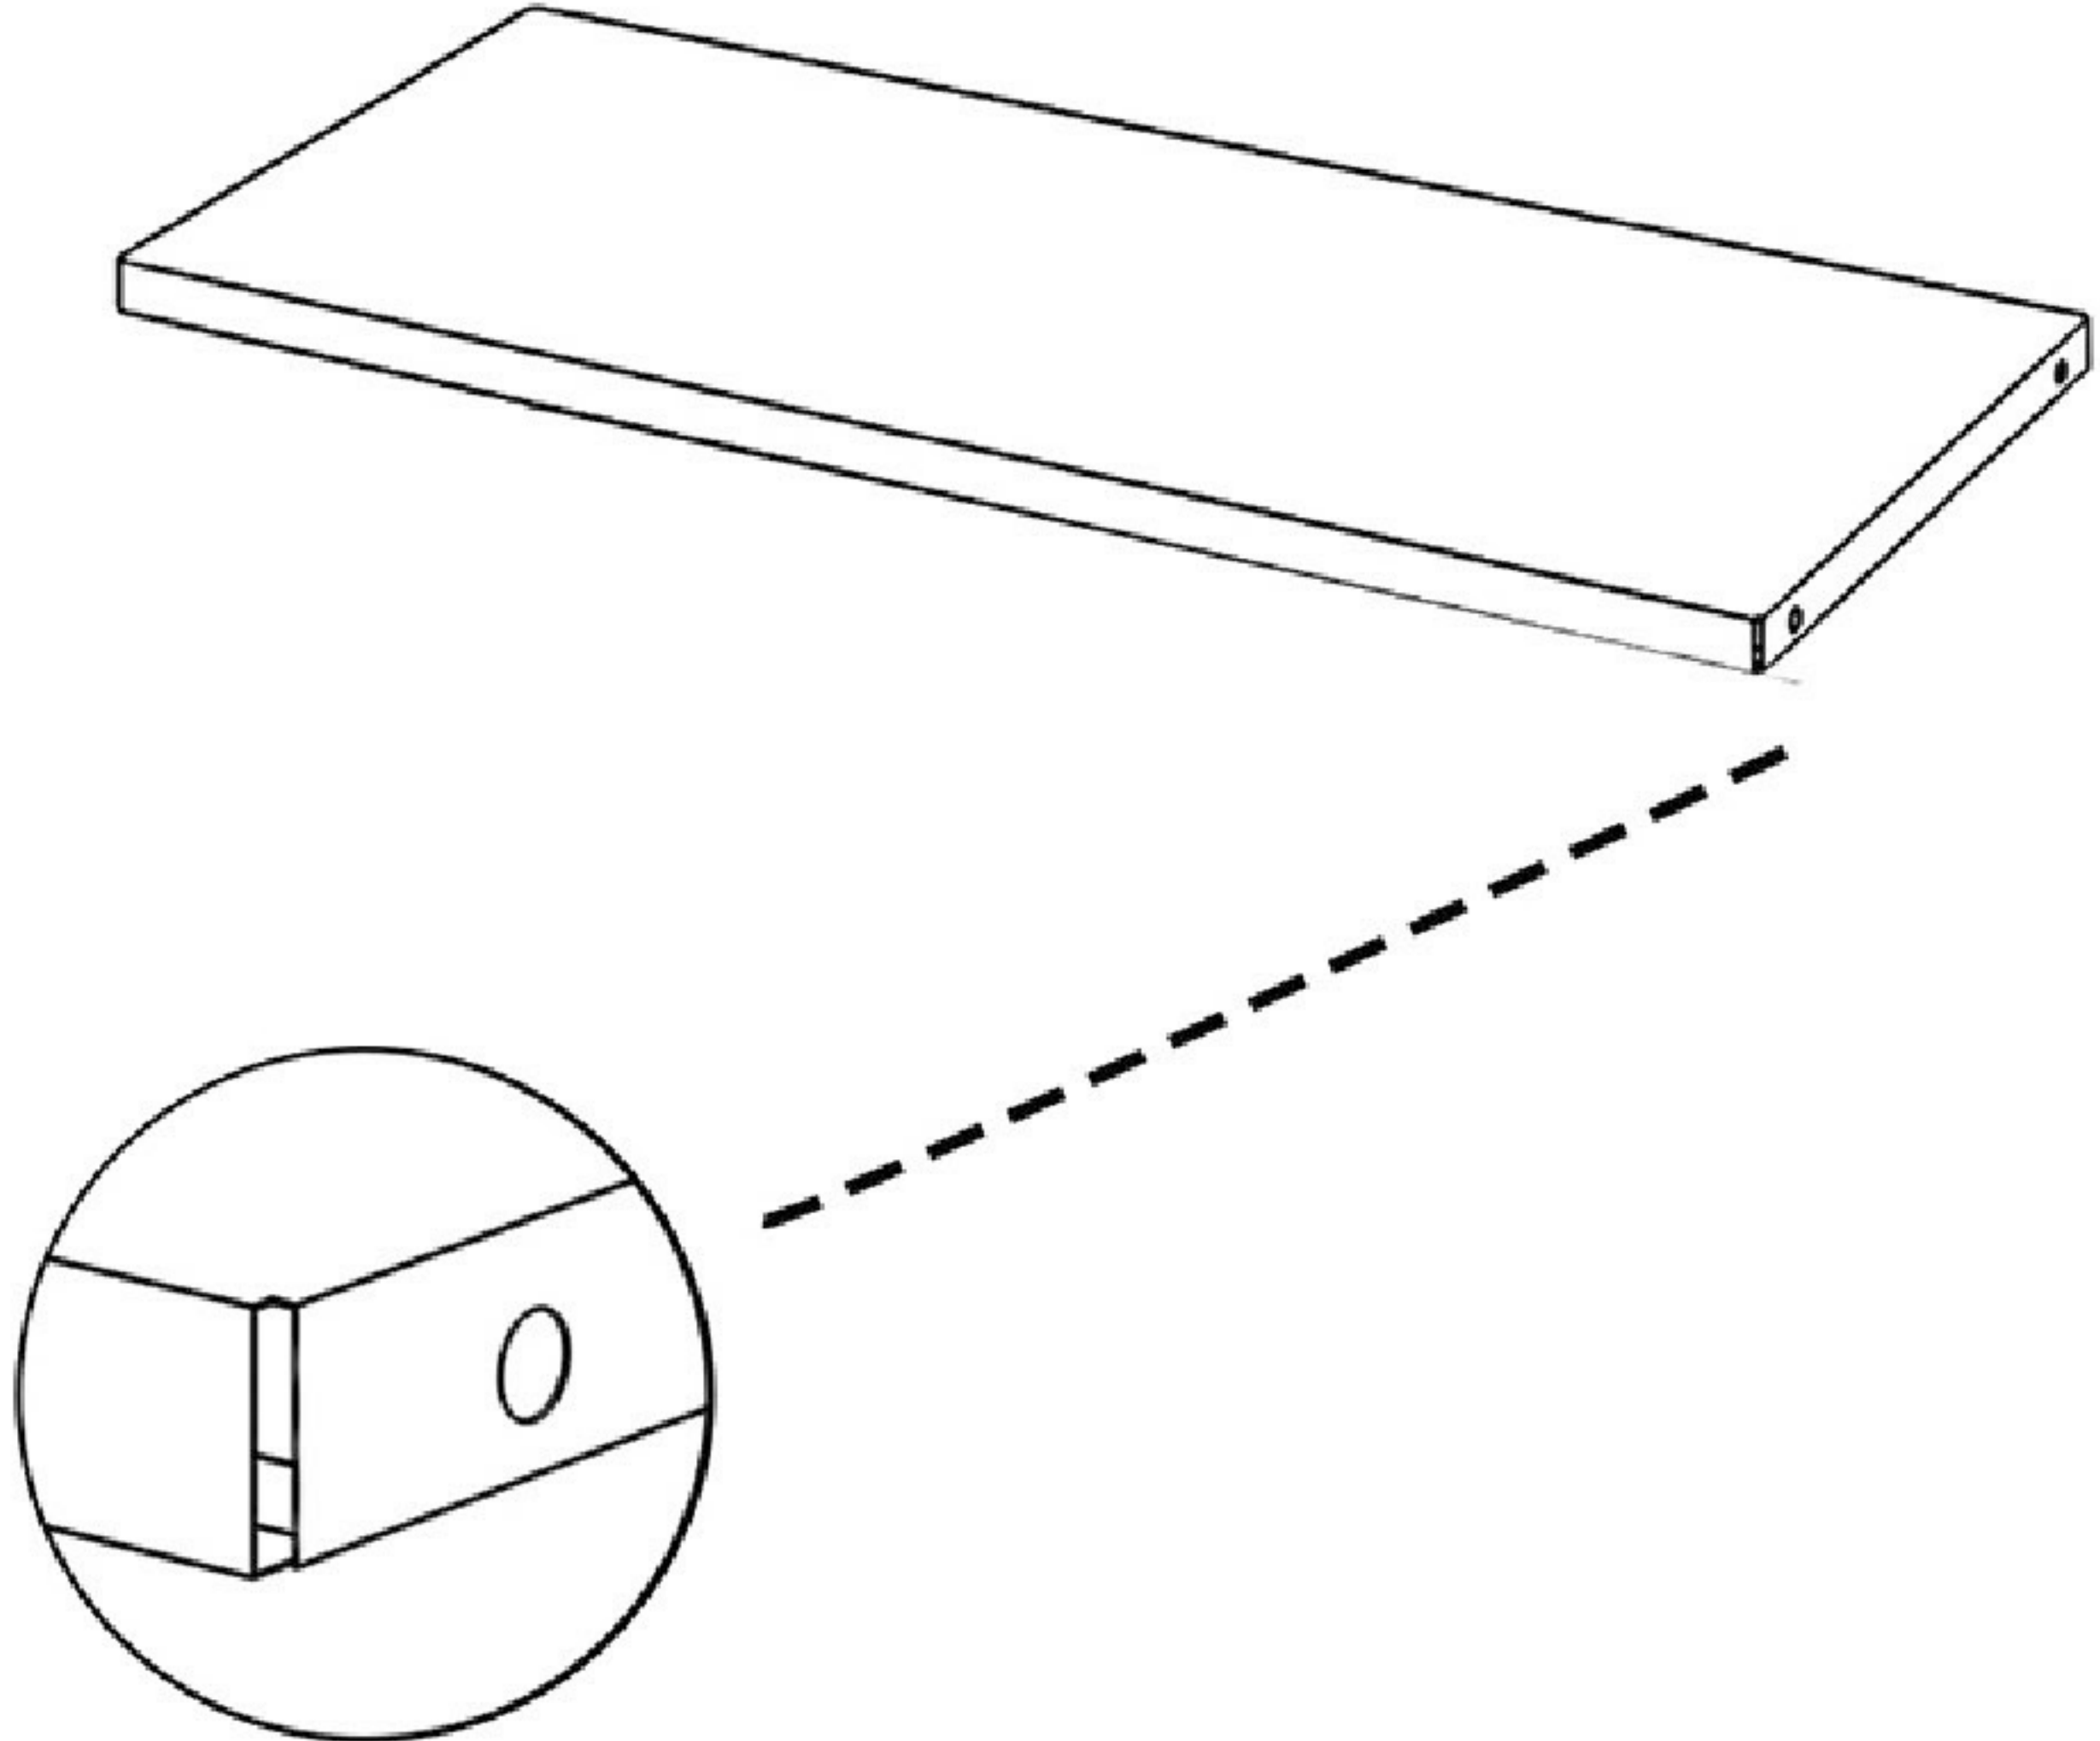J-Left Door		1PC	K-Right Door		1PC
					
F-Top Panel		1PC	I-Shelf		5PCS
					

     Accessories

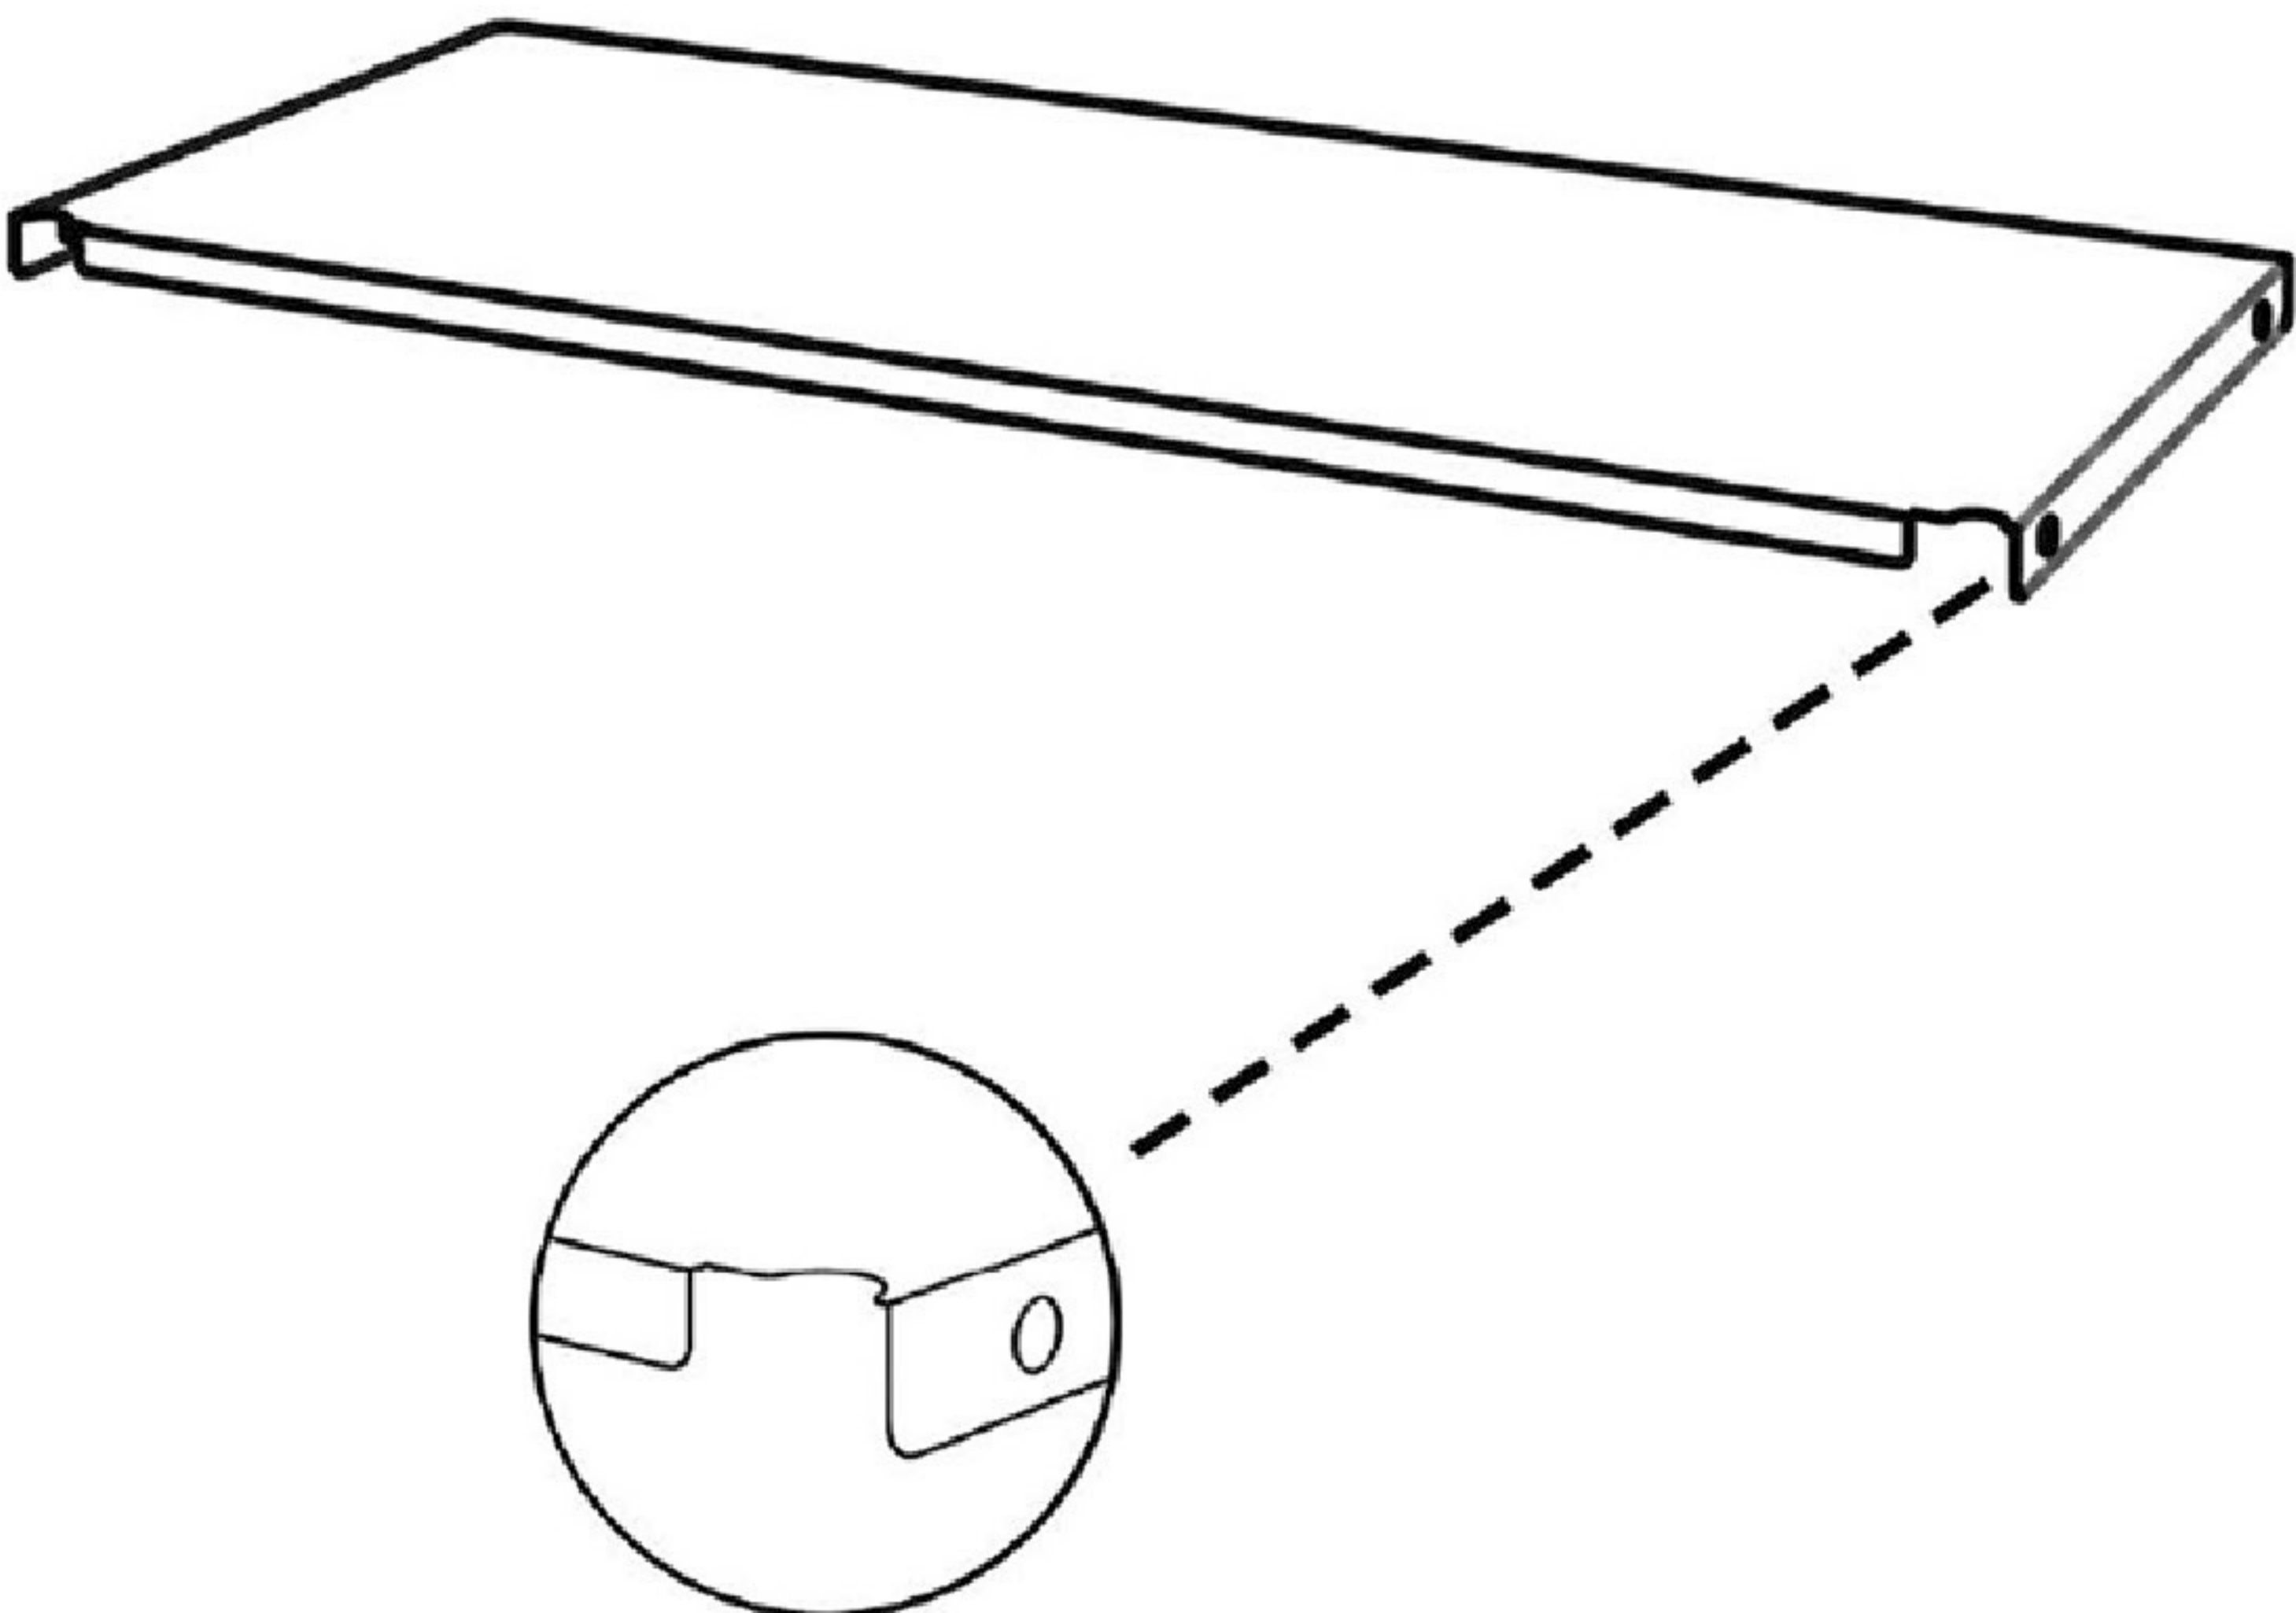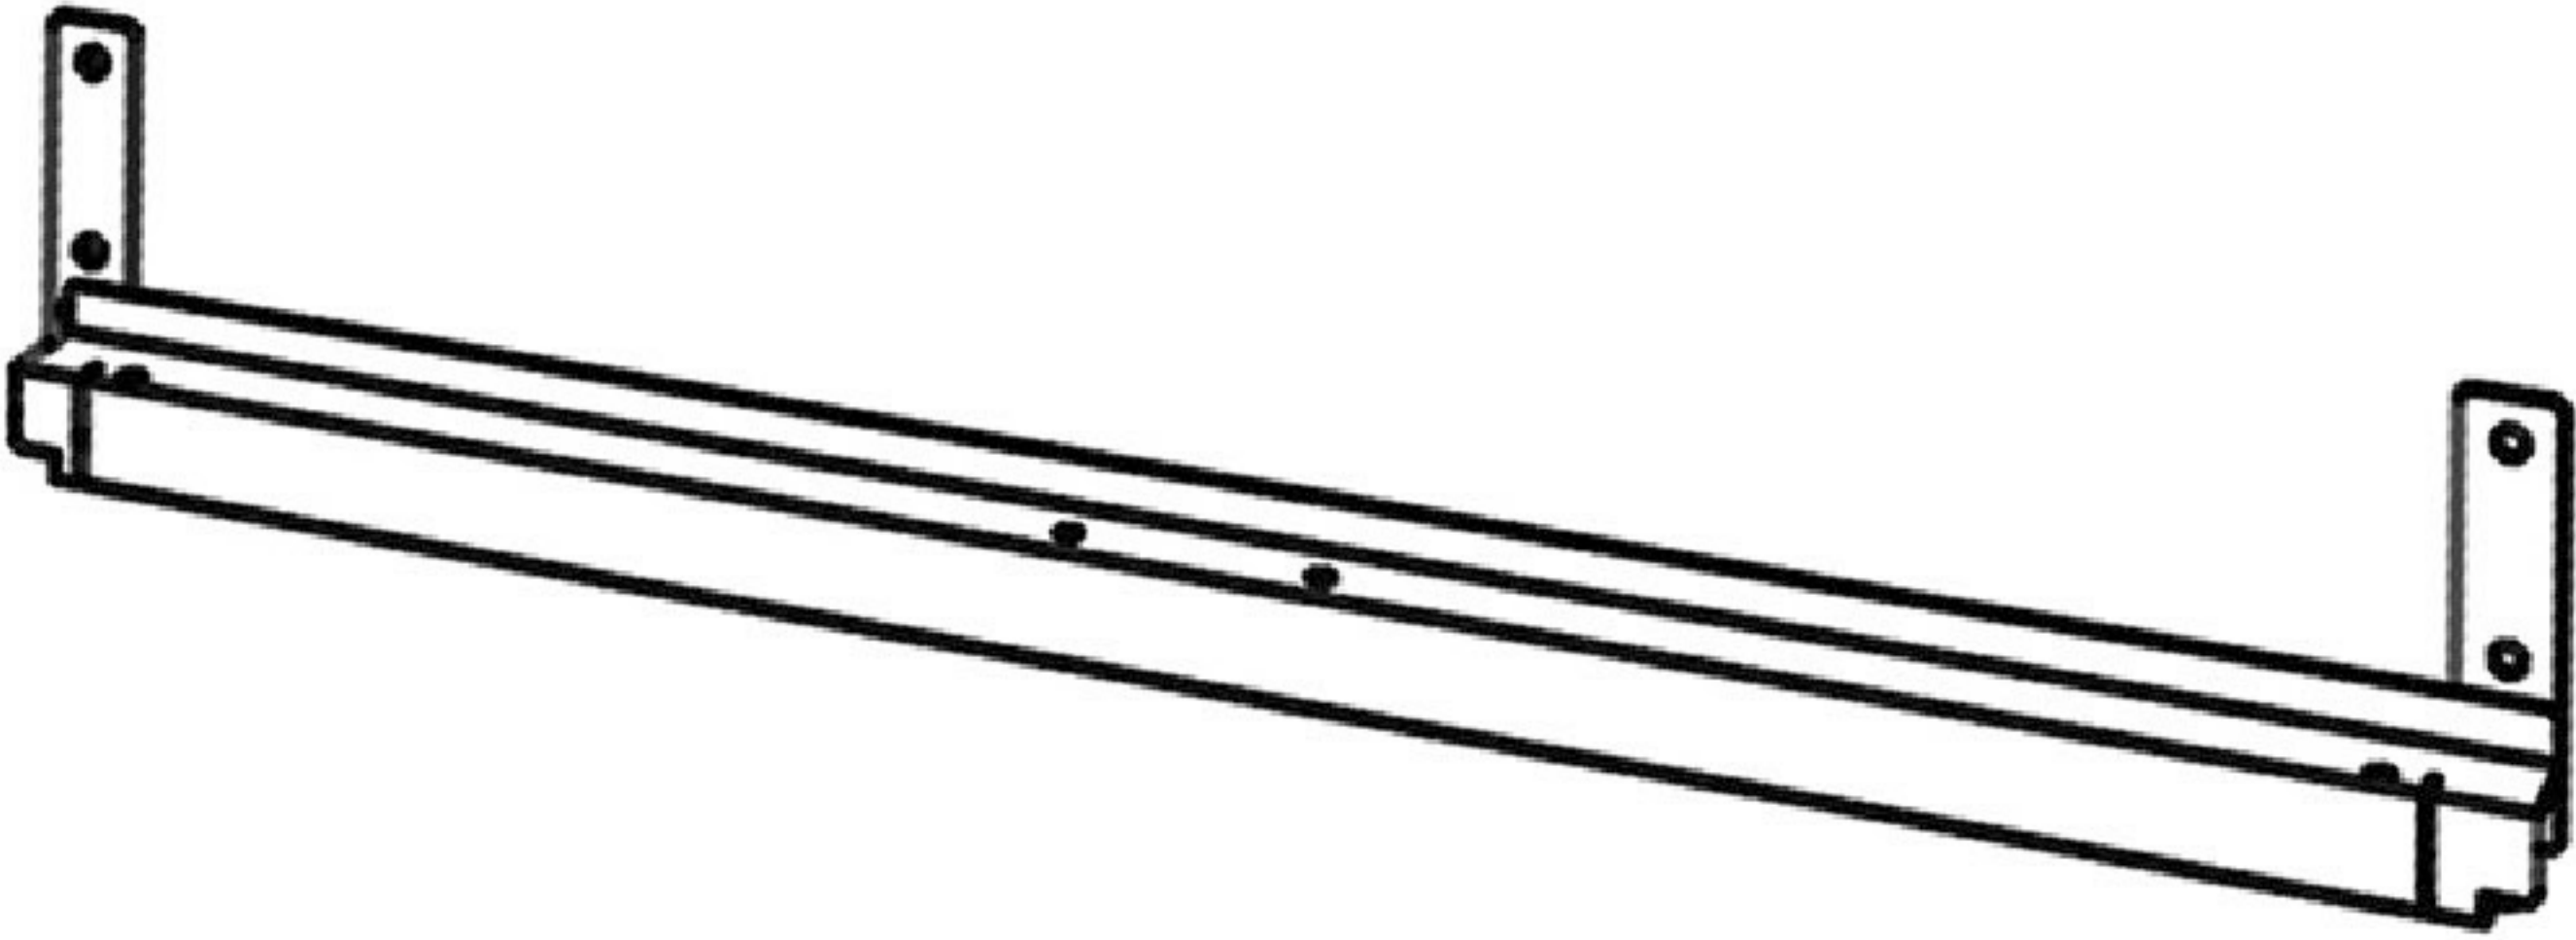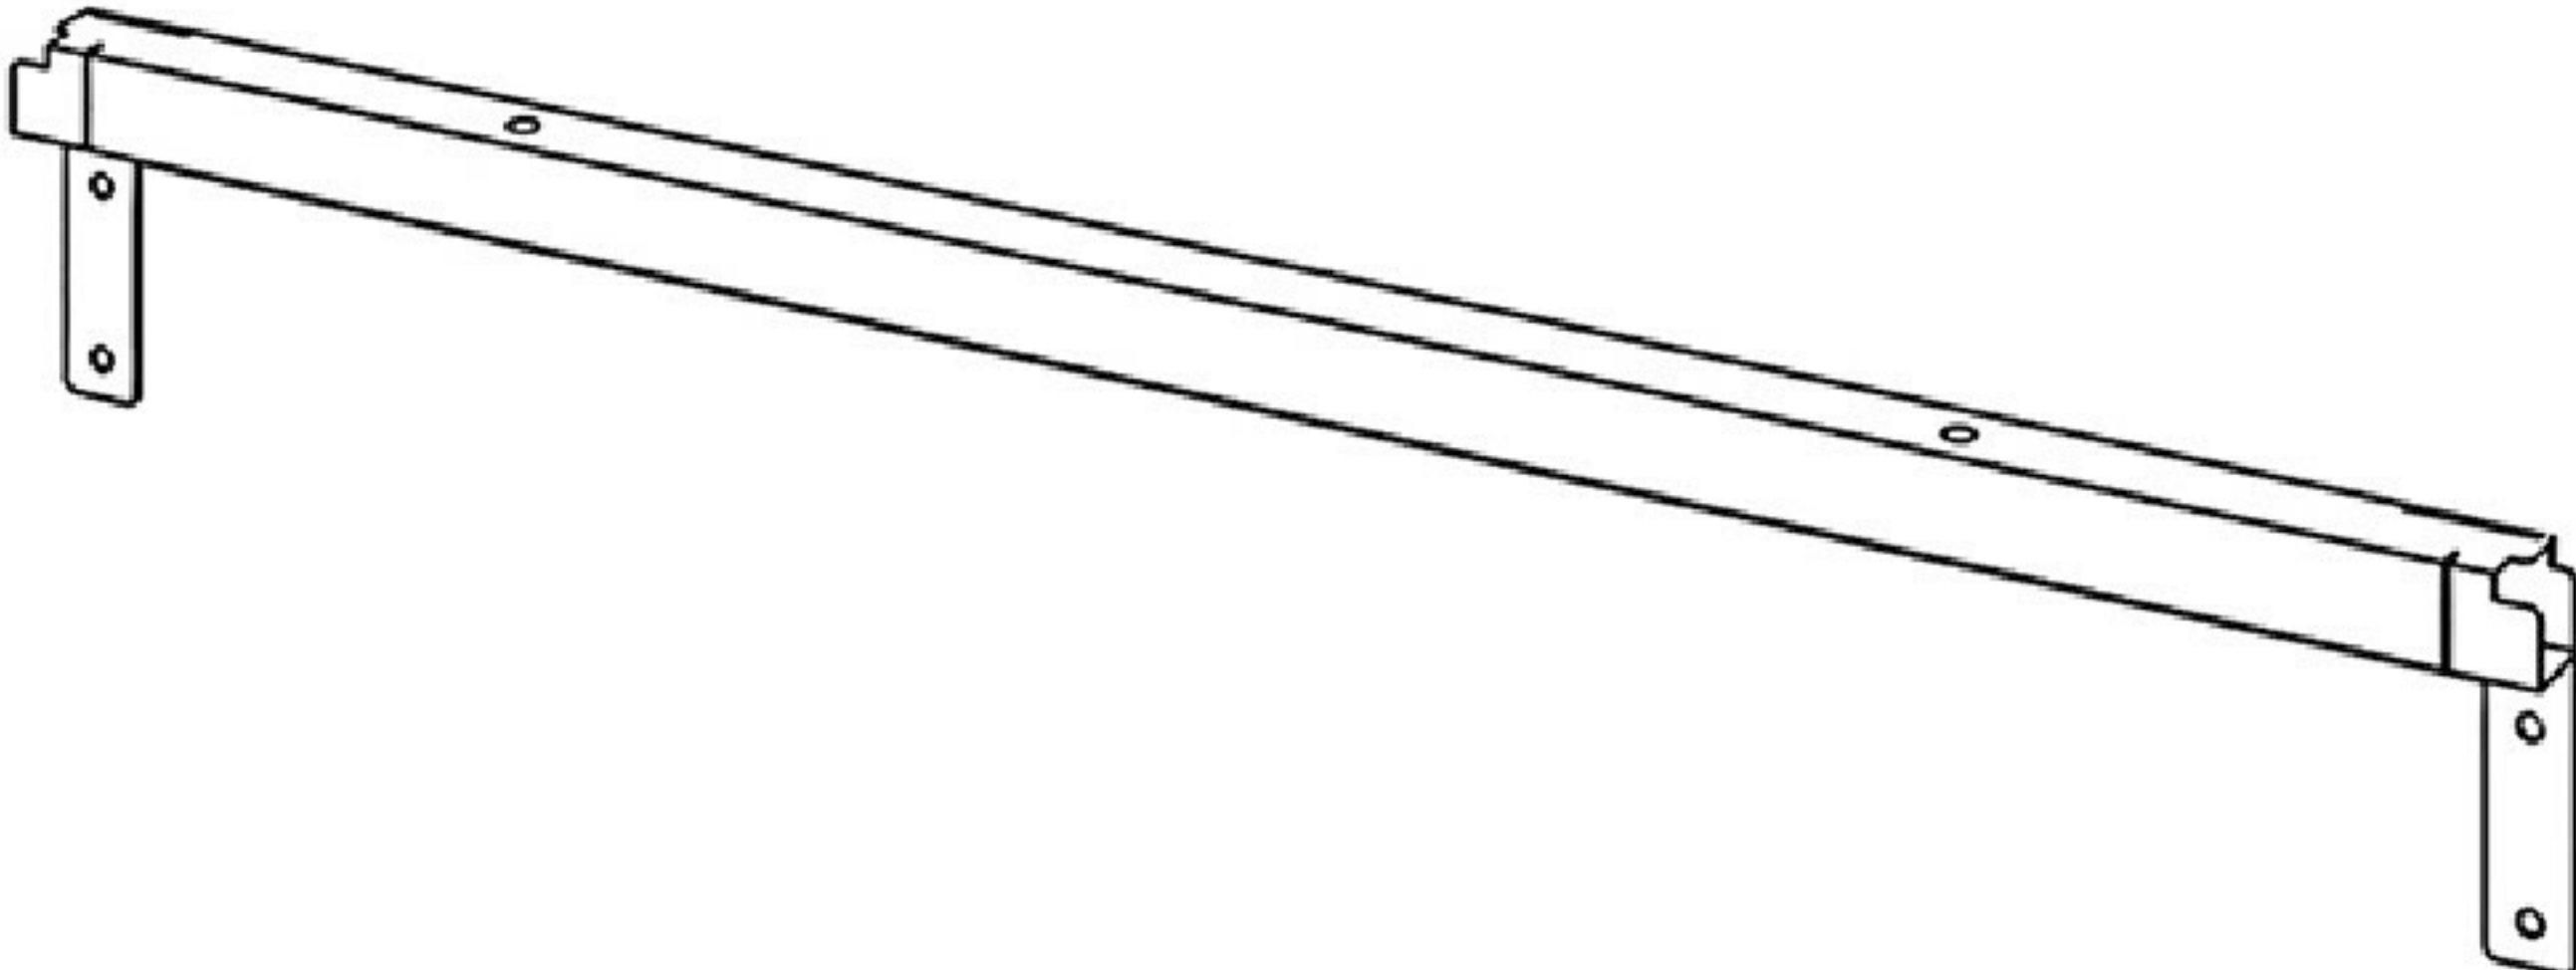
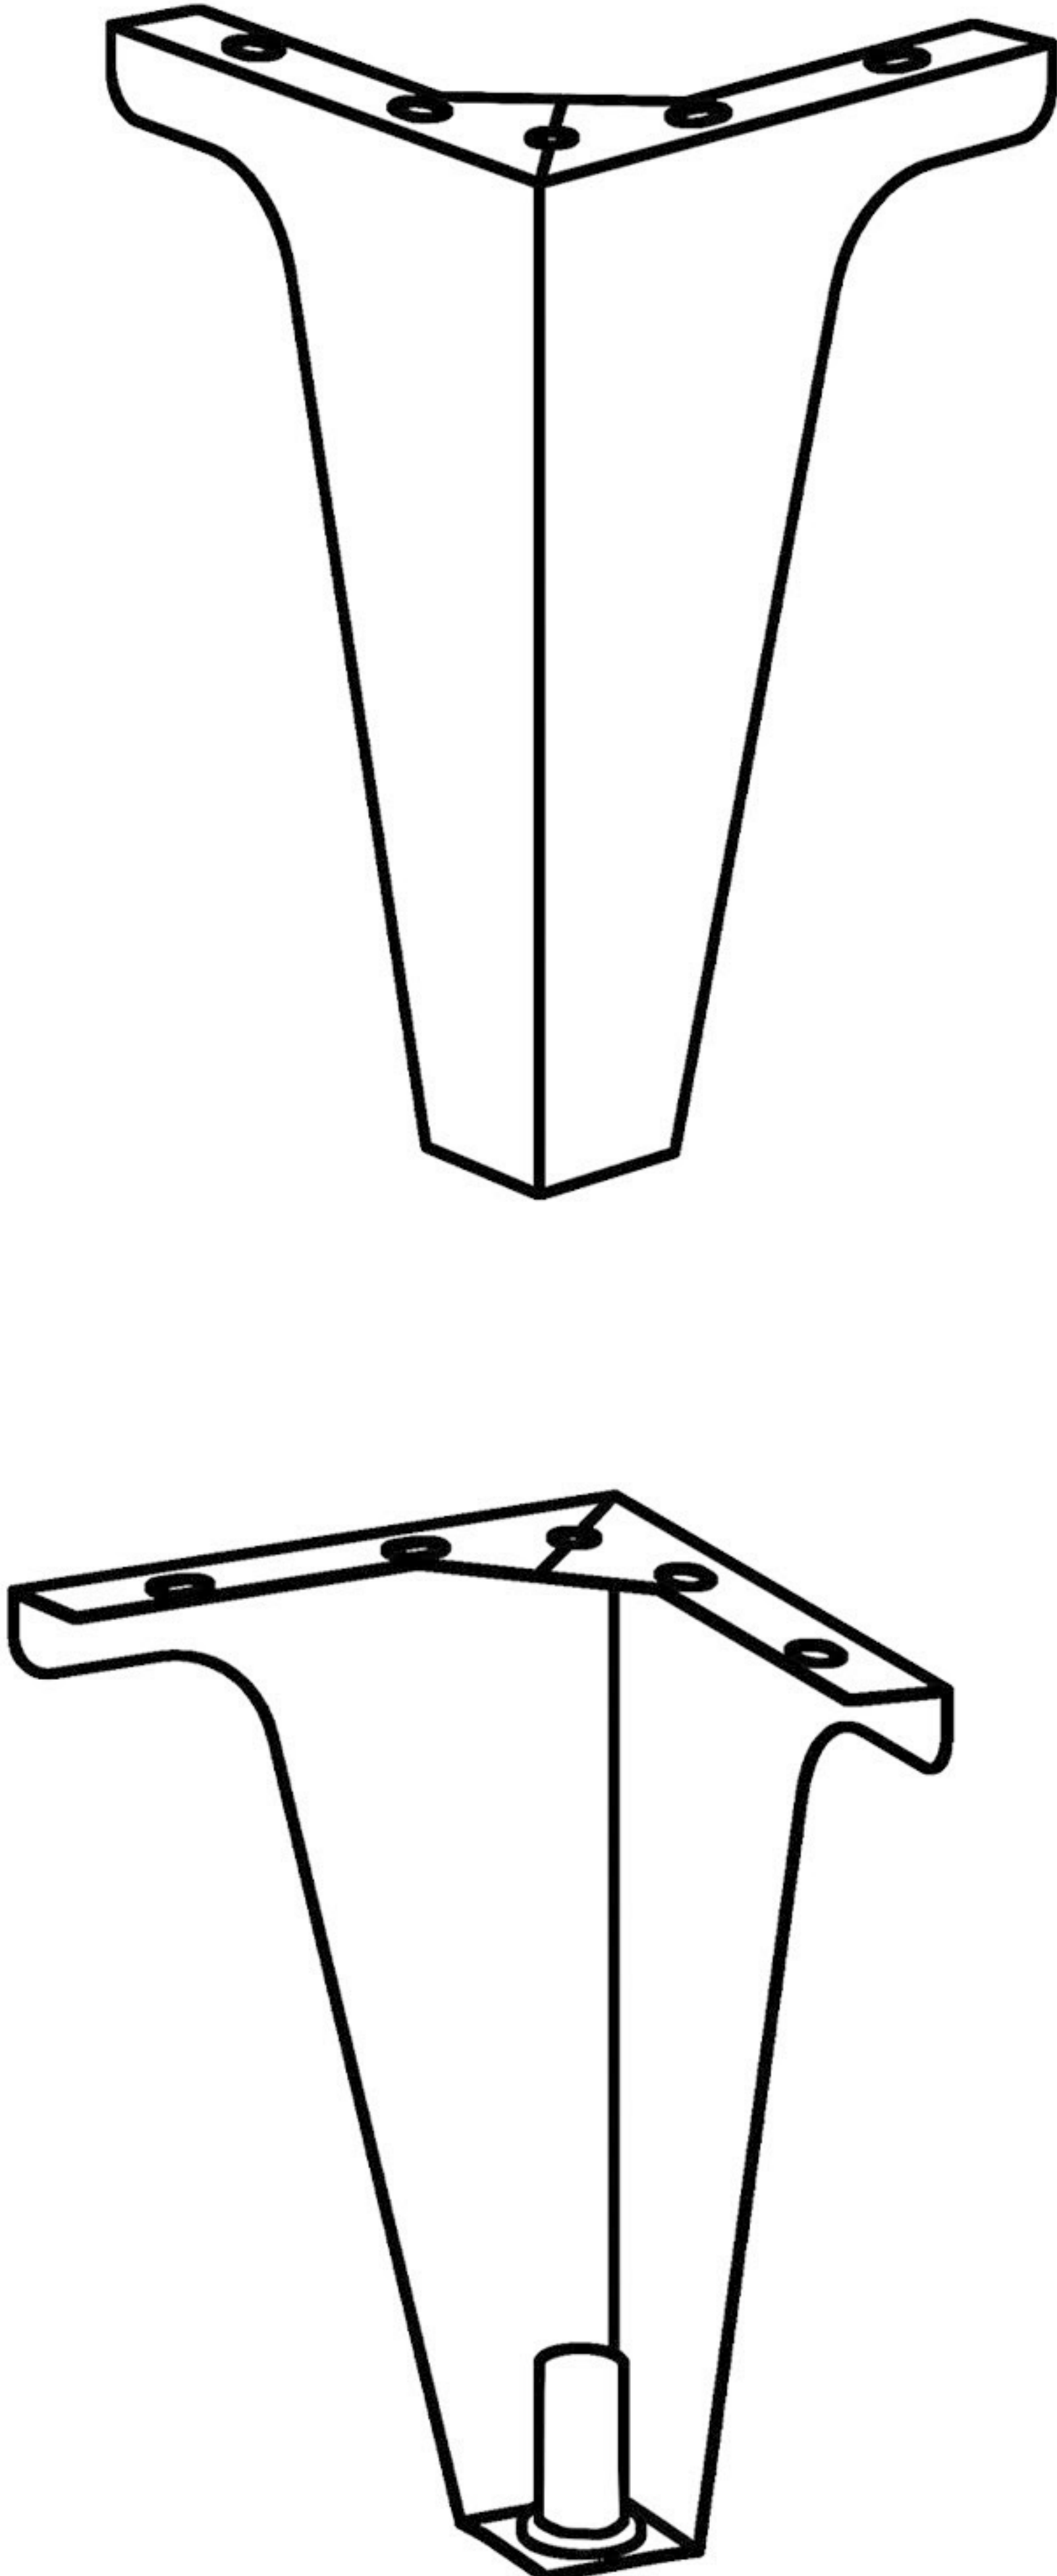
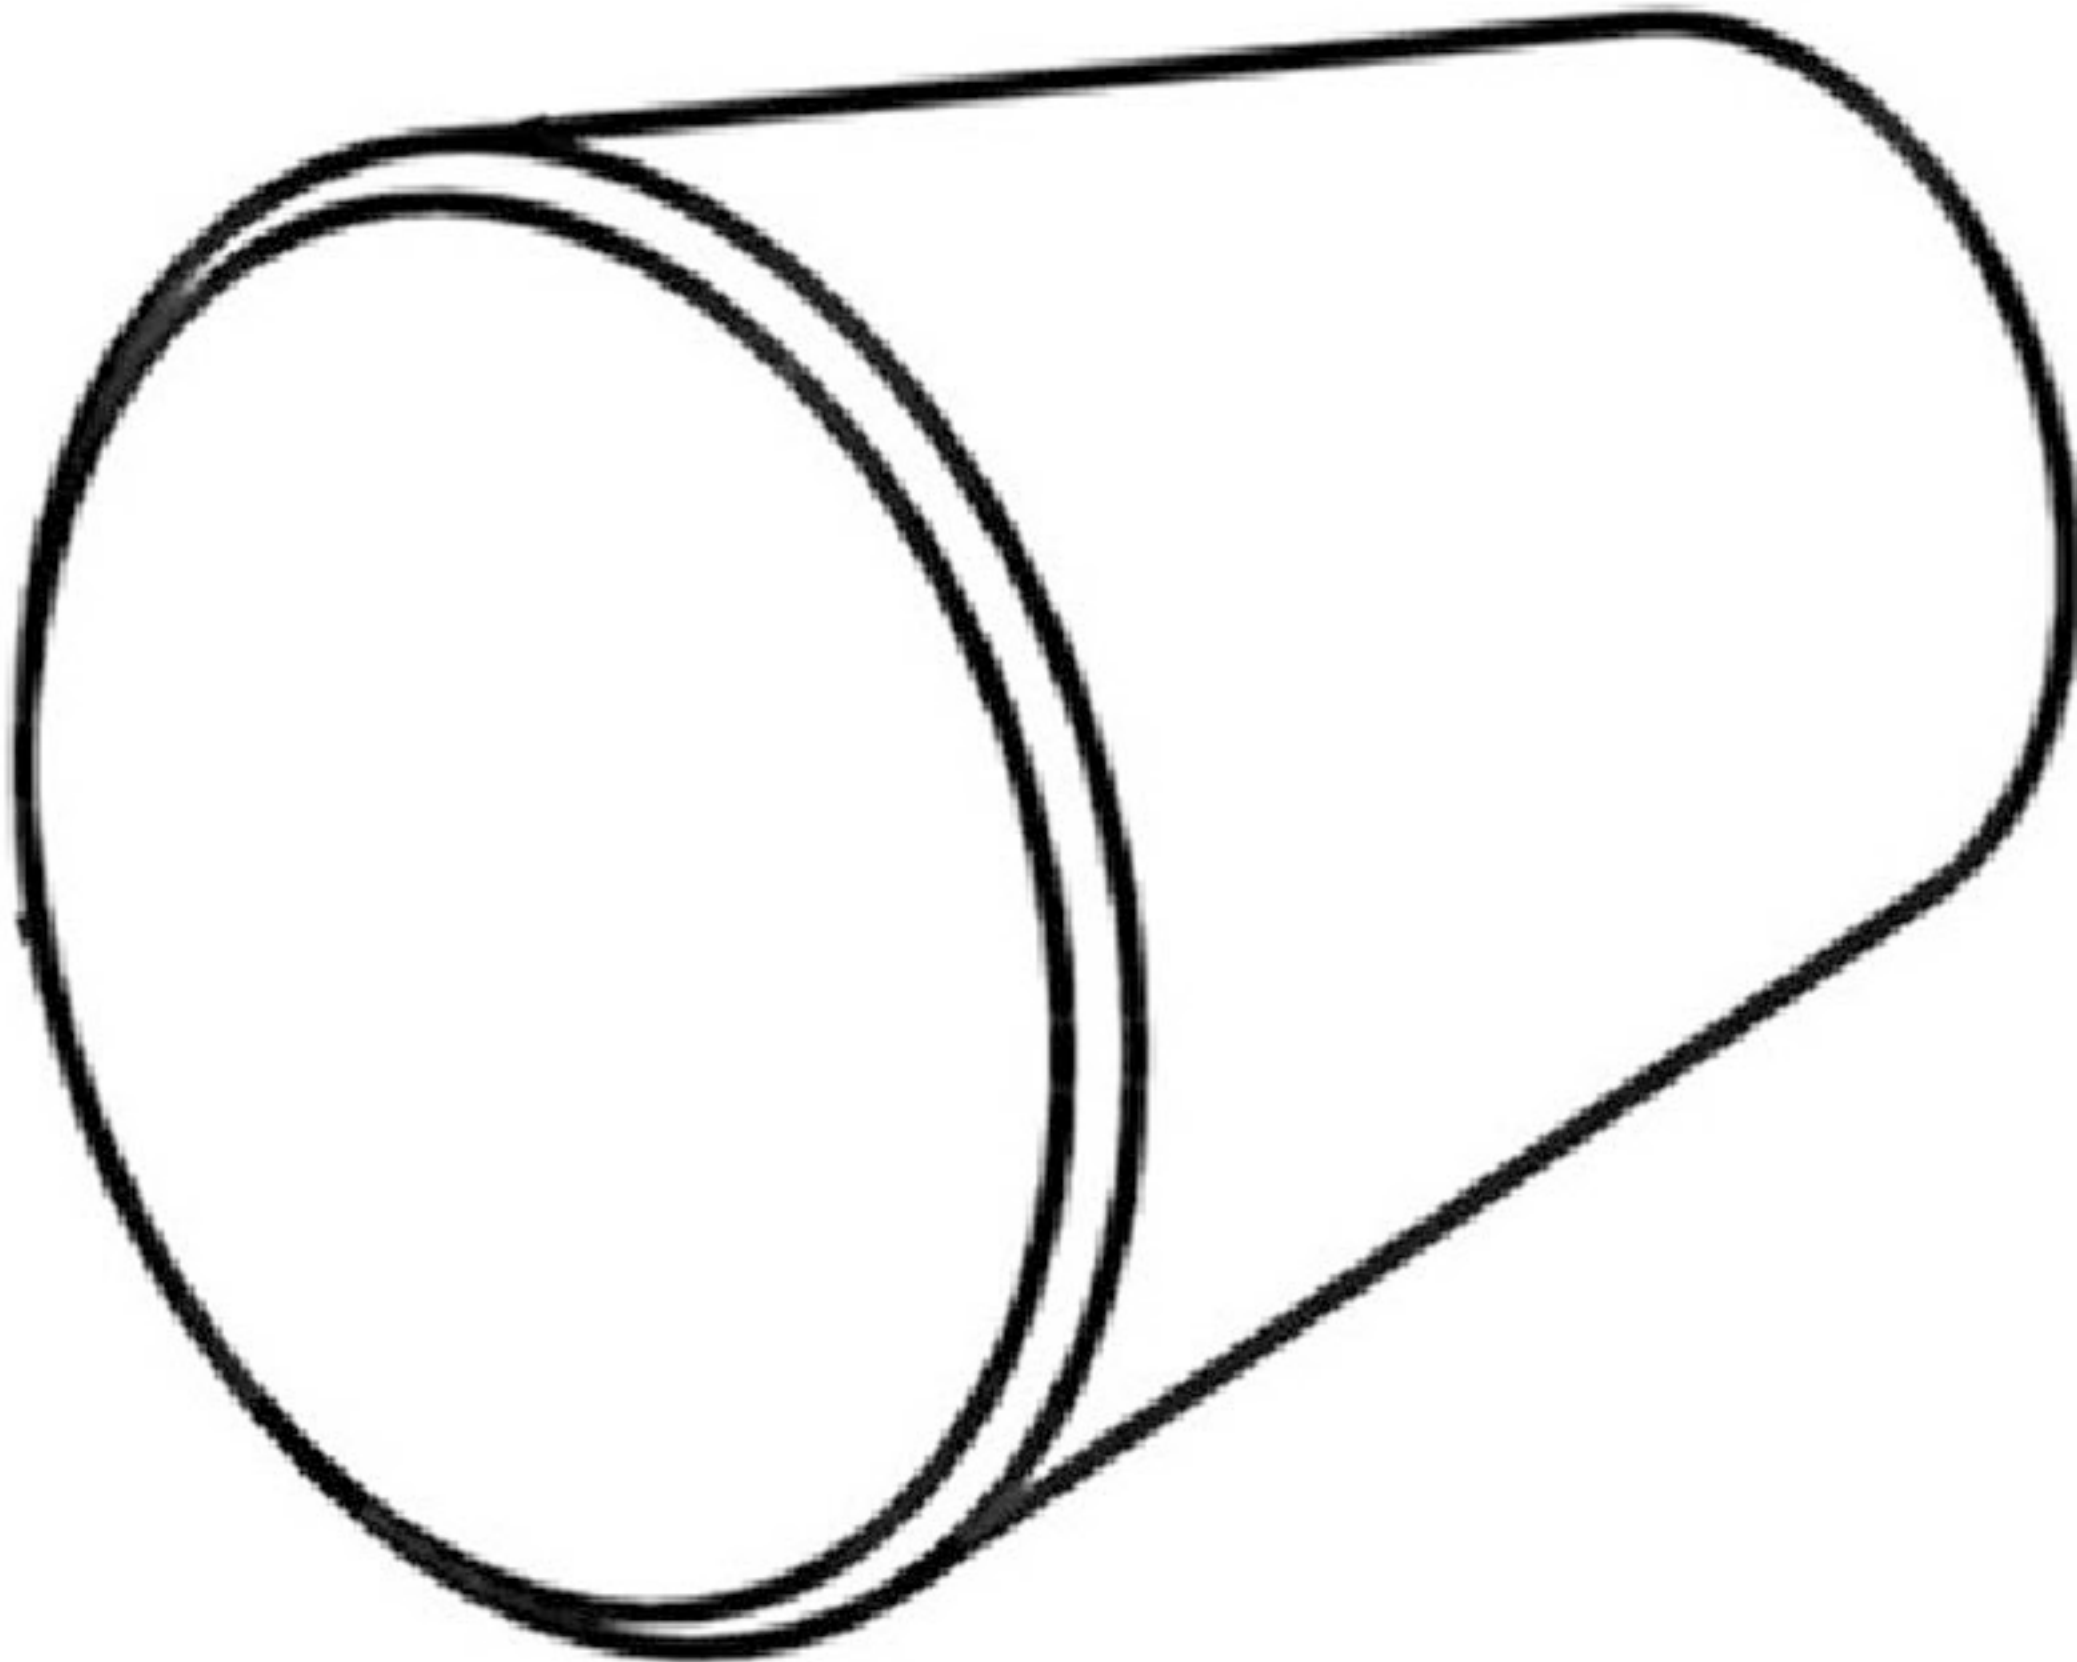
G-Bottom Panel	1PCS	E-Kick Plate	1PC
			
		L-Top Plate	1PC
			
H-Support	4PCS	S-Round Handle	2PCS
			

          Accessories

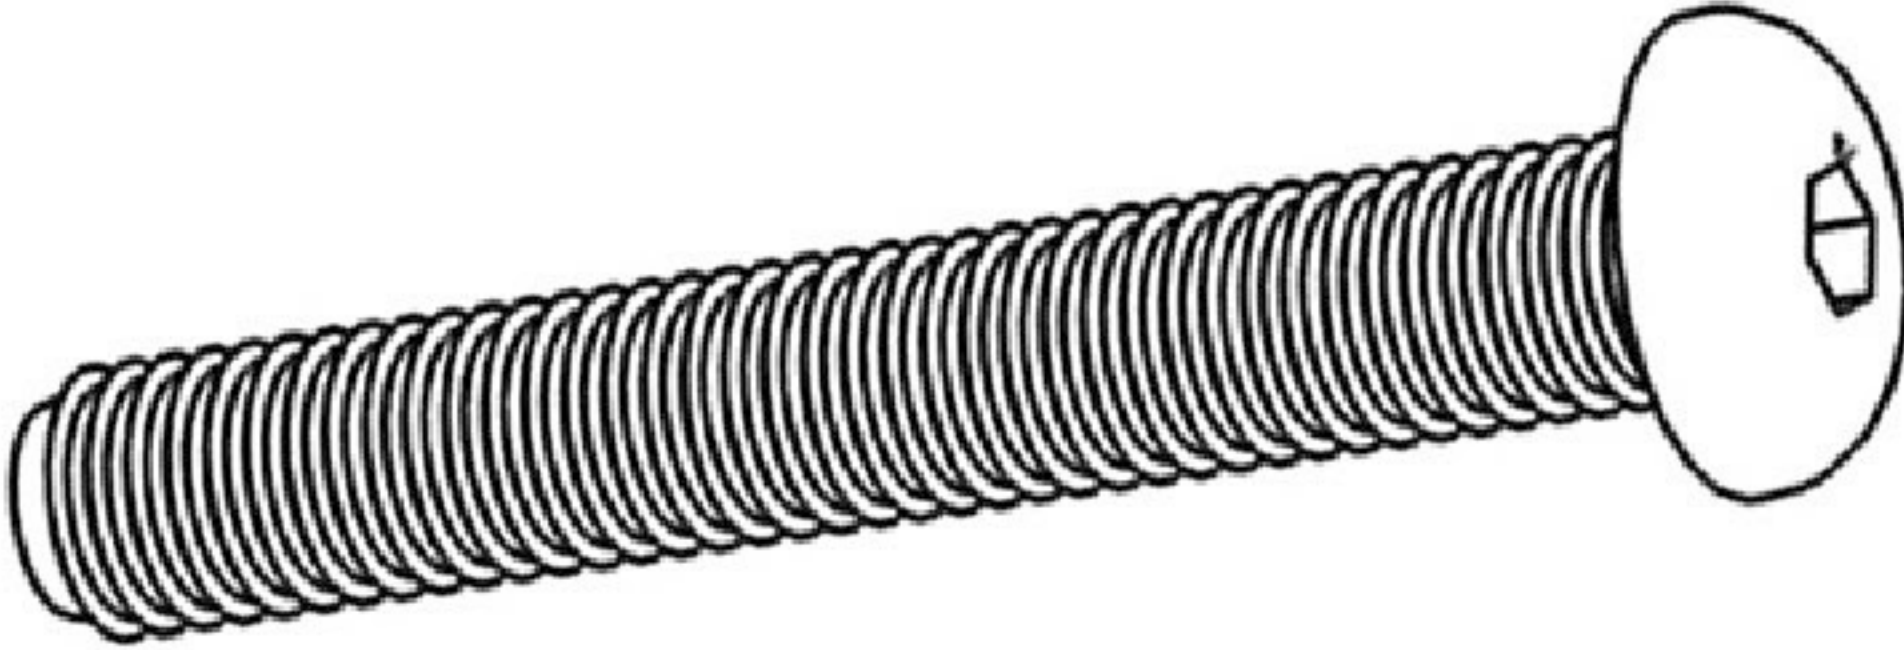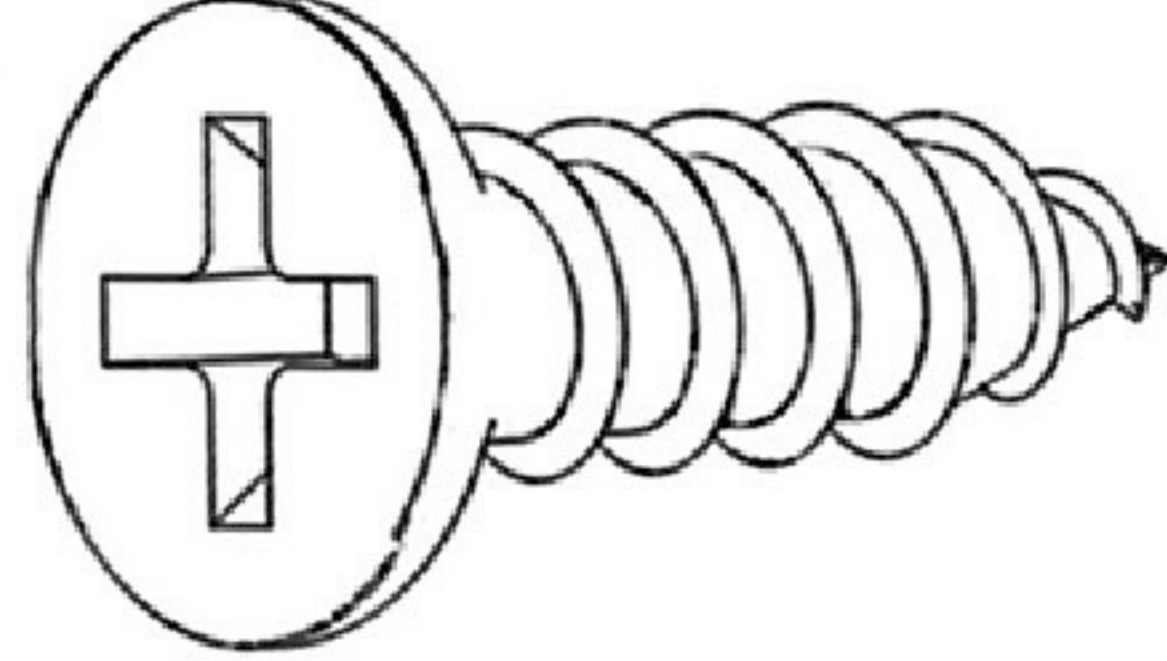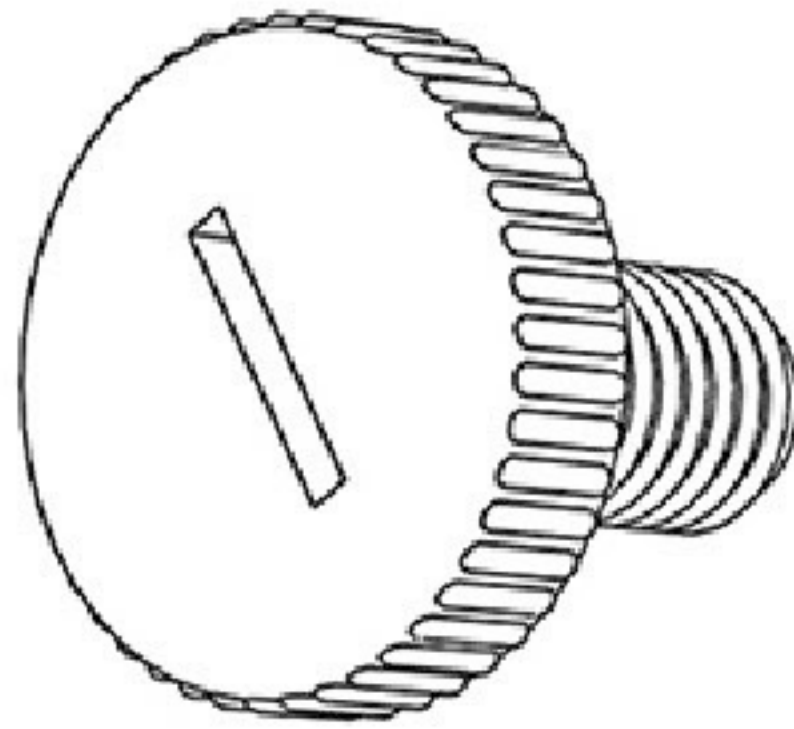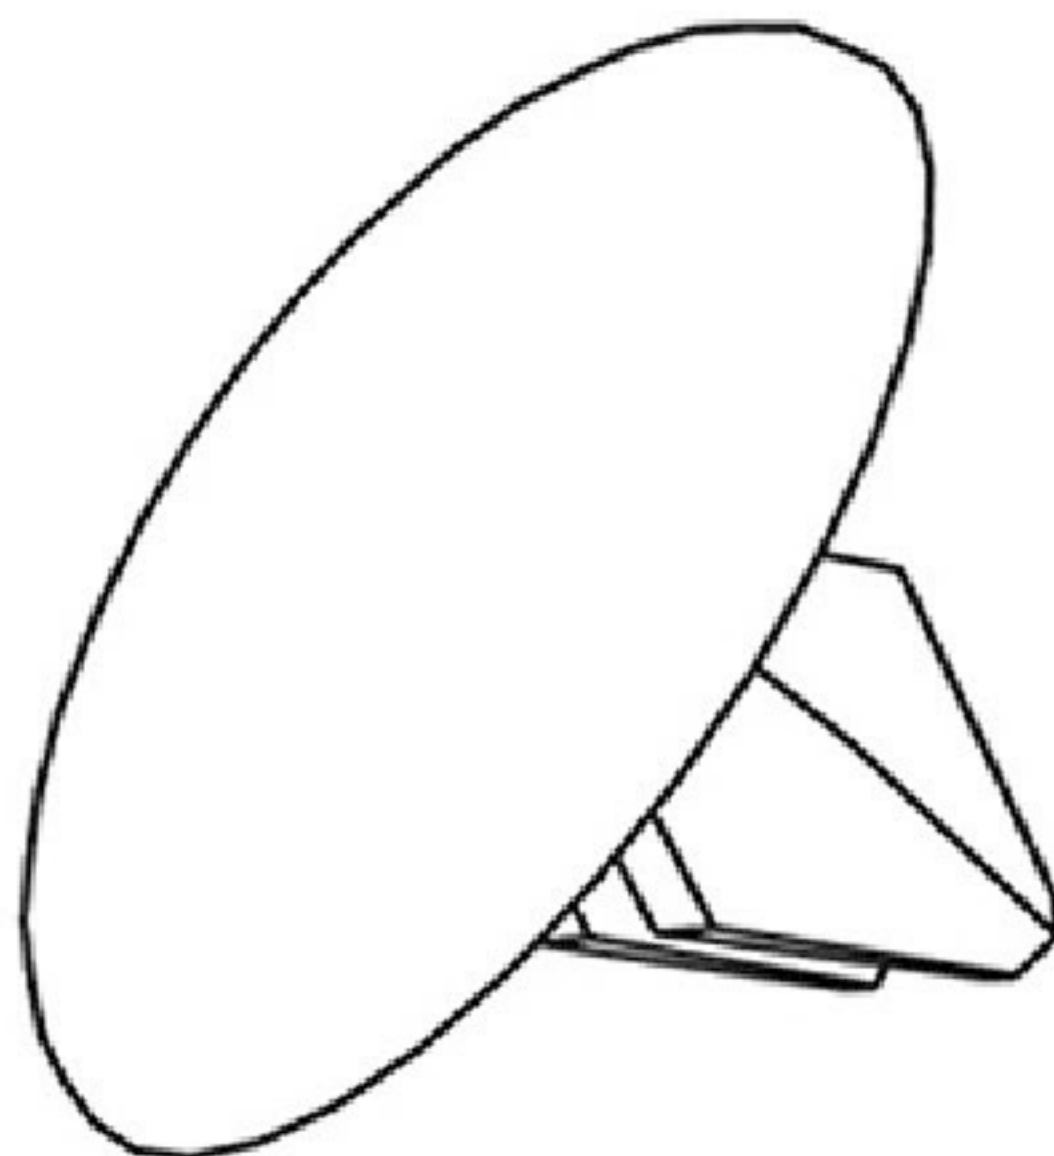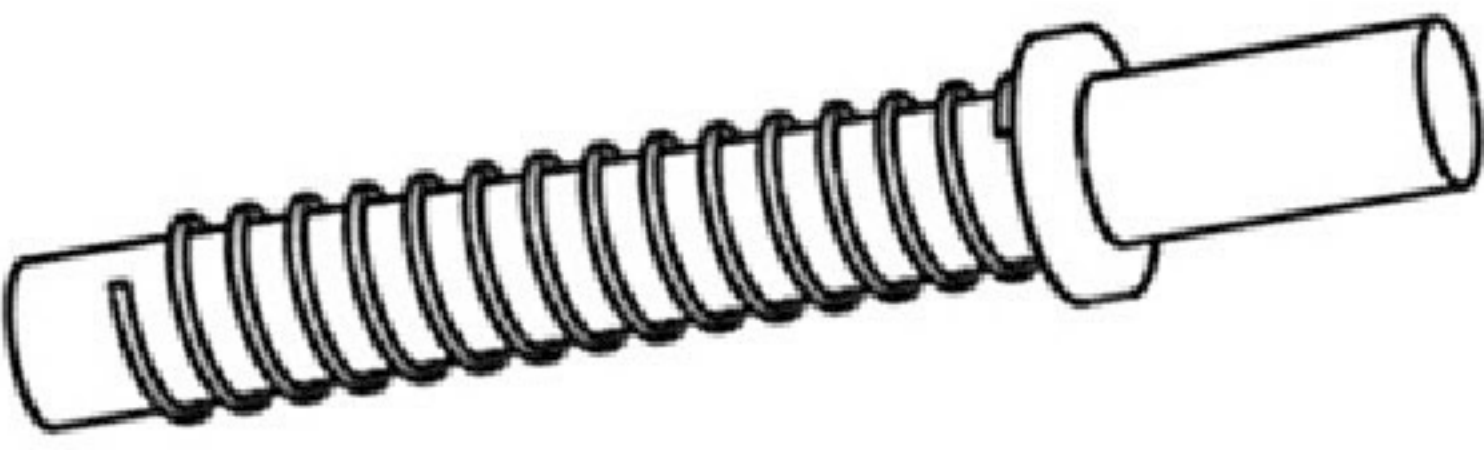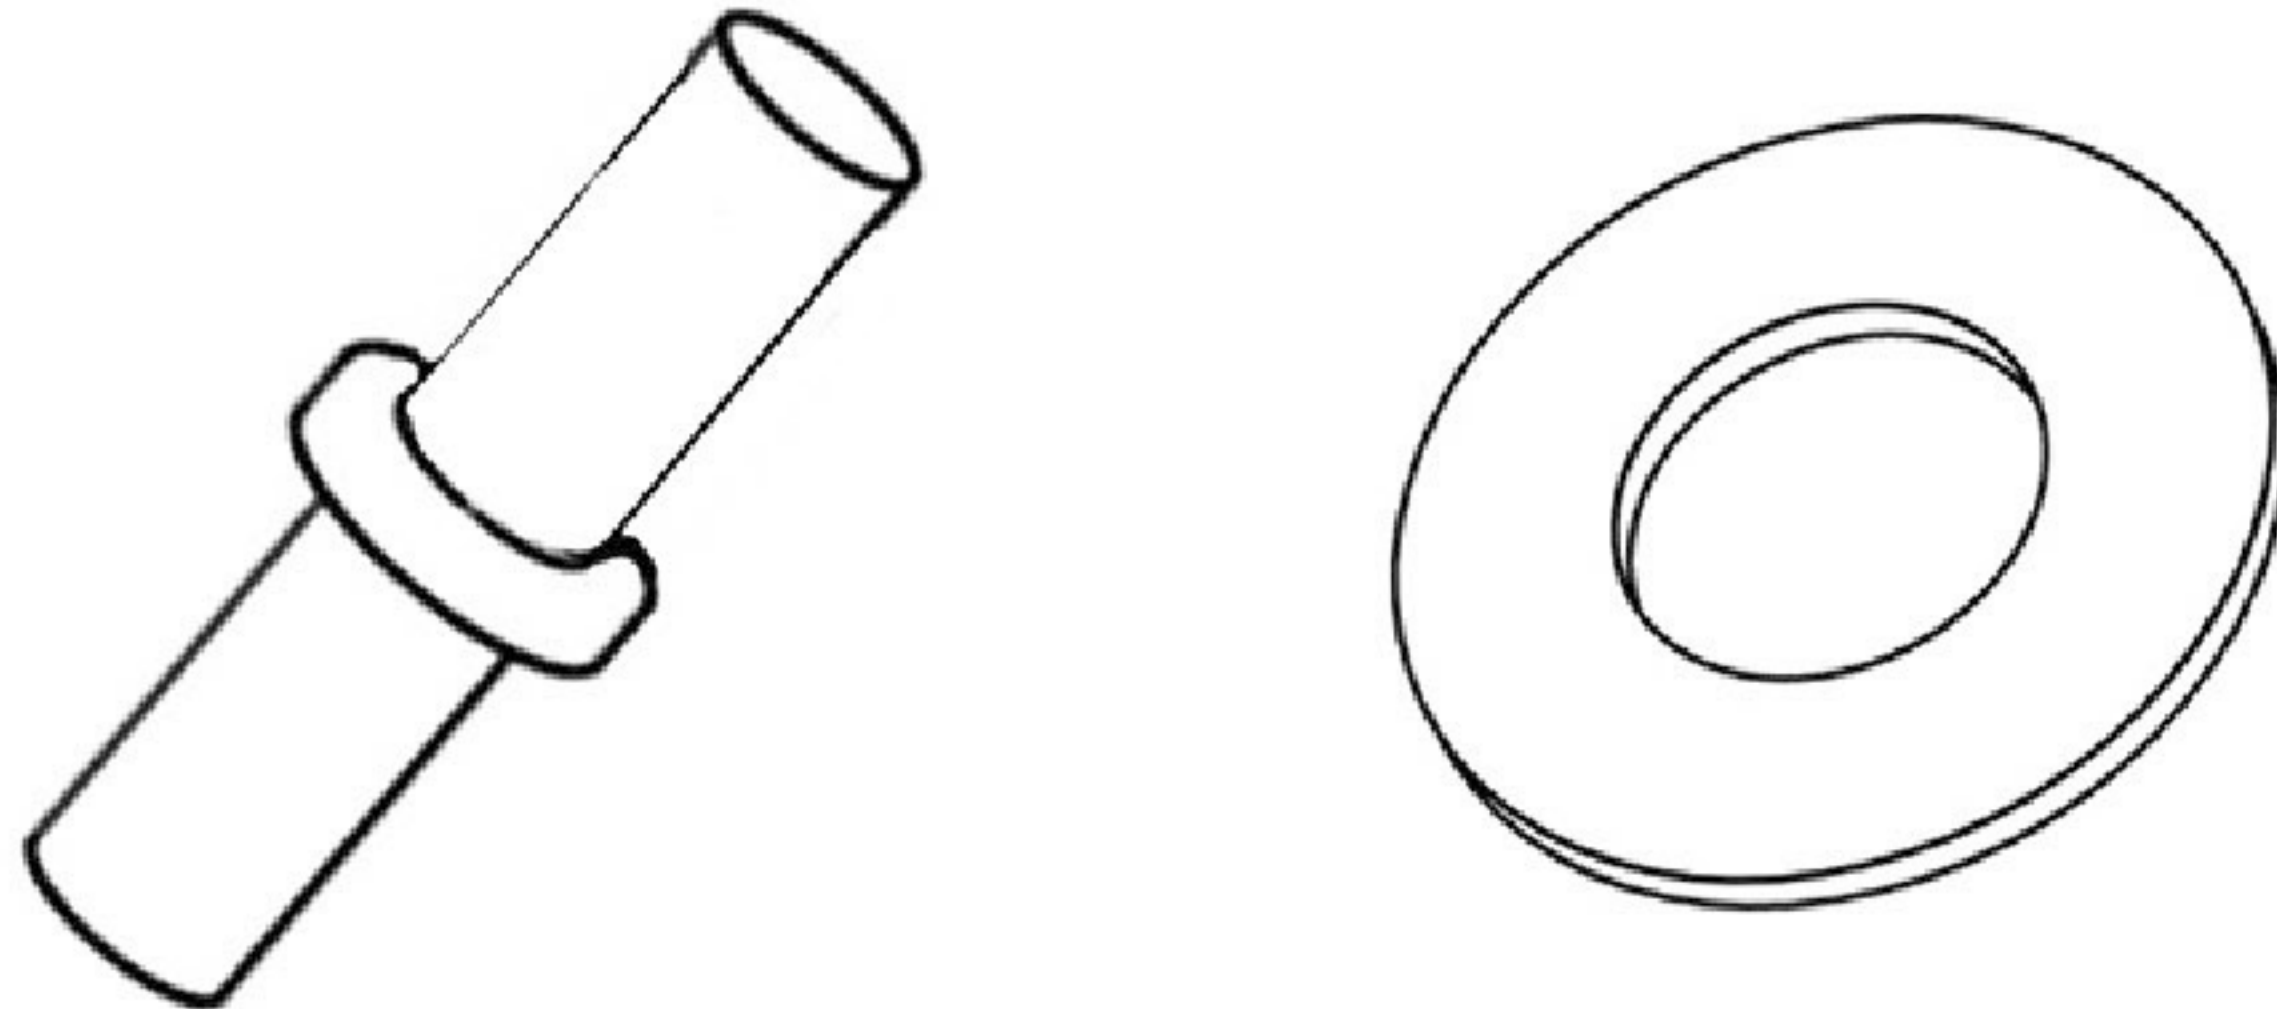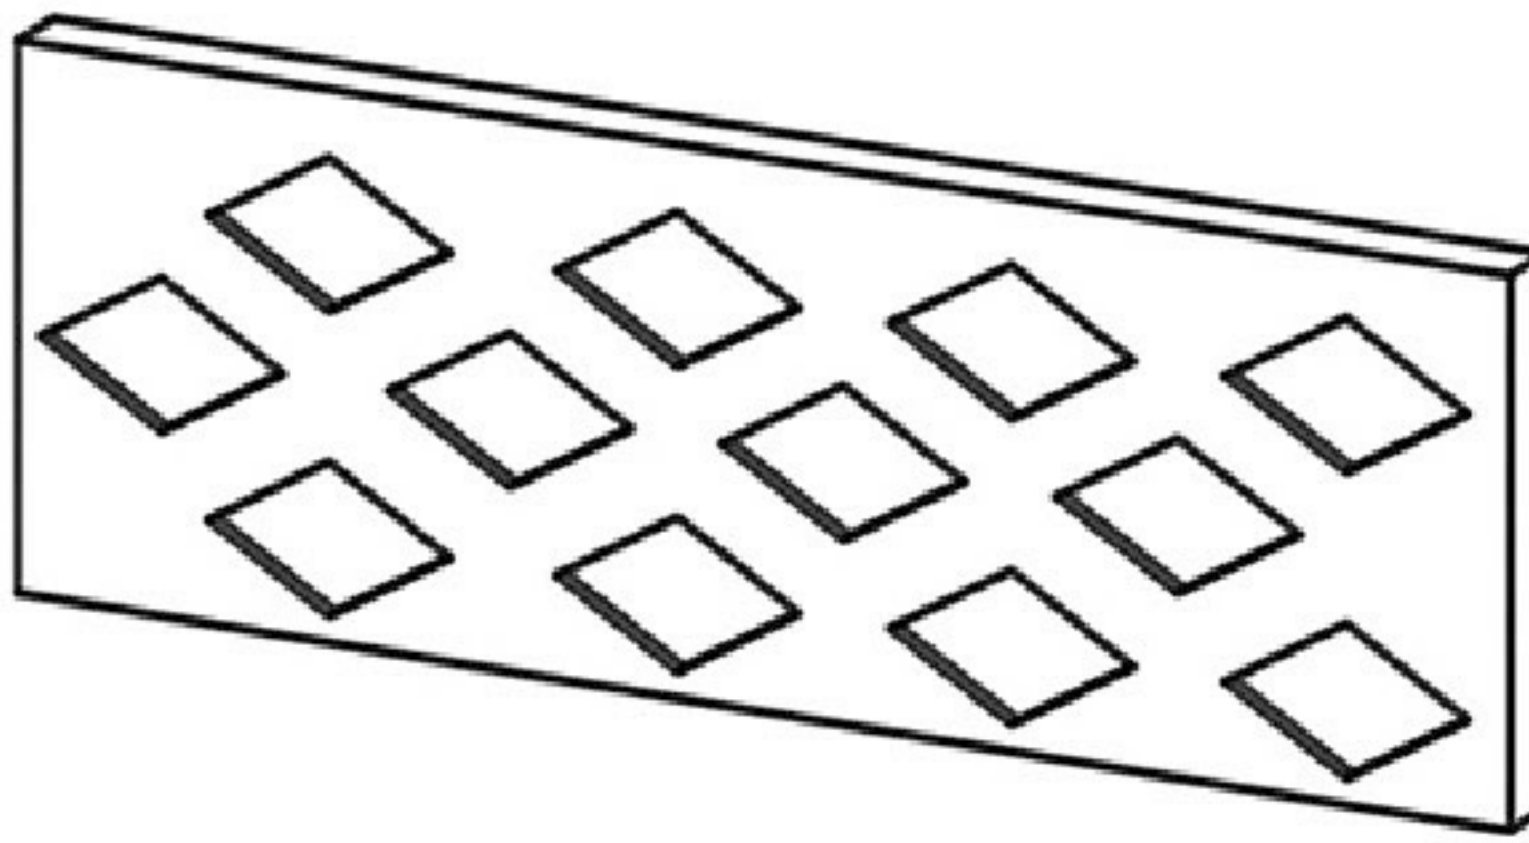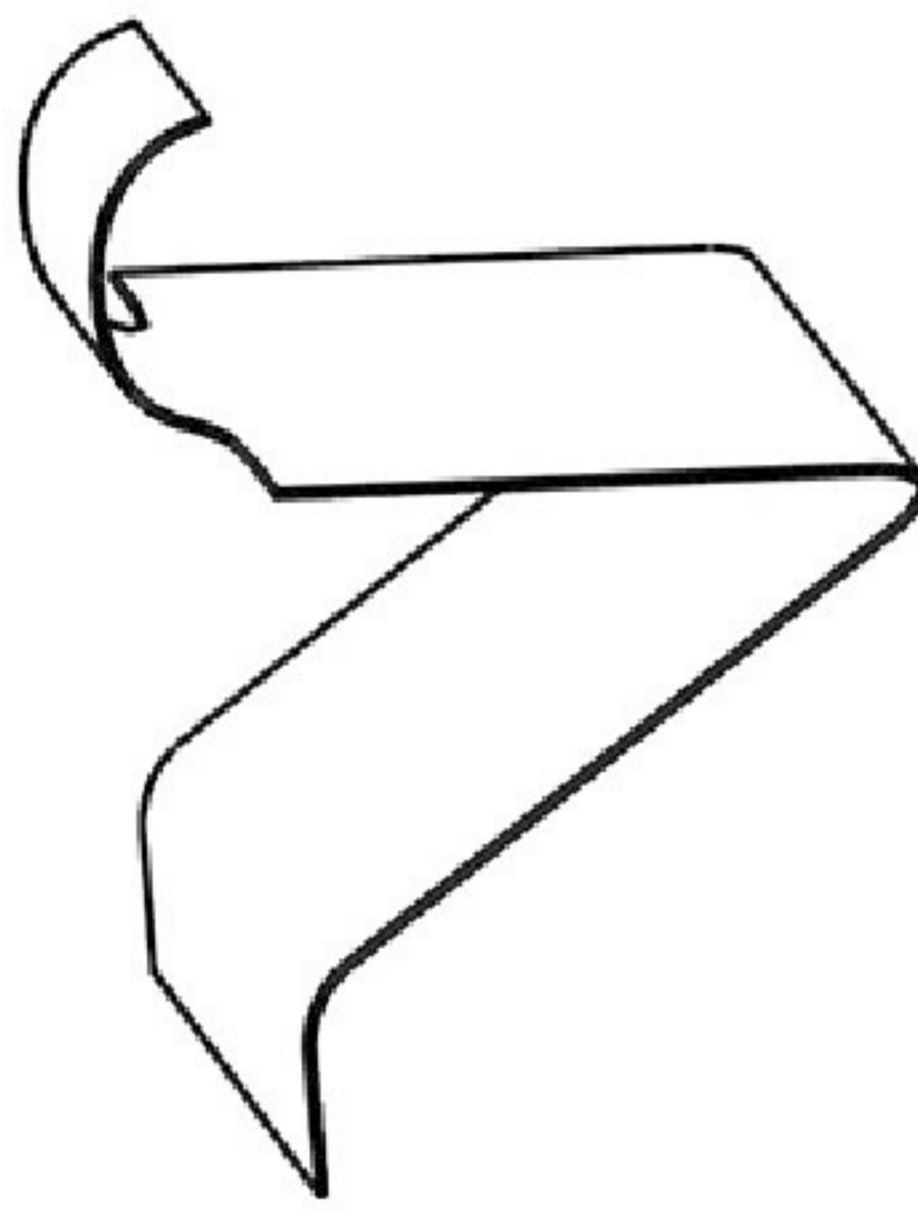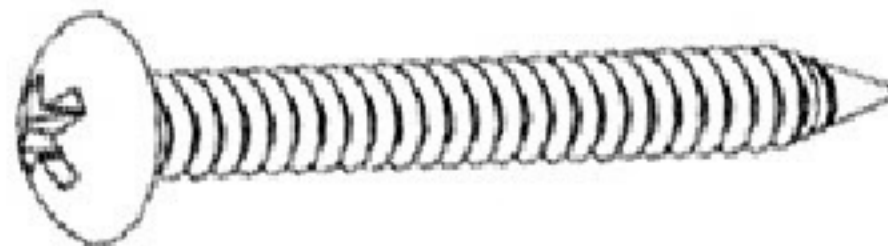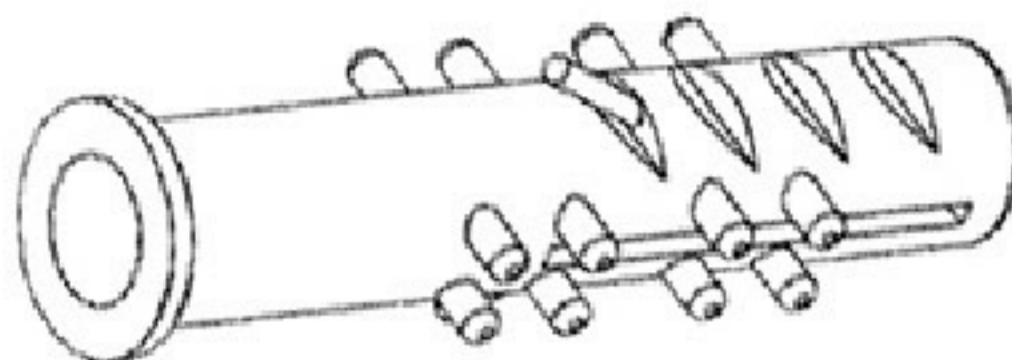N-M4*22 Screw	2PCS	O-M4*8 Screw	47PCS
			
M-Foot	4PCS	P-Stop Pad	2PCS
			
Q-Spring shaft	2PCS	R-Door Pivot & Shim	2PCS
 Already pre-installed on the doors			
T-Magnet	4PCS	U-Shelf Clasp	20PCS
			
V-Expansion Screw	2PCS		
 			




Step 1

   Connect left side panel A and left back panel B with 4 screws O

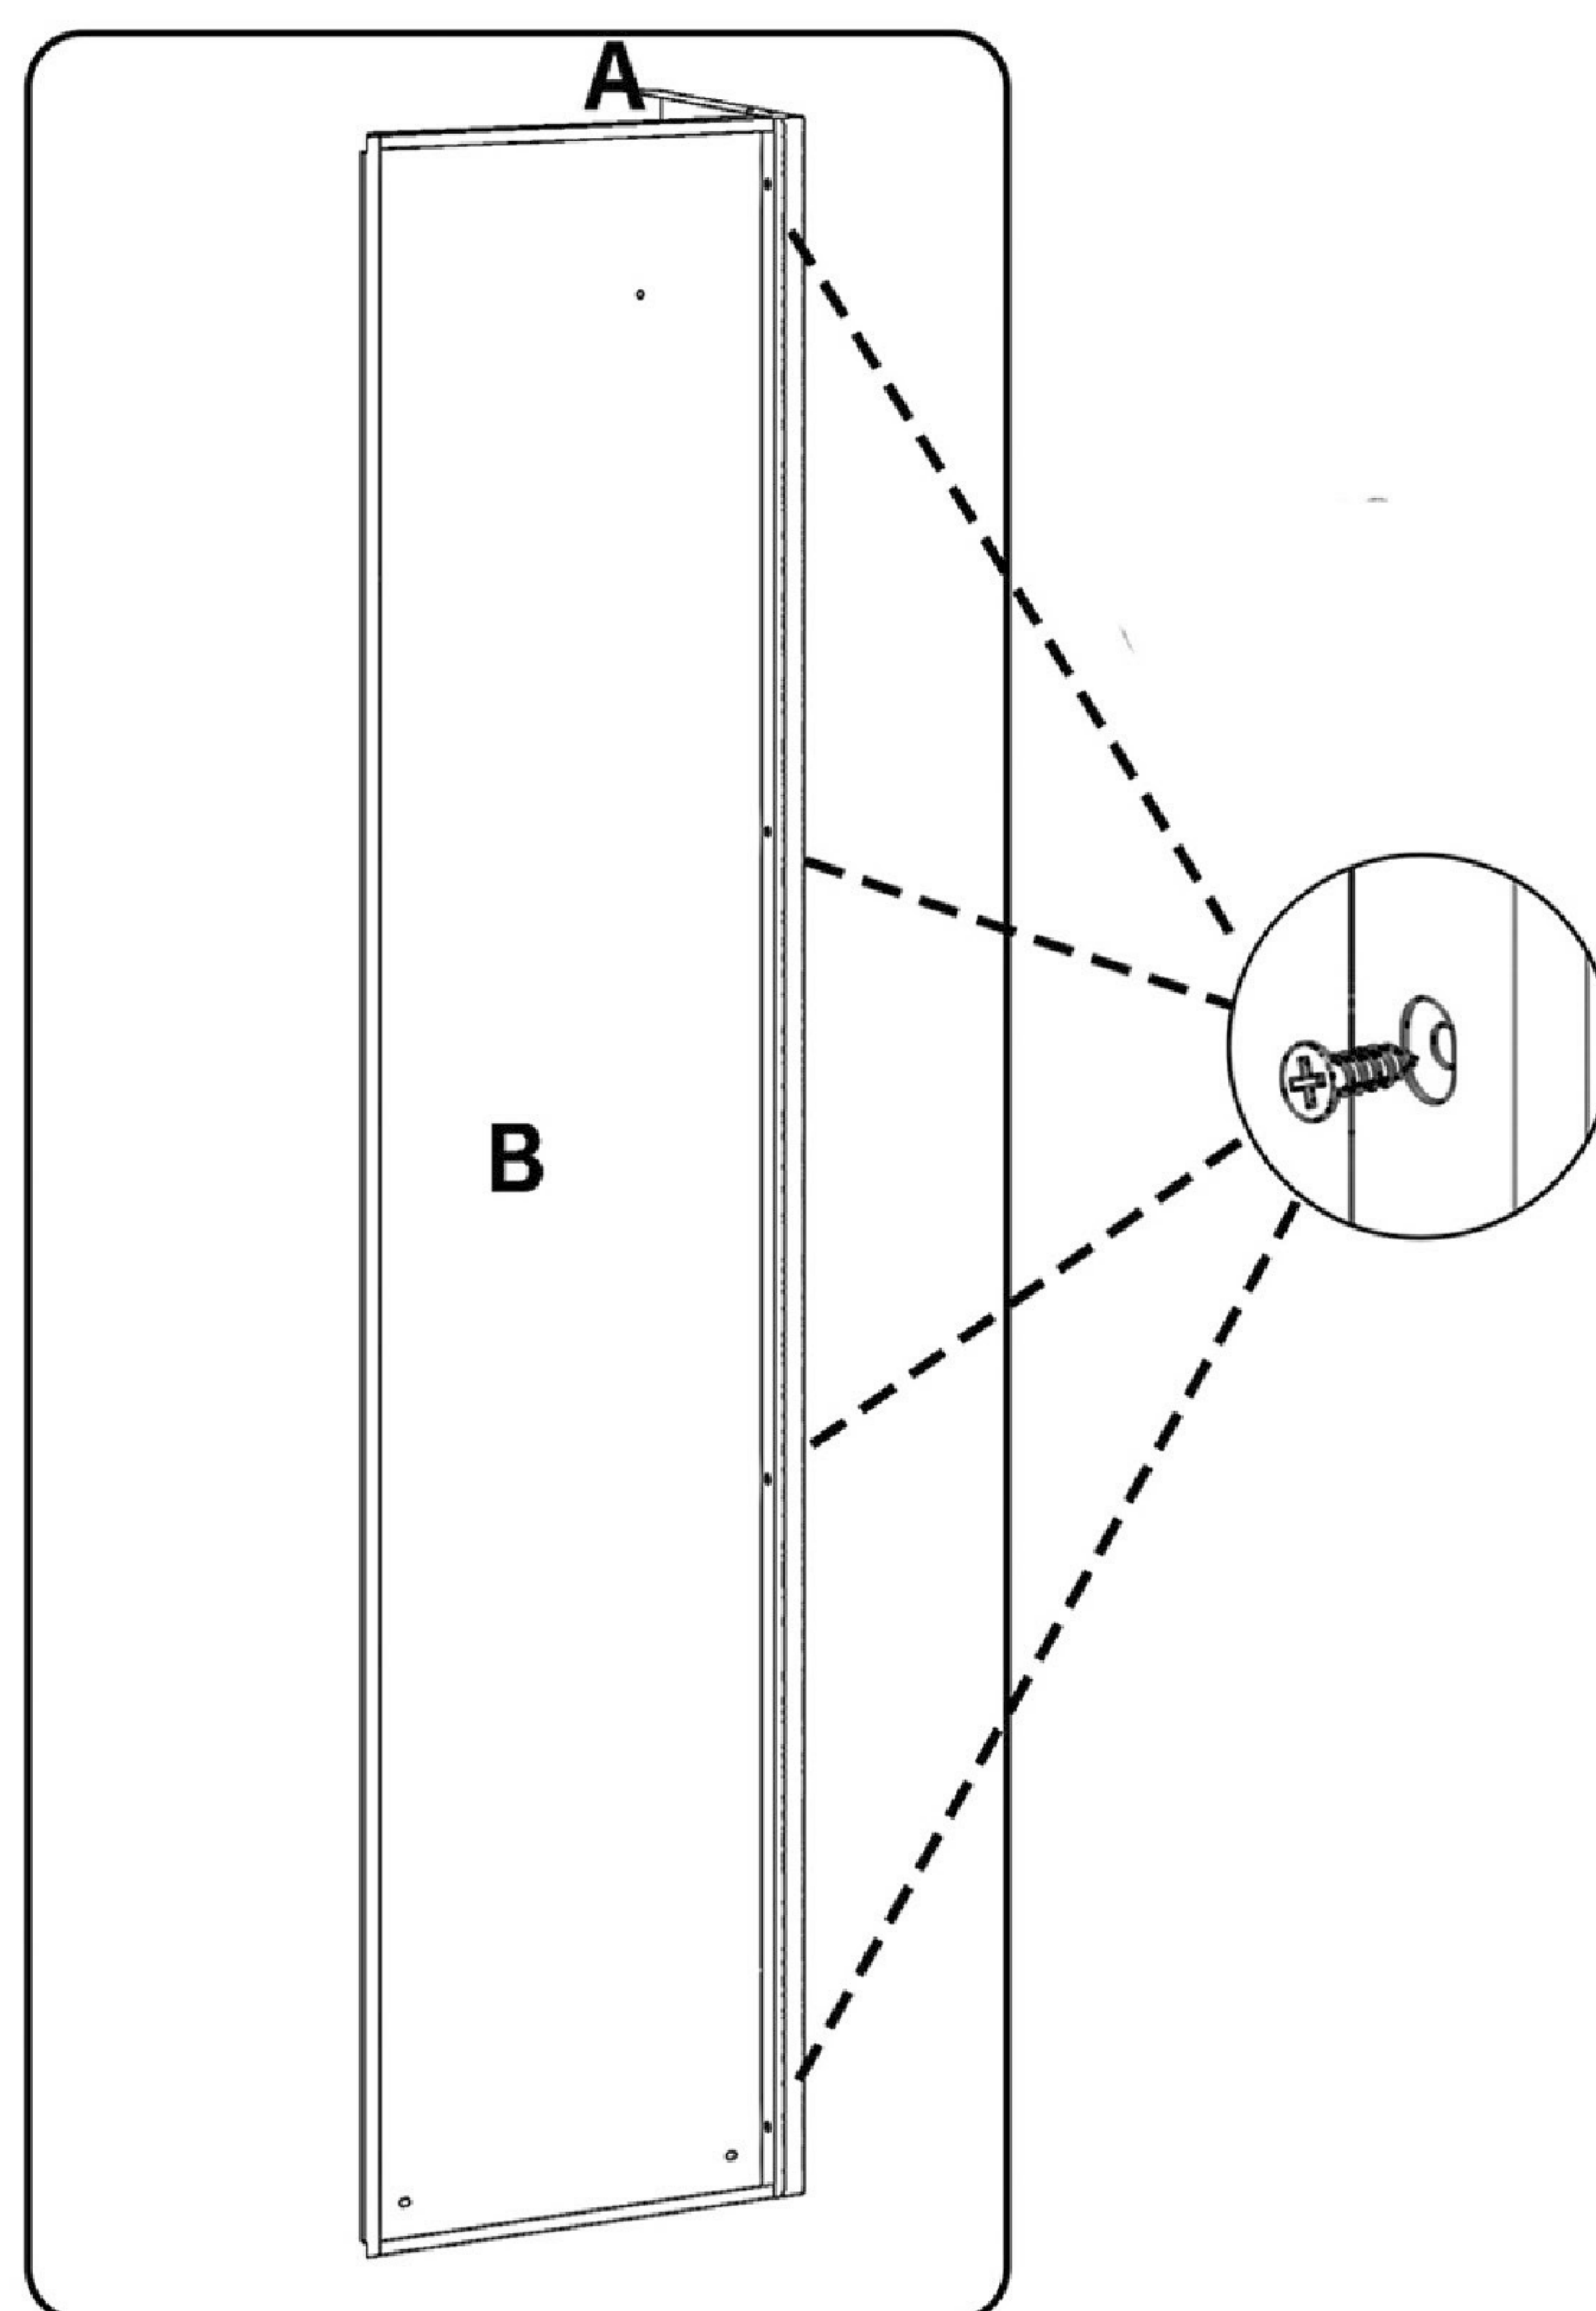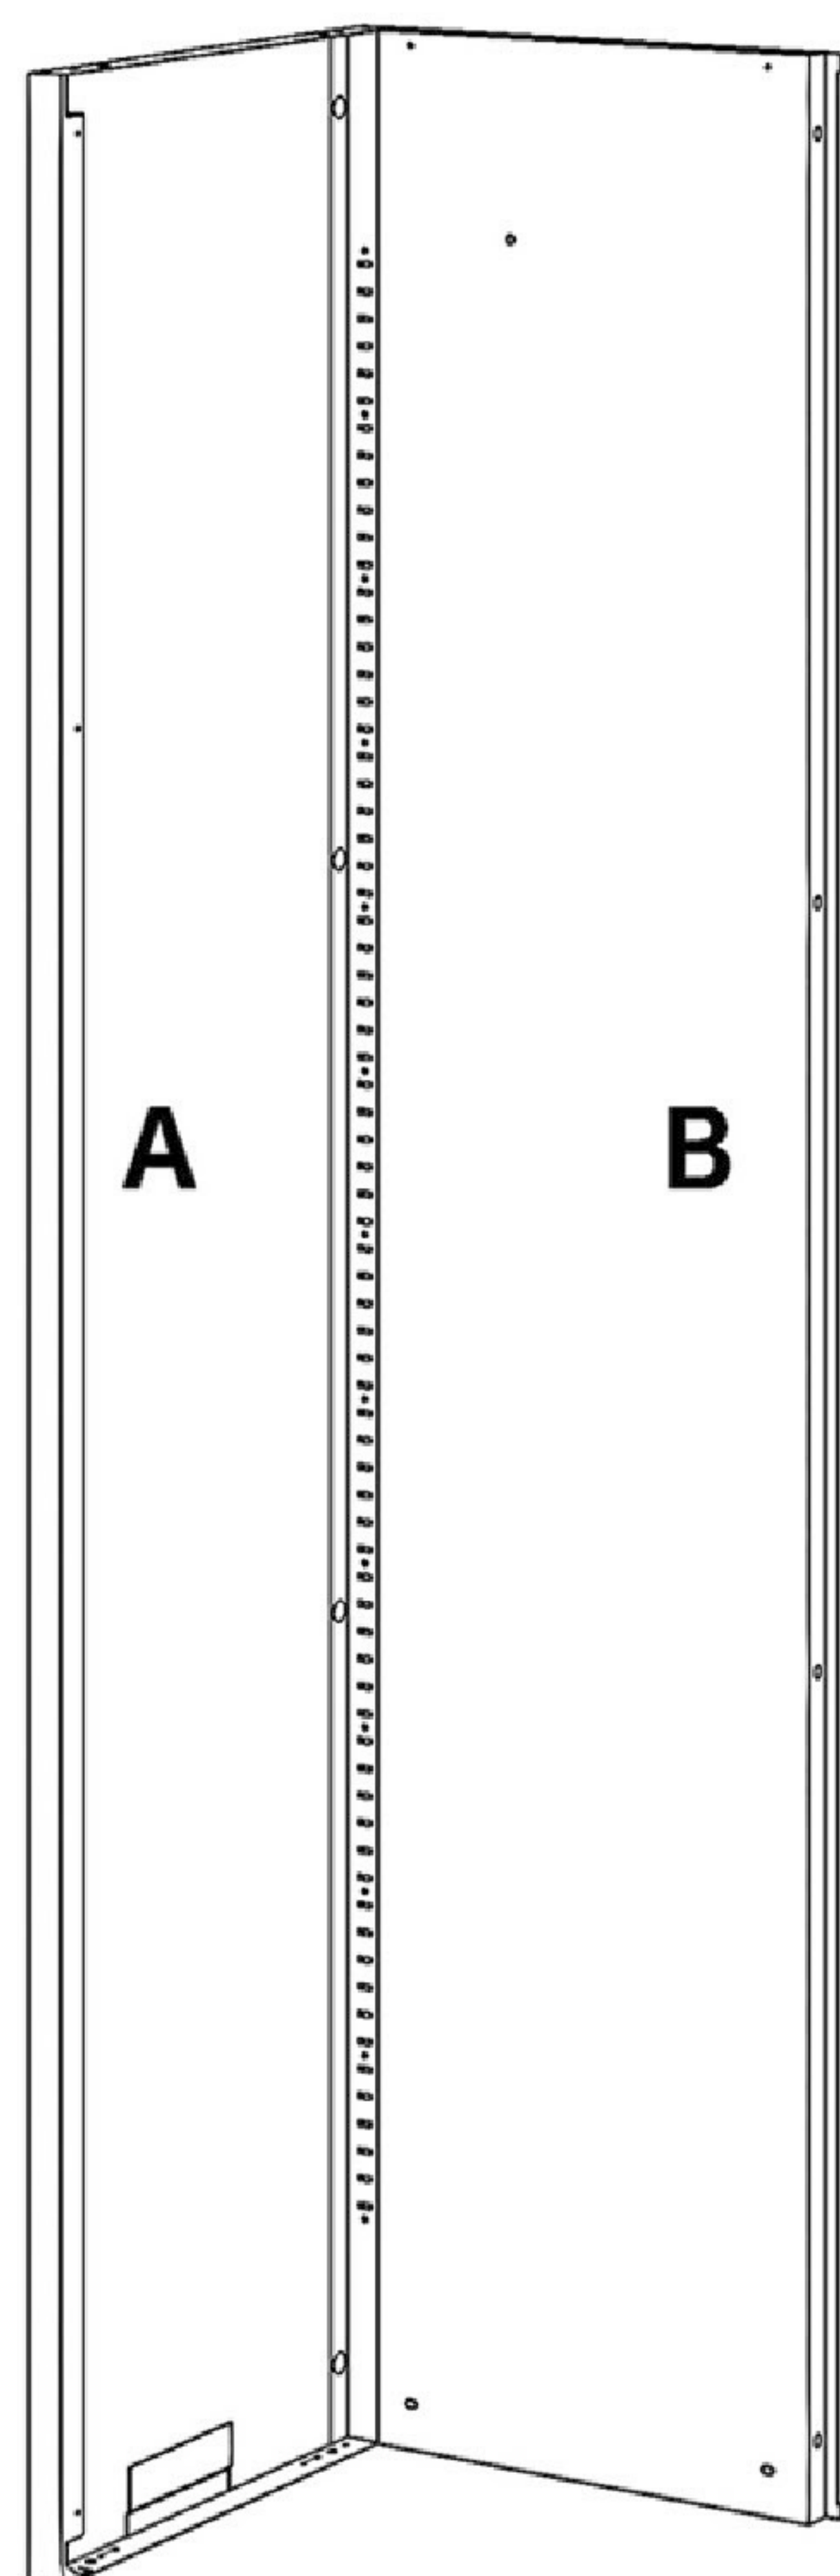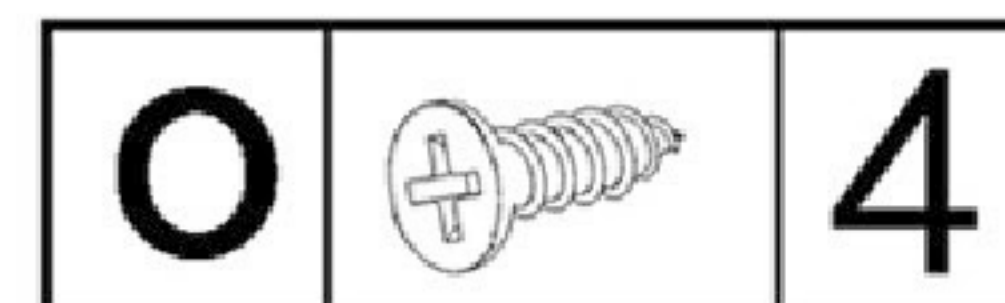

Step 2

   
Connect left back panel B and right back panel C with 4 screws O

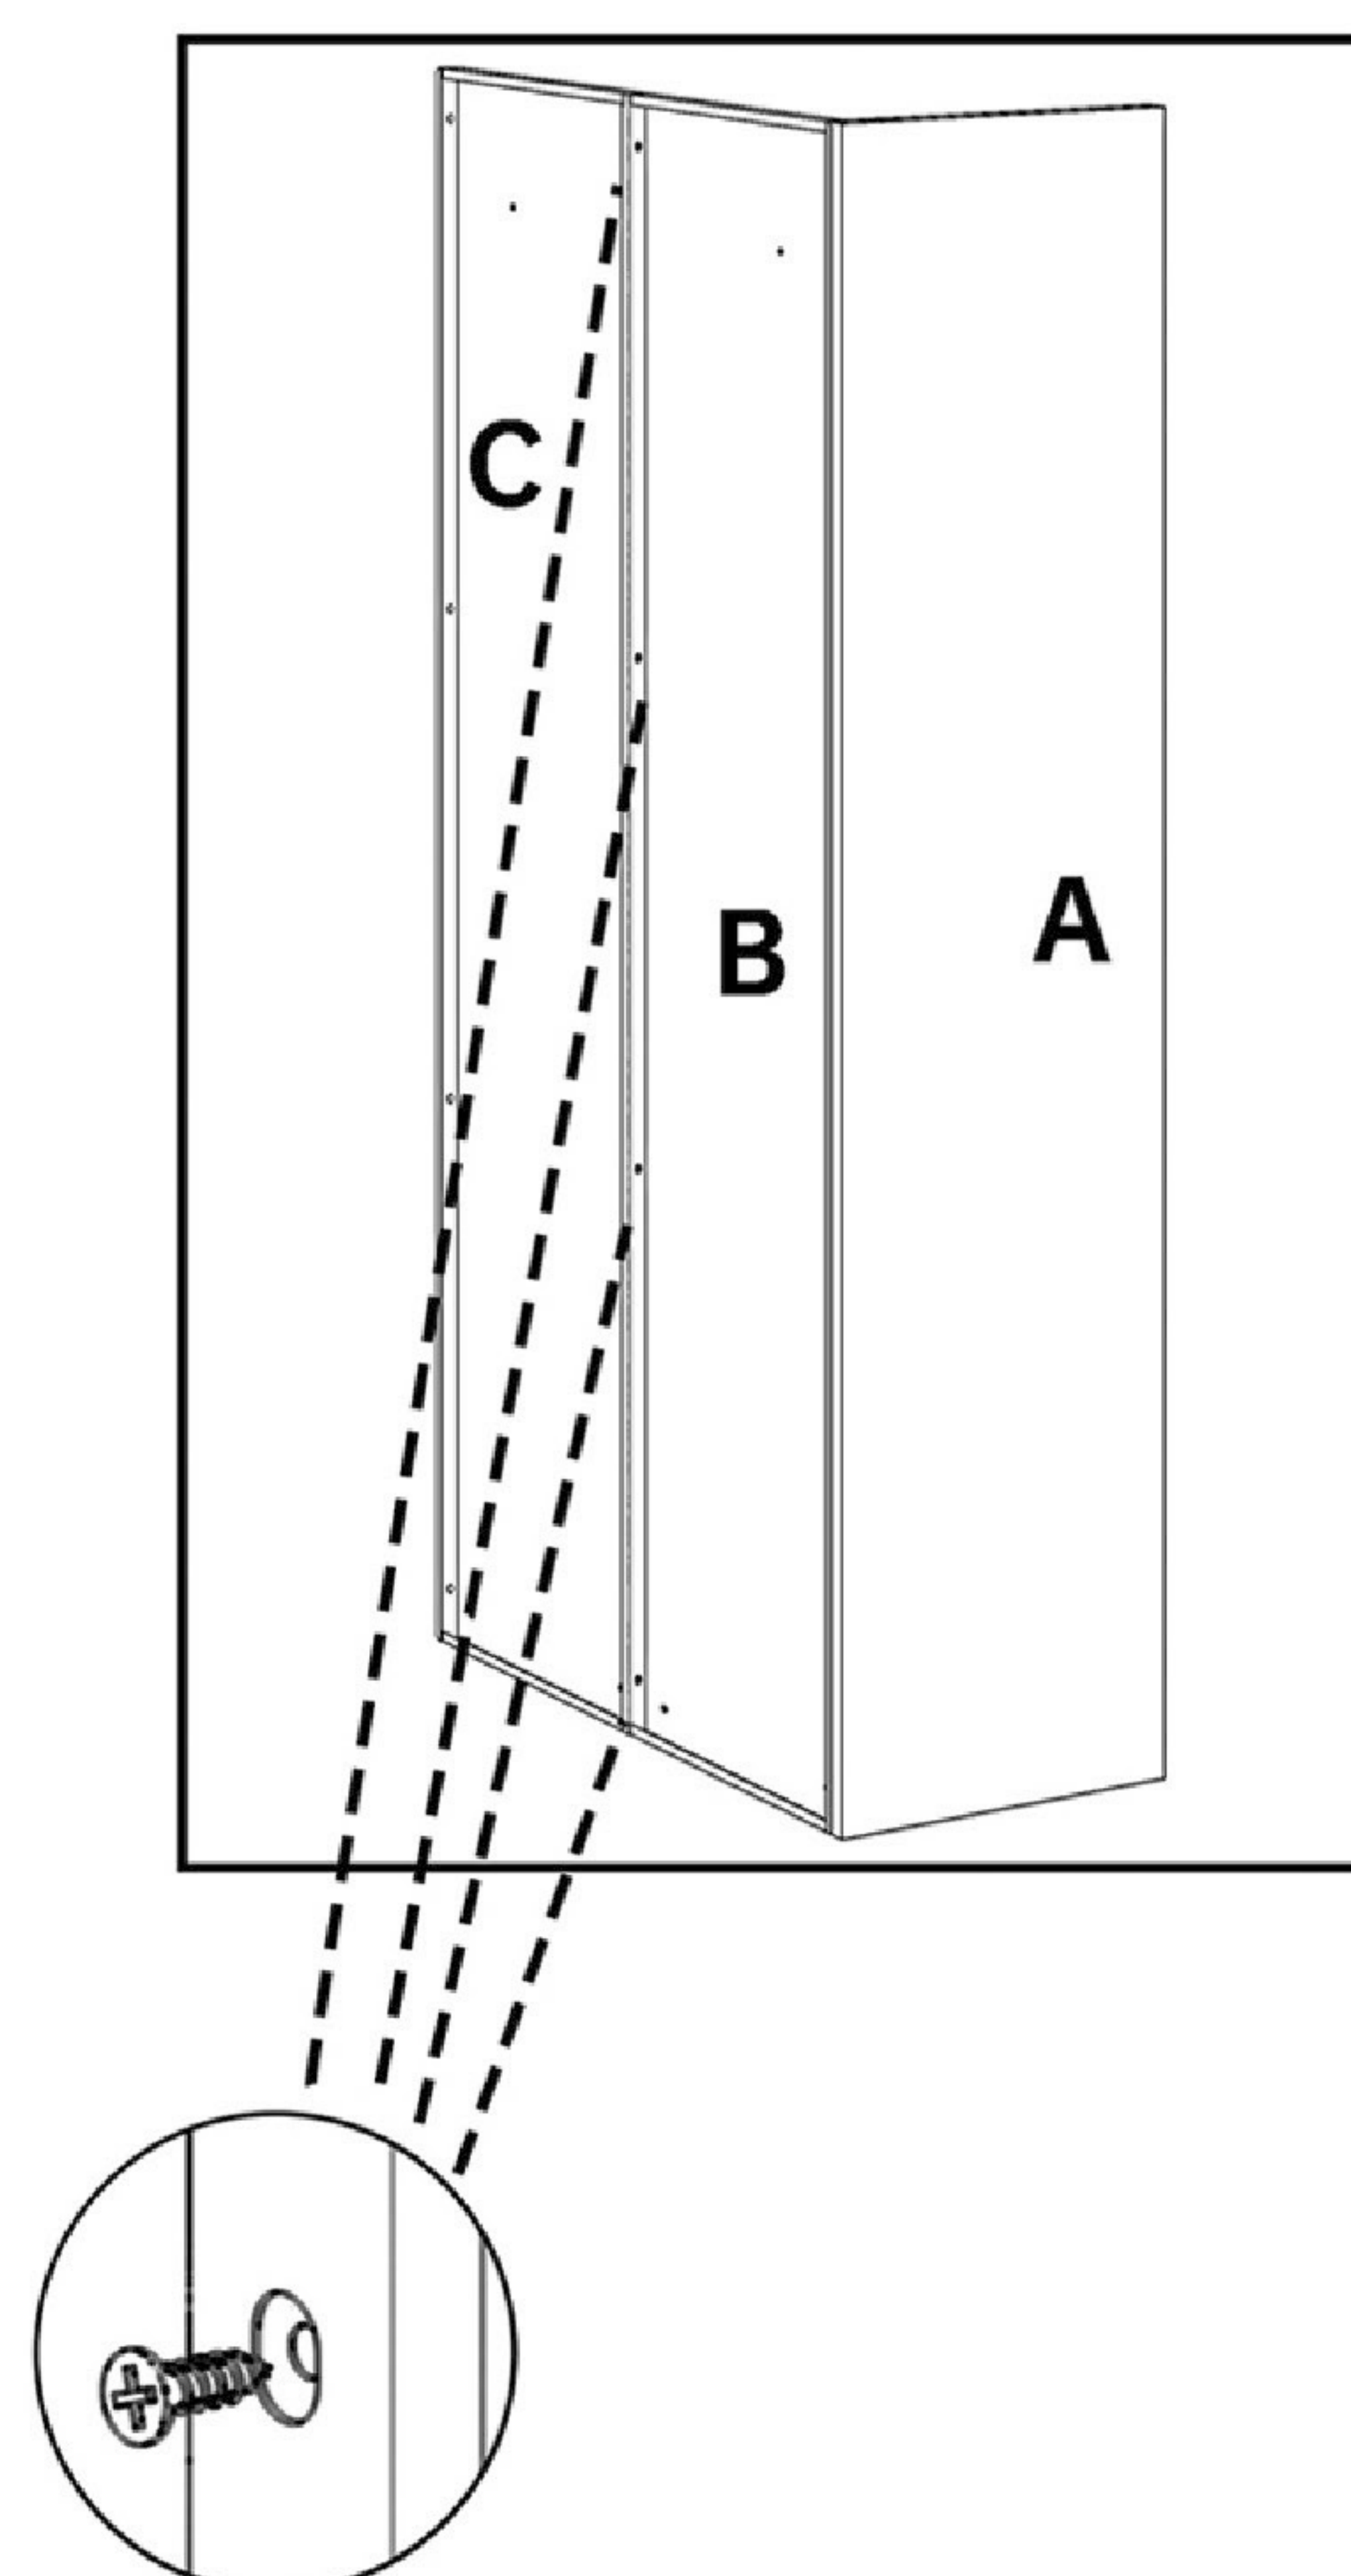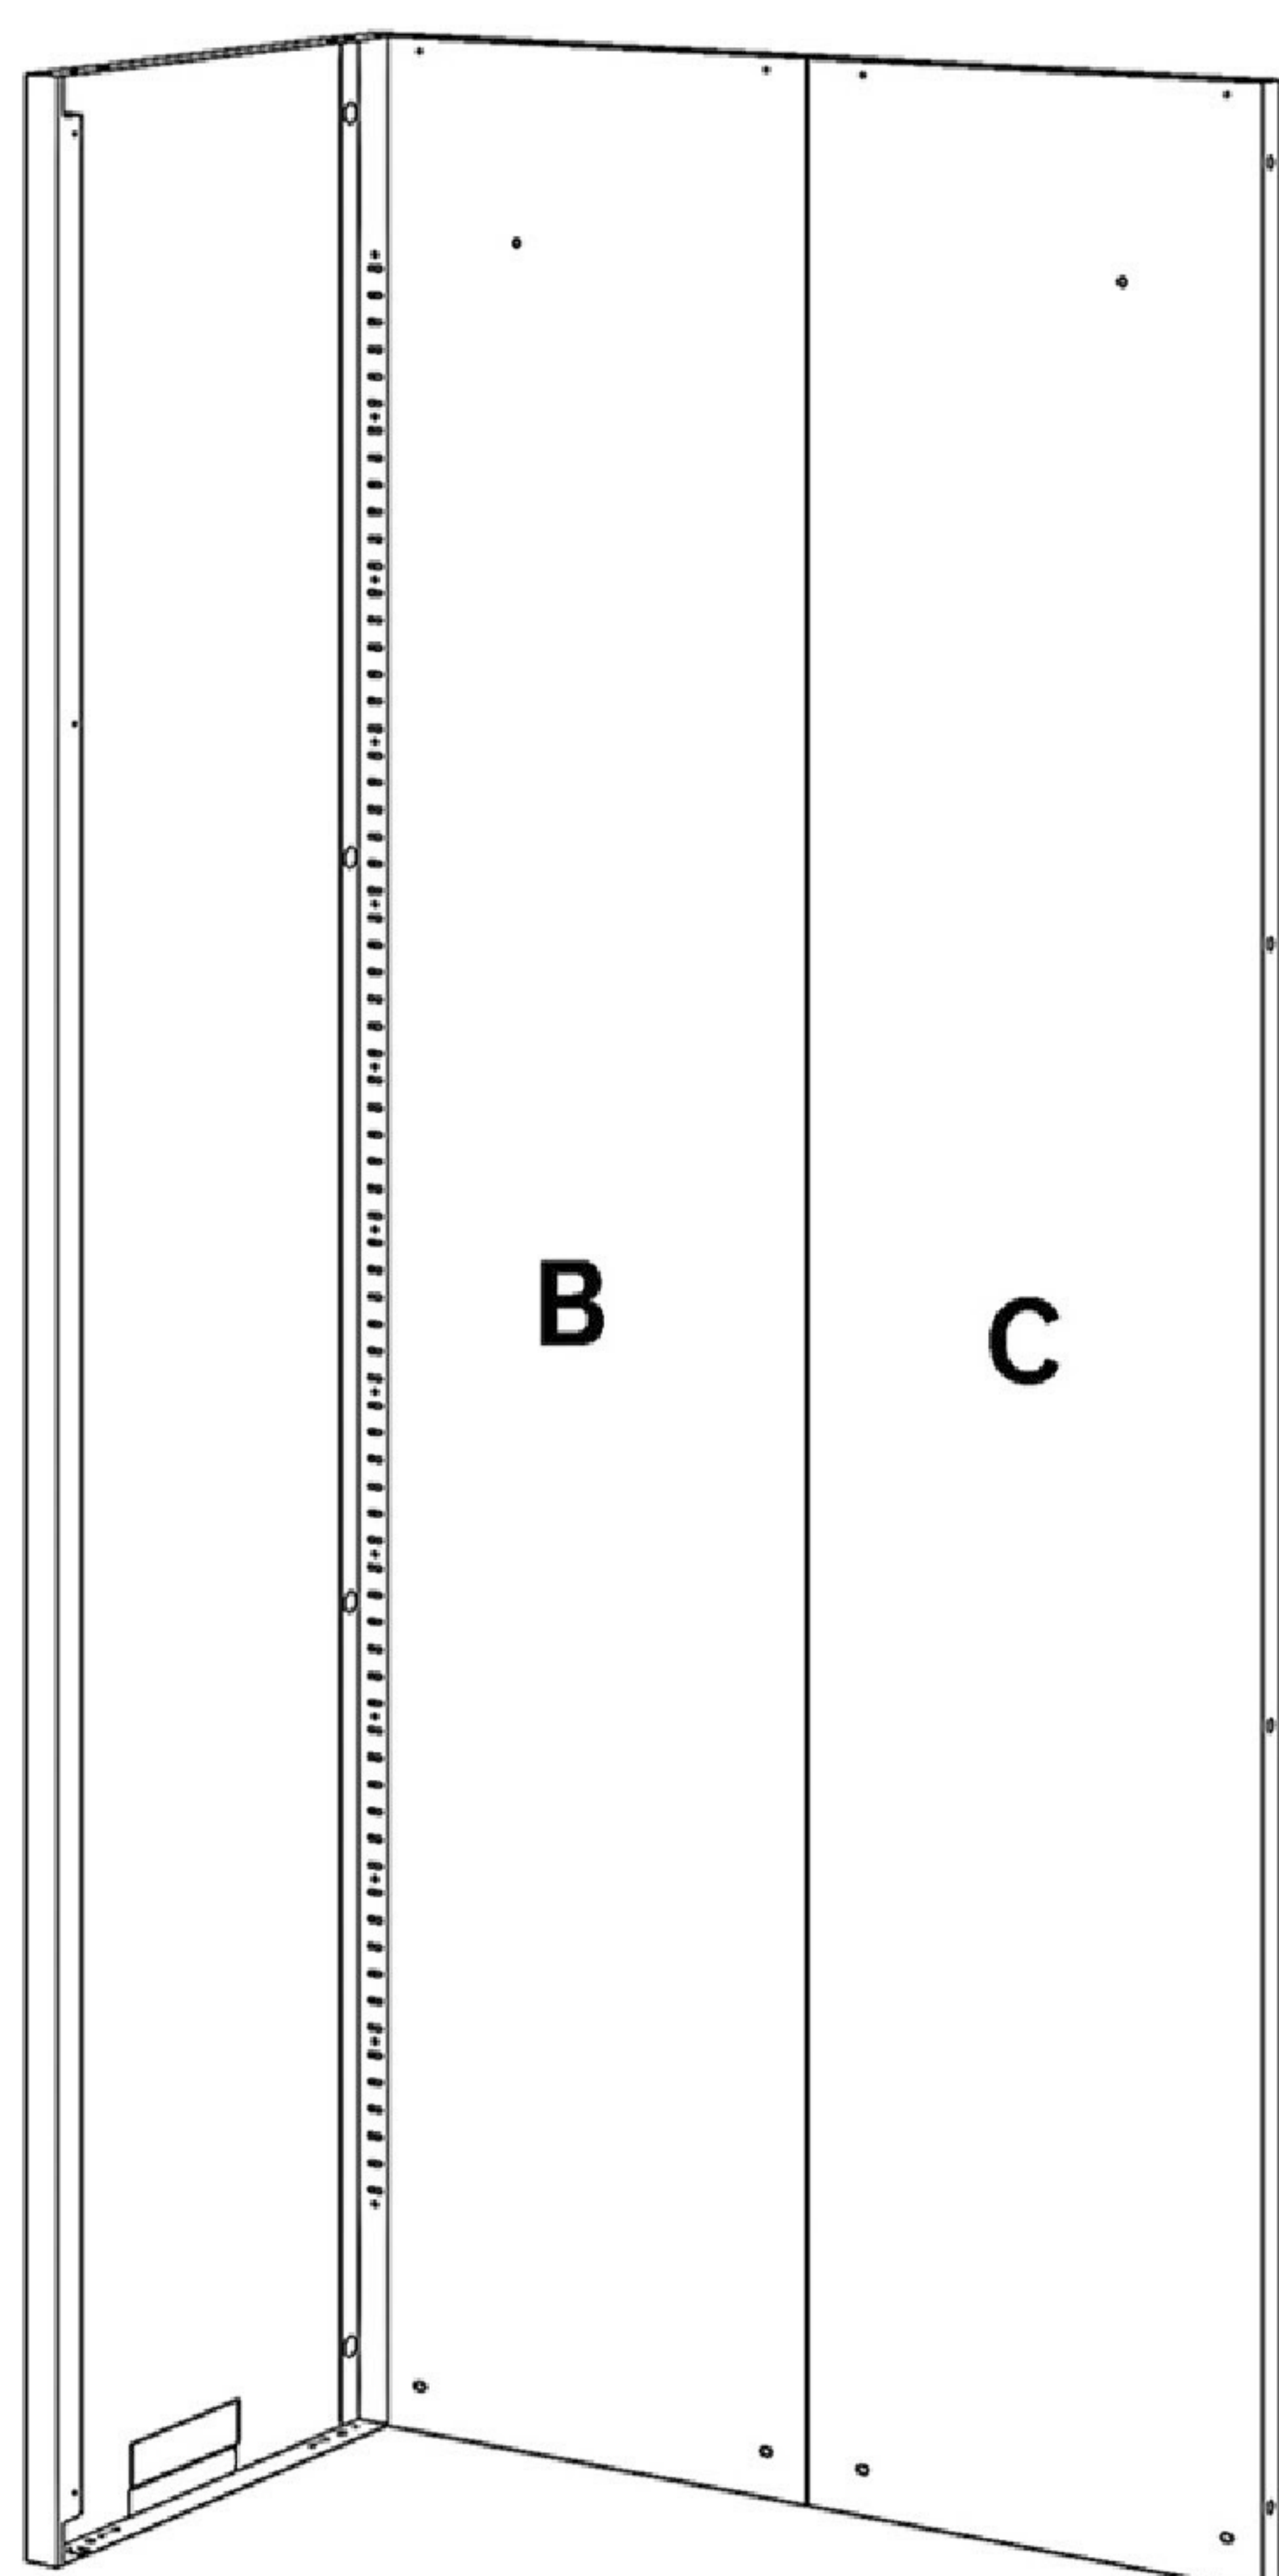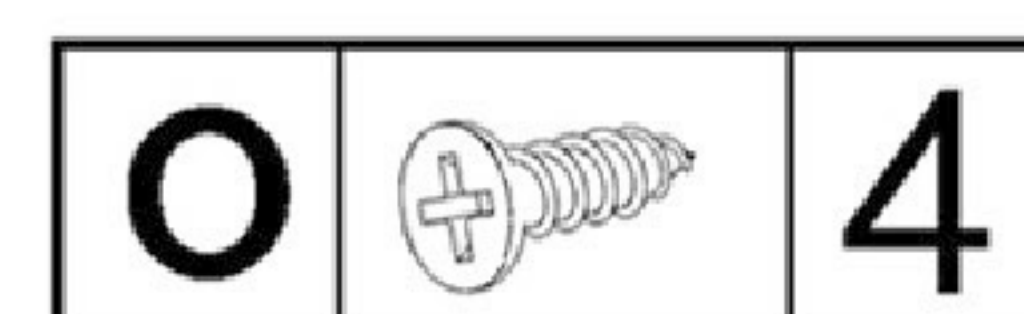

Step 3

O		4
---	---	---

 
Connect right back panel C and right side panel D with 4 screws O

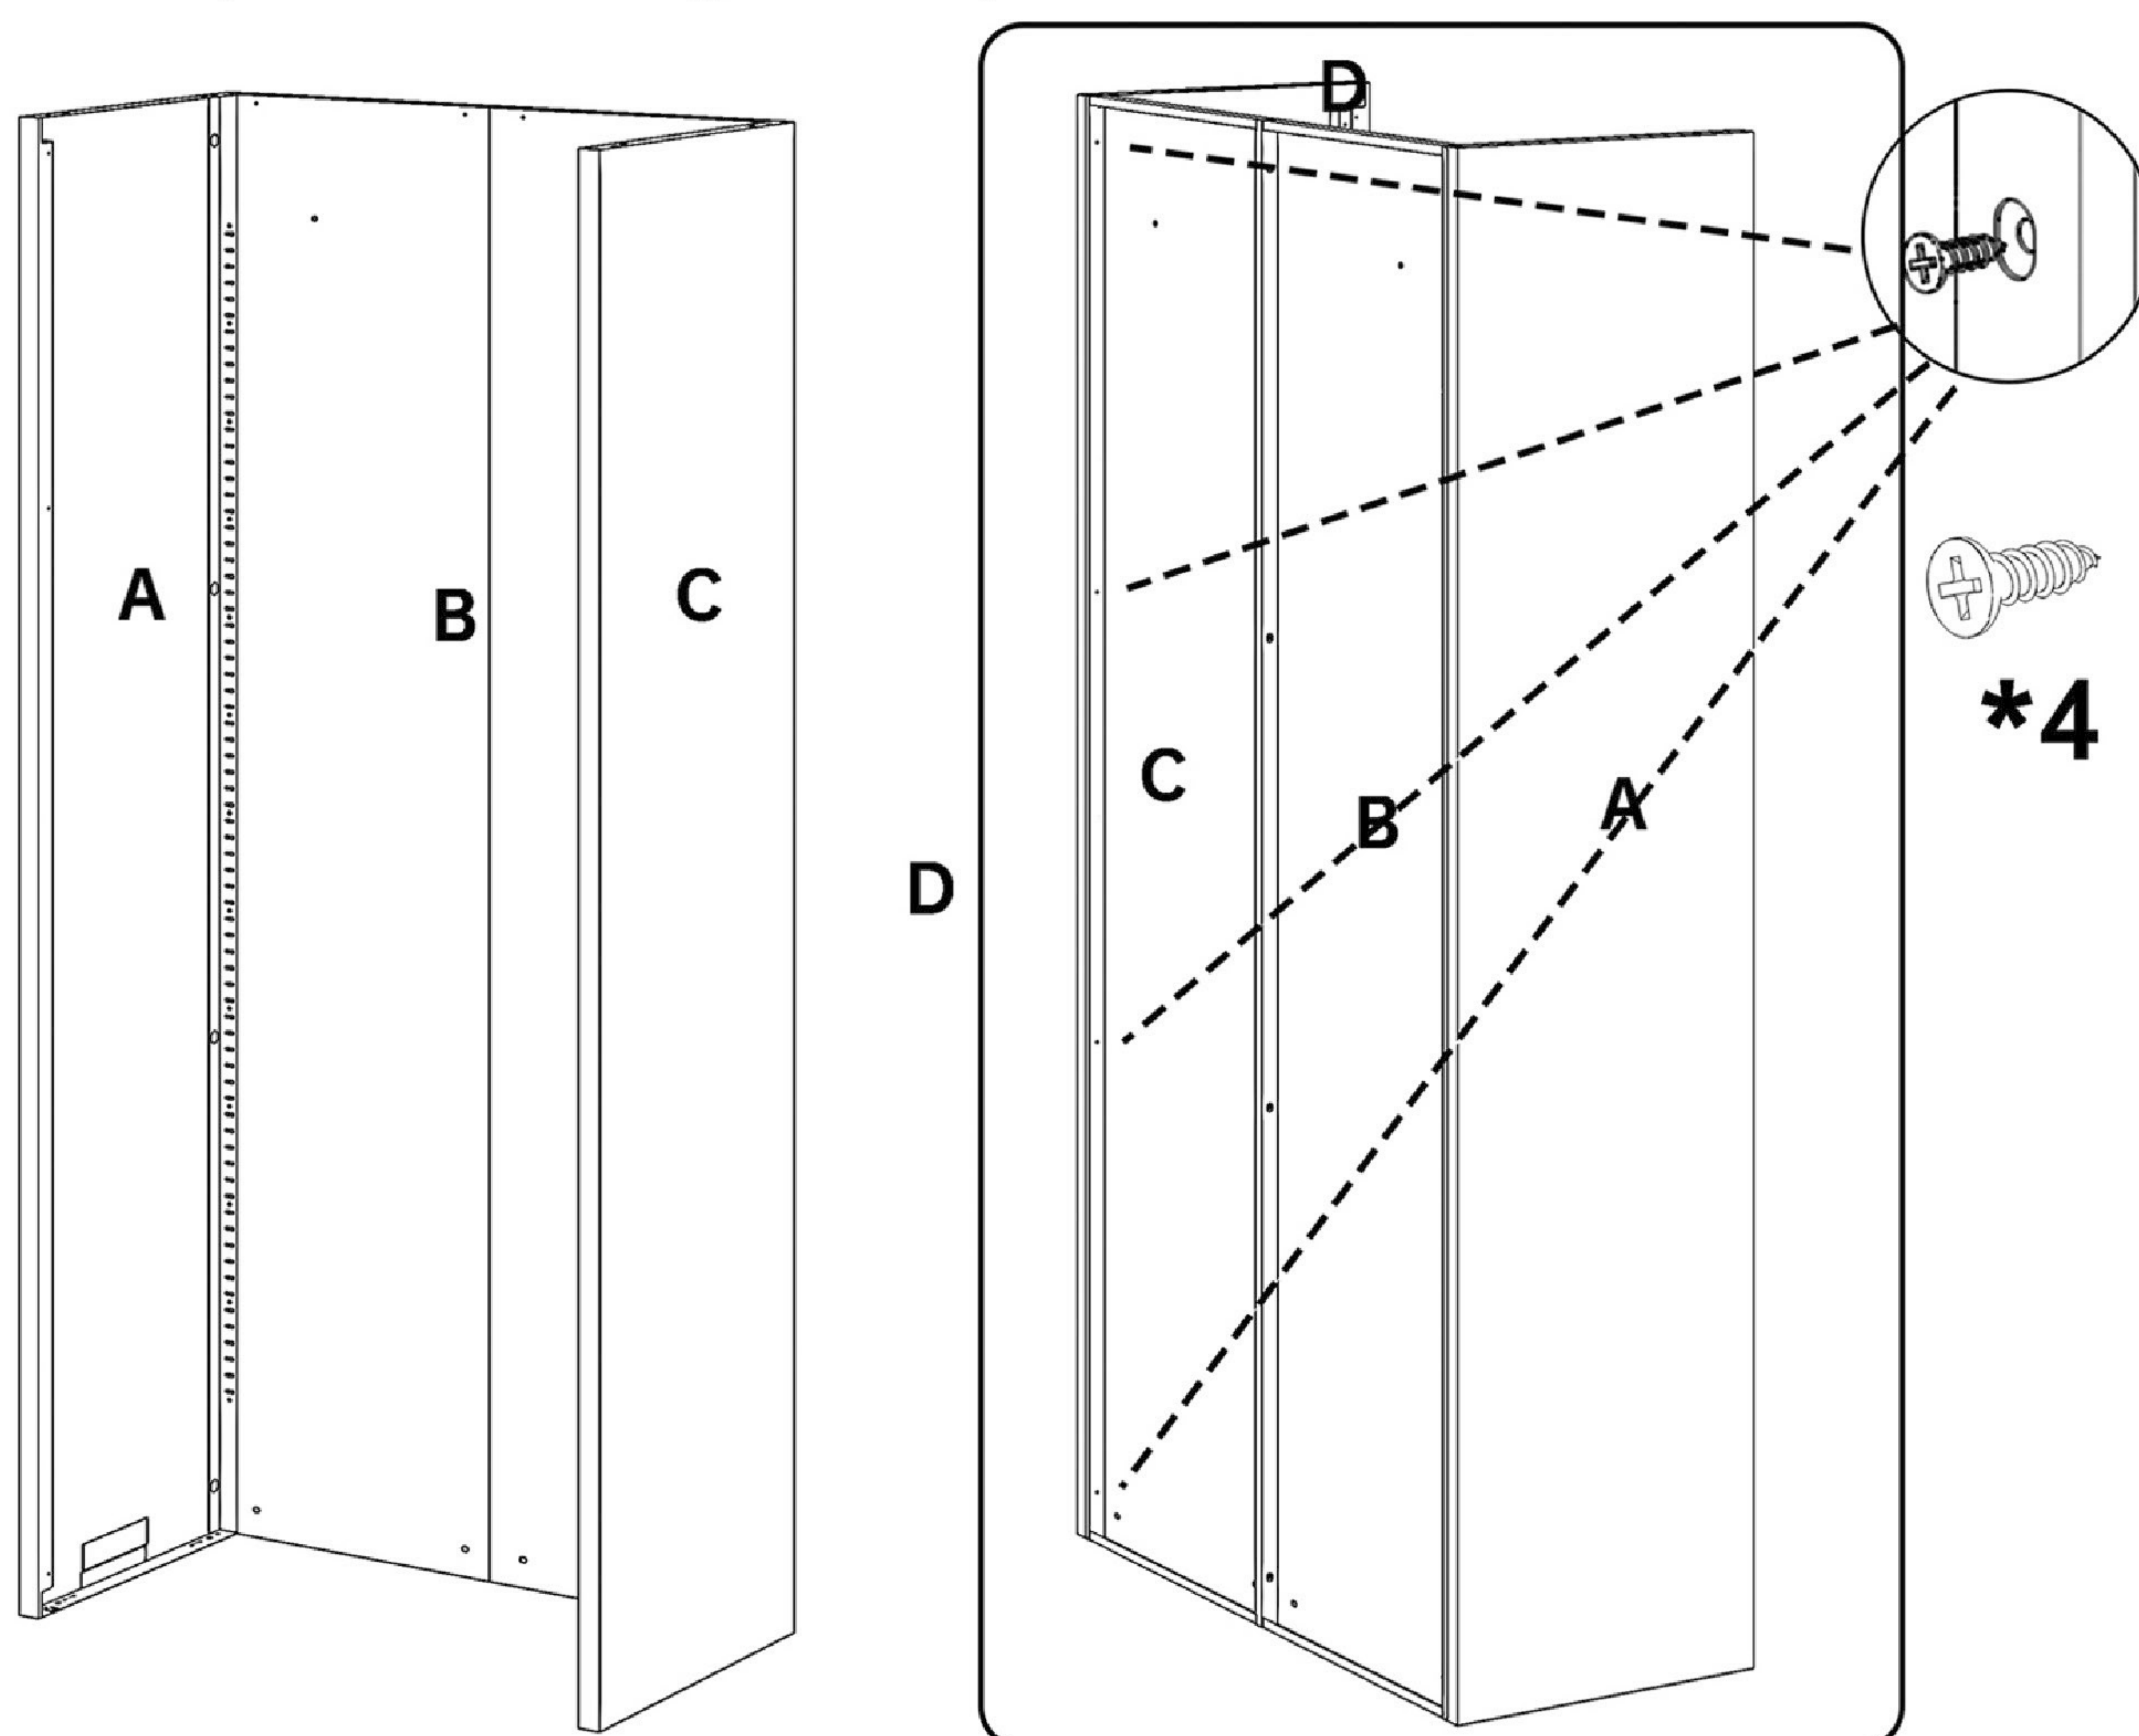


Step 4

O		4
---	---	---

 
Connect kick plate E with side panels and fix them with 4 screws O

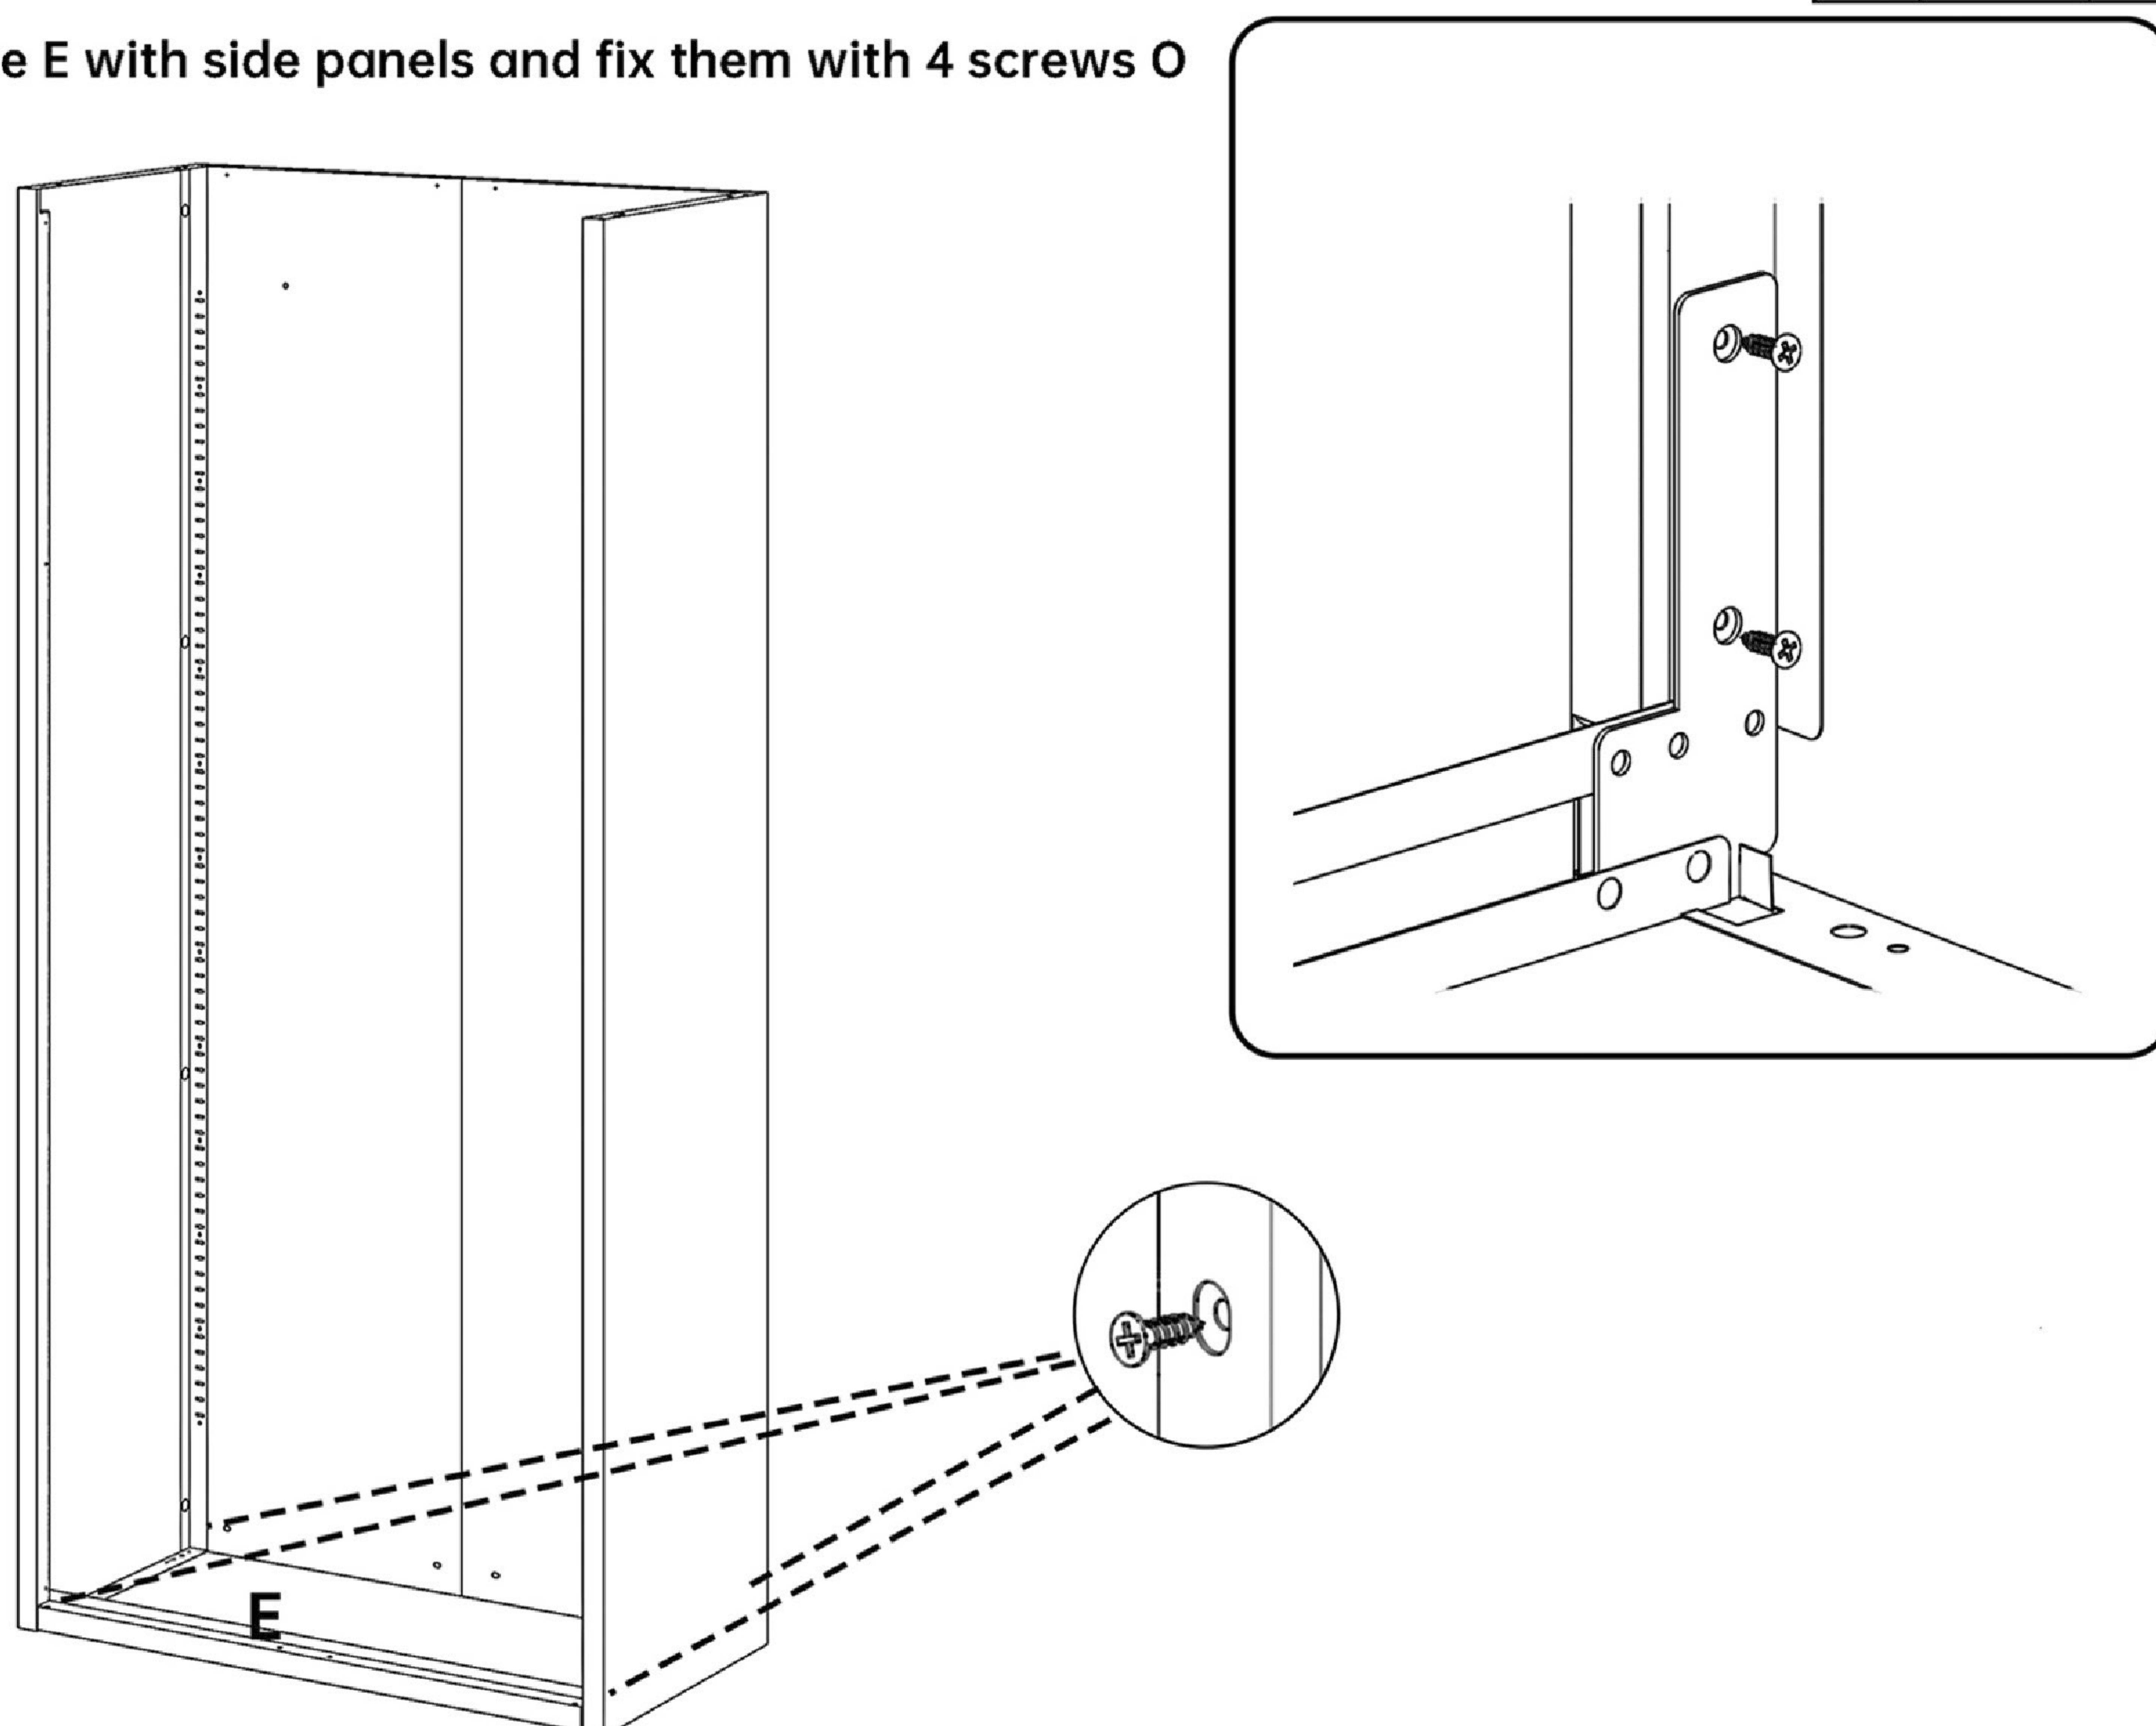

 
Step 5

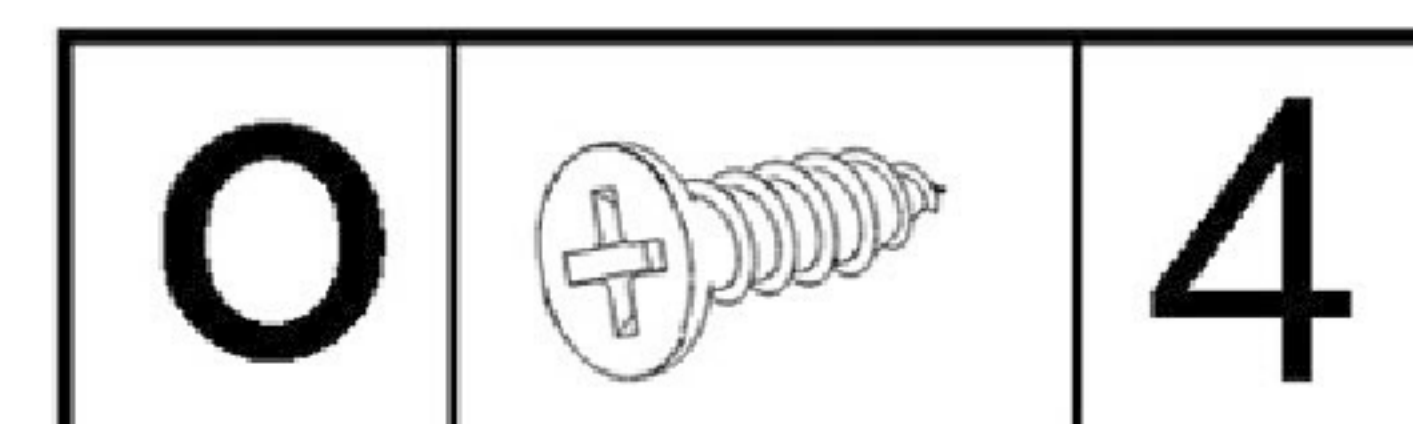

 
Connect top plate L with side panels and fix them with 4 screws O

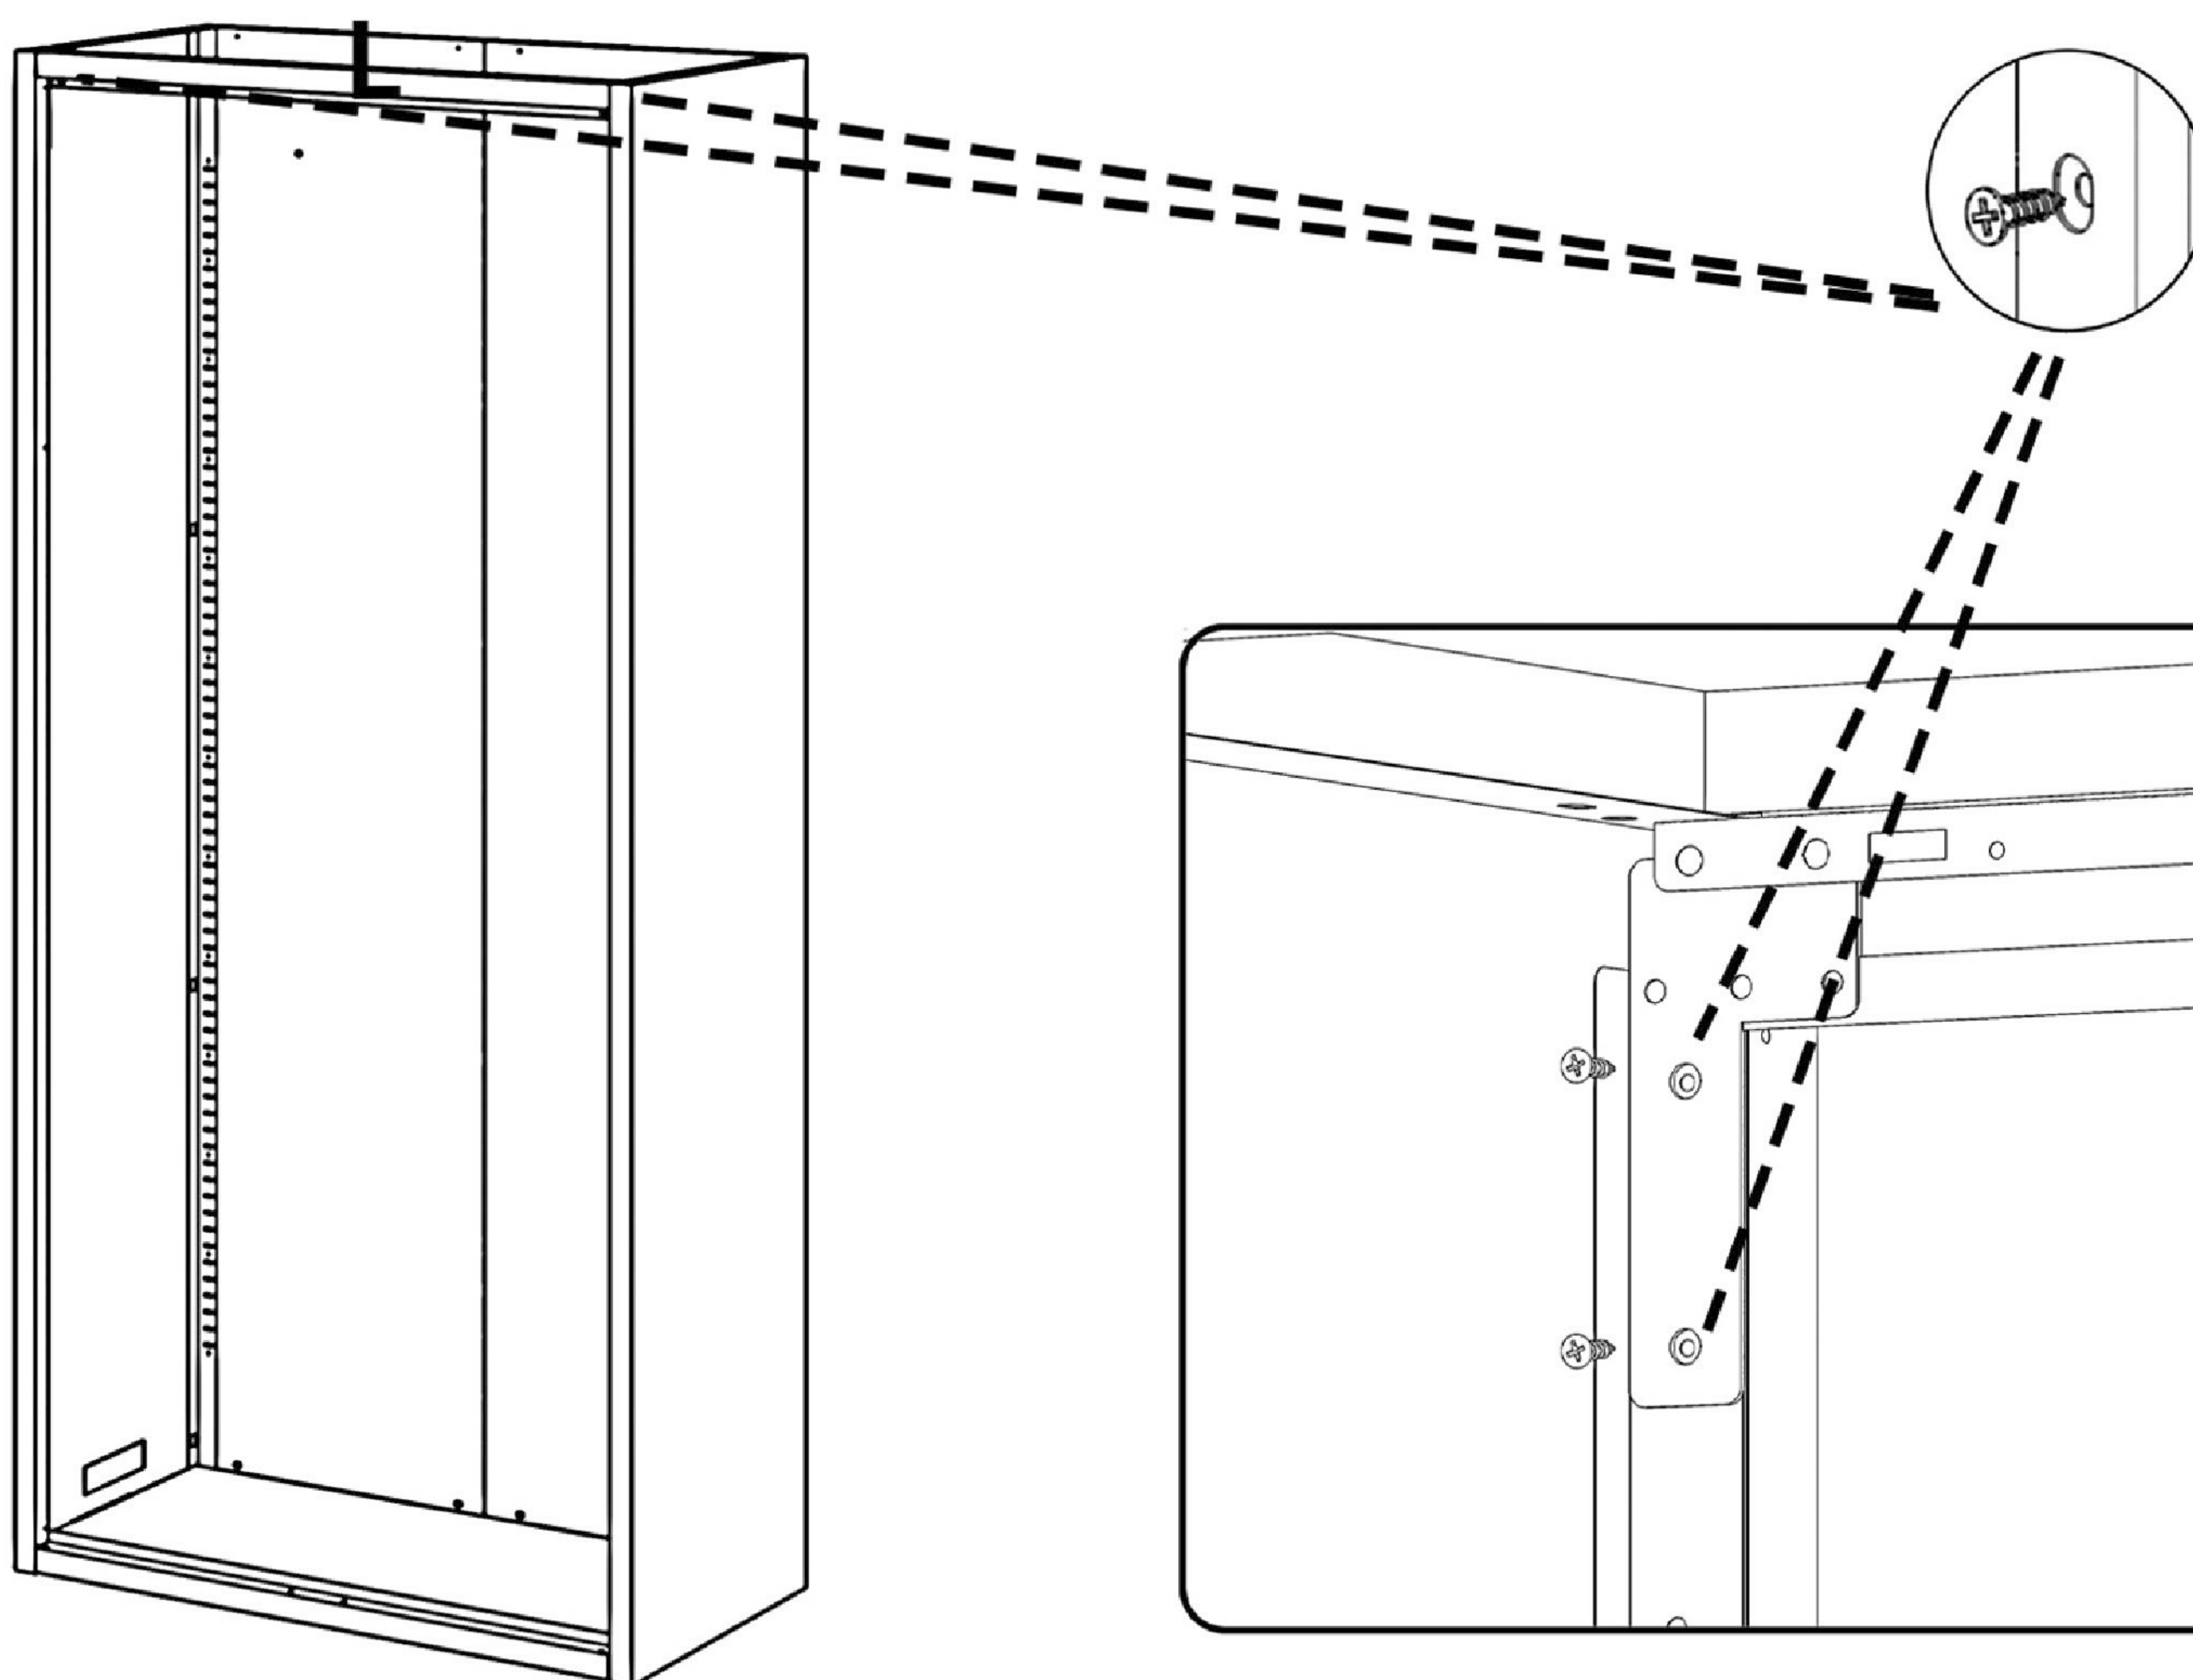

 Step 6



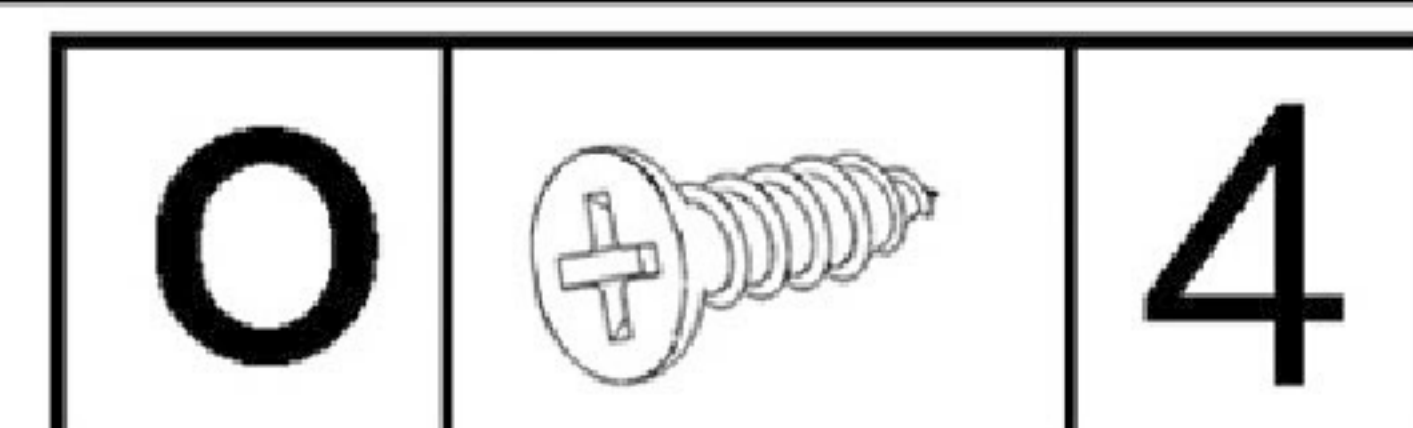


 Tilt bottom panel G into the cabinet and fix it with back panels by 4 screws O
(Ensure that the both sides of bottom panel are inserted into the slots of side panels)

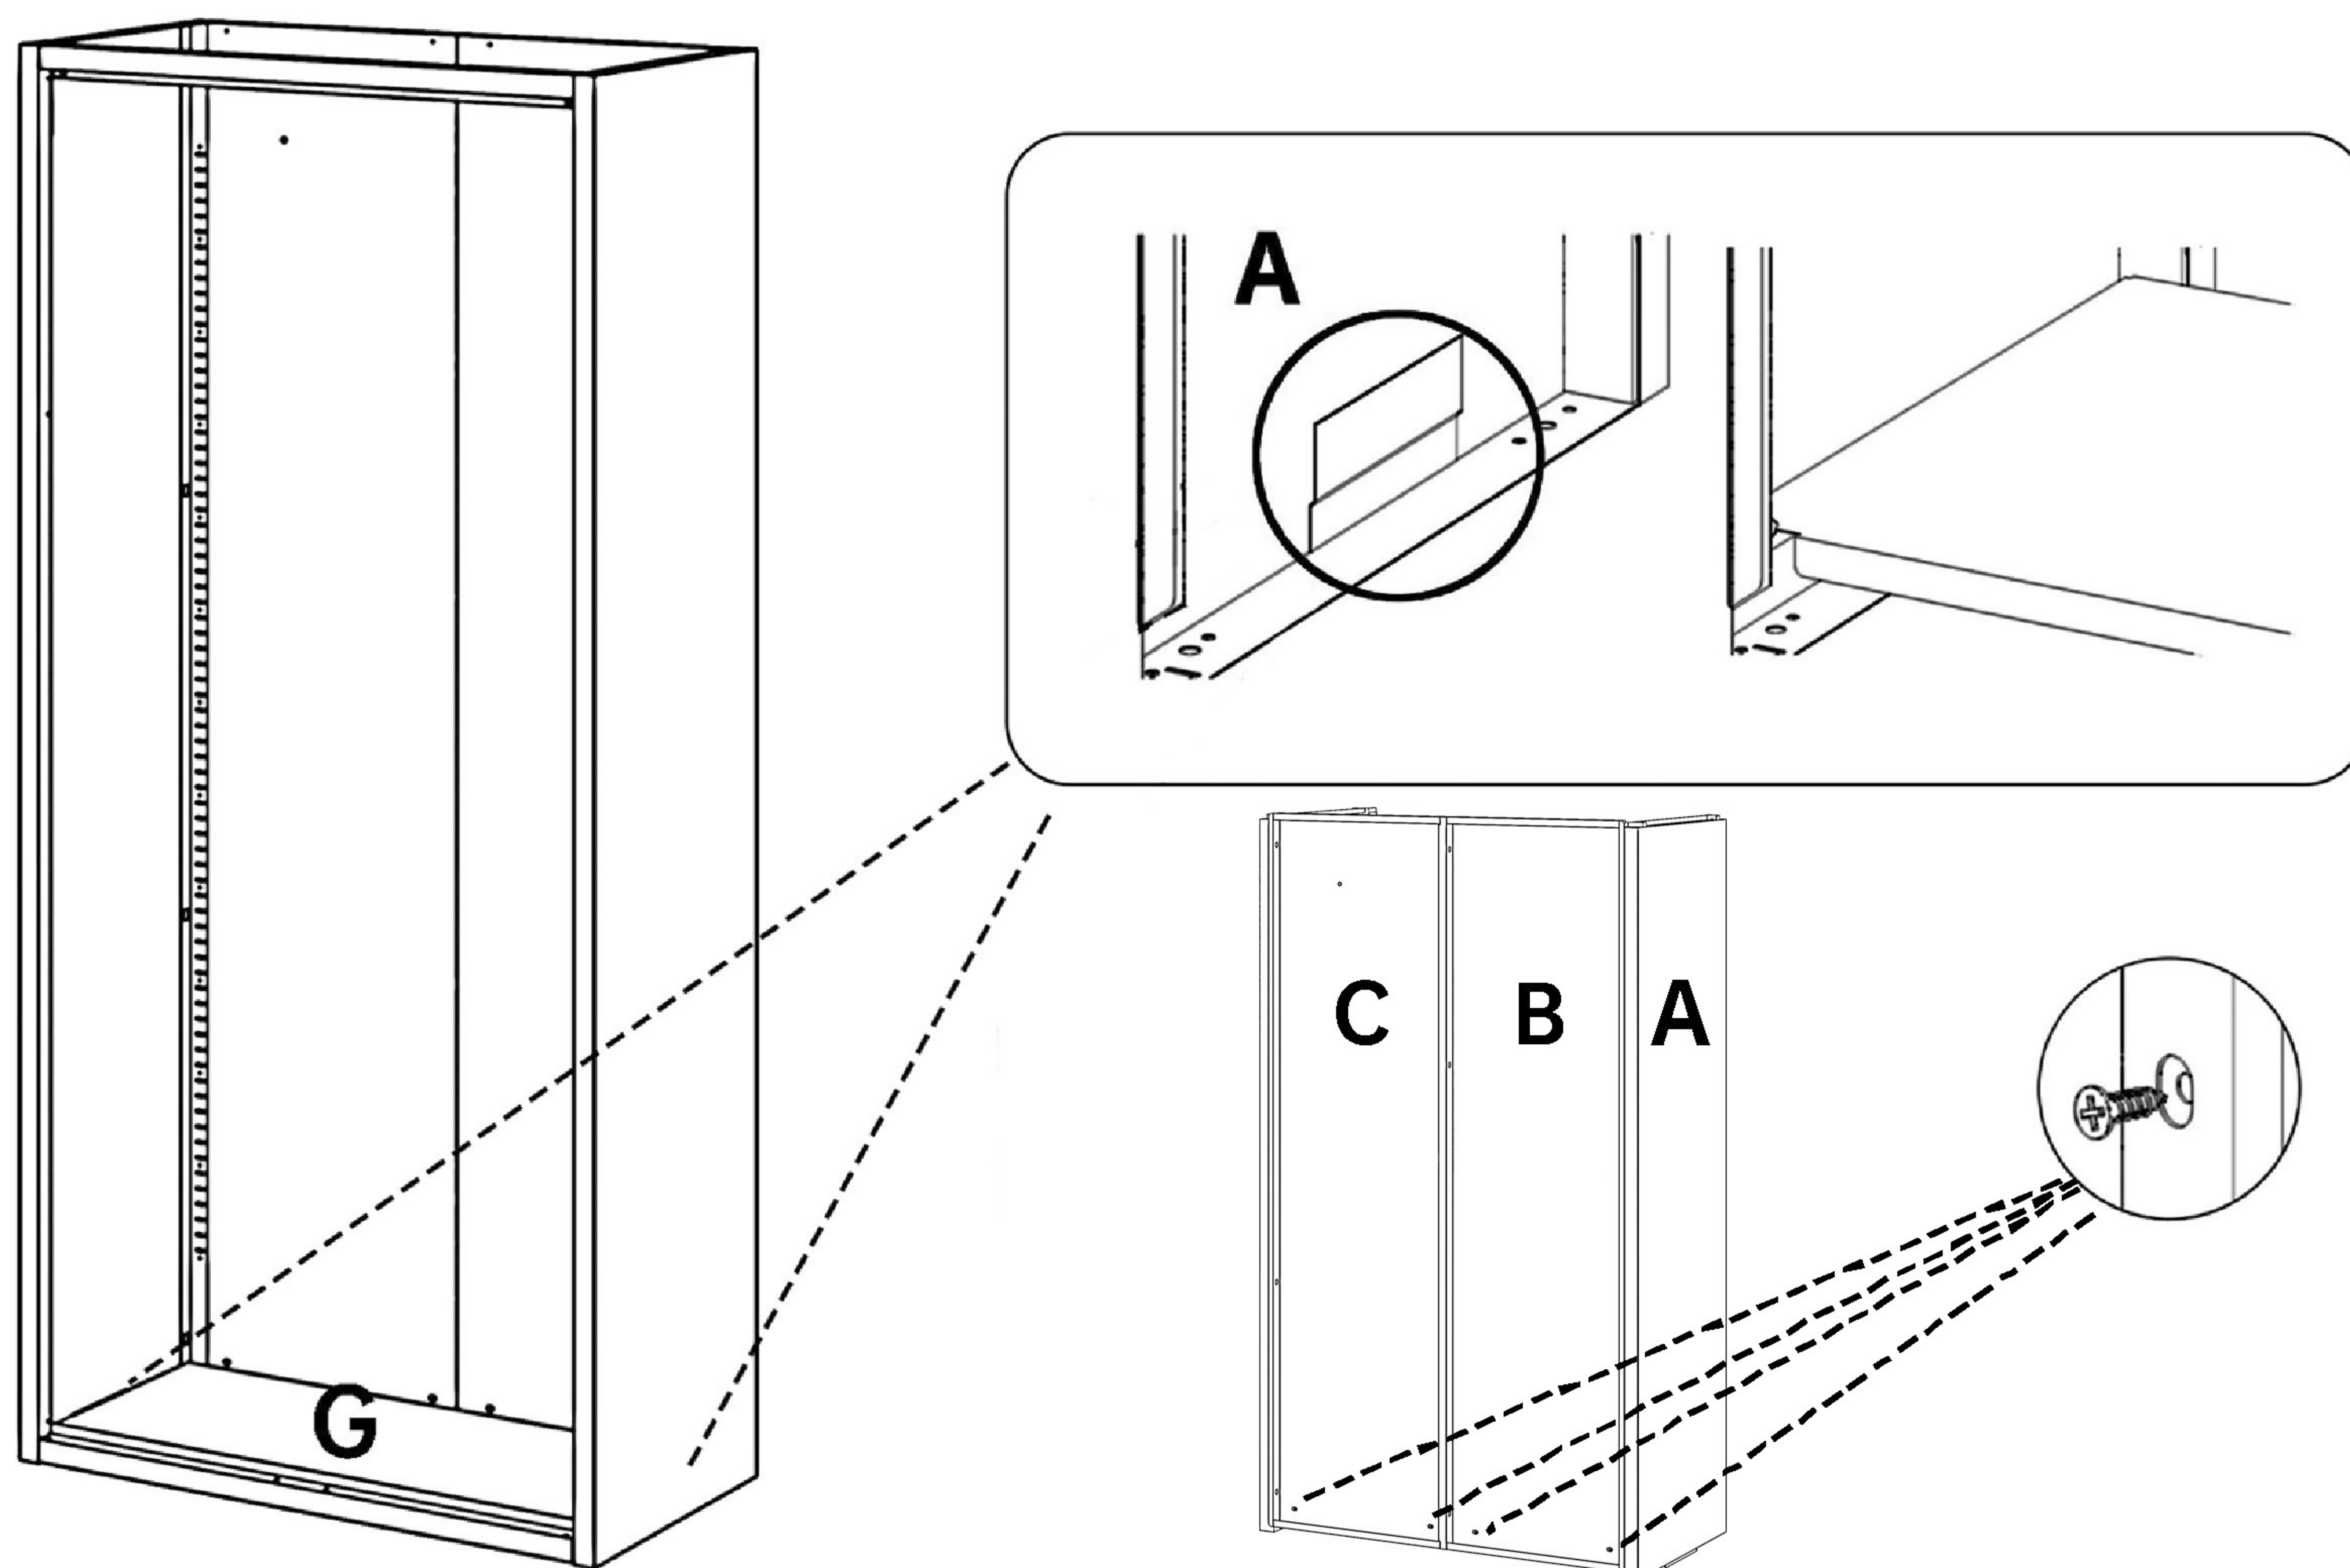




Step 7

   Install top panel F and fix it with back panels and top plate L by 7 screws O

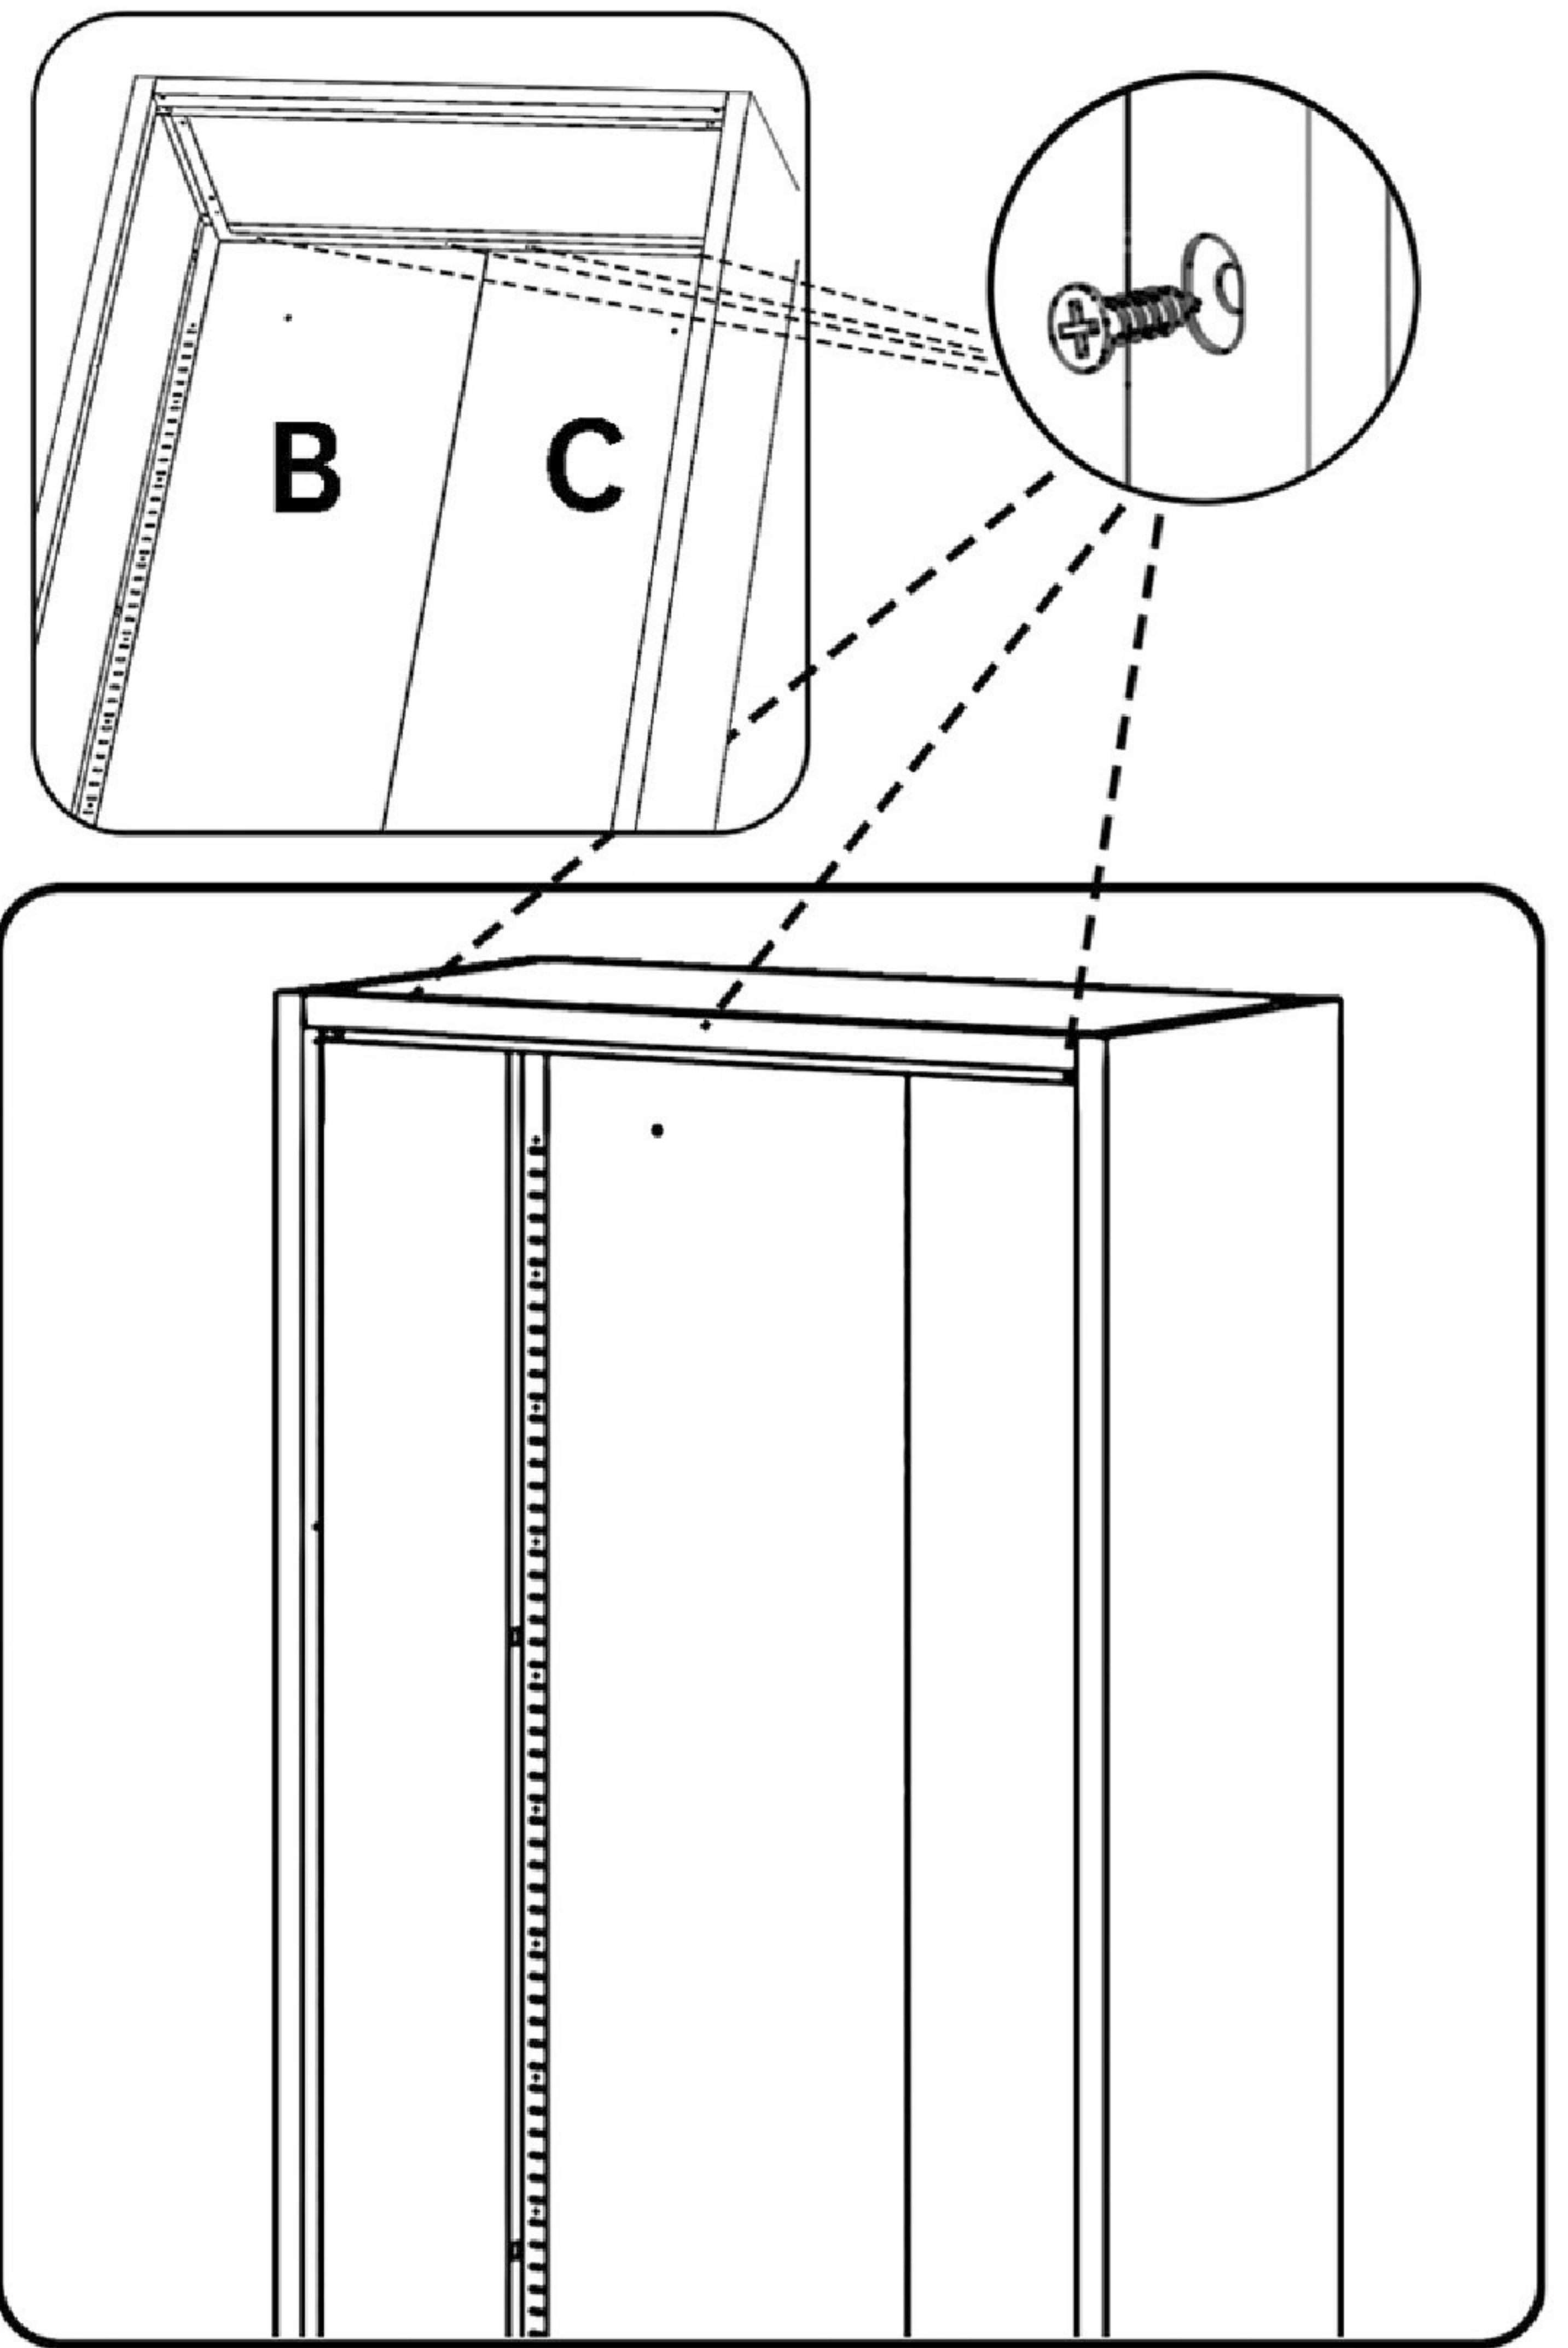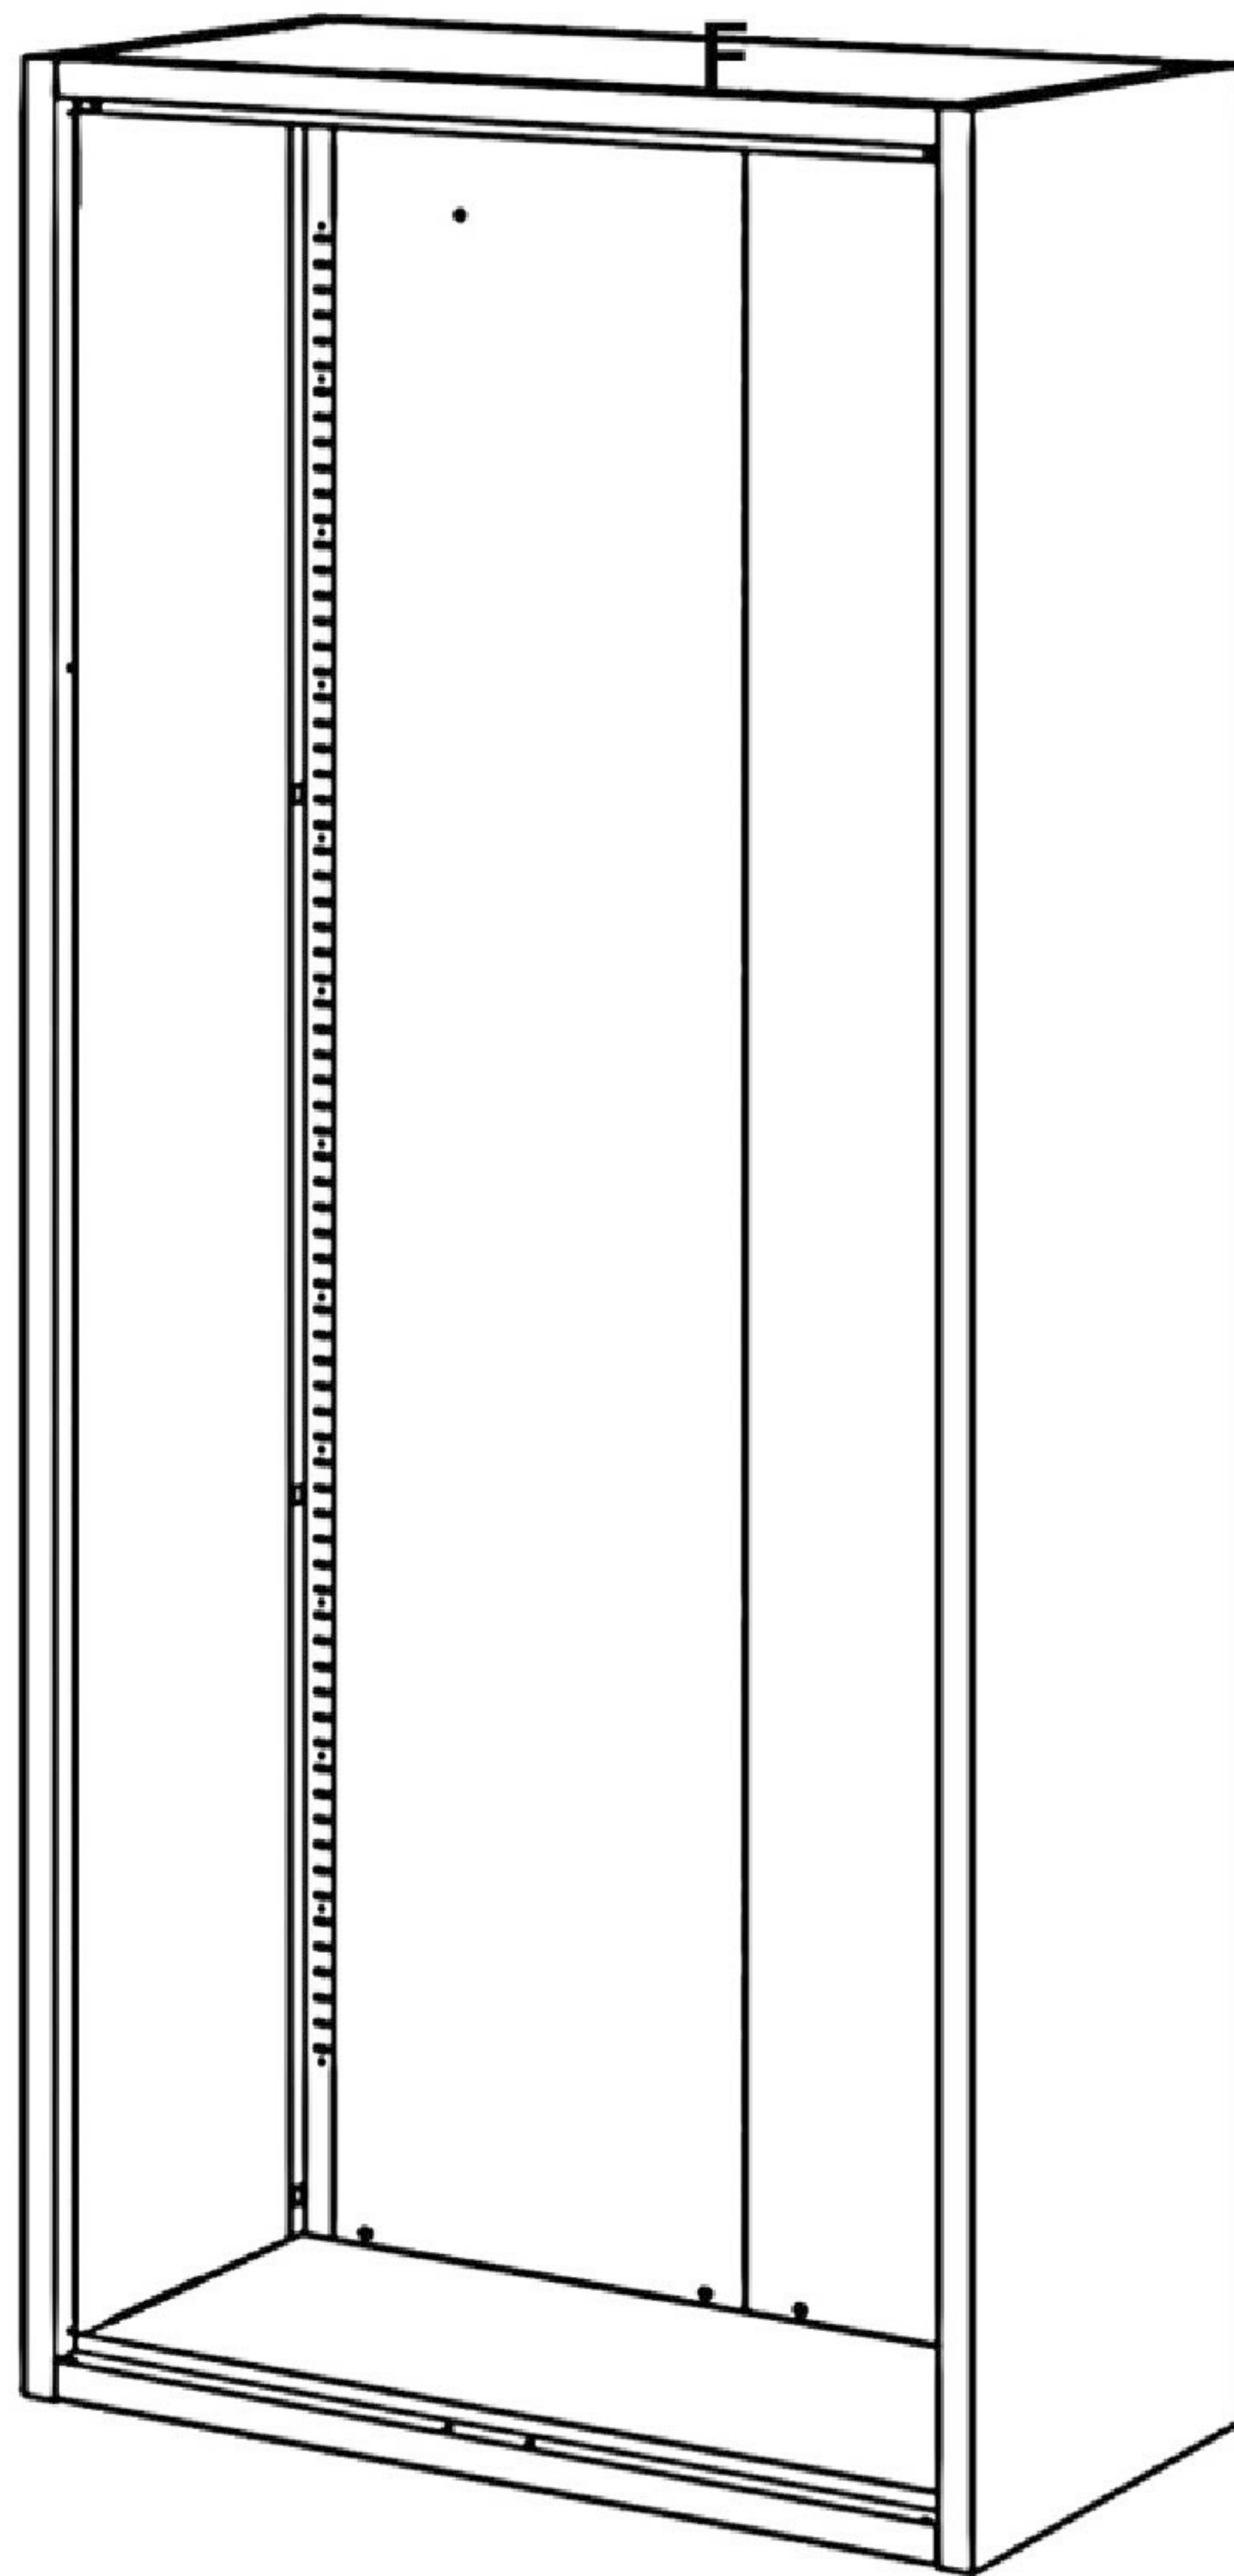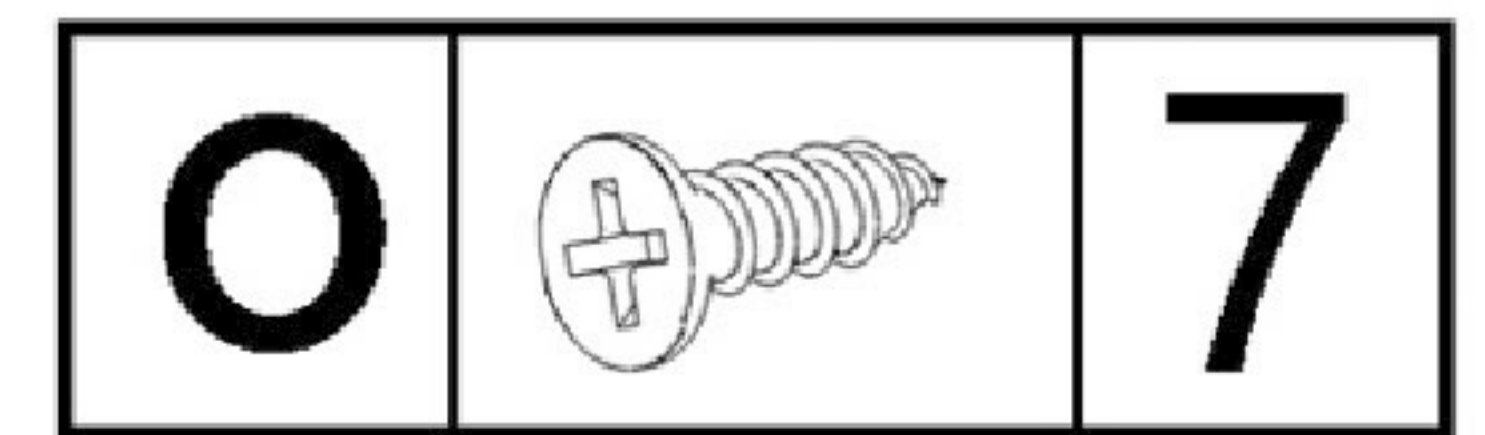


Step 8

 
 
 
Push 2 bottom small pieces upward, then install 4 supports H and fix them with 16 screws O

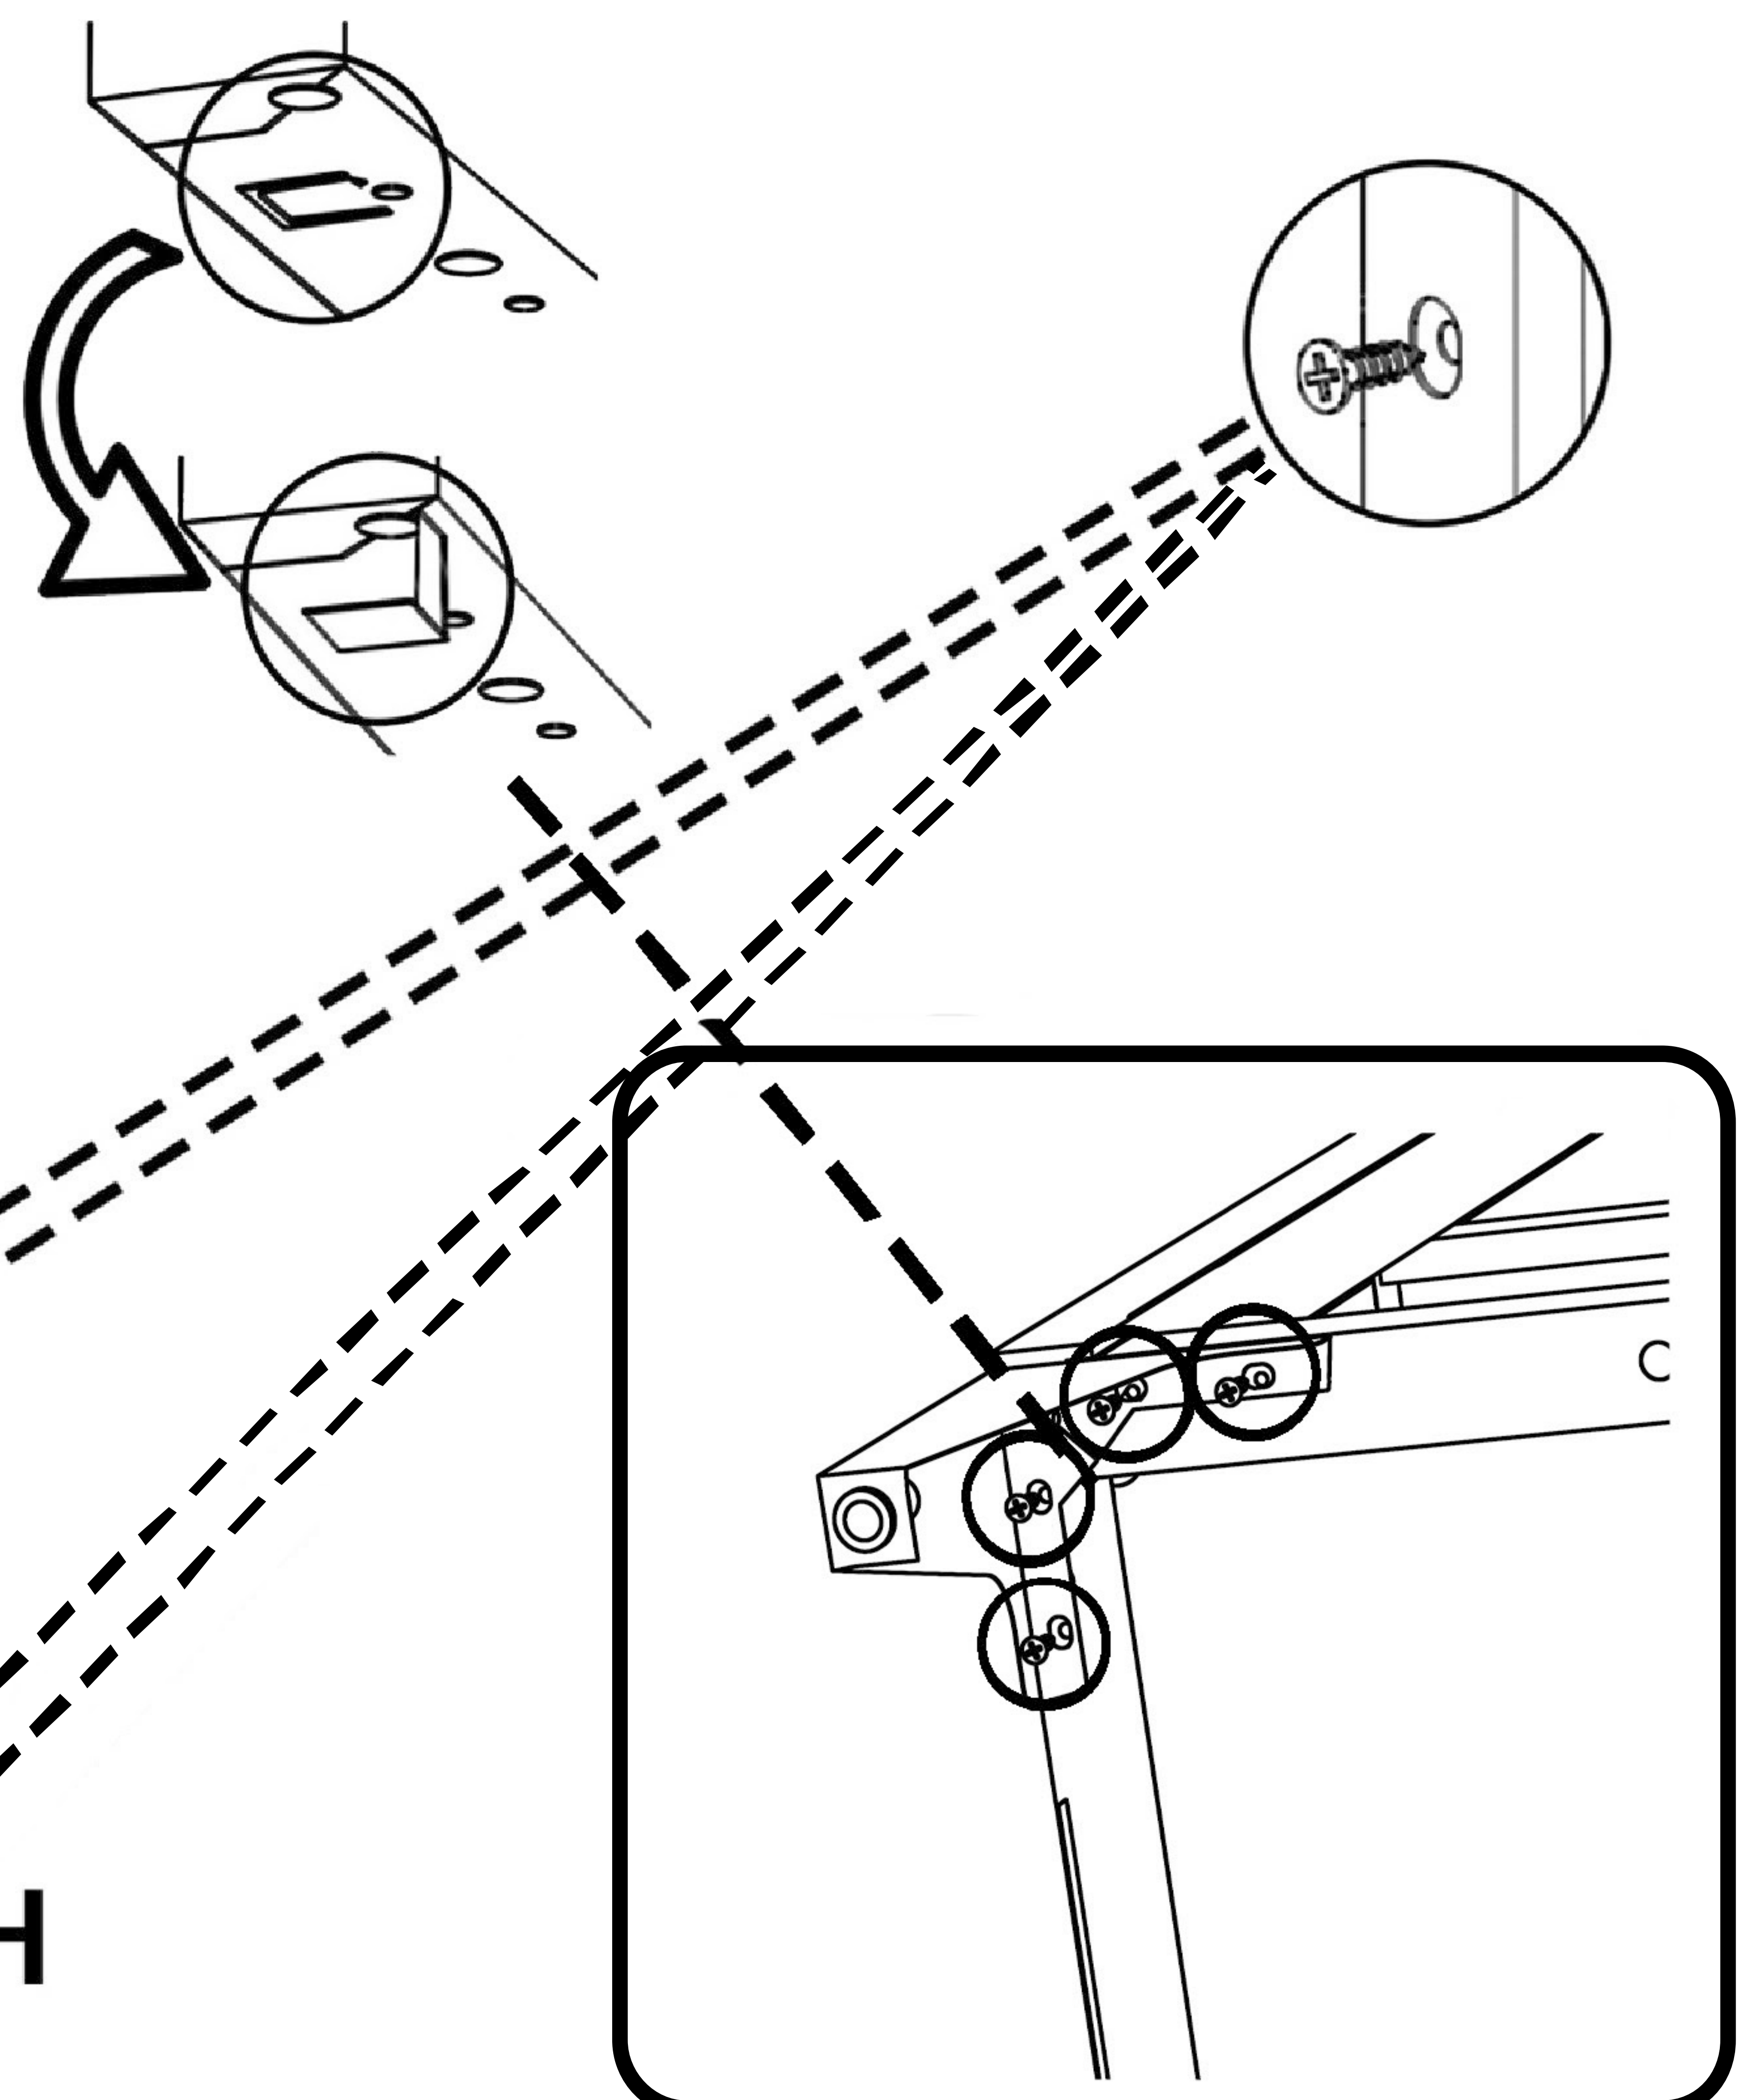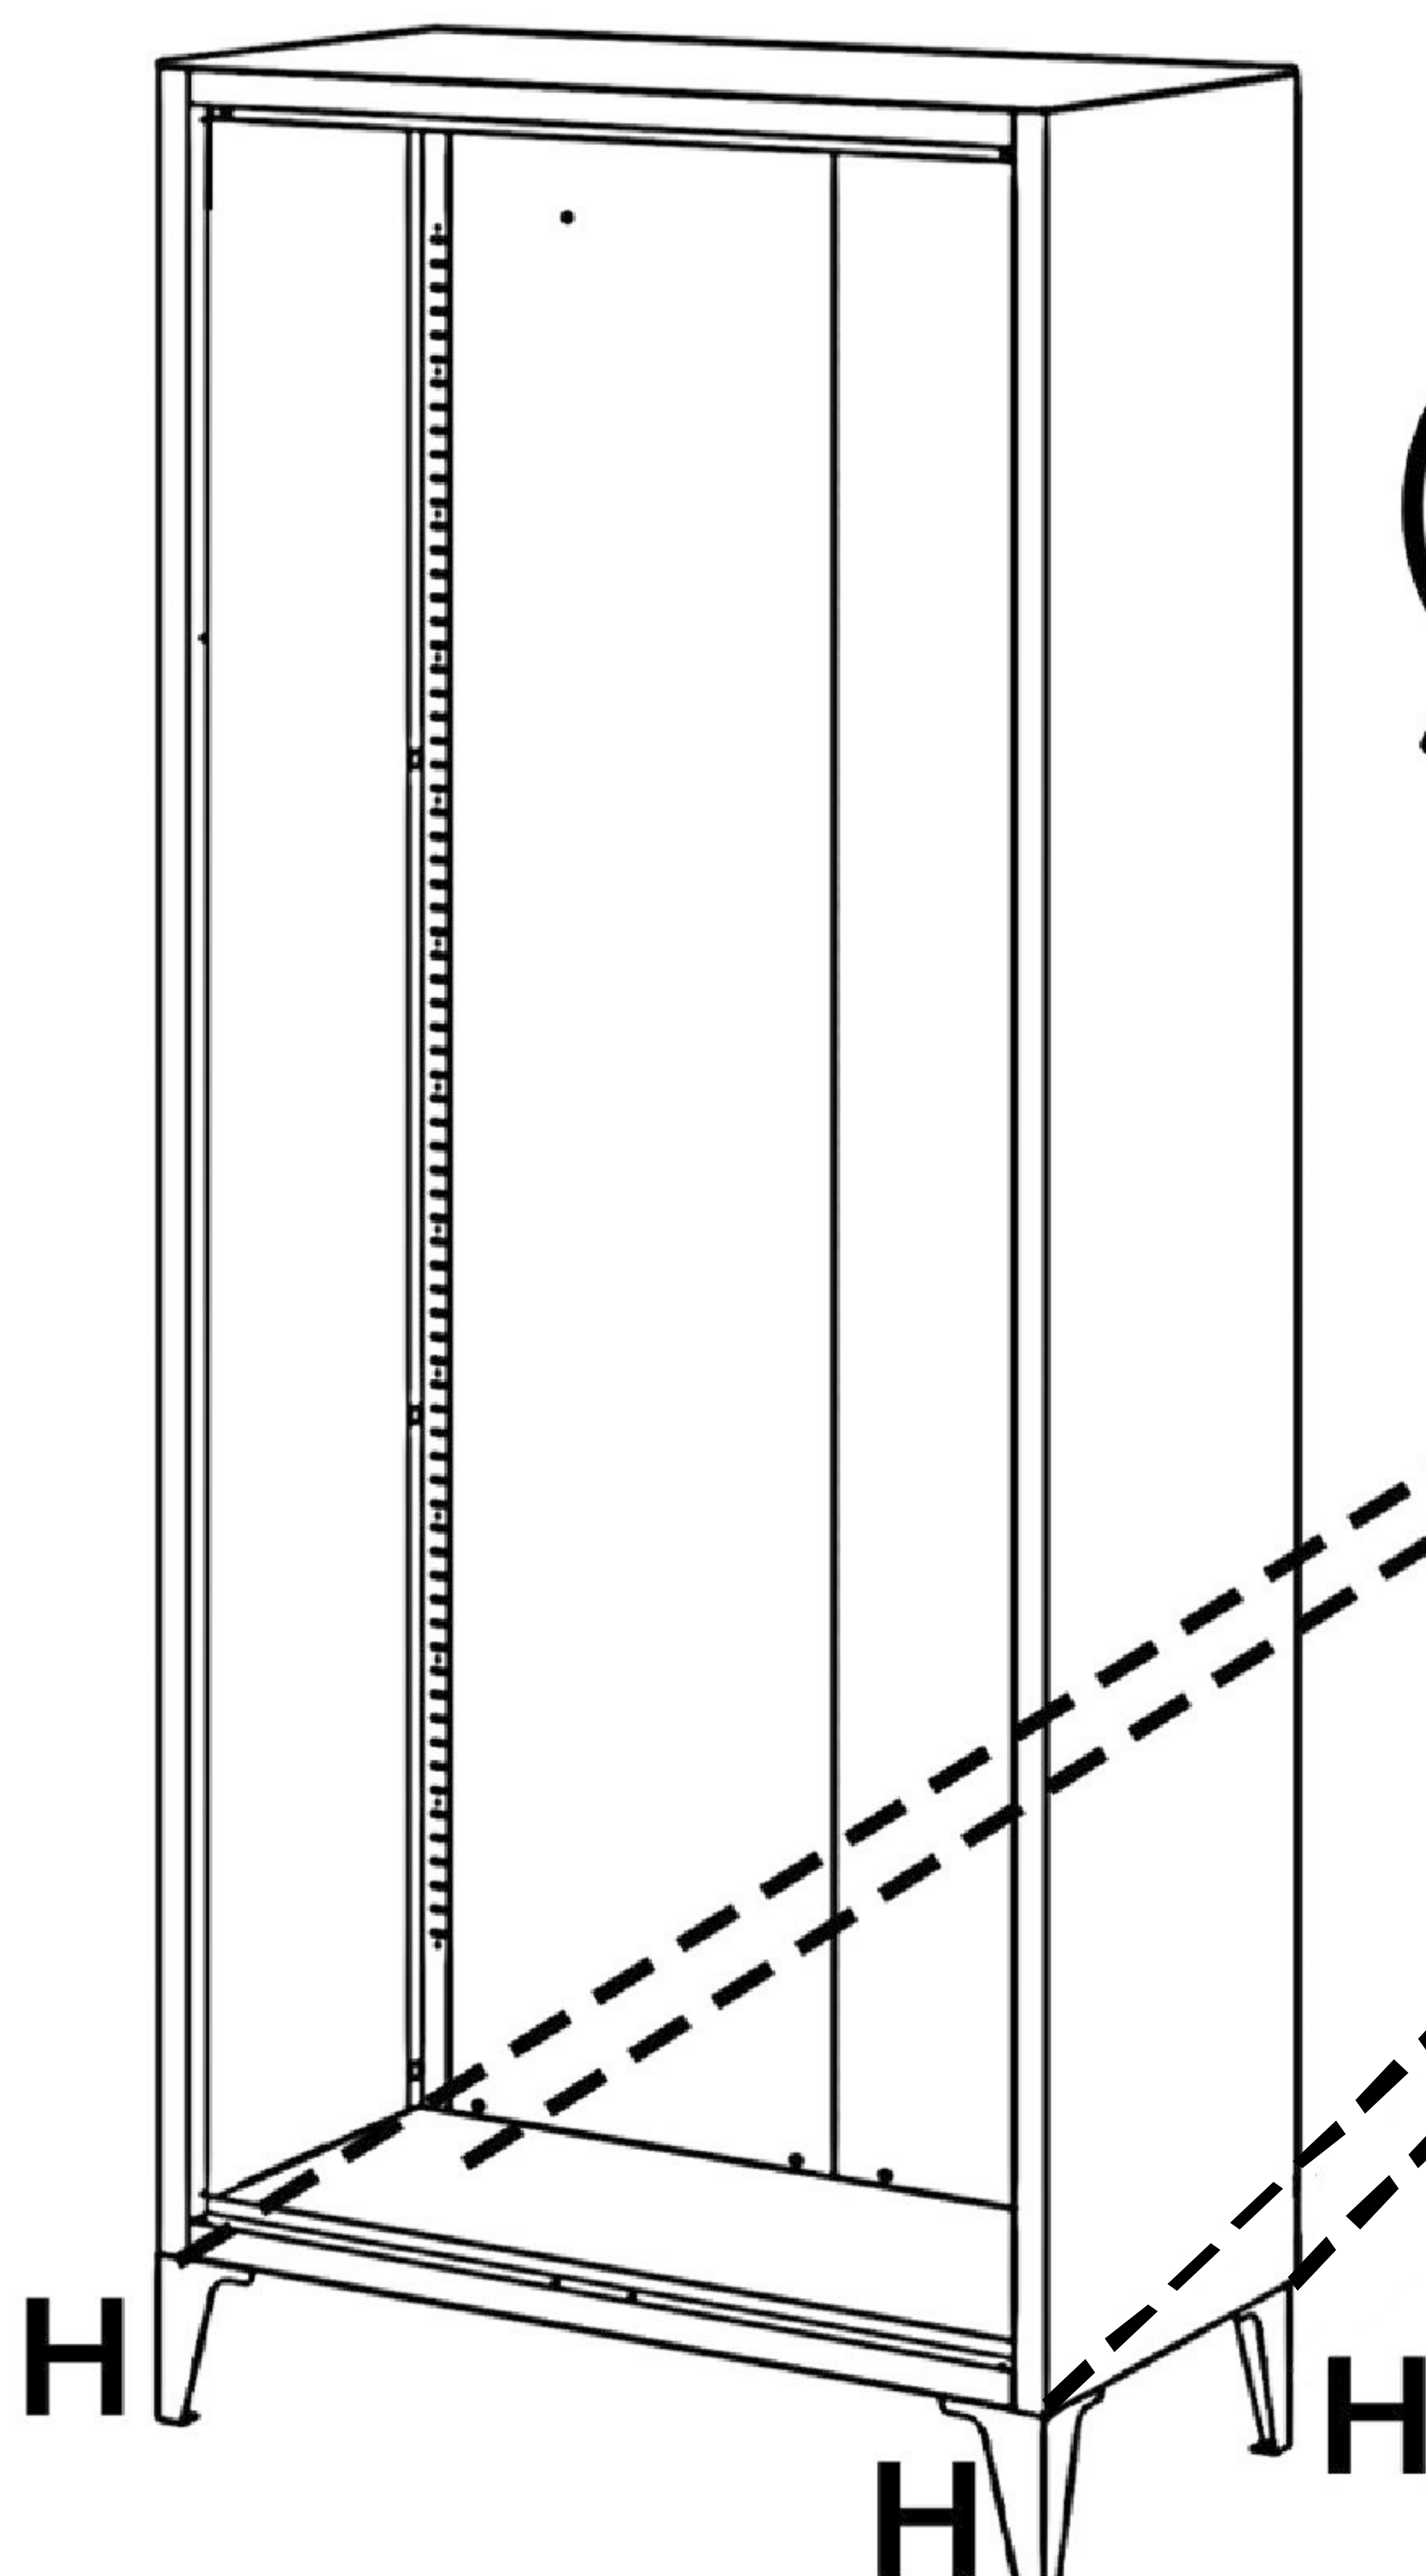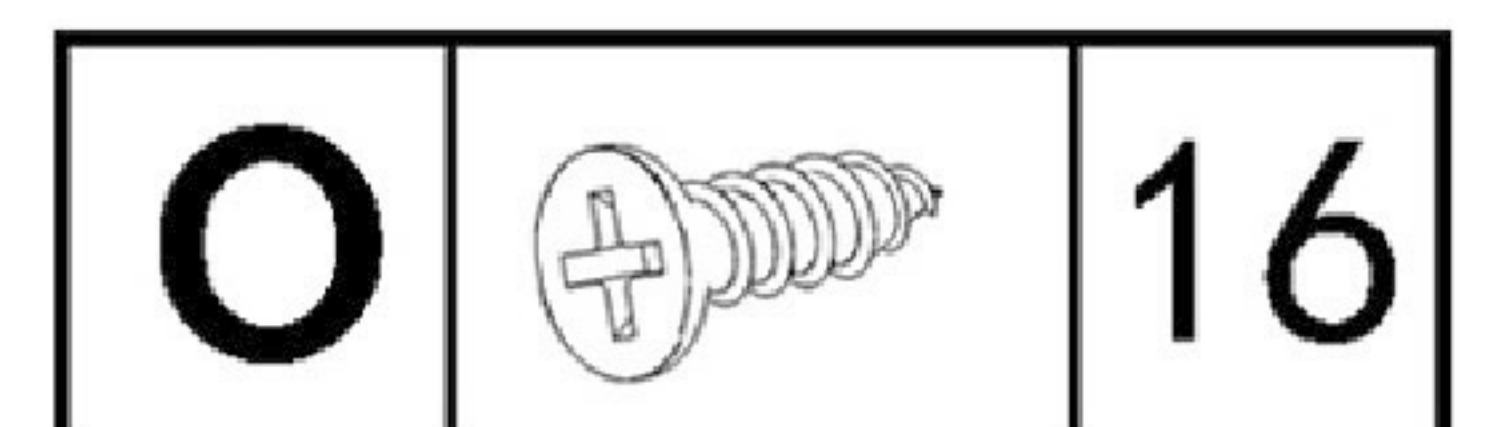

 Step 9

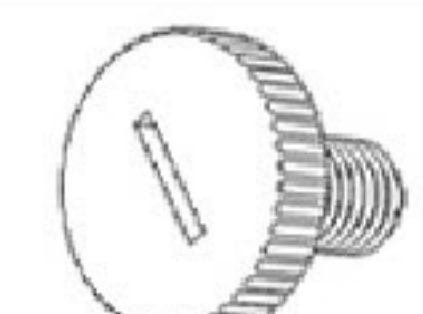
M		4
---	---	---

   Rotate and install 4 feet M on the supports H

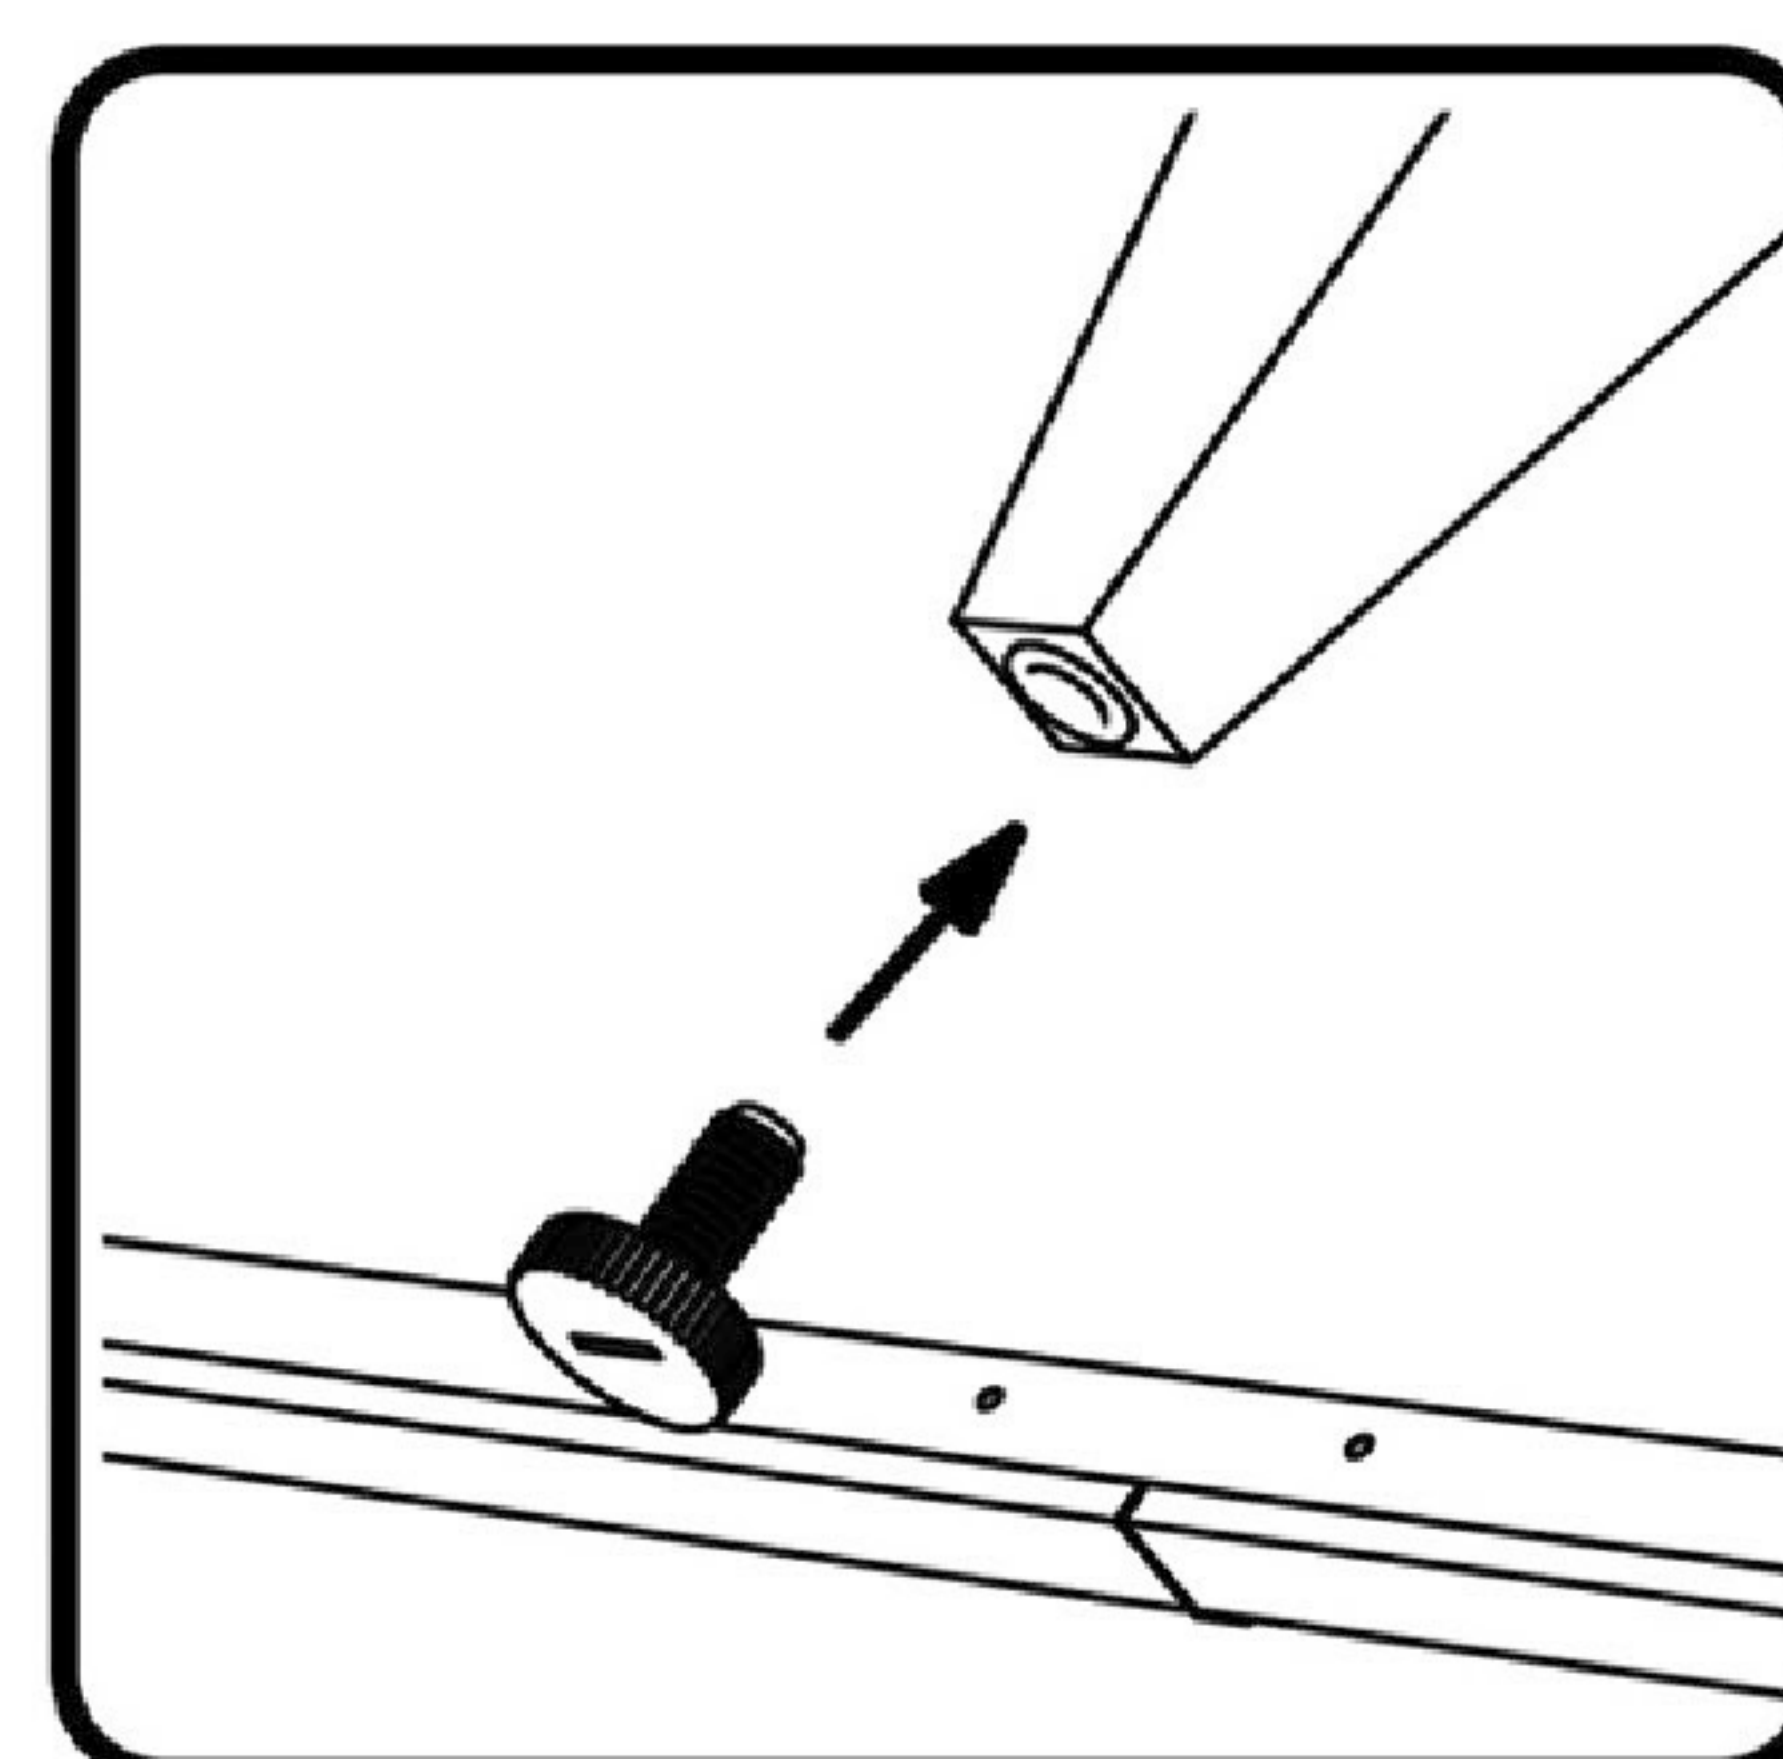
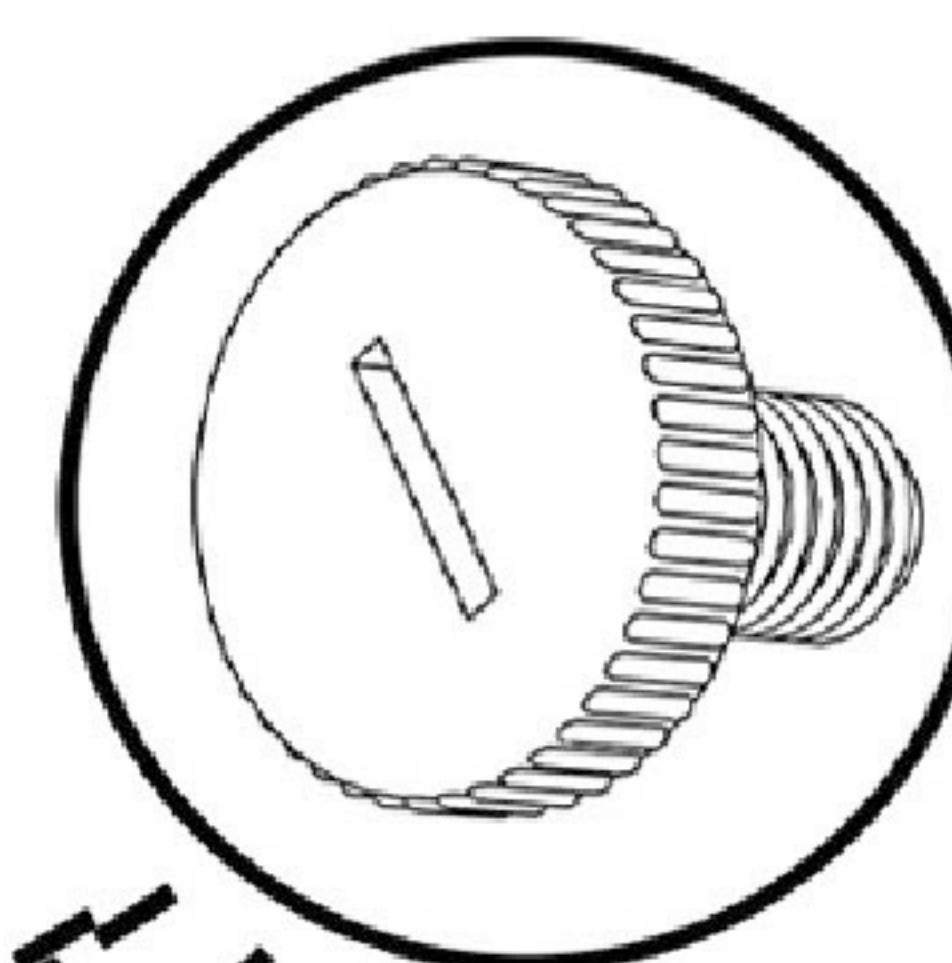
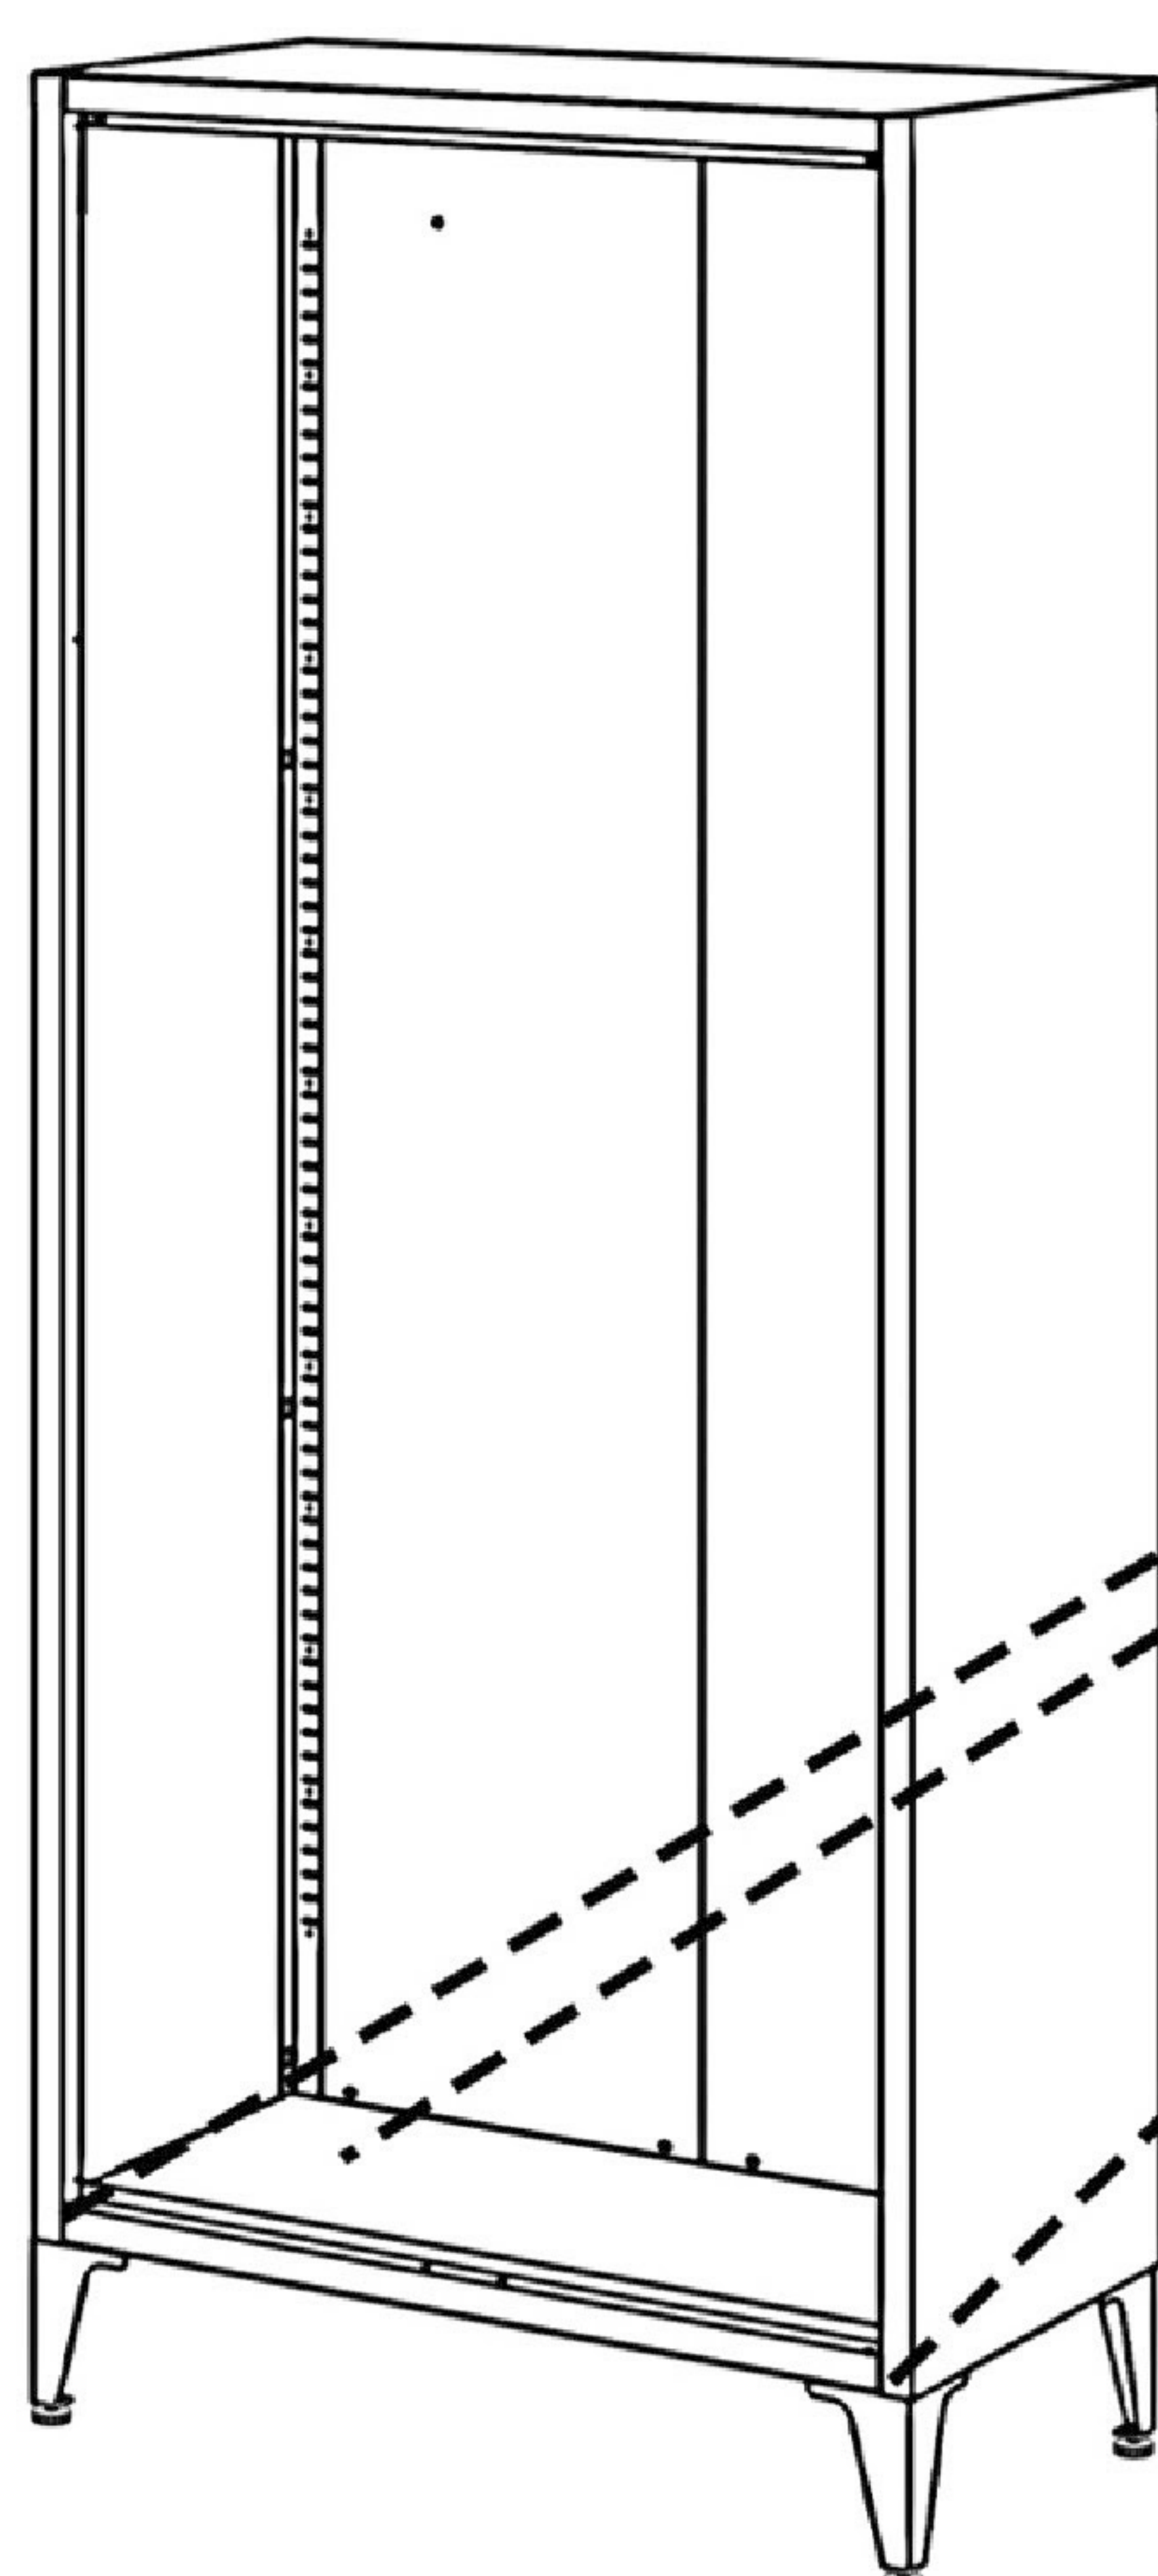


Tips: If the ground is uneven, you can rotate the feet to adjust, which will solve the problem of the door not being easy to open or close.


 
Step 10

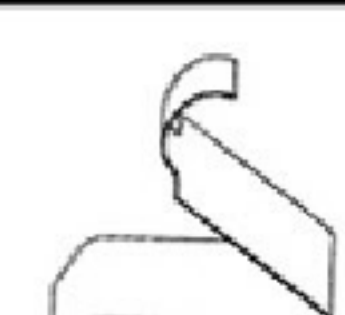U		20
---	---	----

   Install 20 shelf clasps U on the side panels and put 5 shelves I on them
(Ensure that 4 clasps for 1 shelf are at the same level)

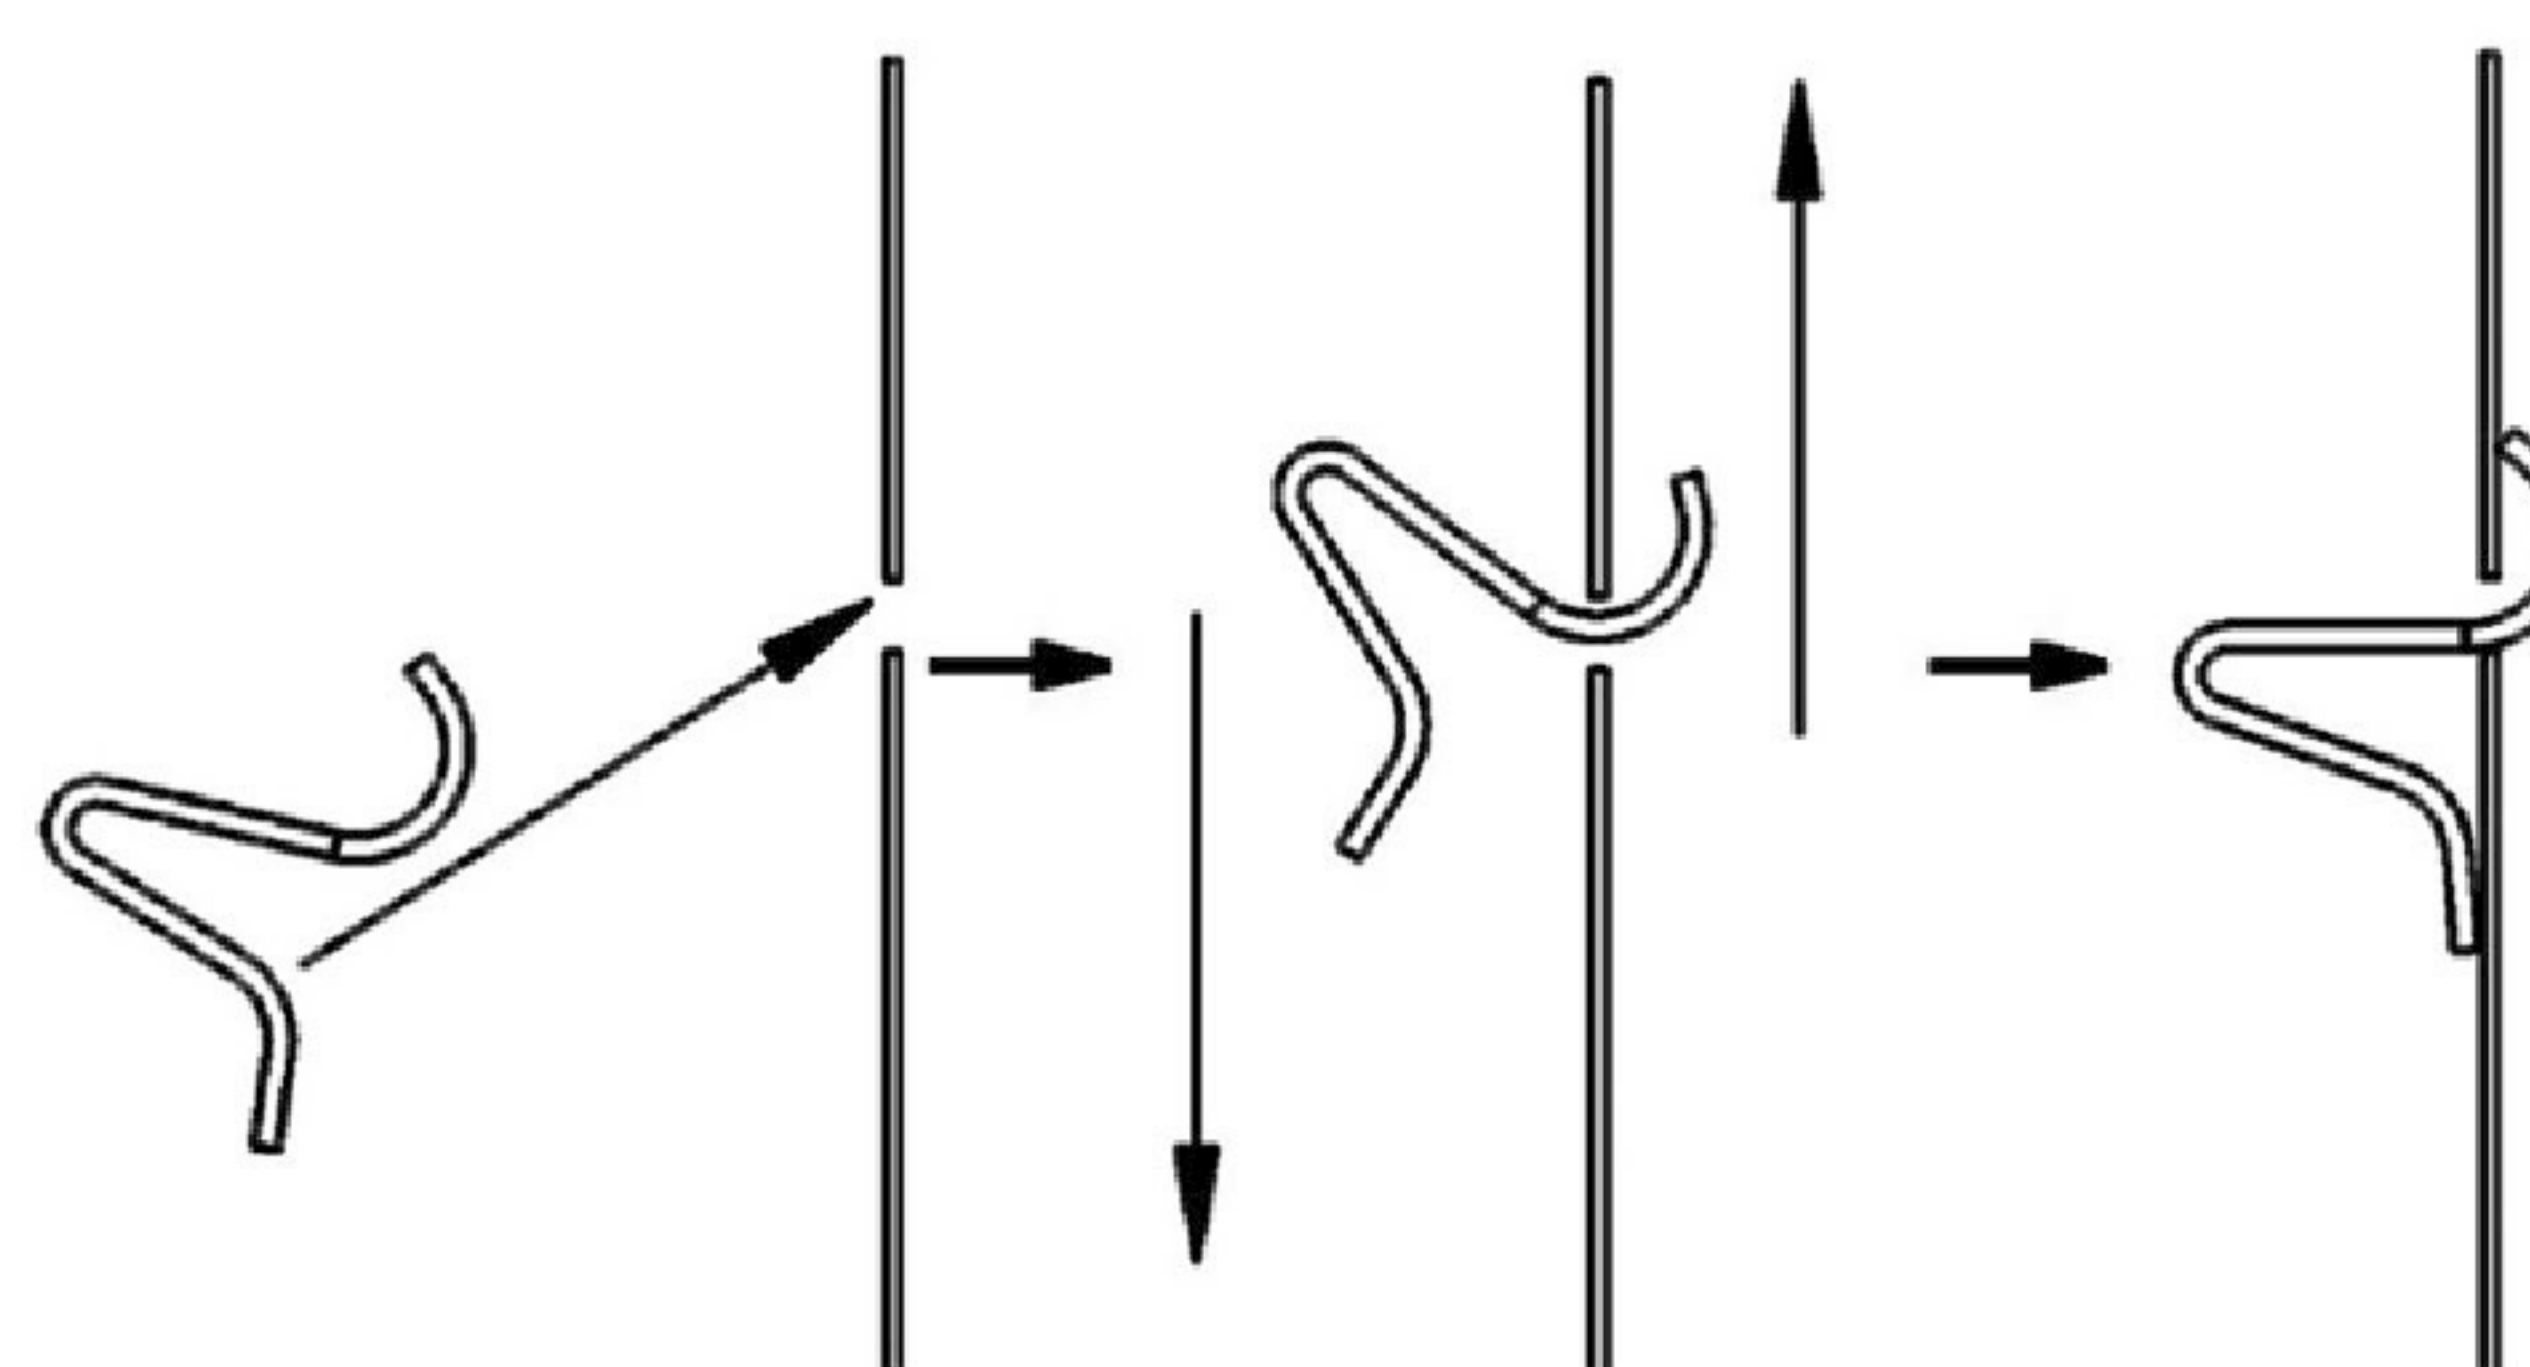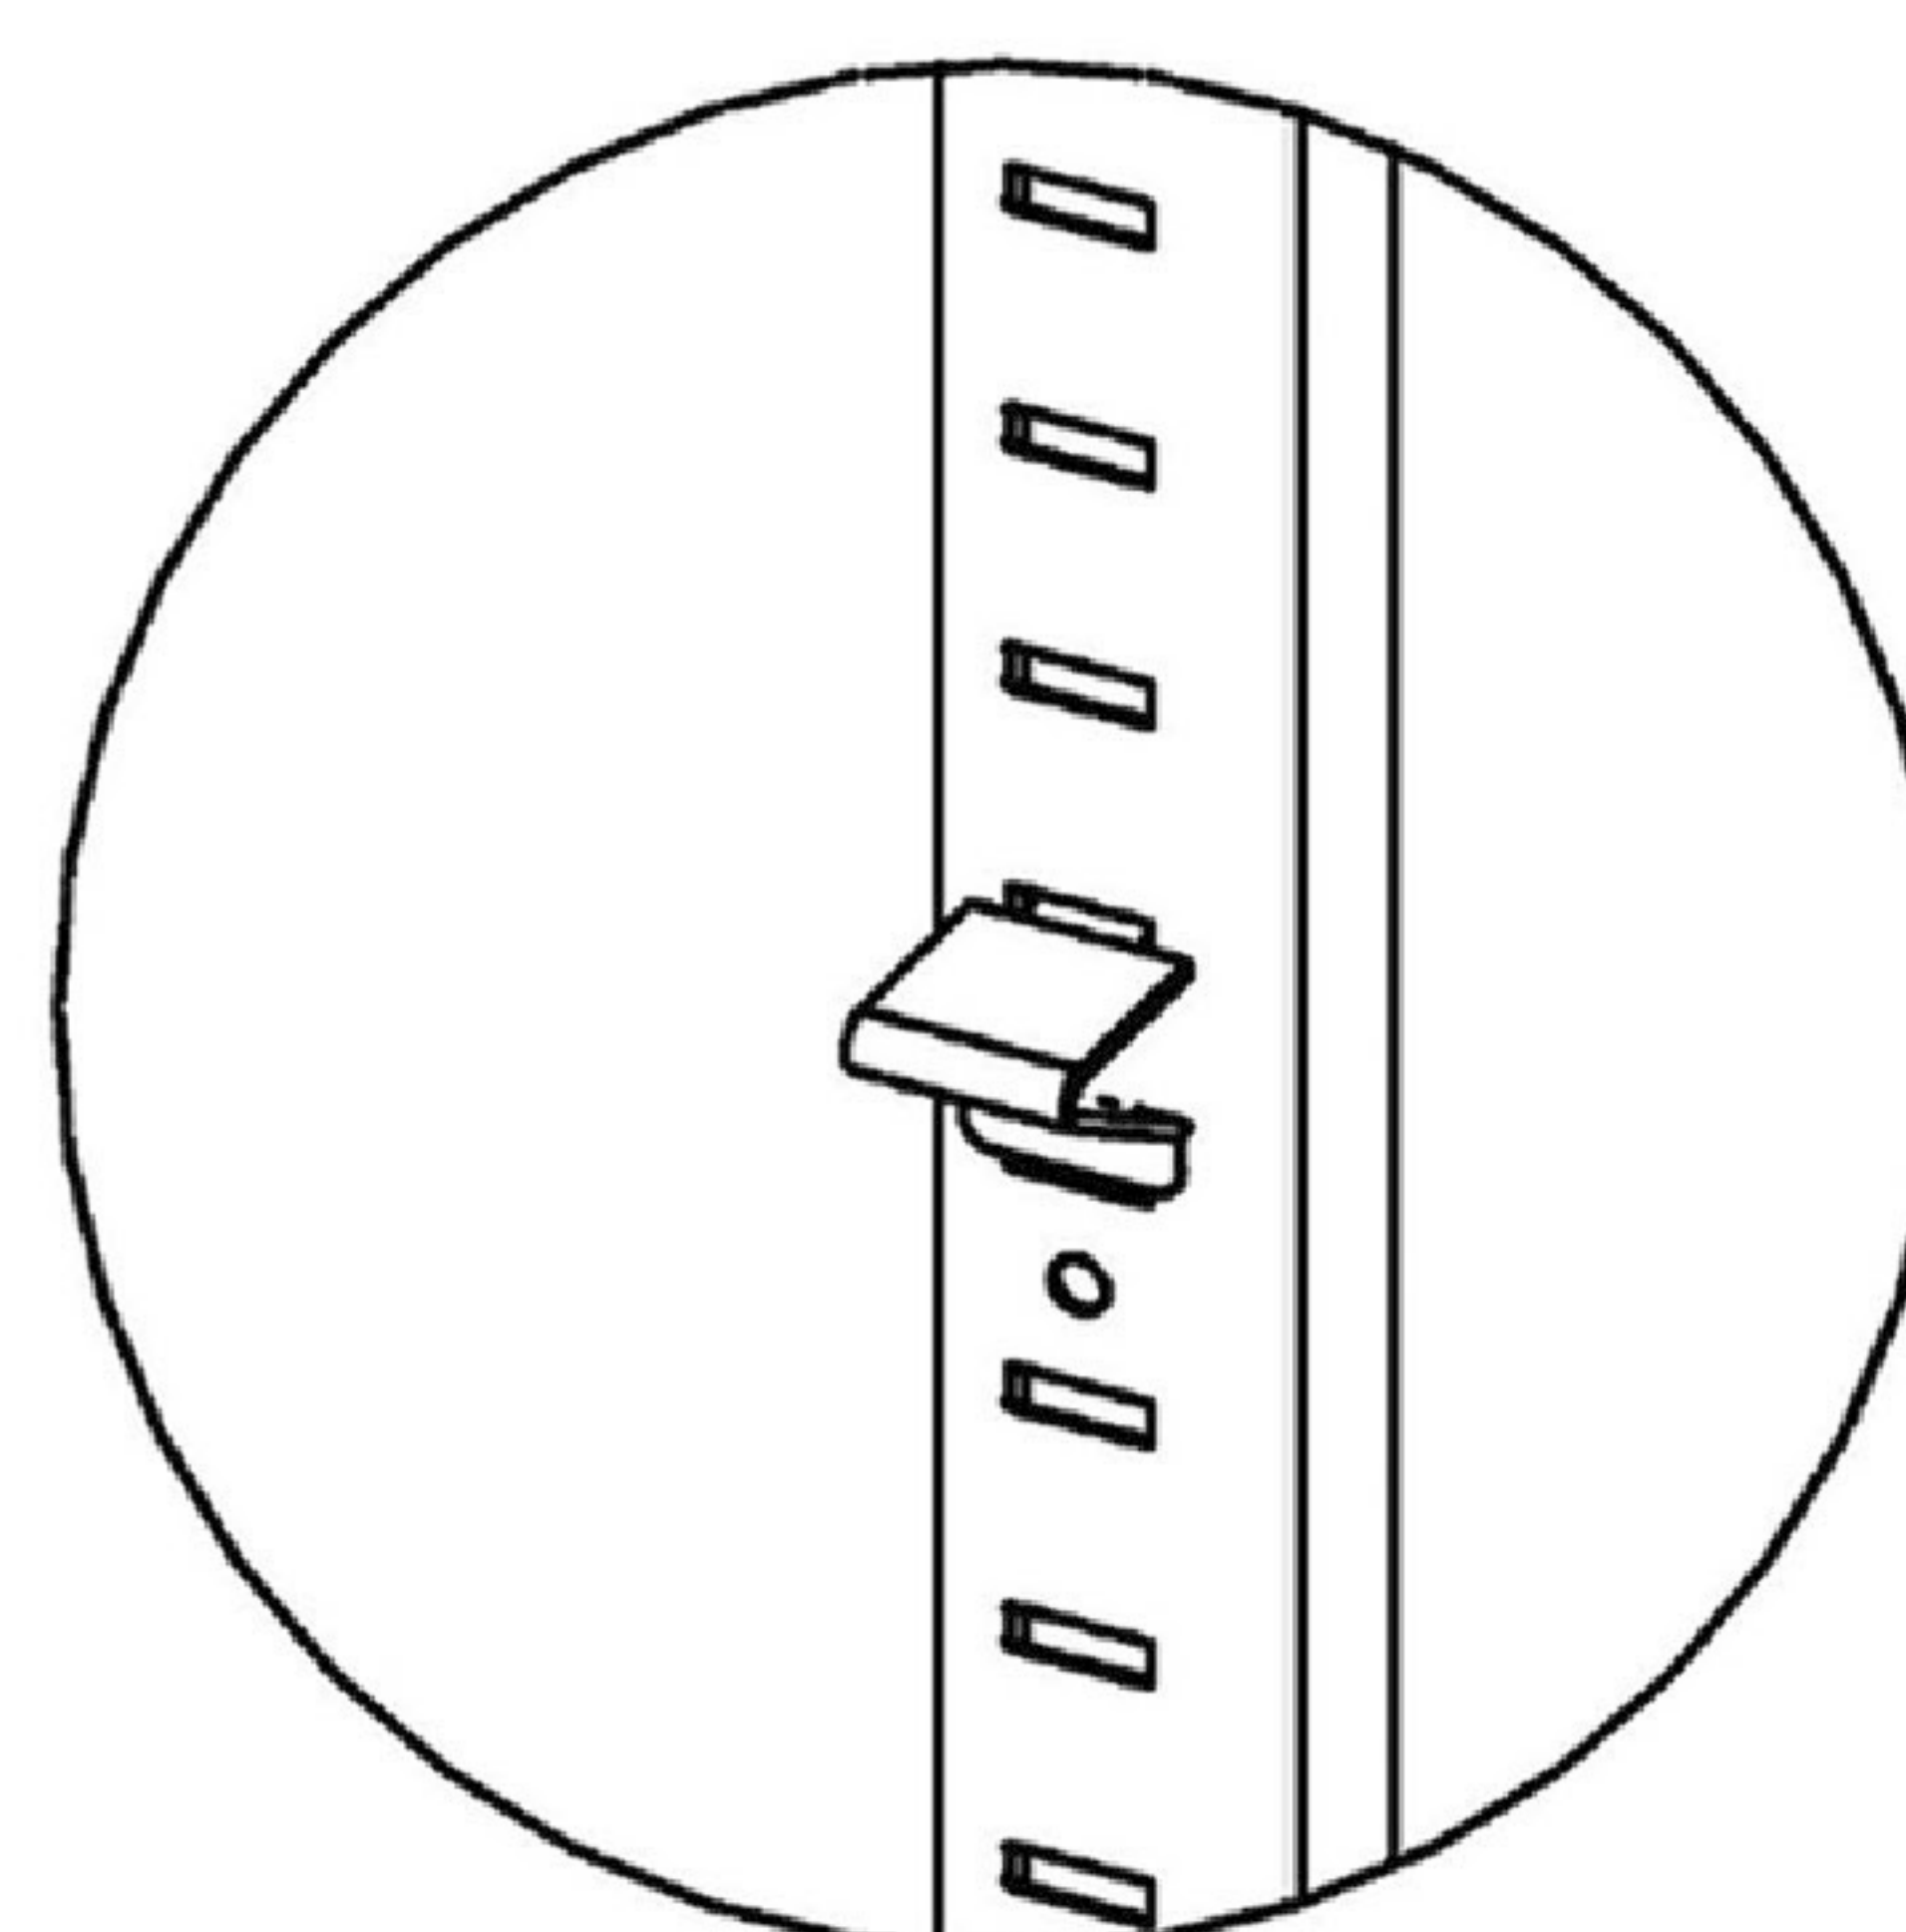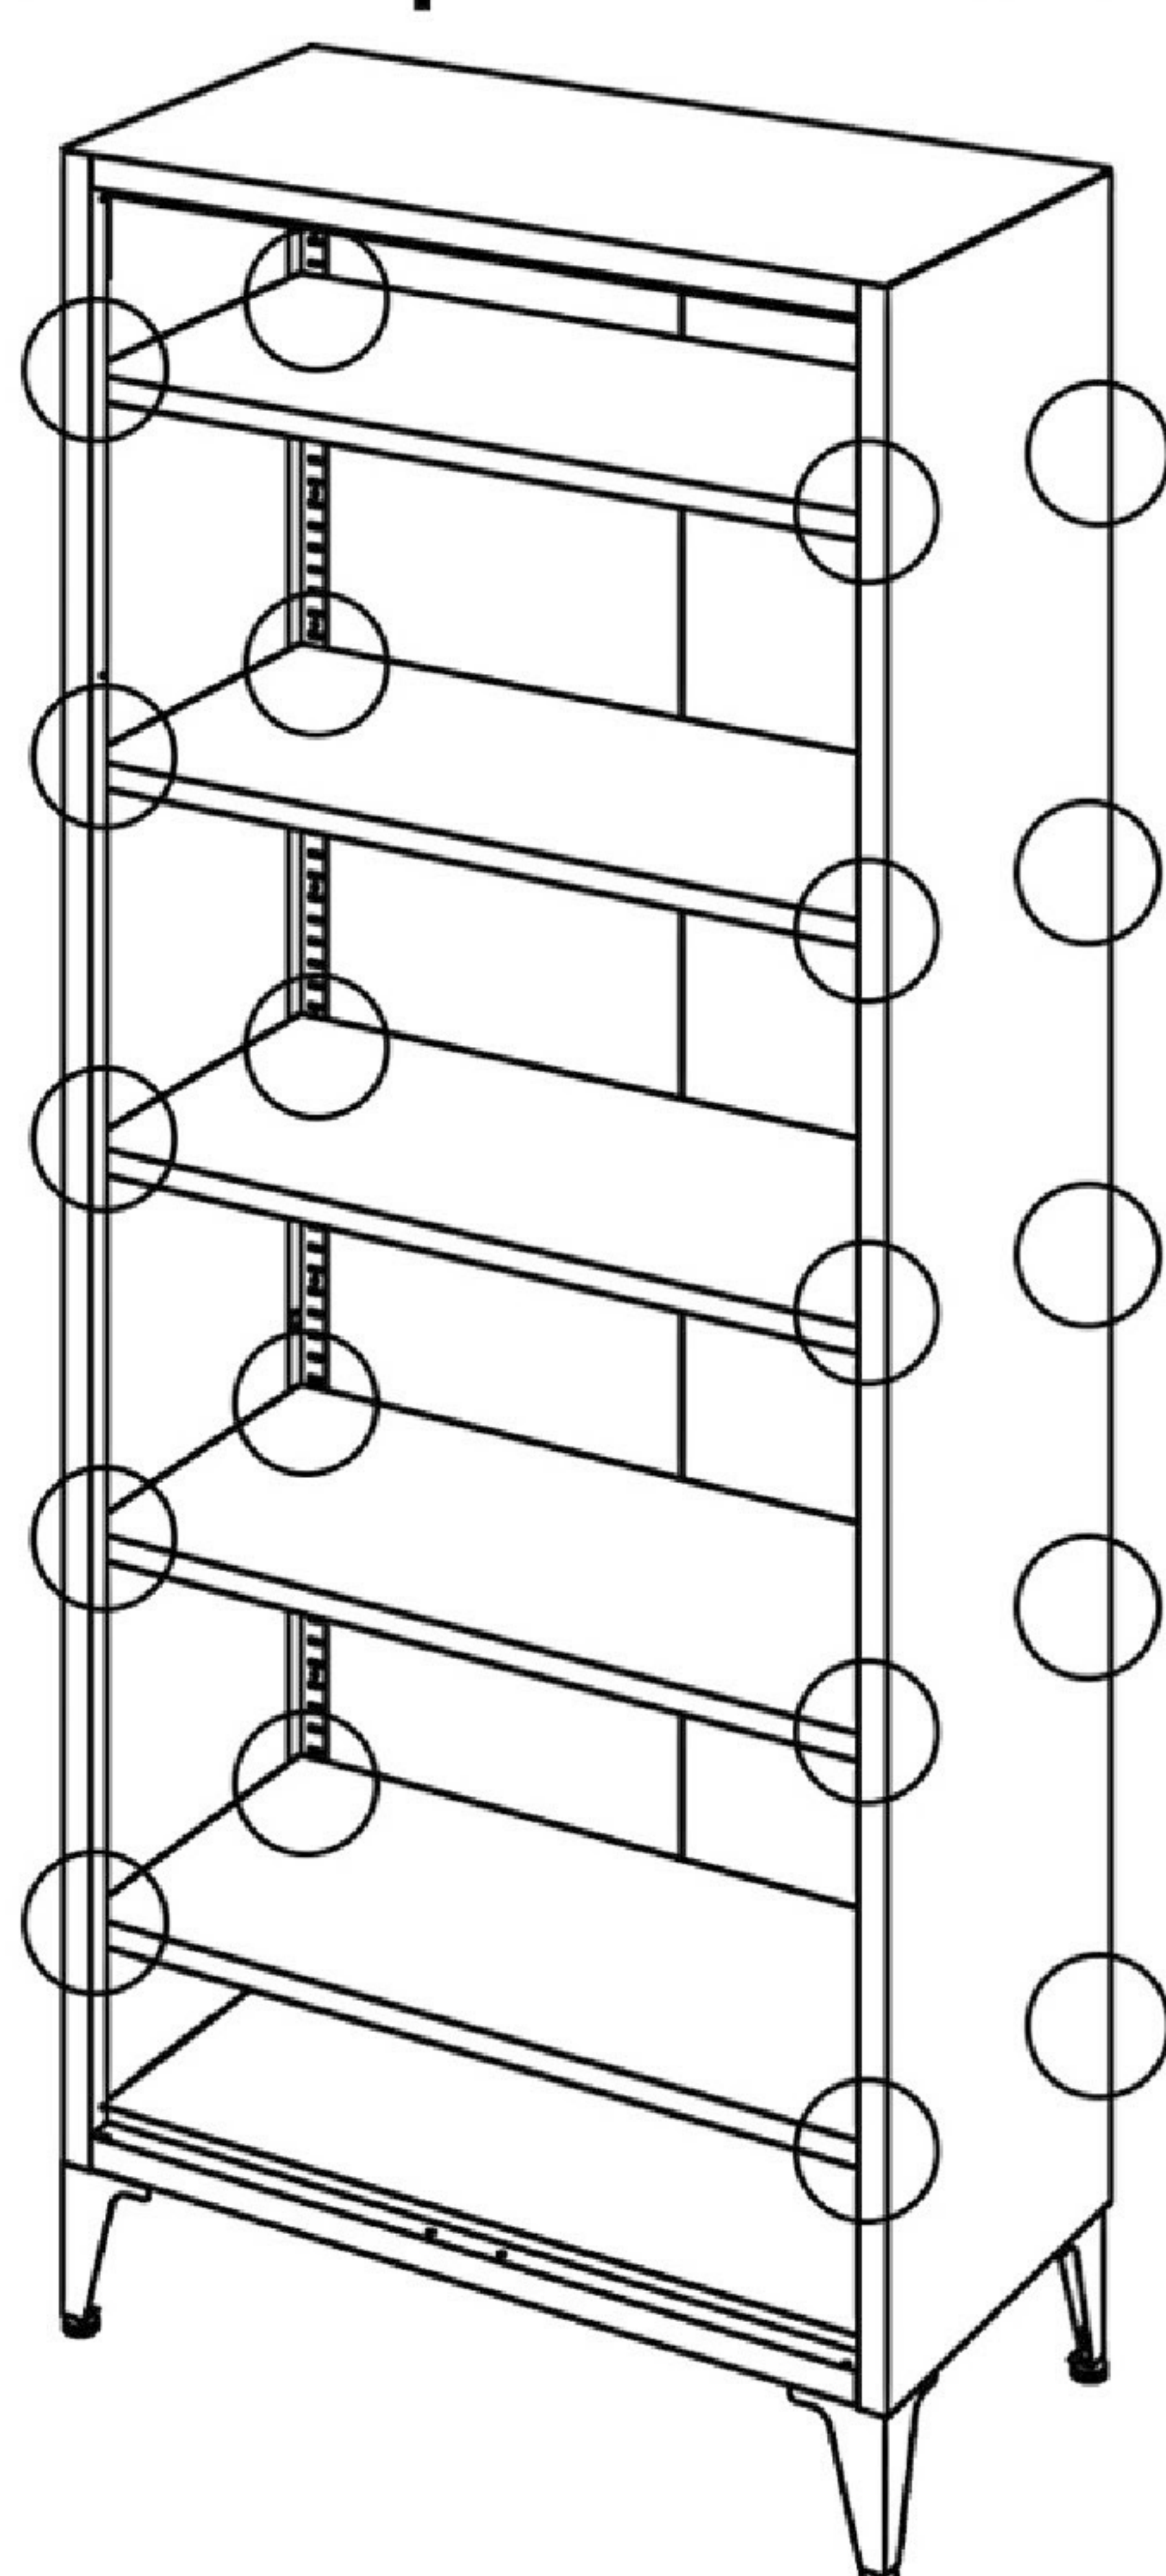


  Step 11

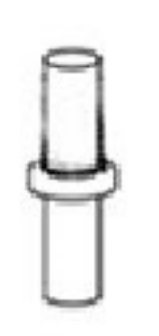
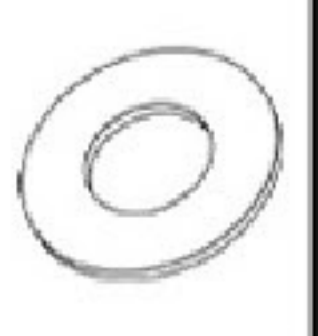
R			2
---	---	---	---

Install door pivots R into the bottom holes of the doors (0/1 shim can be used to adjust the seam), then press the spring shafts Q to pop out

 Q 

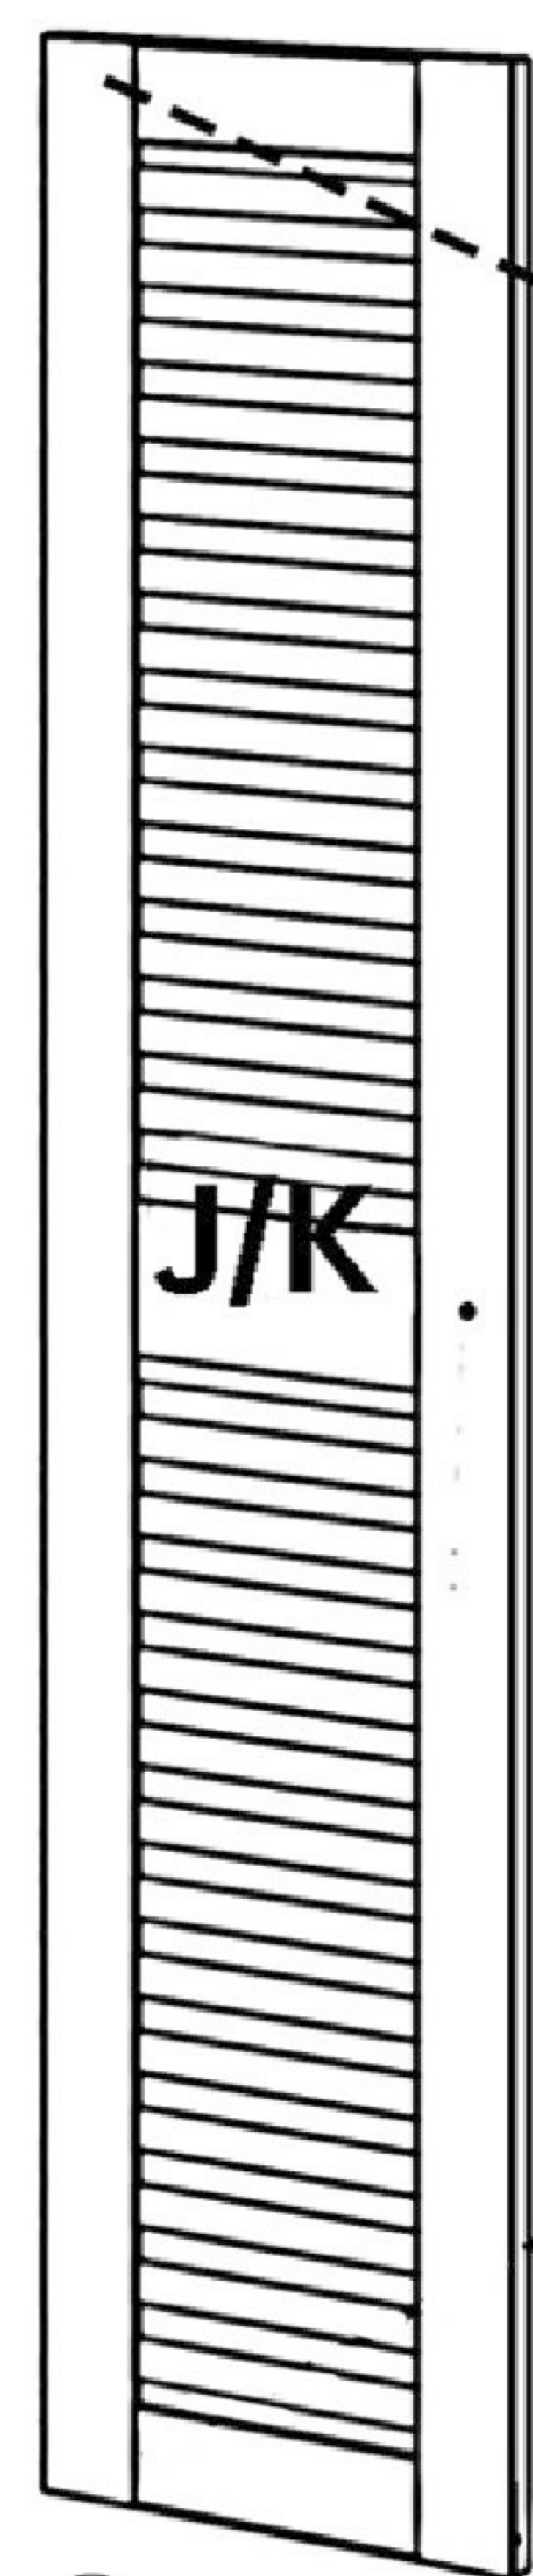

  Tips: There are two holes at the top and the bottom of the doors, the spring shafts and door pivots should be inserted into the smaller one.

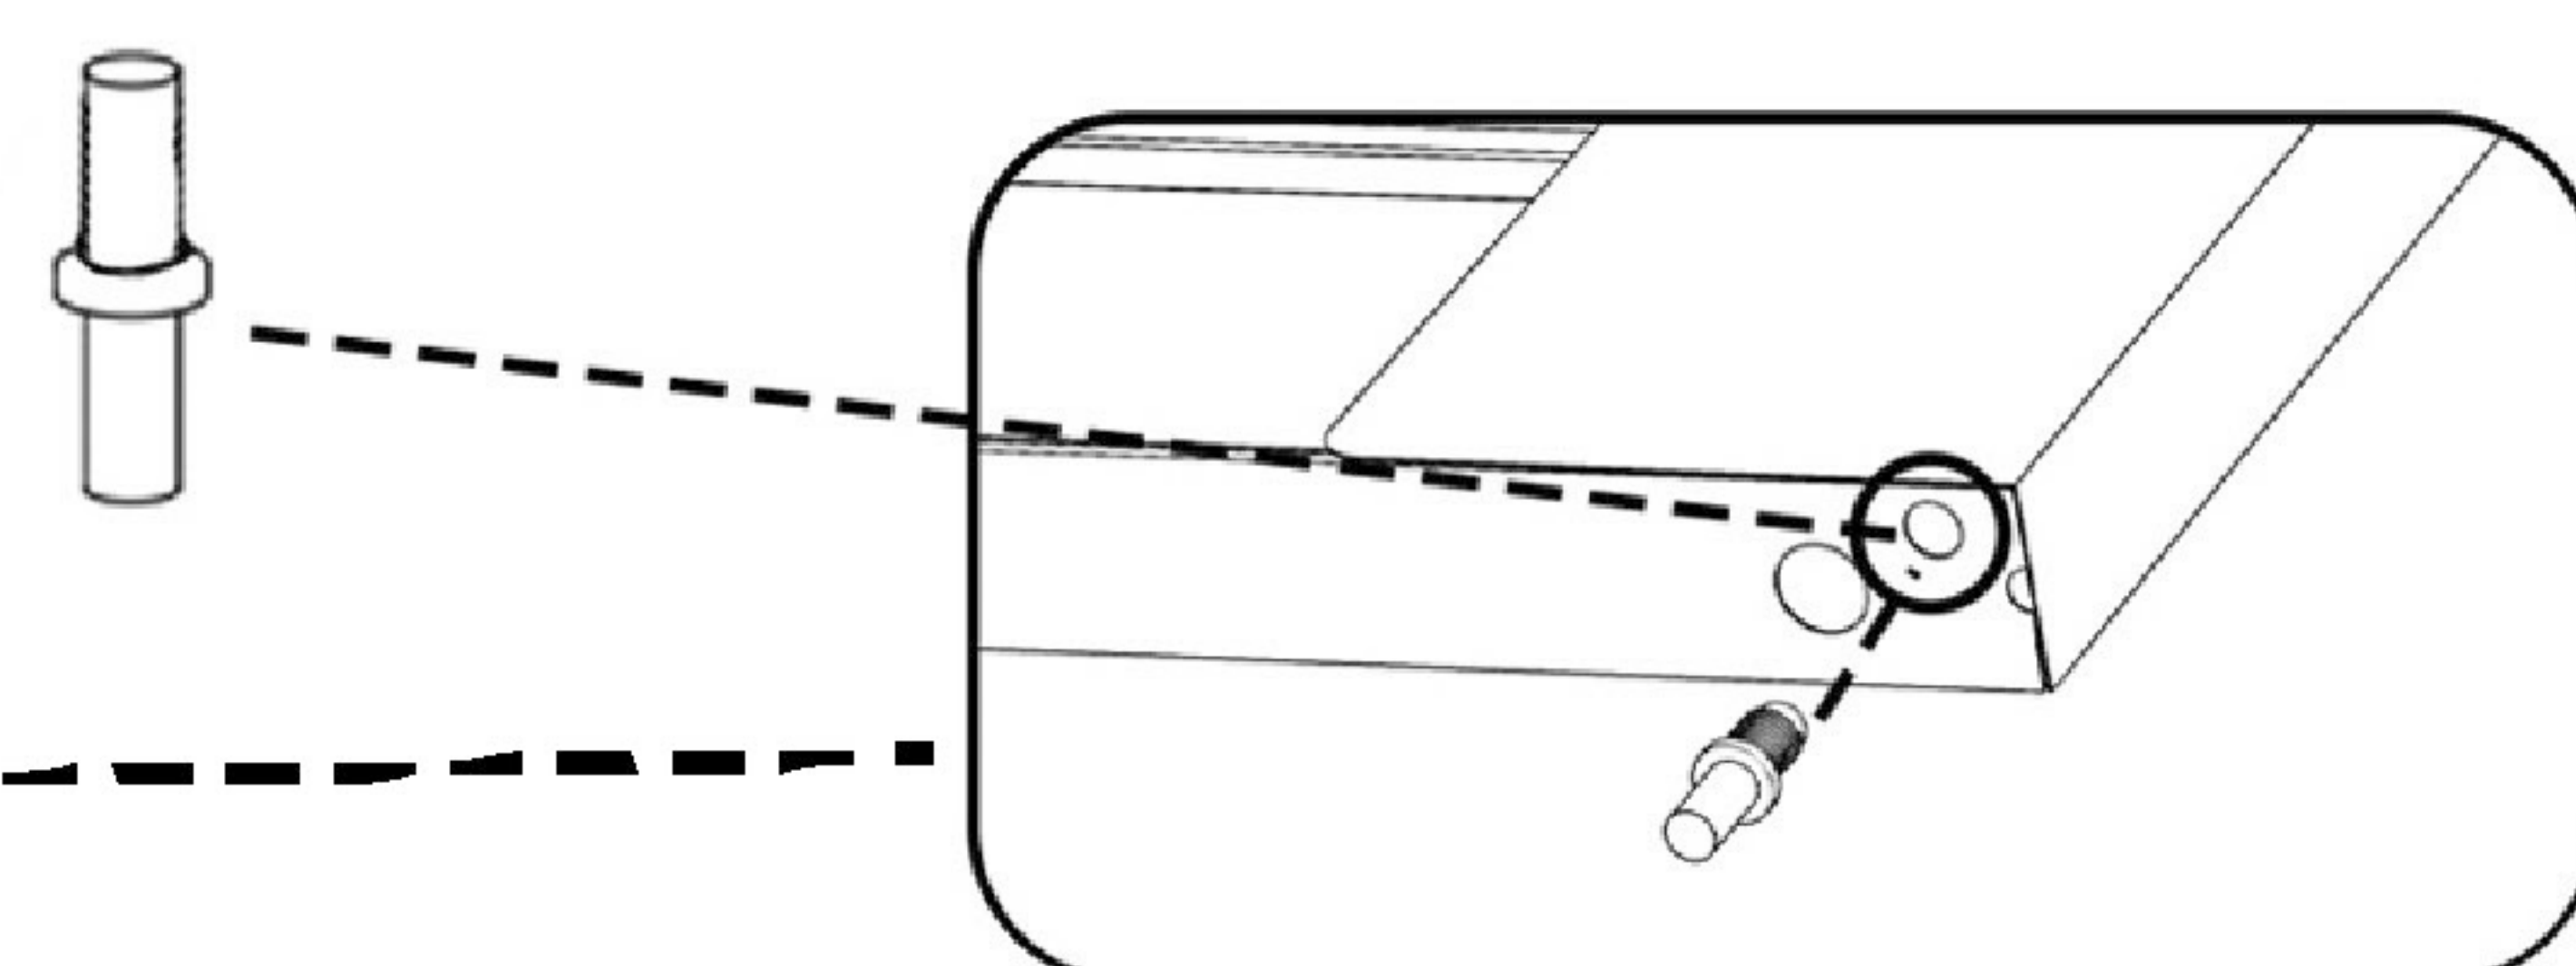
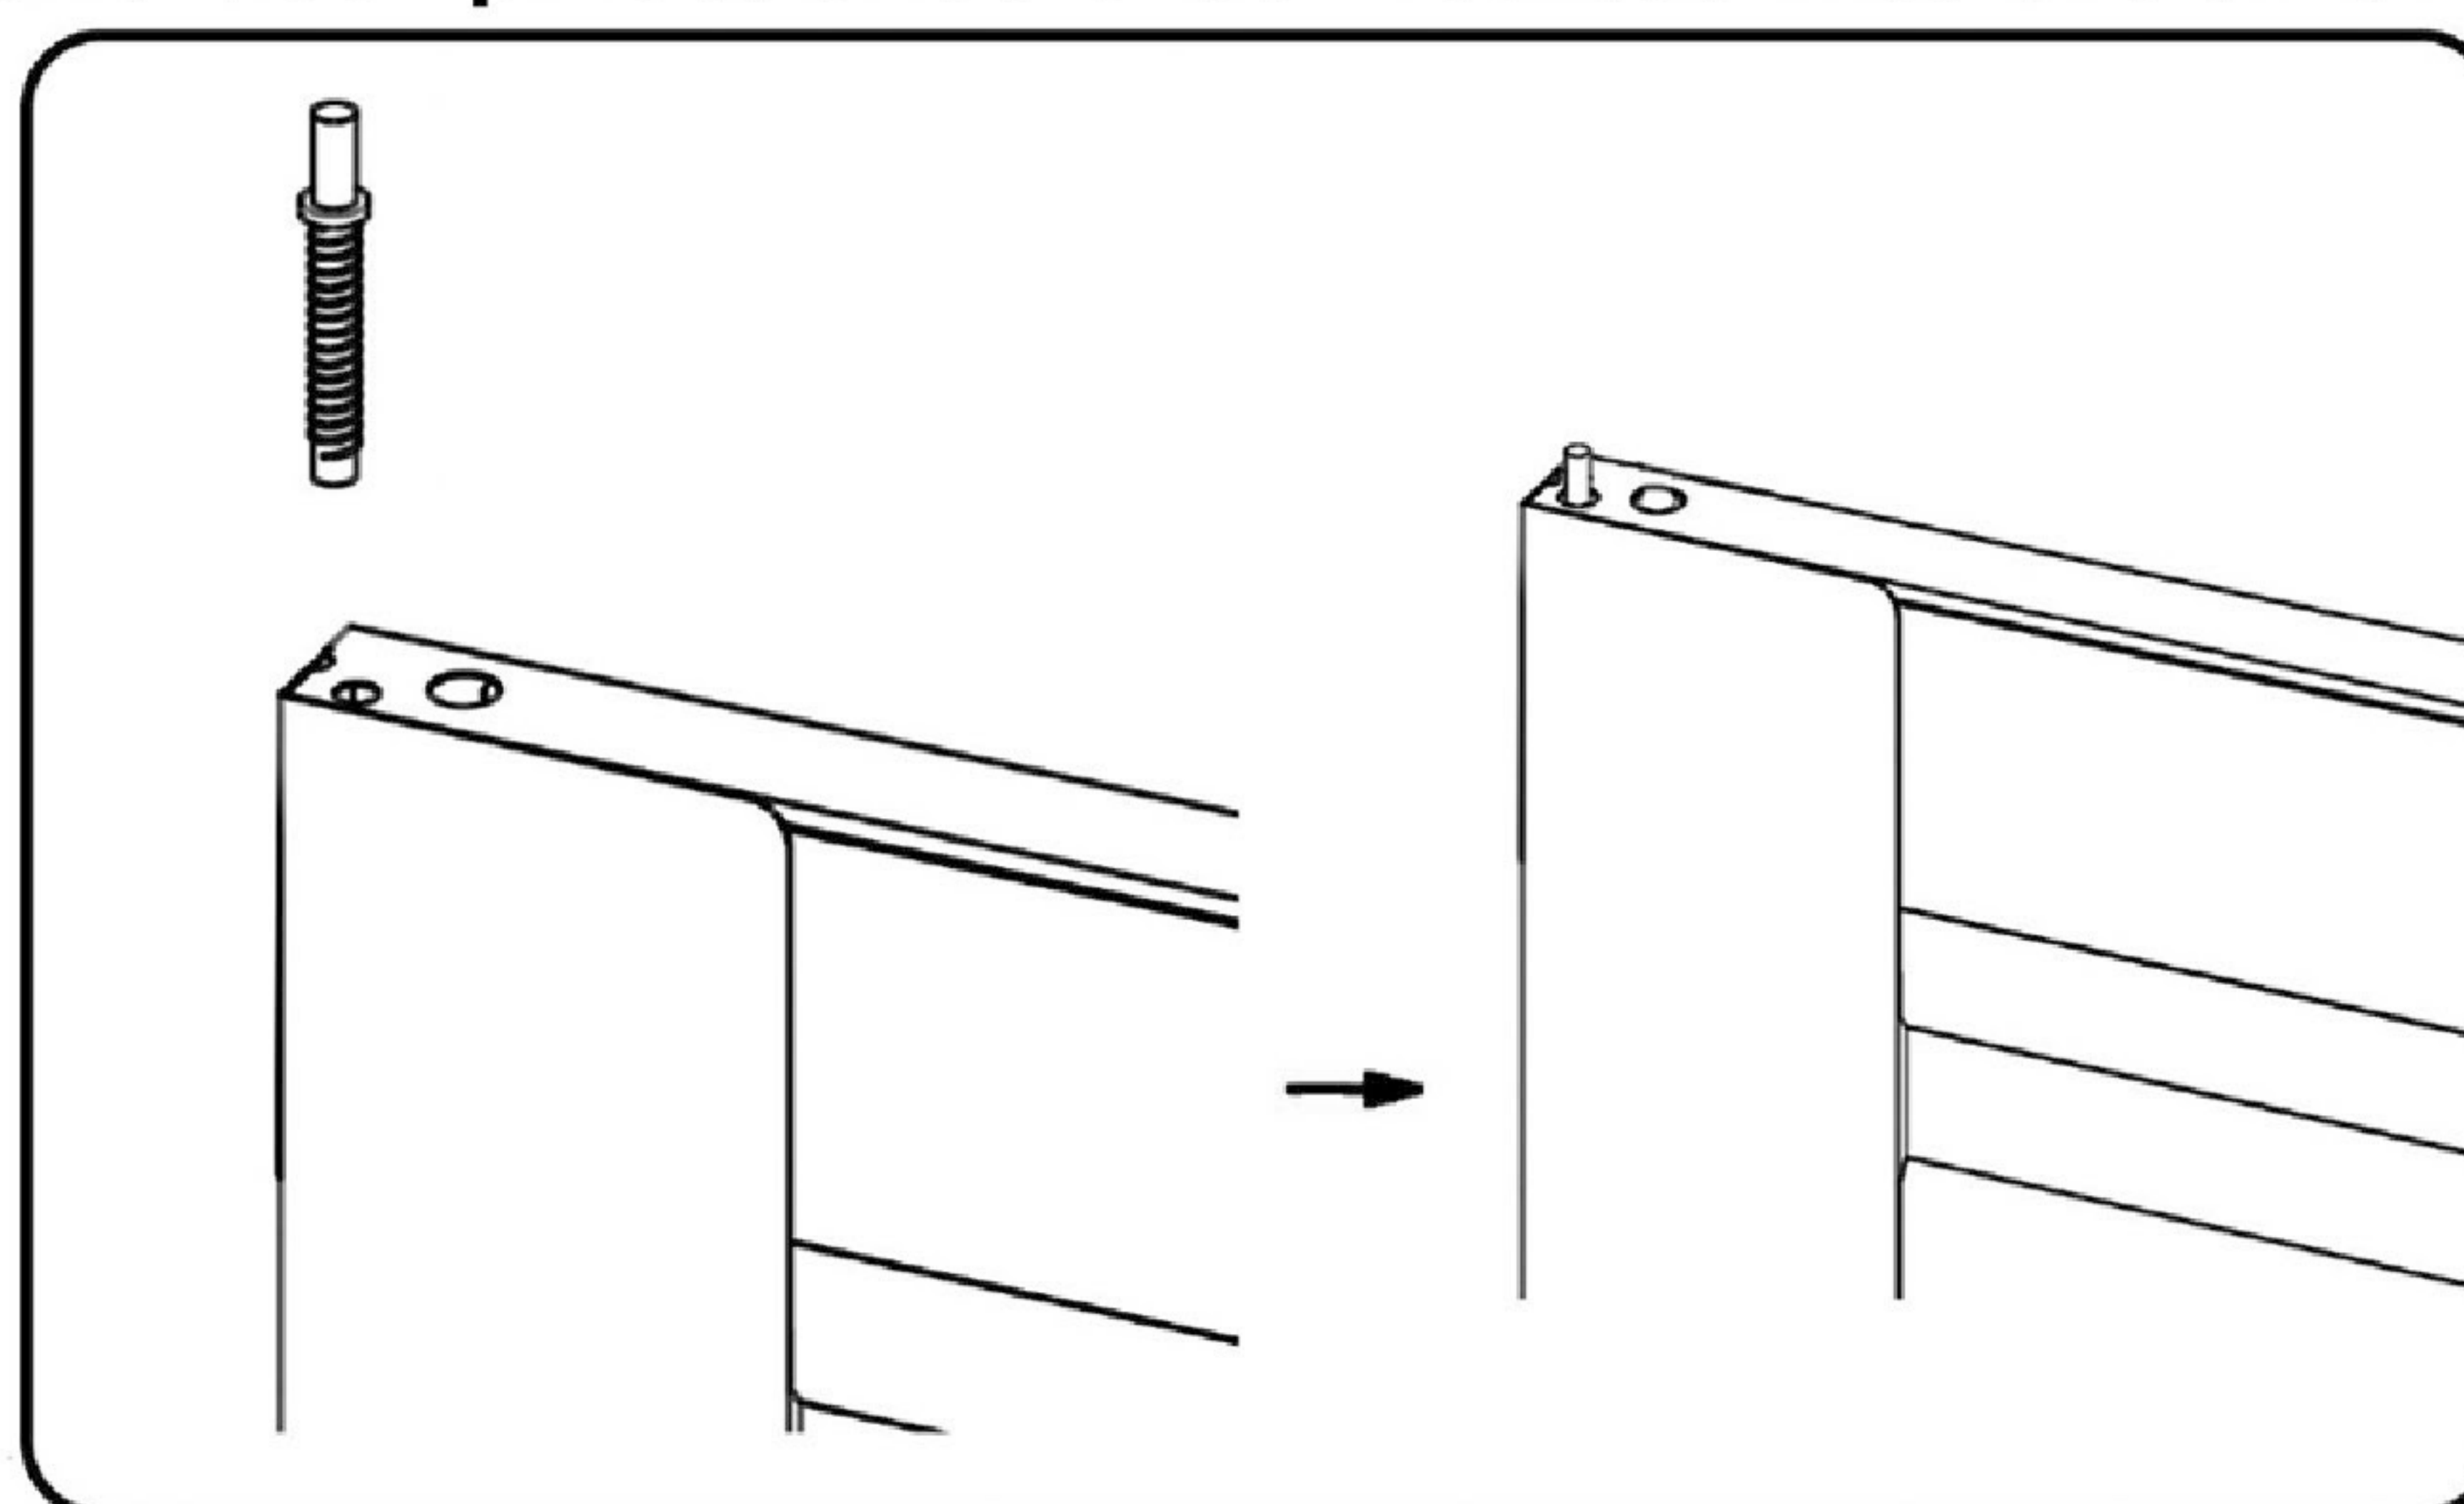


R 

Step 12



S		2	N		2
---	---	---	---	---	---

  Install 2 round handles S on the doors with 2 screws N

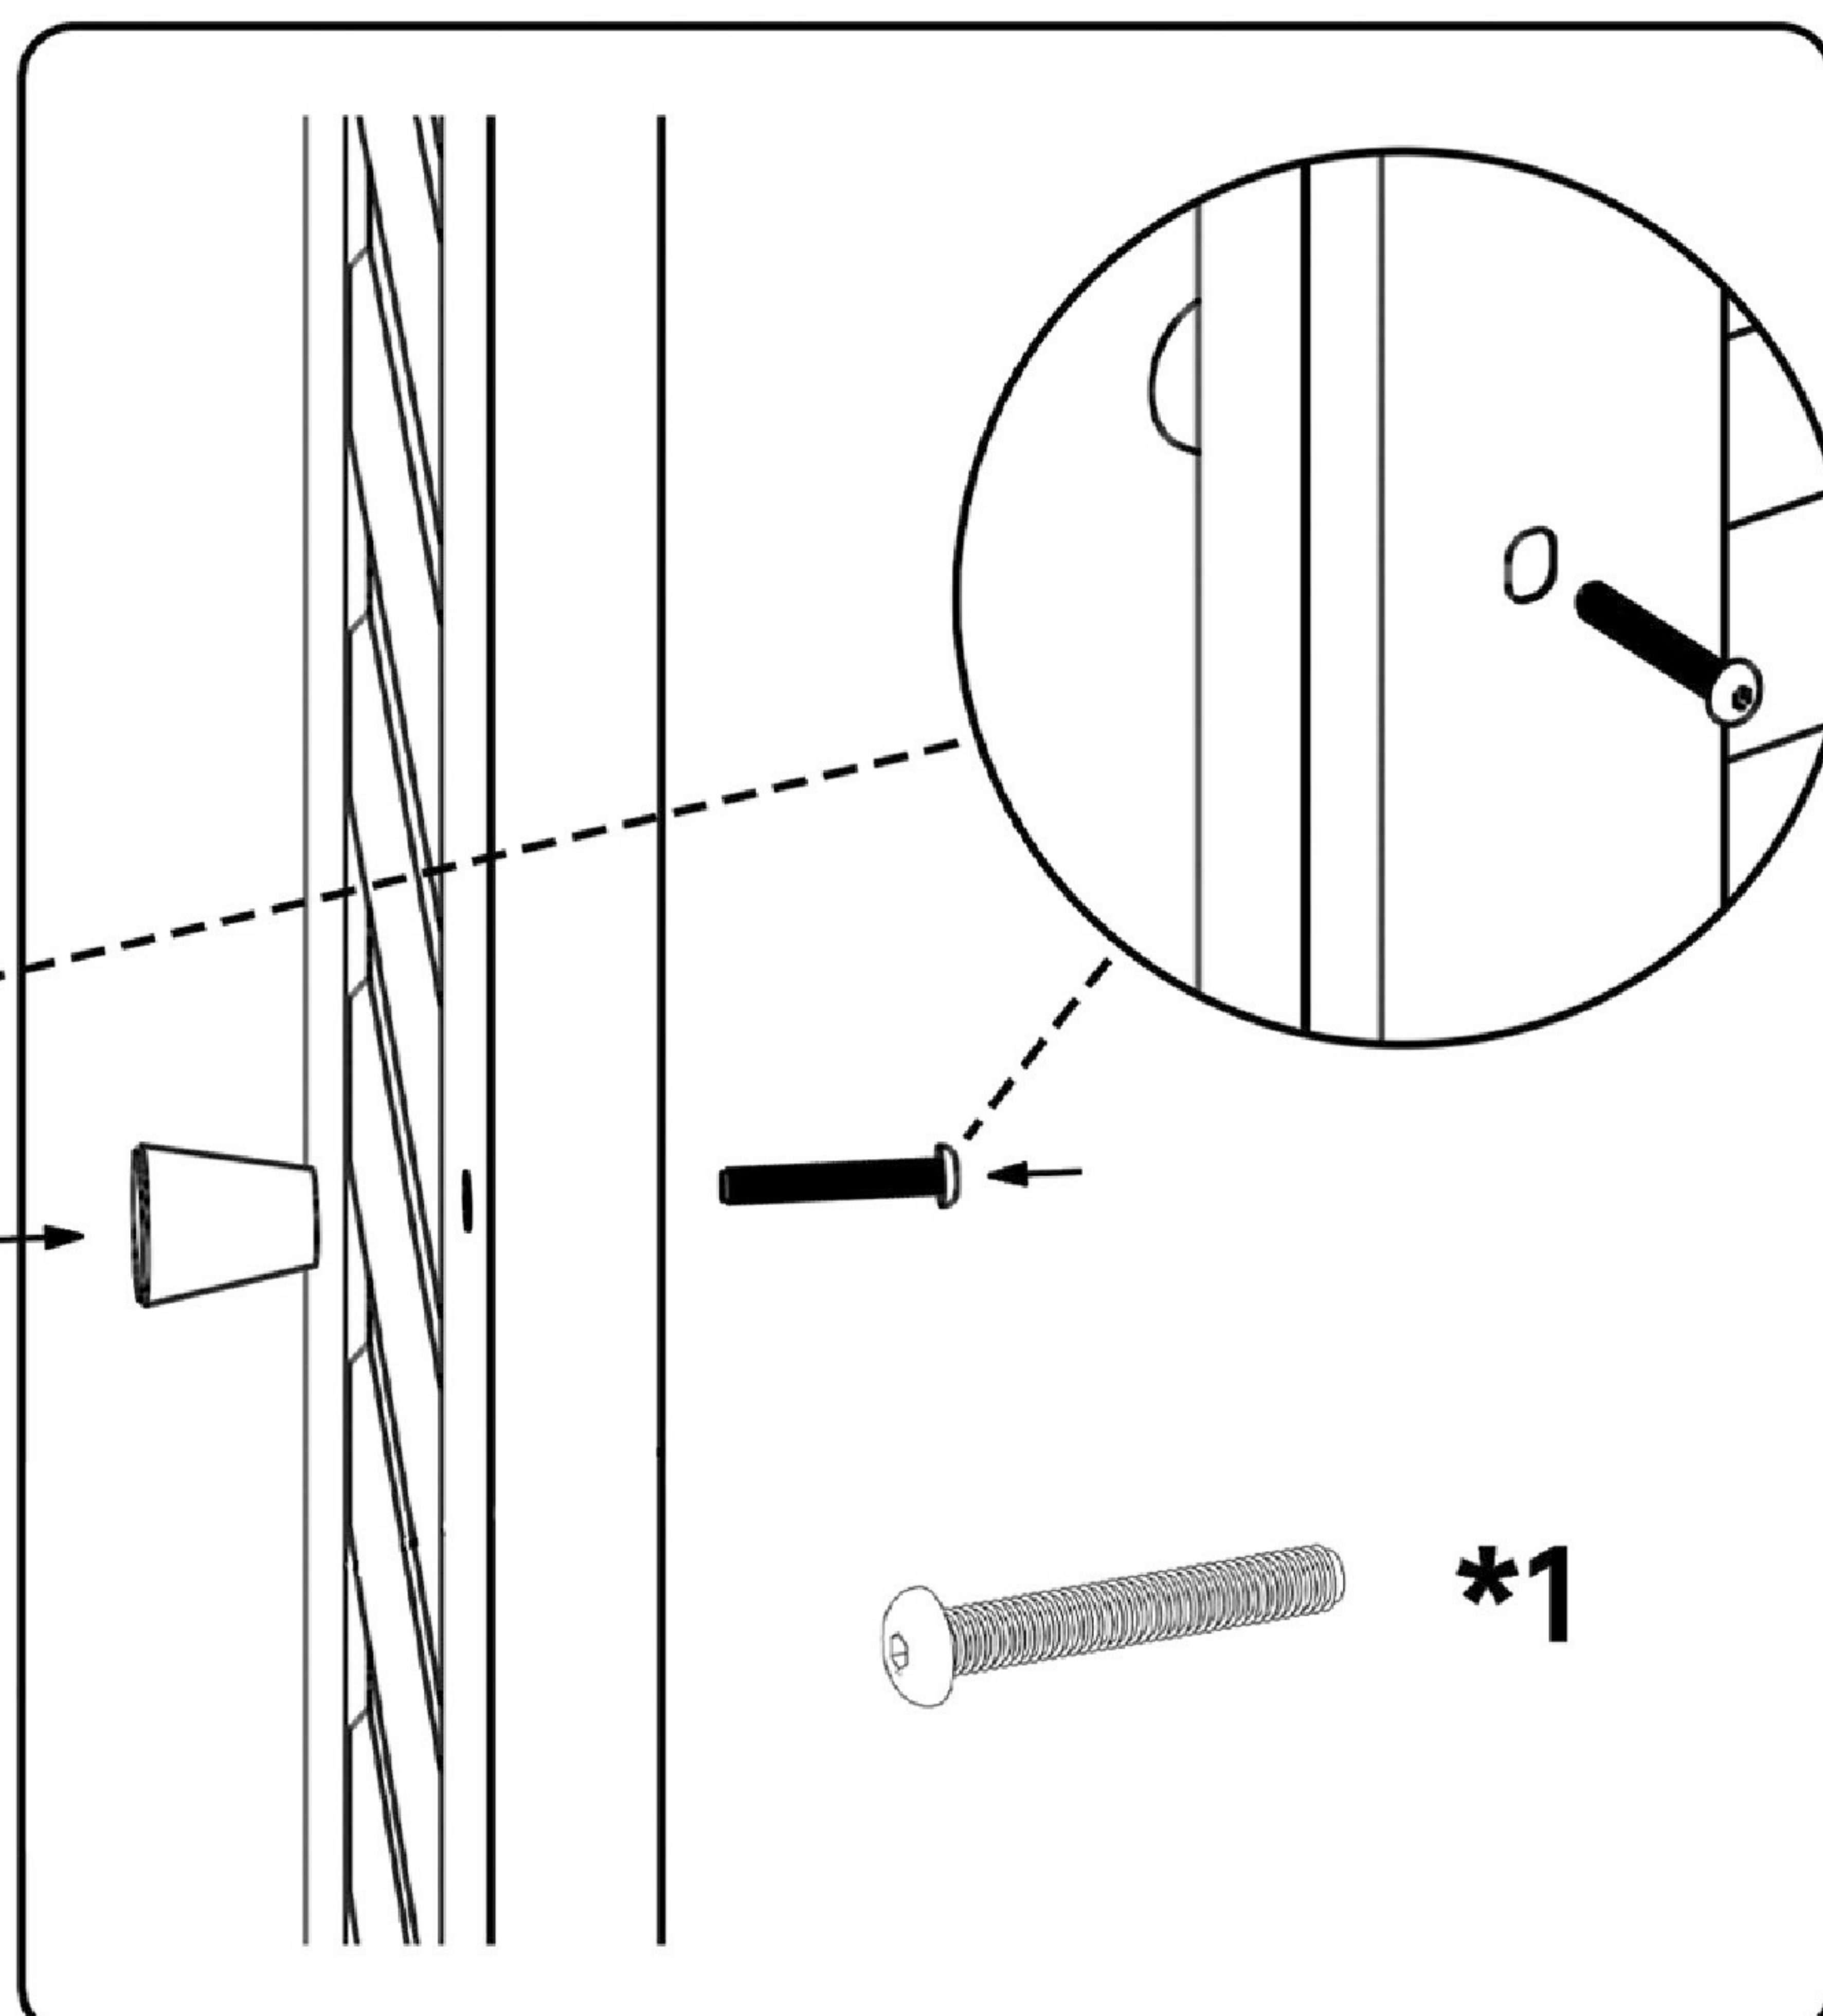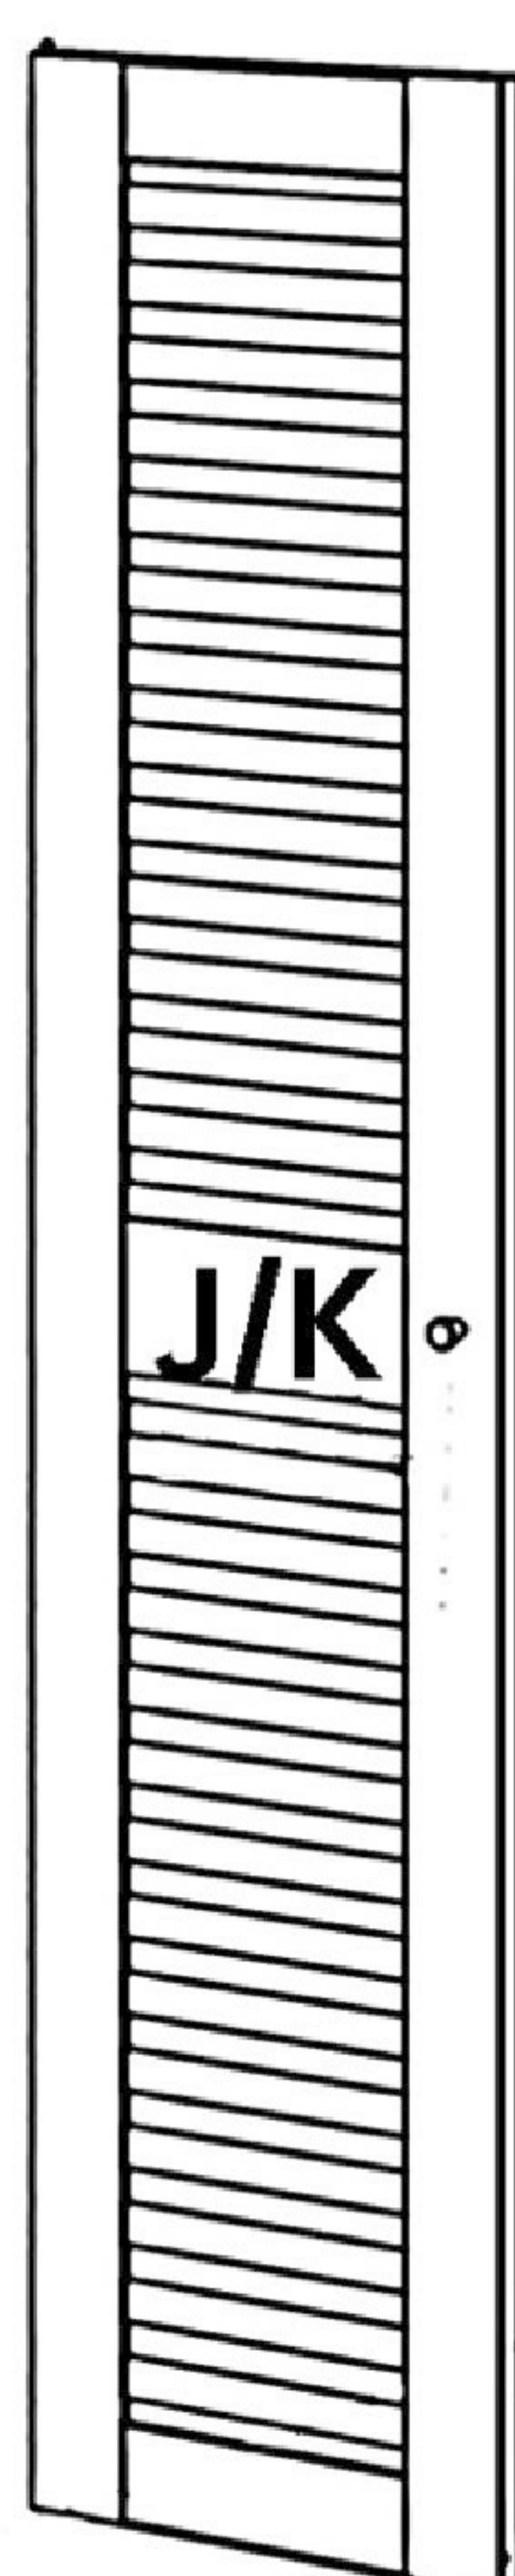


Step 13

  Install 4 magnets T on the doors as shown

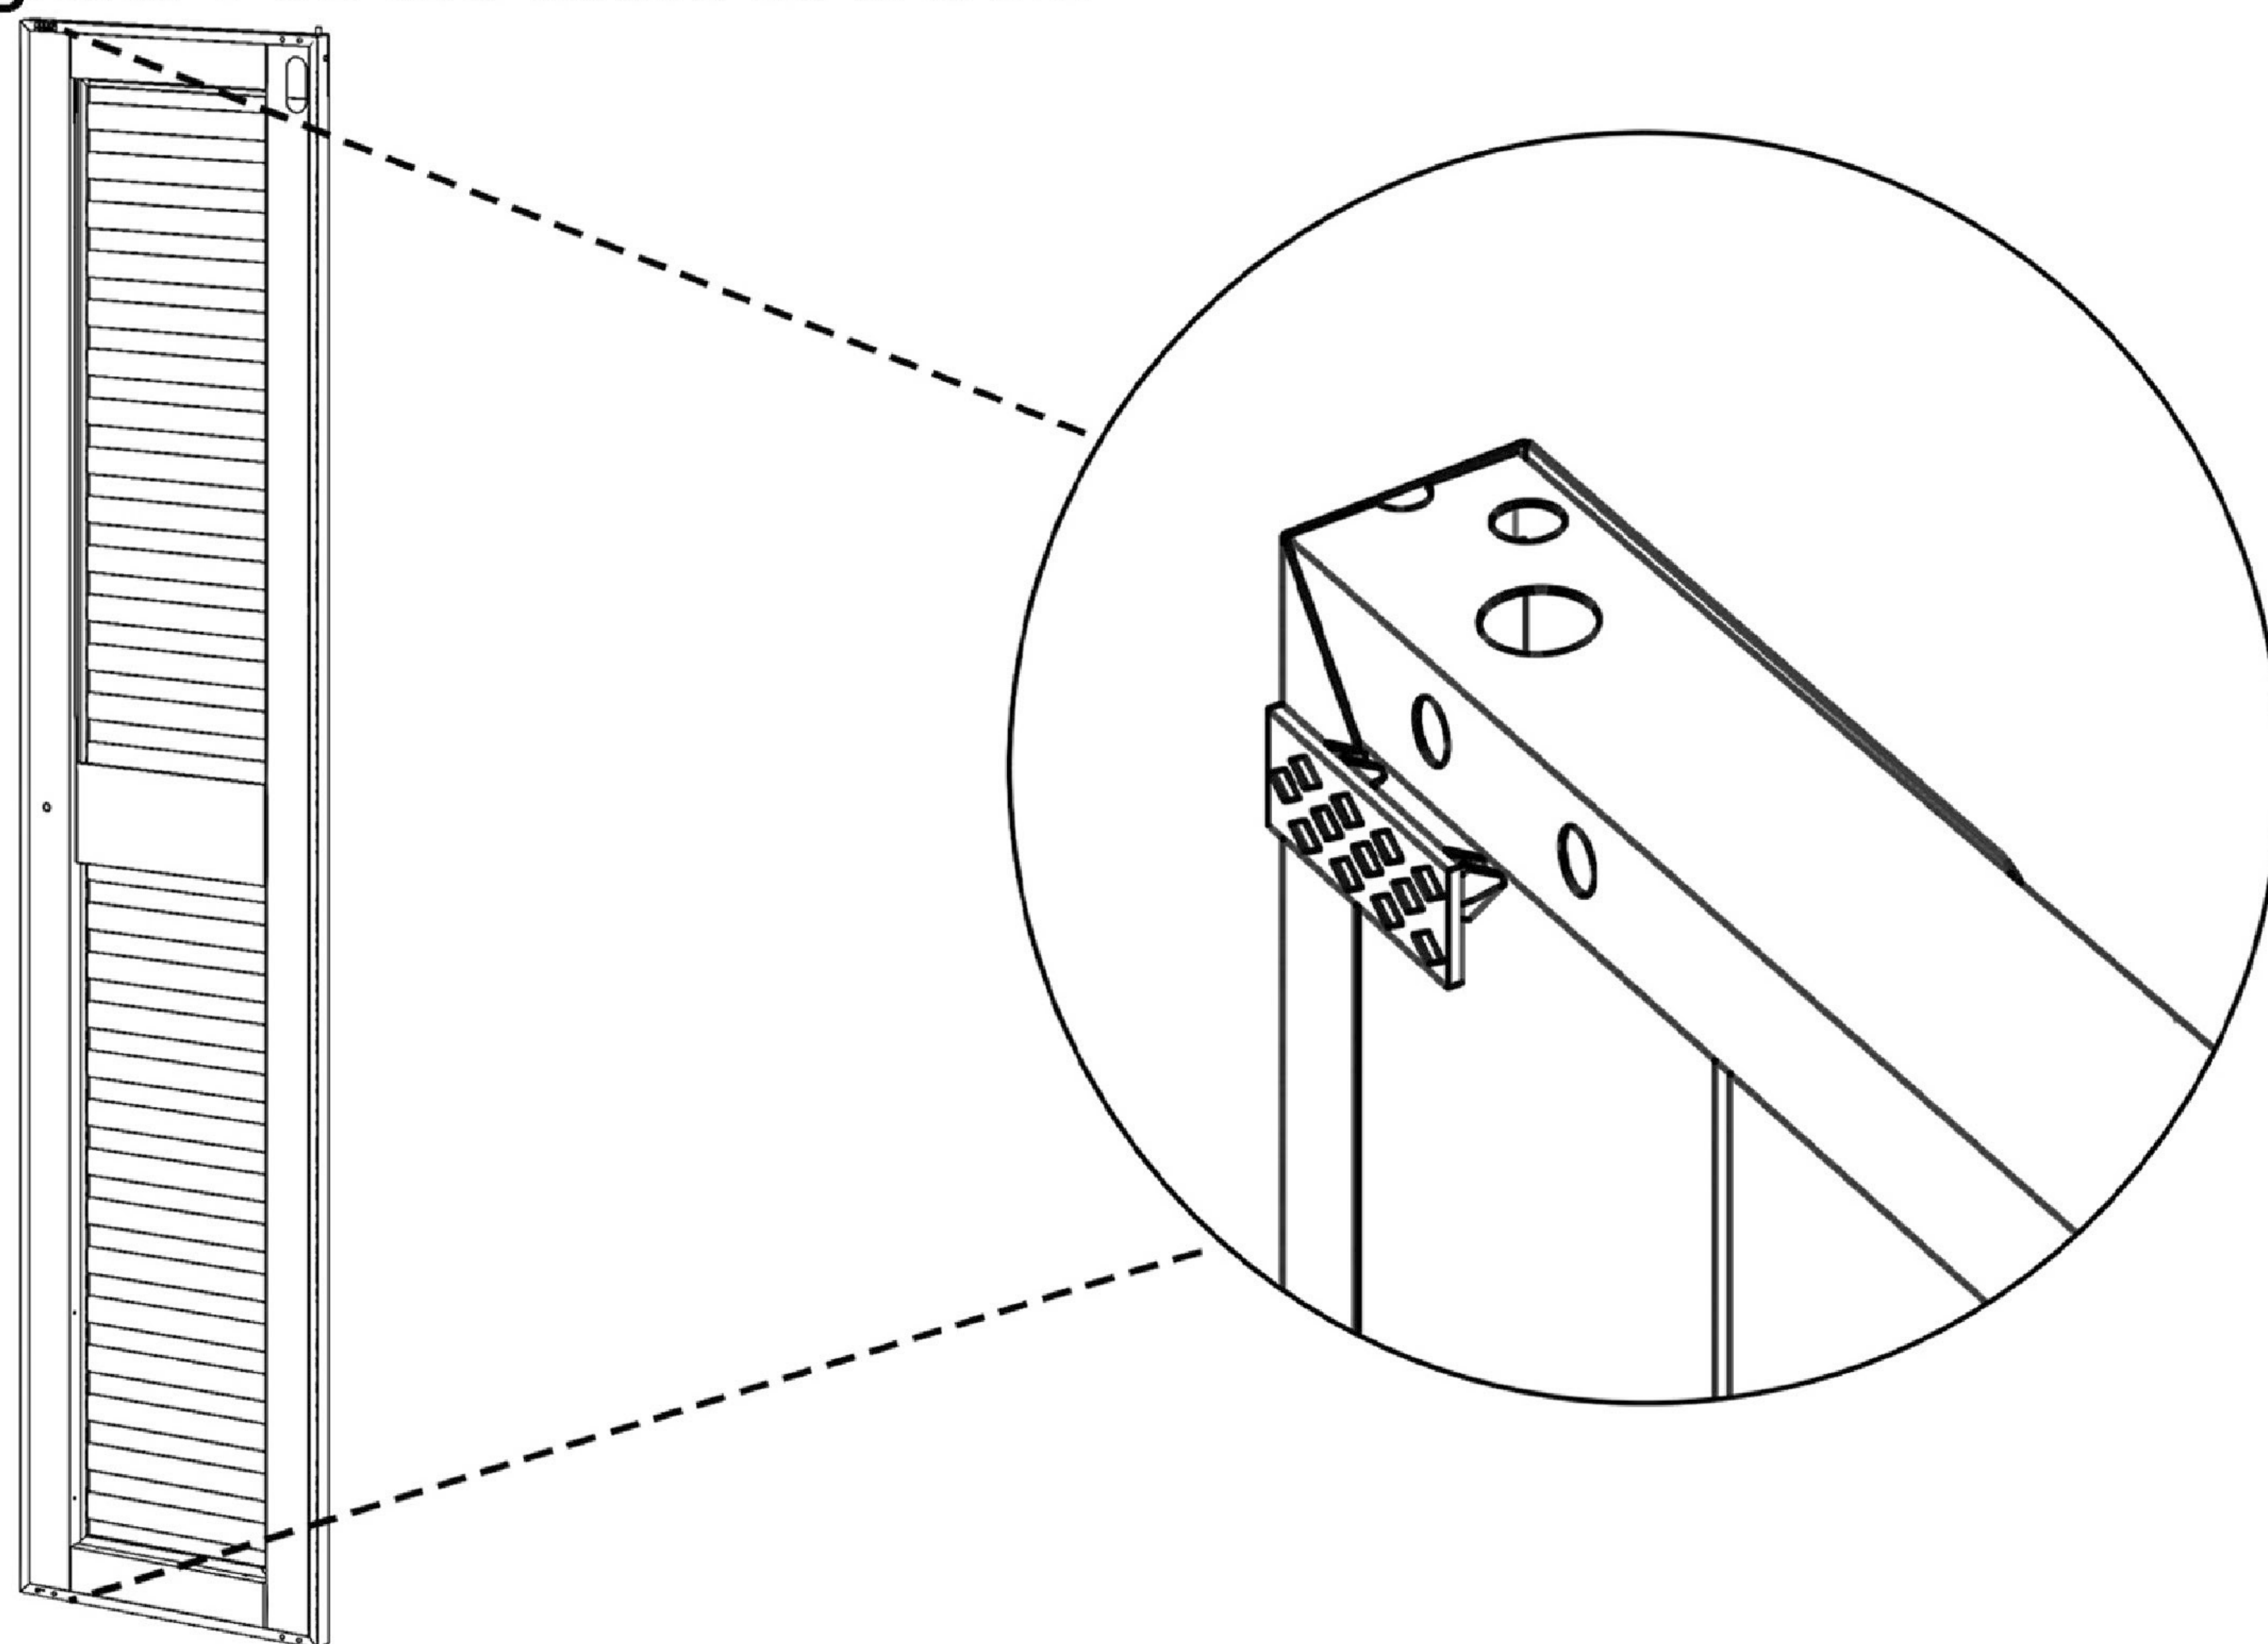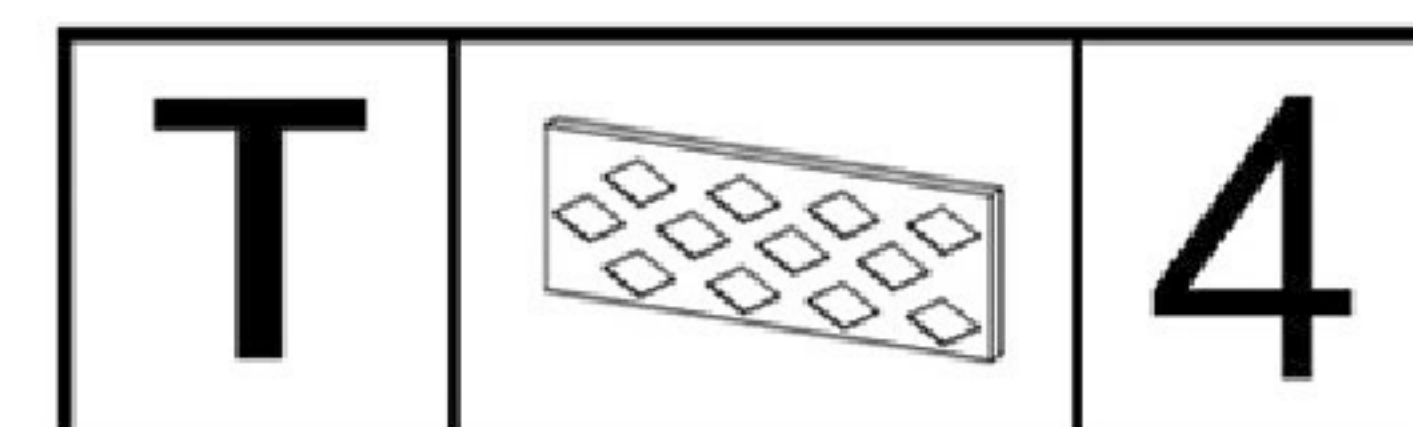

Step 14

 Insert the door pivots R into the holes of the kick plate and adjust the spring shafts Q on the top to install the doors
Install 2 stop pads P

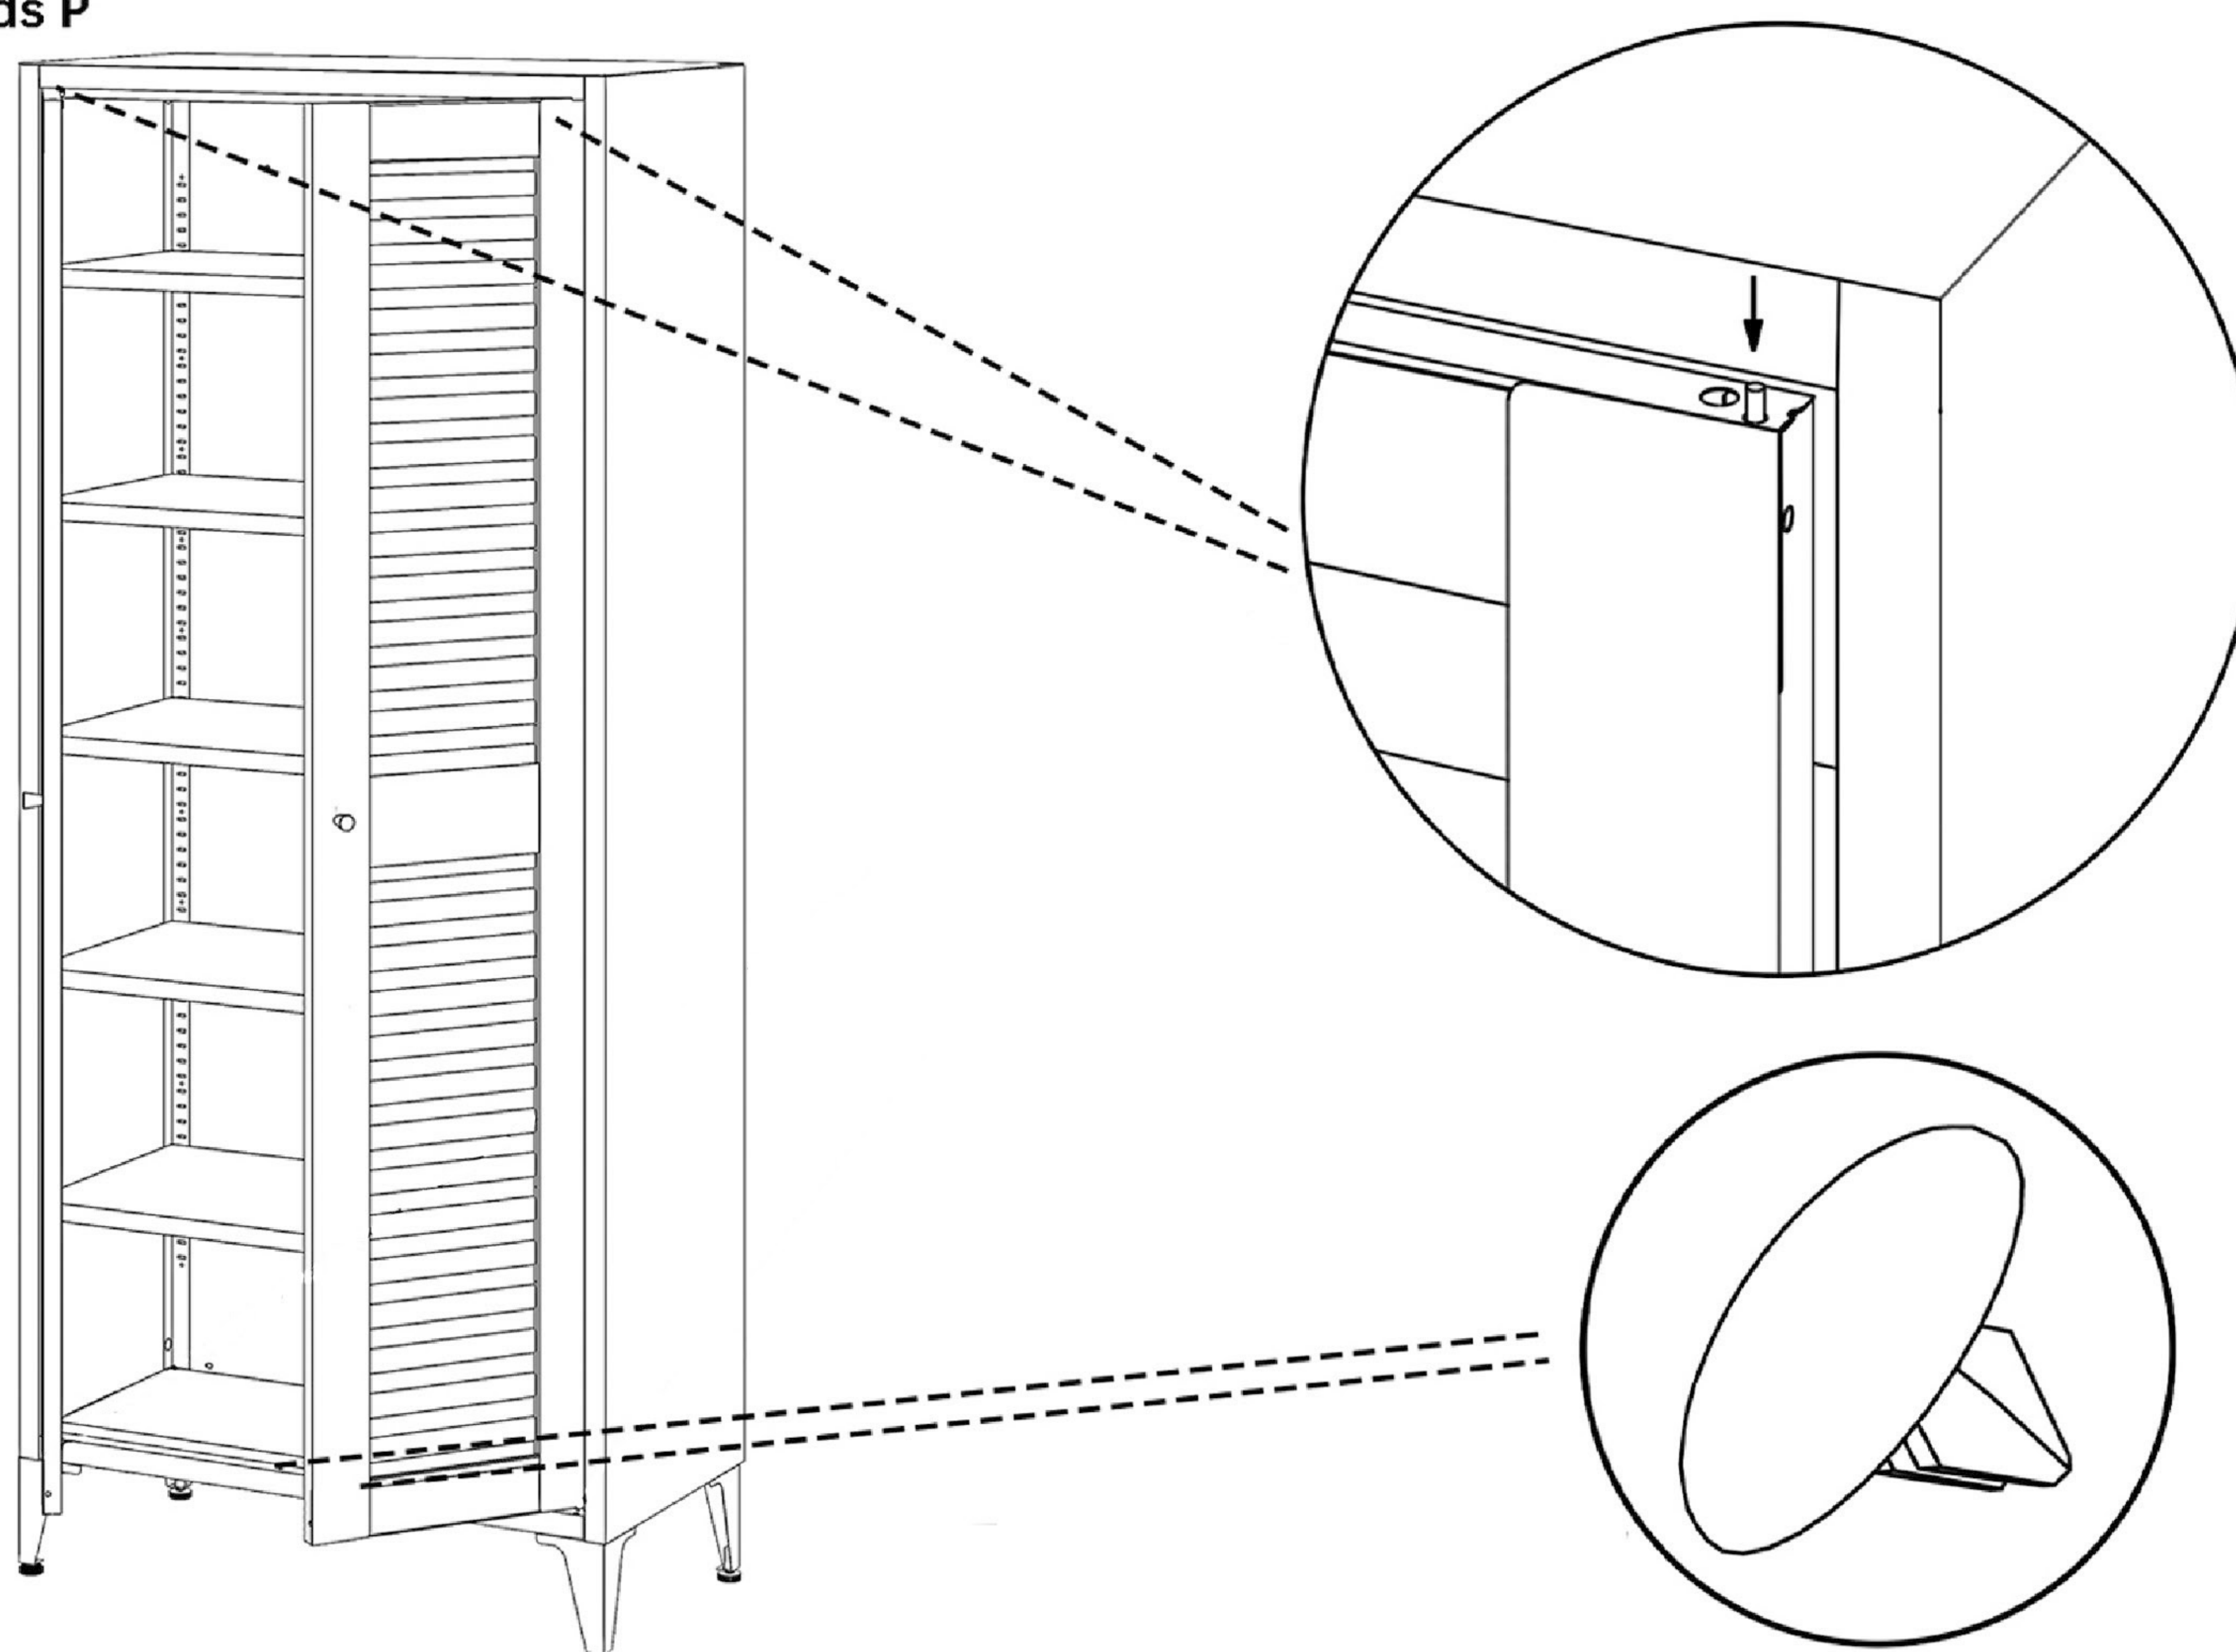



Step 15

V



2

  Fix the cabinet on the wall with 2 expansion screws
V to prevent tipping

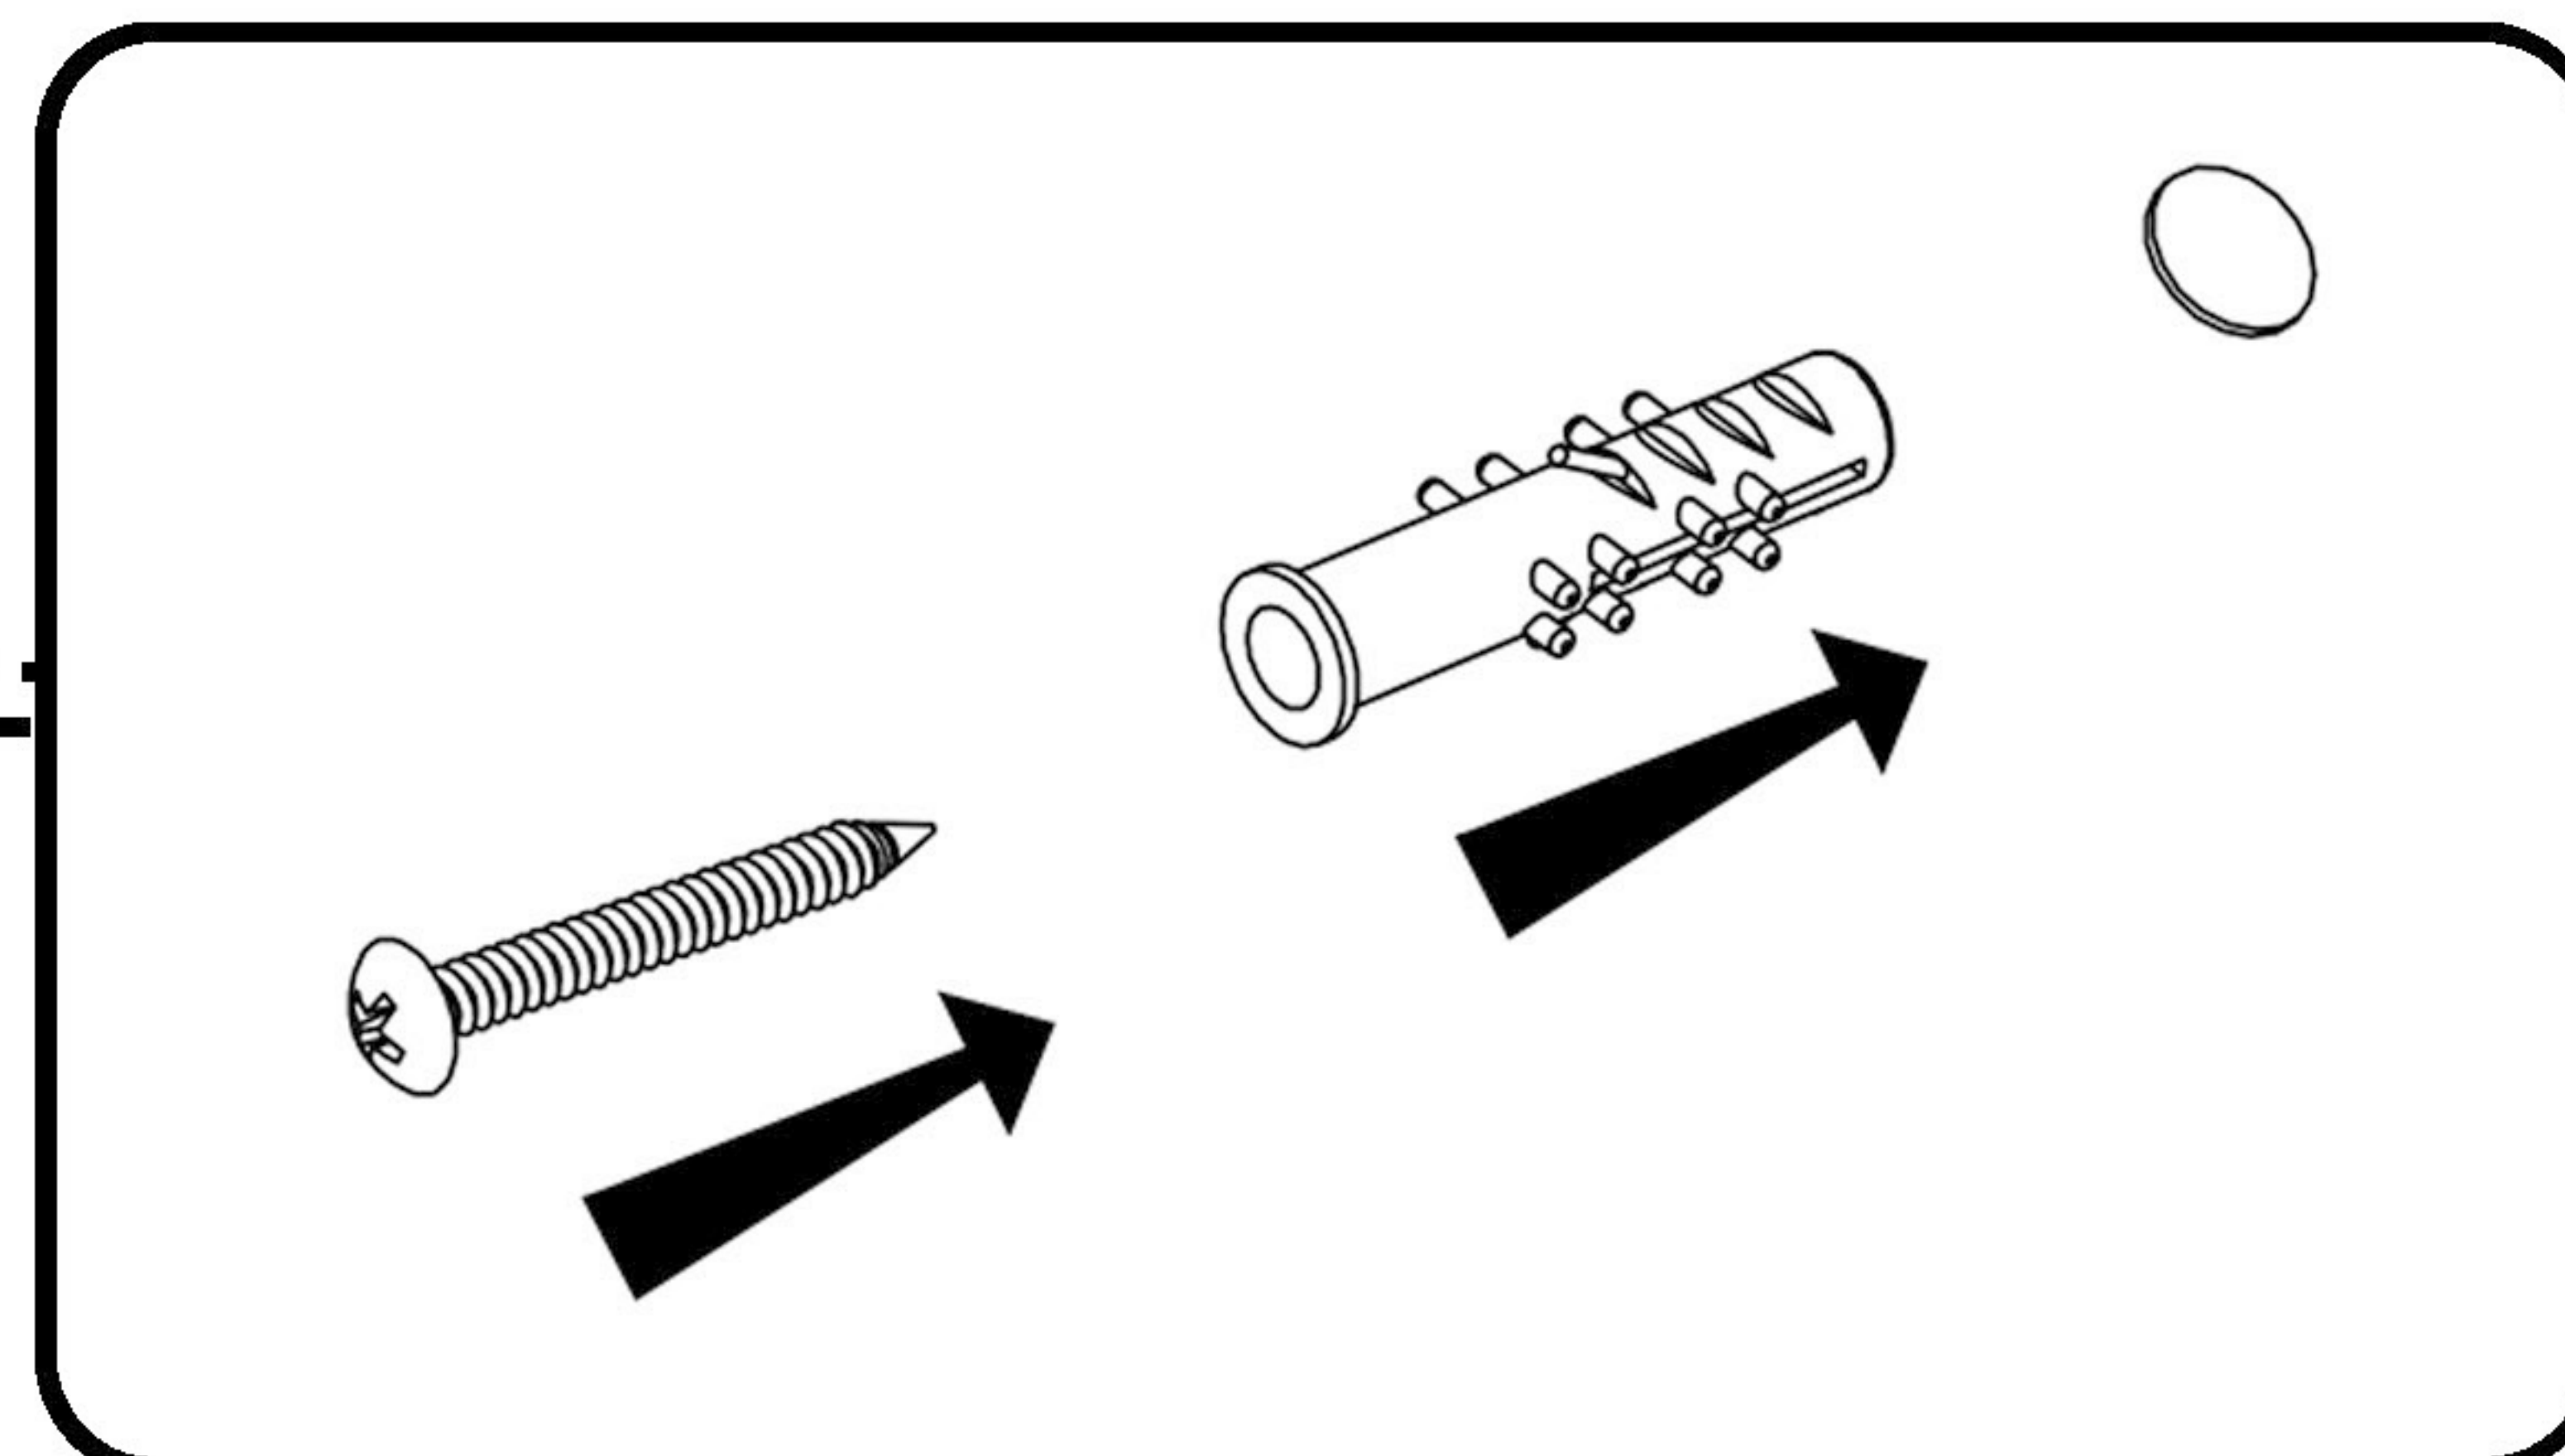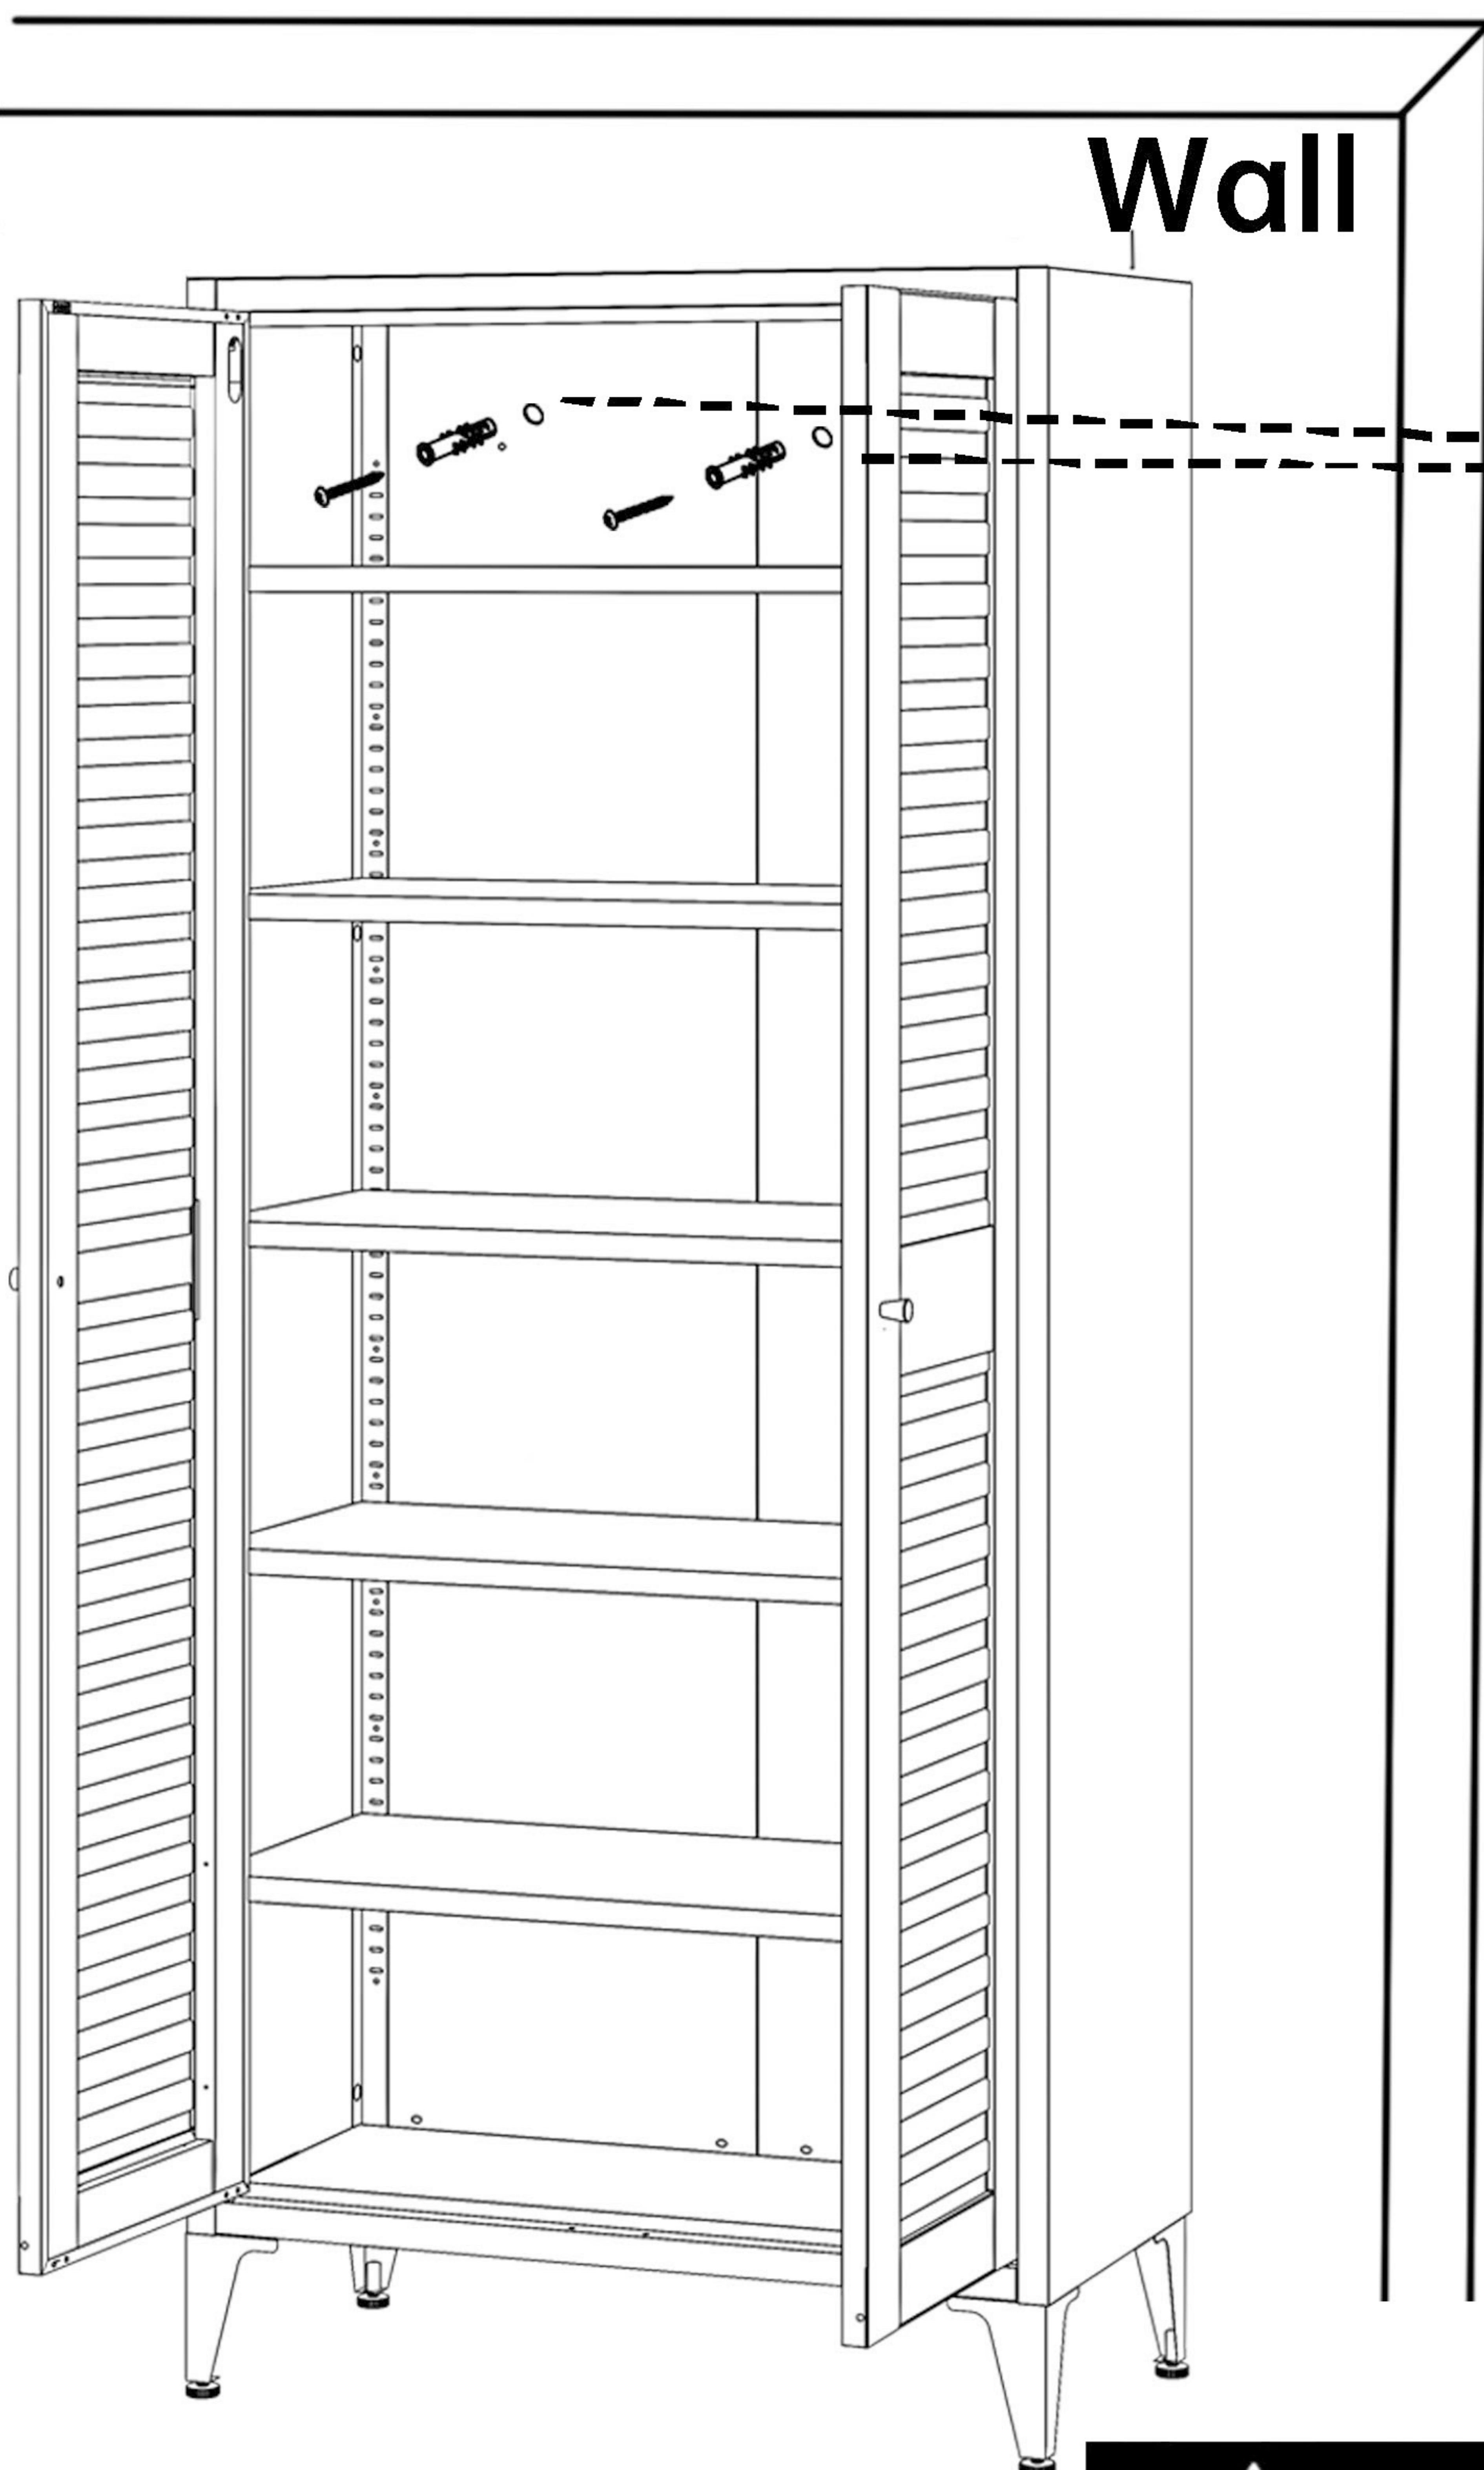

DANGER



Always secure this furniture with an anchor device.

Unsecured furniture can cause serious injury or death to children.

Never allow children to stand, climb or hang on drawers, doors or shelves.

Never open more than one drawer or door at a time.

Place the heavy items on the lower position.

Never place a television on this furniture.

This is a permanent label. Do not remove!