

Assembly Instructions

Ax5	Hx1
Bx1	Ix10
Cx5	Jx4
Dx1	Kx4
Ex1	Lx4
Fx1	Mx4
Gx1	Nx1

①

②

③

④

⑤

⑥

⑦

⑧