

# LP347

## Ultra-Bright Multi-color Headlamp

3 AAA Batteries






### Features

- Durable ABS and rubberized compact design
- LPE optics
- Dual button operation
- Non-slip adjustable headband
- 45° adjustable head
- IPX4 waterproof rating
- Batteries included (3 AAA)

### Product Warranty

The LP347 has a Limited 90-Day Warranty Against Manufacturer’s Defects from time of purchase. For warranty claims please contact us by calling 801-553-8886 or sending an email to [info@simpleproducts.com](mailto:info@simpleproducts.com)

ANSI/PLATO FL1 STANDARD			
			
MODES	LUMENS	RUN TIME	BEAM DISTANCE
Spot Modes			
High	400 lm	3h	125m
Low	125 lm	4h 30m	45m
Strobe	400 lm	--	--
Flood Modes			
Red	30 lm	5h	10m
White	60 lm	5h	20m
Green	55 lm	5h	15m

### Operation Instructions

**Spot On/Off & Cycle Modes:** Press and release the button on the right of the headlamp to turn spotlight on. Press button repeatedly to cycle through modes (High/Low/Strobe).



**Flood On/Off & Cycle Modes:** Press and release the button on the left of the headlamp to turn flood light on. Press button repeatedly to cycle through modes (Red/White/Green).



### Battery Replacement

The LP347 uses 3 AAA batteries. To replace the batteries, first locate the plastic tab on the top of the headlamp. Gently push the tab up and outward using your thumb to pop the battery cover loose and open it. Remove the old batteries and insert new batteries according to the (+/-) symbols in the battery tubes. For best results, we recommend using brand new alkaline batteries that are the same voltage and brand. To re-attach the battery cover, press the headlamp housing and battery cover together until it clicks into place. Check that the battery cover is secured by gently tugging on the headlamp straps while holding the main housing firm.



If you know it will be a while between uses, we suggest removing the batteries from the headlamp and storing it in a dry, protected place.