

开箱快速指南-Flexer Pro

尺寸: 700*500mm

专色:  PANTONE P 24-6 C

 PANTONE 9420U

 PANTONE Black

超感米300g

OUR JOURNEY

Dear New Friend,

Greetings! I am Flexer Pro from ProtoArc, your ergonomic office chair designed with care and precision. Since leaving the production line, I have been eagerly awaiting our time together. Today, our journey finally begins.

Your effort in assembling me is truly appreciated, bringing functionality to my design. This moment marks "Day 1" of my mission, not the end of ProtoArc's dedication to your comfort.


In the years ahead, I will be your reliable companion through every workday and leisure moment. I aim to support you during your morning coffee, each task you complete, every game session, and the quiet moments with your favorite book under soft lighting.

While I may not join you in the outside world, I will always be here, ready to provide consistent support and comfort when you return. No matter what happens out there, I'll always be behind you.

If my structure ever encounters an issue, please do not hesitate to contact my creators at ProtoArc. They are always prepared to assist, ensuring our journey continues seamlessly.

Thank you again for choosing me. Together, let's embark on a journey of comfort and productivity.

Sincerely,
Flexer Pro, Your Ergonomic office chair



Each time you sit with me, you place your trust in me, even if you may not notice it. Rest assured, I will keep performing at my best and will not let you down. Thank you for trusting ProtoArc.

FAQ

How to Adjust the Seat Height?
Rotate the adjustment lever at the bottom of the seat to raise or lower the seat height. To lower the height, you need to sit on the chair, and to raise the height, you need to stand up.

How to Adjust the Seat Recline Angle?
Reclining Function Activation: Rotate the handle to the unlock position to release the backrest for free tilting.
Angle Locking (95°-105°-115°-130°): After unlocking, lean back slowly to your desired angle. Rotate the handle to the lock position to secure the recline angle.
Unlock the Reclined Position: Apply slight backward pressure with your body to release the lock, then pull out the adjustment lever to readjust the tilt angle.
Tension Knob: Rotate the knob to adjust the backrest reclining resistance—turn clockwise to increase resistance, counterclockwise to decrease resistance.


How to Adjust the Seat Cushion Depth?
Adjust the seat: The seat adjustment latch is positioned within the recessed channel under the left side of the seat cushion. To adjust, firmly grip the release mechanism with four fingers, then while maintaining pressure, slide the seat forward or backward to your desired position. Release to lock the seat in place.

A workspace for wellness

Quick Installation Guide

Need help?
Scan the code to connect with our 100% Satisfaction Specialists anytime. We're here to make things right.

24/7 Live Chat




protoarc.com


support@protoarc.com

US: +1 886-287-6188


Mon-Sun:
9AM-1PM, 2PM-6PM PT
*Closed on holidays

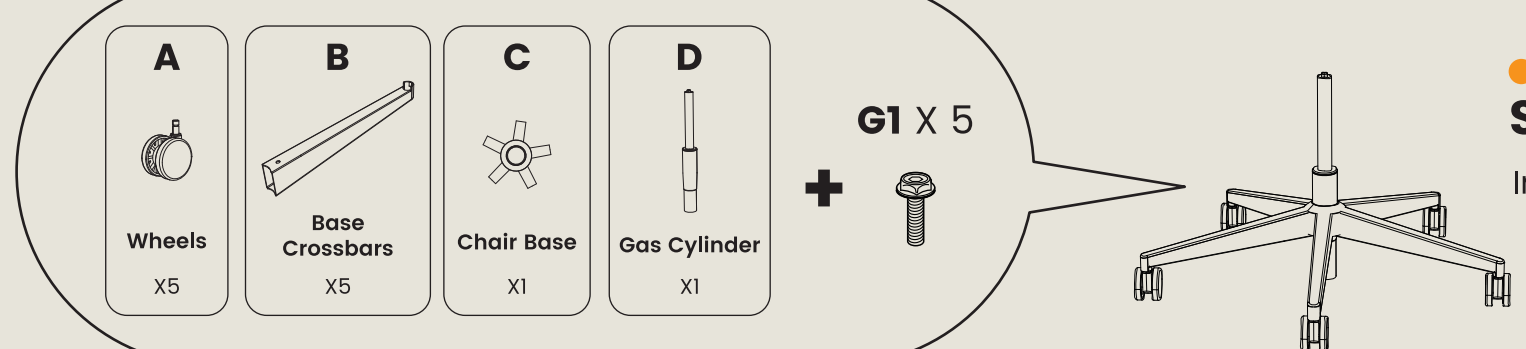


Step 1
Install the five-star base.

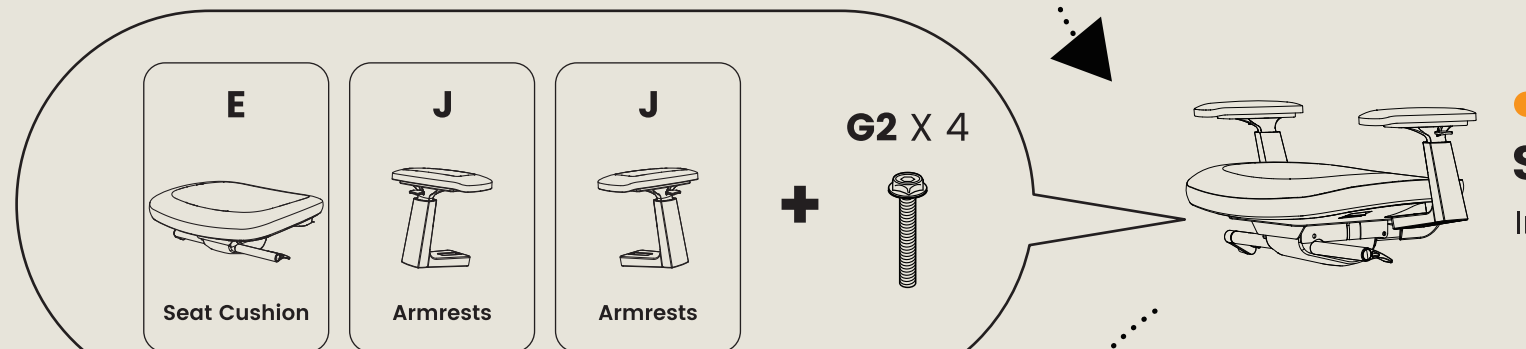

Step 2
Install the armrests.

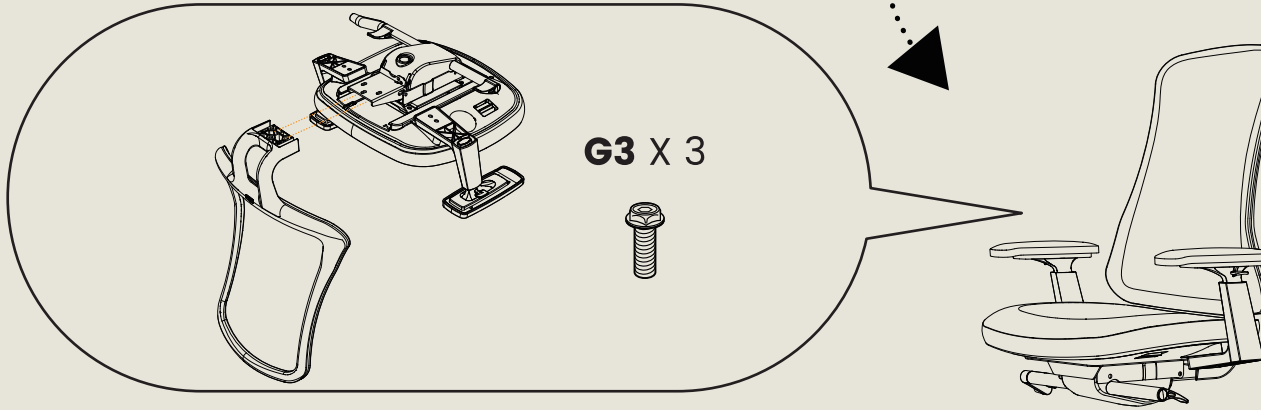

Step 3
Install the seat cushion and backrest.



Step 4
Insert the five-star base and lumbar support.

Finished!

Scan for install video

