 


2 Drawers Dresser Chest

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

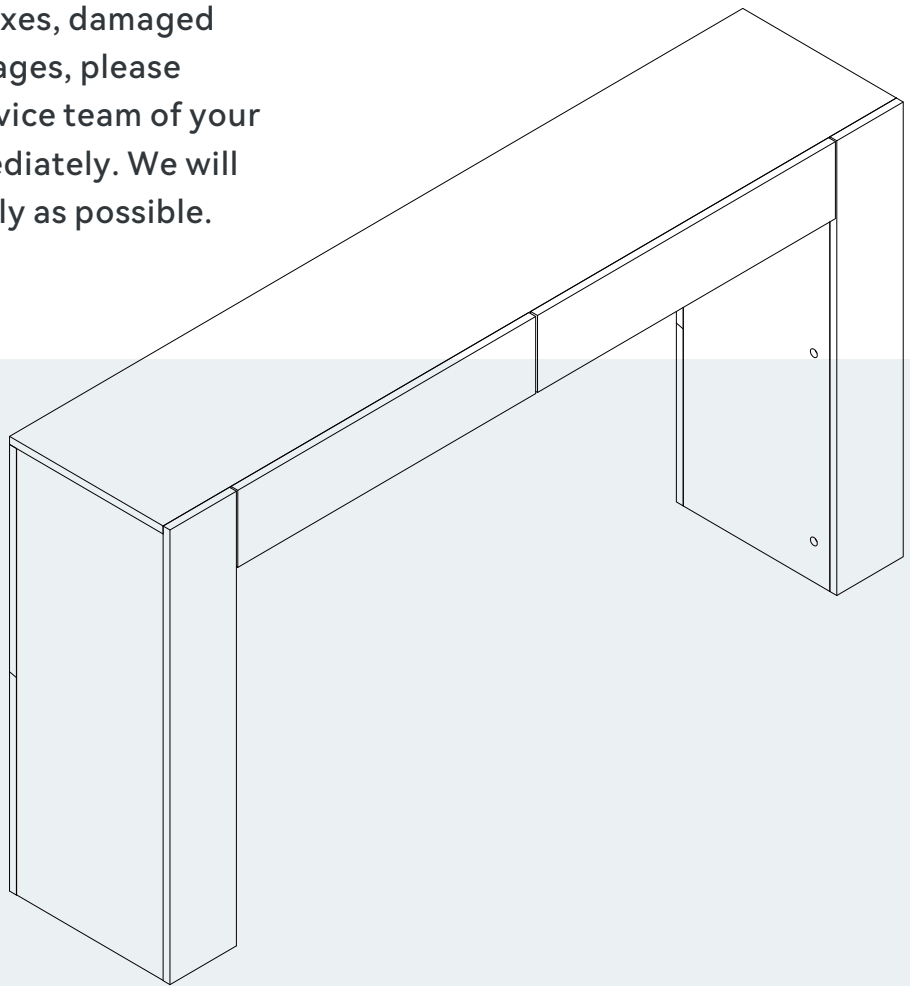

Dimensions

Width – 63 inch
Depth – 13.8 inch
Height – 33.7 inch

CONTACT US

- In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the "Parts List" in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., "Missing 5 pieces of M6x30mm screws."

Contact Us:

- By Email:

Send an email with the subject line "Missing Parts Issue." Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details, with the subject line "Product Damage Issue."

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  7*43mm Cam Bolt x 42	B  Cam Lock x 42	C  8*30mm Wooden Dowel x 34
D  5*40mm Screw x 32	E  7*7mm Screw x 12	F  Drawer Slide x 4
G  6*30mm Wooden Dowel x 16	H  Protective Foot x 8	I  4*12mm Screw x 4
J  4*12mm Screw x 2	K  Wall attach bracket x 2	L  Wall Fixing Pack x 2
M  Reversible Screwdriver x 1		

 
Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm



The screws length is measured from the head to the point (30mm screw shown).



inch

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.

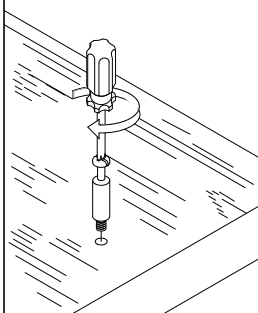

Step 2

Push the male camlock into the entry hole.

 2

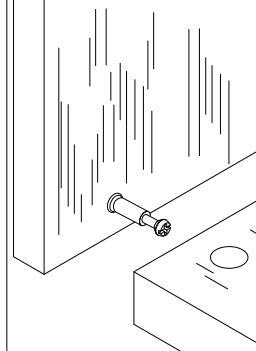


Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

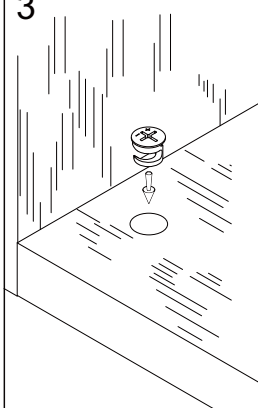


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

 4

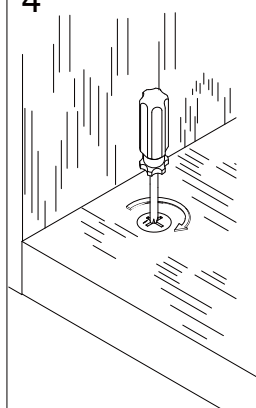


Parts List - Panels

 
Please check you have all the panels listed below

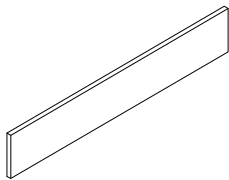


1 (85 x 14.5 x 1.5cm) x 1

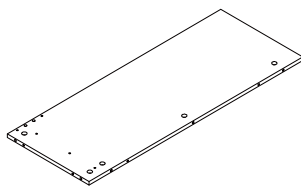 


2 (83.5 x 32 x 1.2cm) x 1

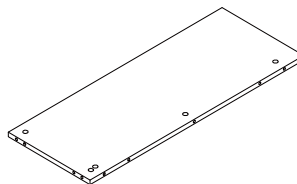 


3 (83.5 x 32 x 1.5cm) x 1

 


4 (41.7 x 14.5 x 1.5cm) x 2

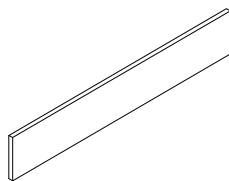 


5 (85 x 14.5 x 1.5cm) x 1

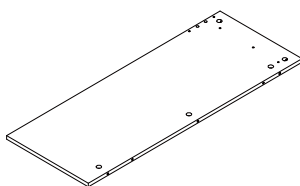 


6 (83.5 x 32 x 1.2cm) x 1

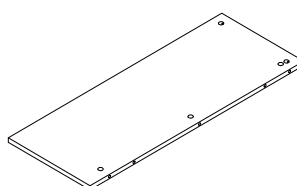 


7 (83.5 x 32 x 1.5cm) x 1

 


8 (41.7 x 14.5 x 1.5cm) x 2

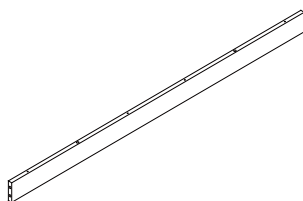 


9 (131 x 7.5 x 1.5cm) x 1

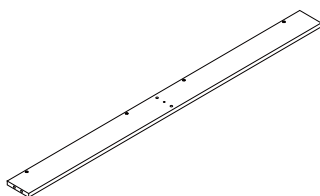 


10 (131 x 9.5 x 1.5cm) x 1

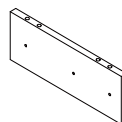 


11 (30.2 x 11.1 x 1.5cm) x 1

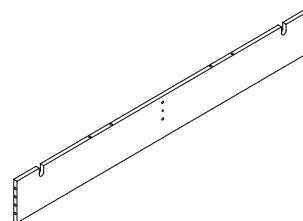 

12 (131 x 16 x 1.5cm) x 1

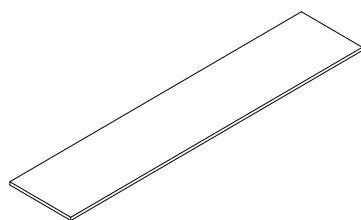 

13 (160 x 33.5 x 1.5cm) x 1

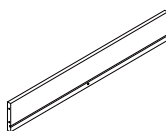 

14 (61.3 x 9.5 x 1.2cm) x 2



 
15 (30 x 9.5 x 1.2cm) x 2




16 (30 x 9.5 x 1.2cm) x 2




17 (28.7 x 4 x 1.2cm) x 2

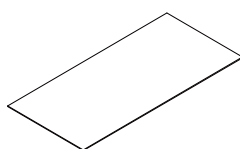

18 (62.3 x 29.7 x 0.25cm) x 2

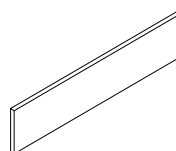 


19 (65 x 14.4 x 1.5cm) x 1

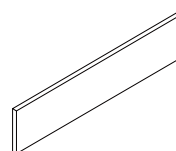 


20 (65 x 14.4 x 1.5cm) x 1

 Assembly Instructions

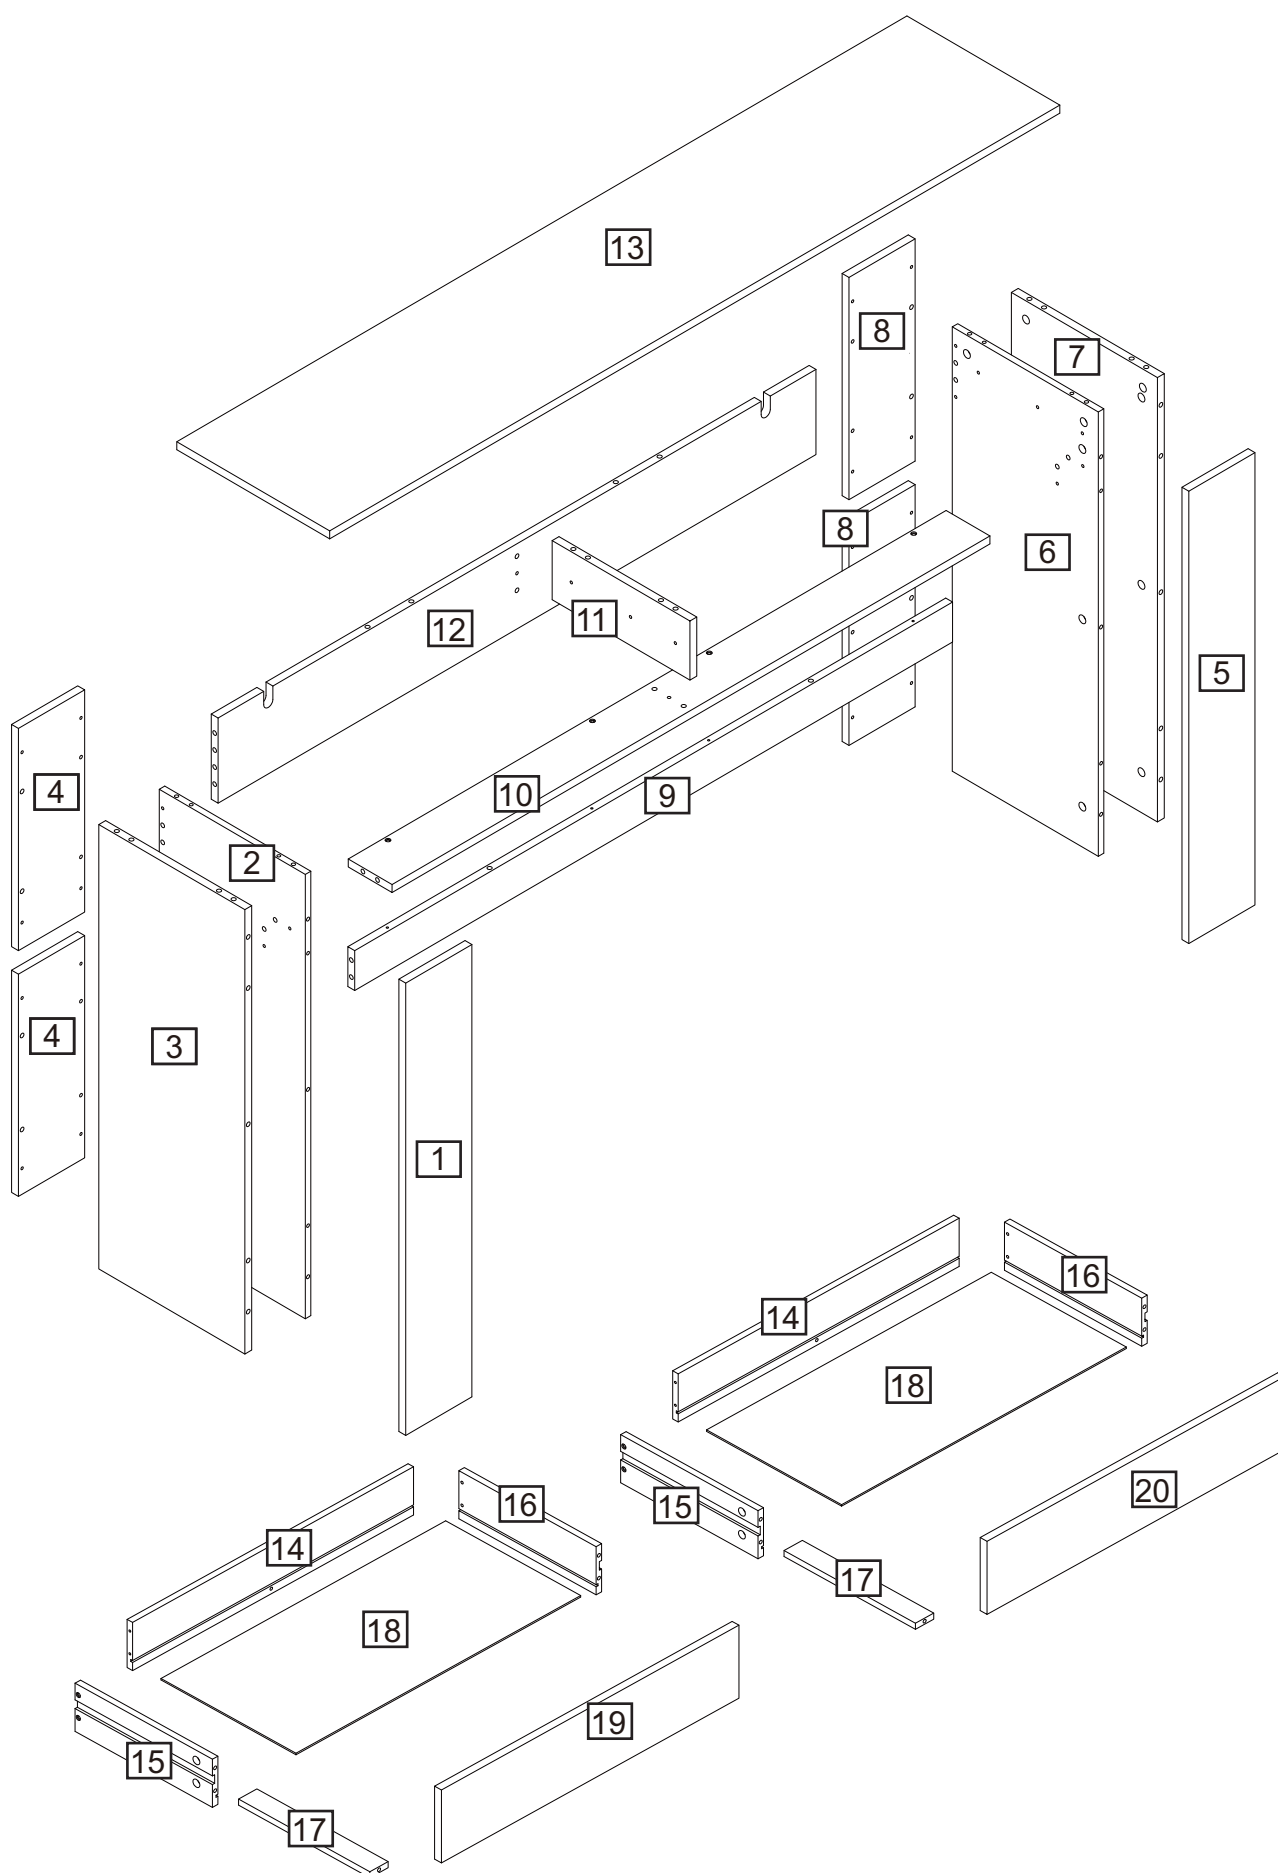


Assembly Instructions

 Step 1

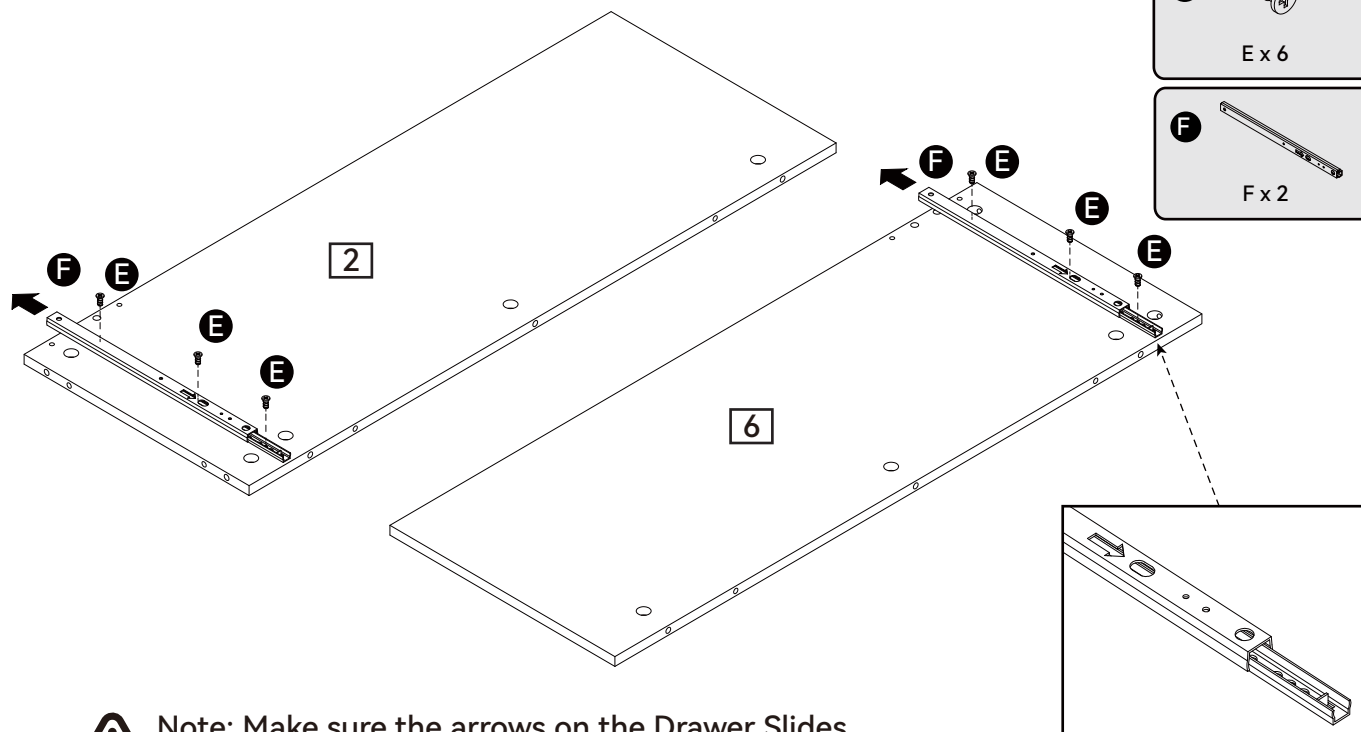


Note: Make sure the arrows on the Drawer Slides are pointing in the correct direction.

 1-1

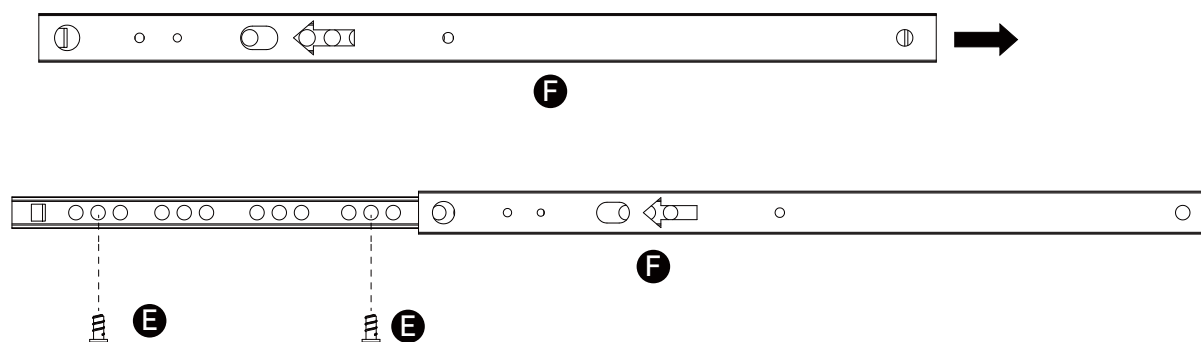

1-2

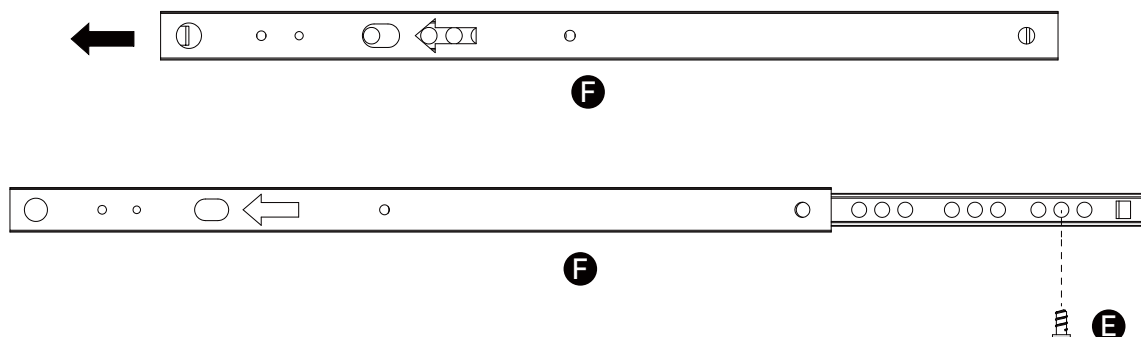 





Attach the Drawer Slide (F) to Parts (2) and (6) using Screw (E) with a screwdriver.

Assembly Instructions

Step 2

CAM-LOCK

    Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

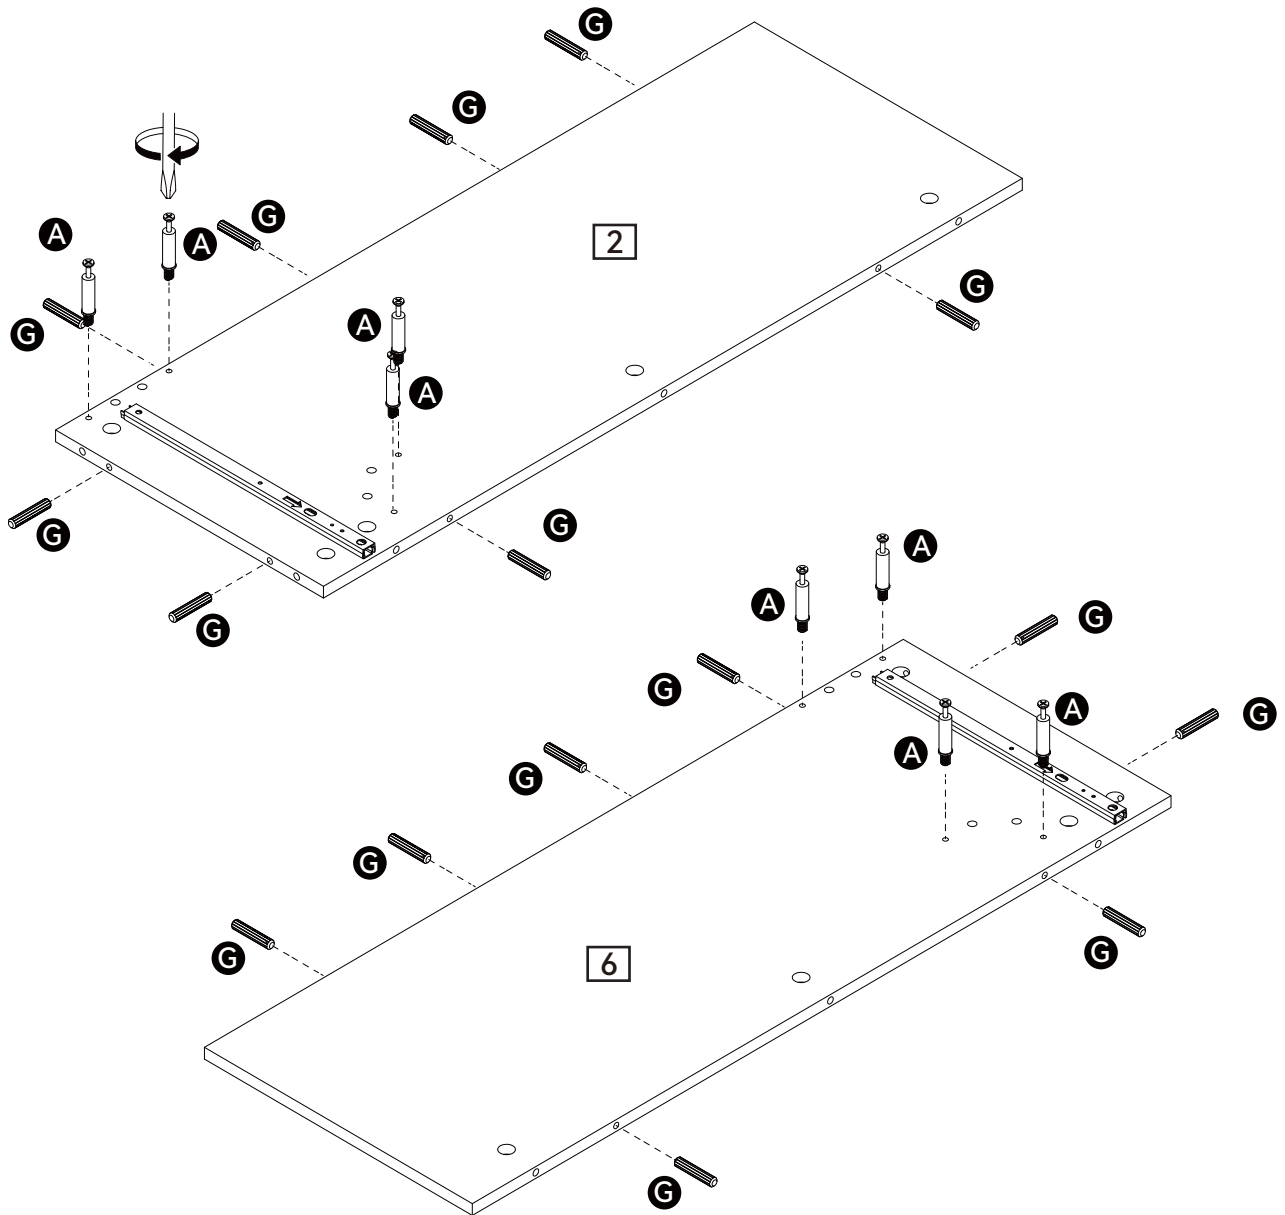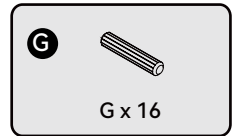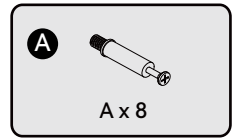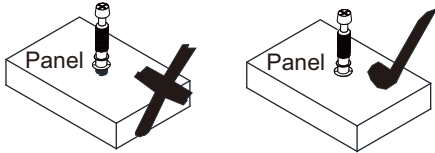

Attach the Cam Bolt (A) to Parts (2) and (6) using a screwdriver.

 
Insert the Wooden Dowel (G) into Parts (2) and (6).

Assembly Instructions



Step 3

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)


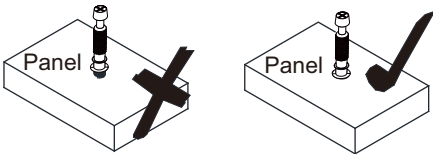


  Tighten until the shoulder is flush with the panel. Do not overtighten or undertighten (see example below).

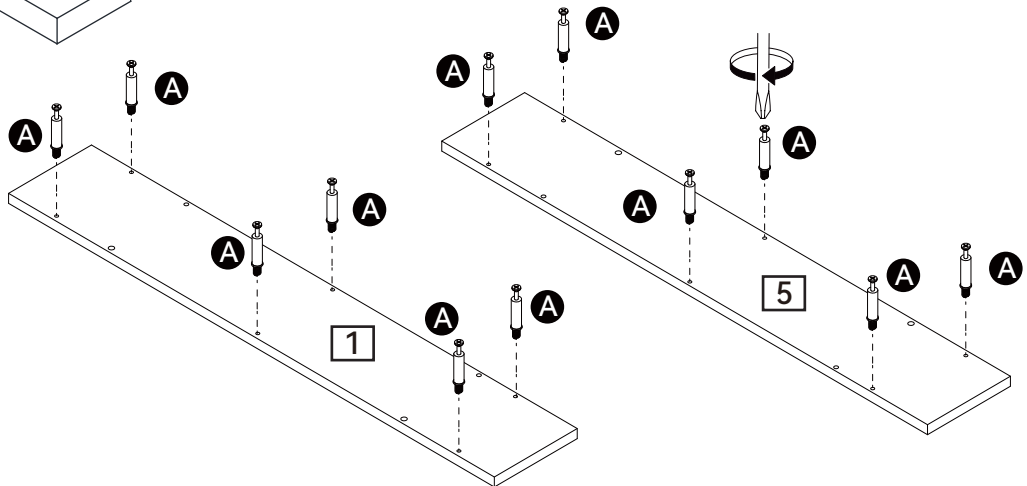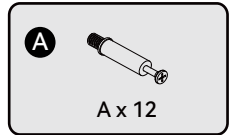

Attach the Cam Bolt (A) to Parts (1) and (5) using a screwdriver.



 
 
Step 4

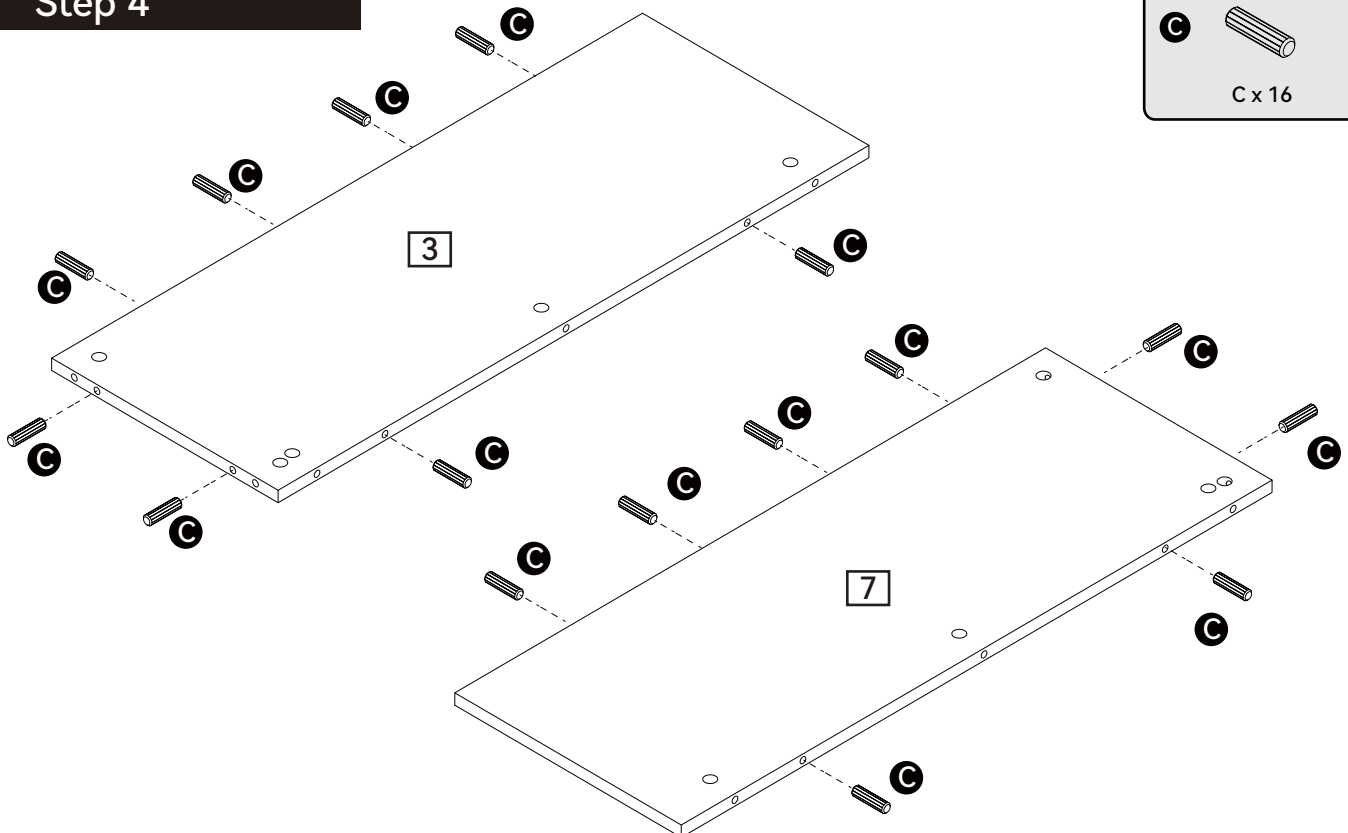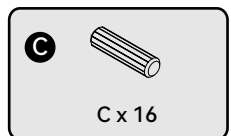

Insert the Wooden Dowel (C) into Parts (3) and (7).




Assembly Instructions

    Step 5

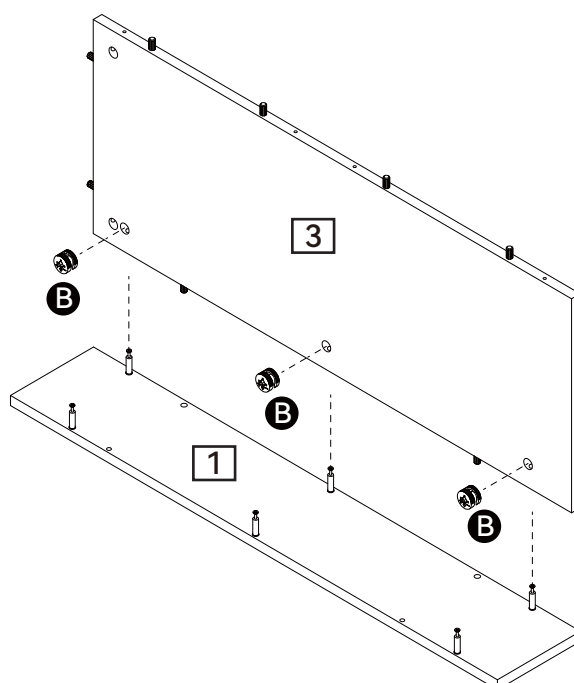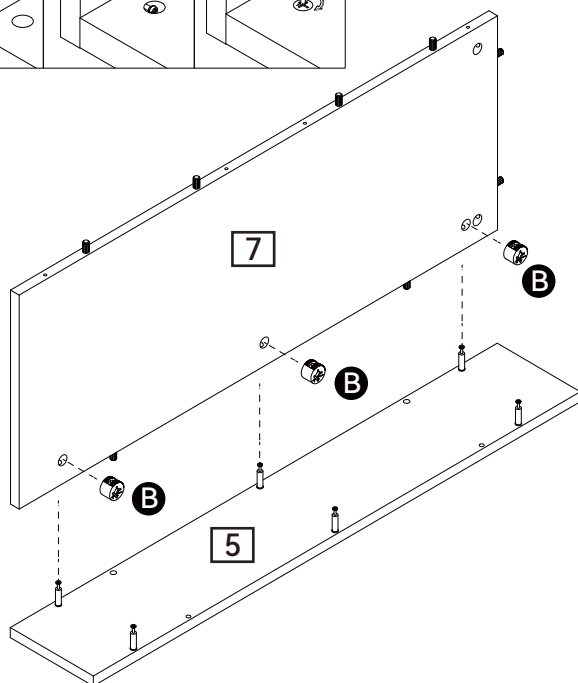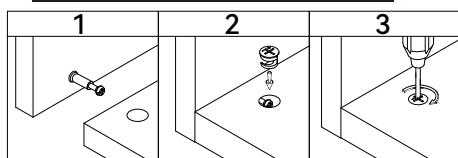

Attach Part (7) to Part (5), then insert and secure the Cam Lock (B) into Part (7) to lock it.
Attach Part (3) to Part (1), then insert and secure the Cam Lock (B) into Part (3) to lock it.

 
 
 
Step 6

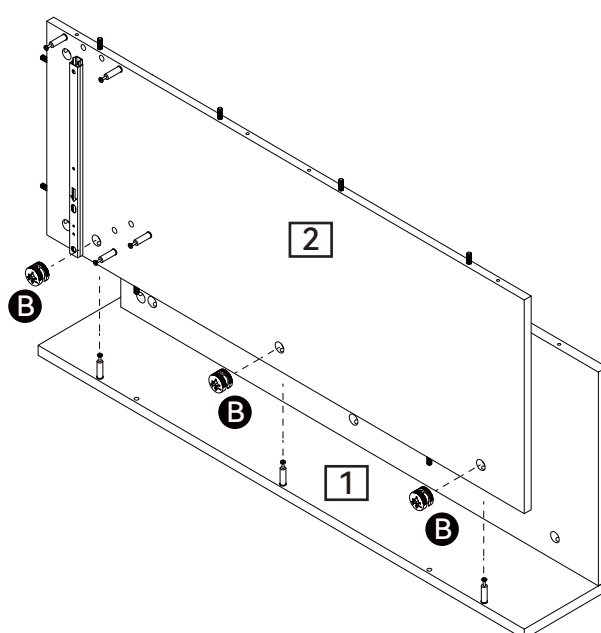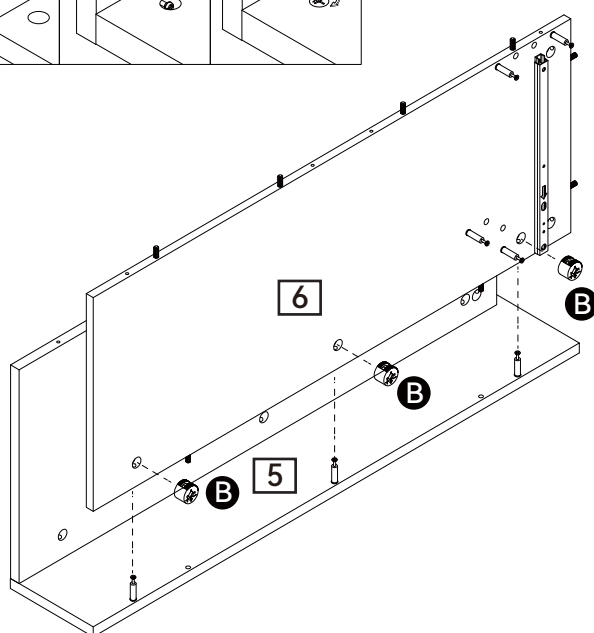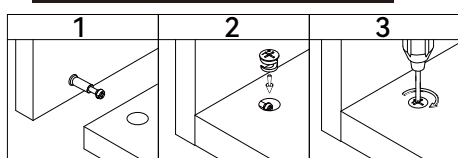

Attach Part (6) to Part (5), then insert and secure the Cam Lock (B) into Part (6) to lock it.
Attach Part (2) to Part (1), then insert and secure the Cam Lock (B) into Part (2) to lock it.

Assembly Instructions

  
 
Step 7

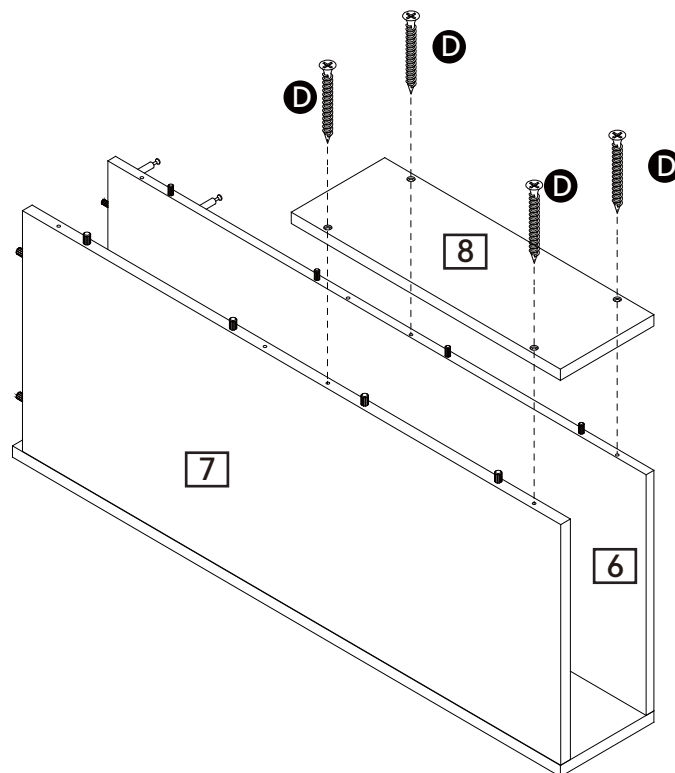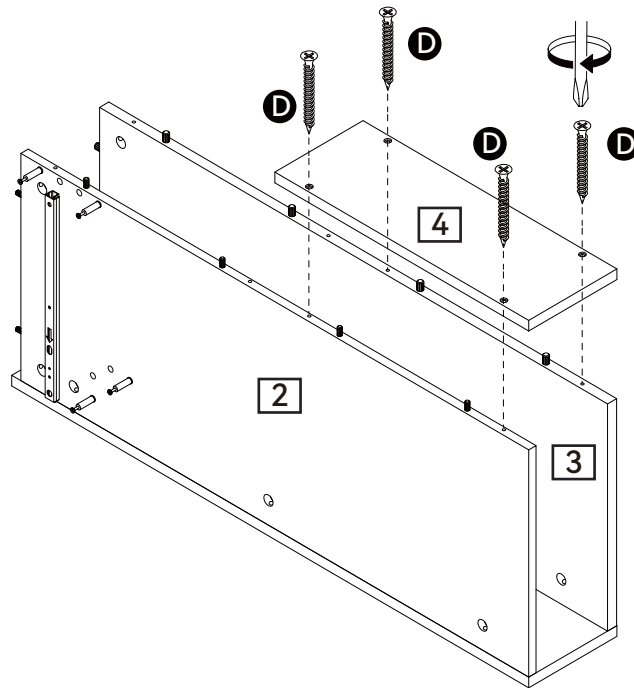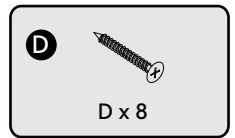

Attach Part (4) to Parts (2) and (3) using Screw (D) with a screwdriver.
Attach Part (8) to Parts (6) and (7) using Screw (D) with a screwdriver.


Assembly Instructions

  Step 8

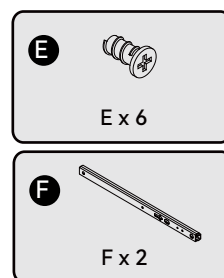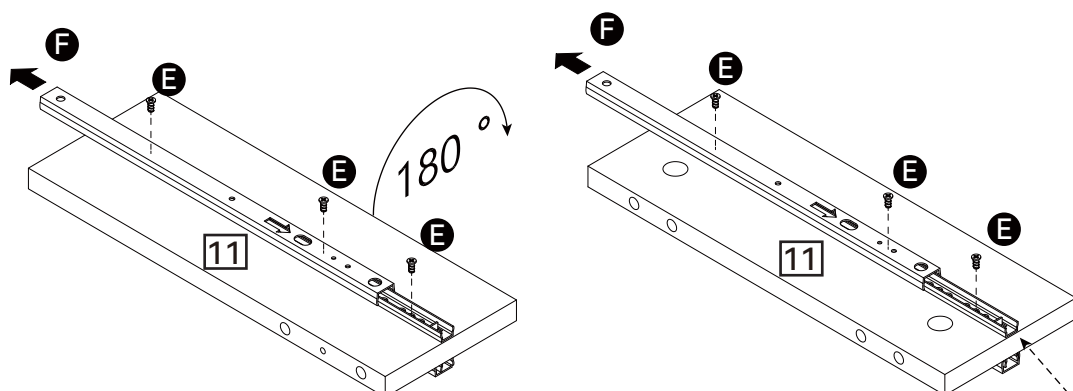


Note: Make sure the arrows on the Drawer Slides are pointing in the correct direction.

 8-1

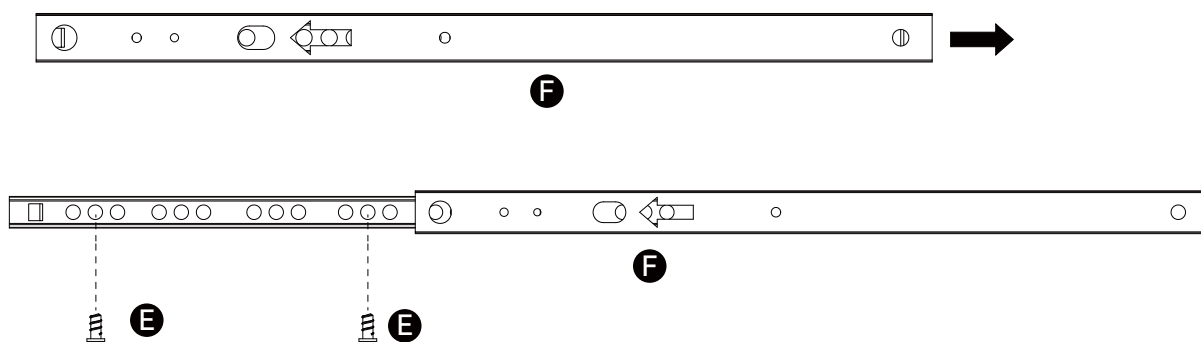



8-2

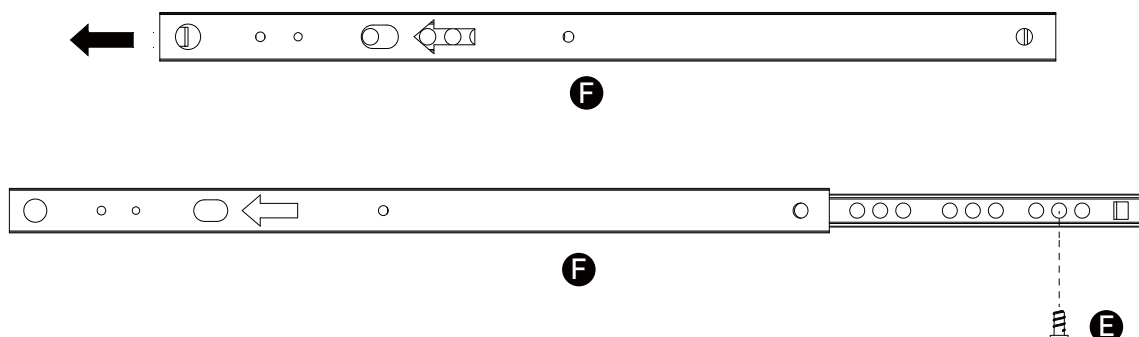 

Attach the Drawer Slide (F) to Part (11) using Screw (E) with a screwdriver.


Assembly Instructions

  Step 9

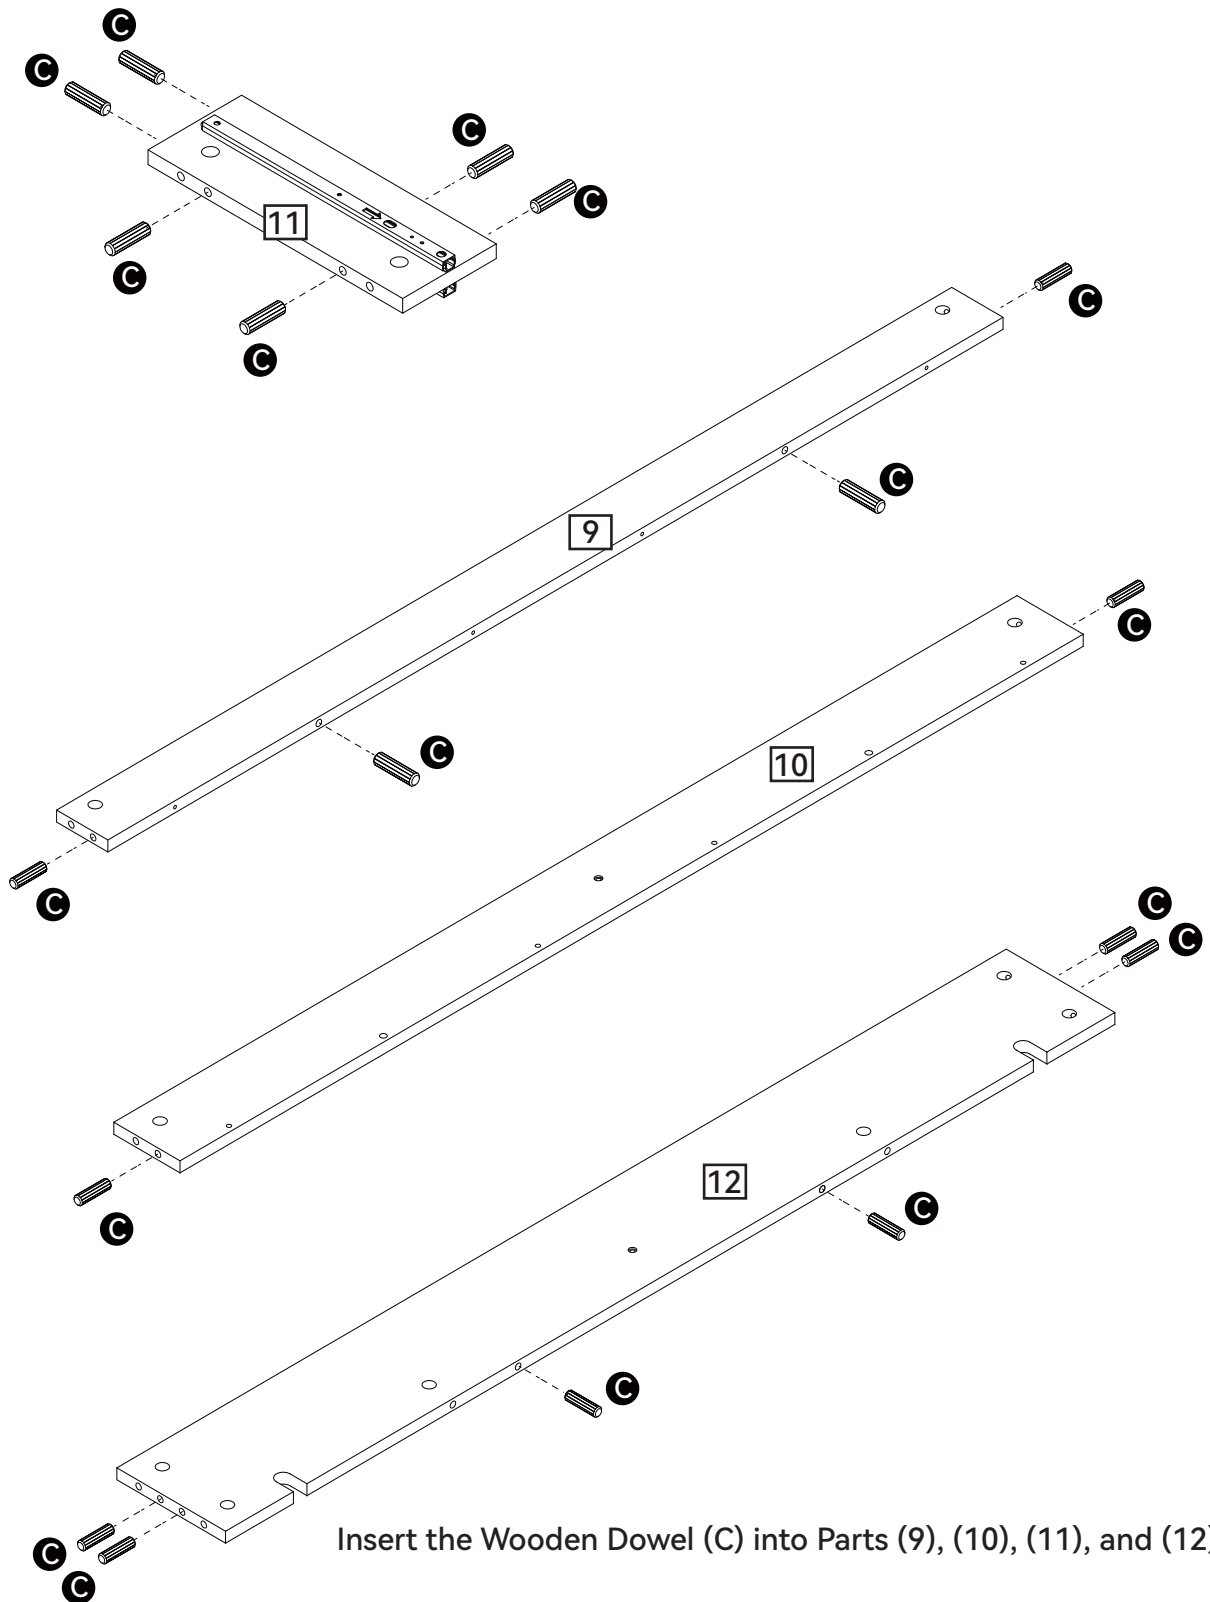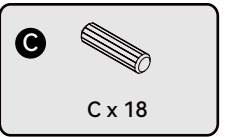


Assembly Instructions

 Step 10

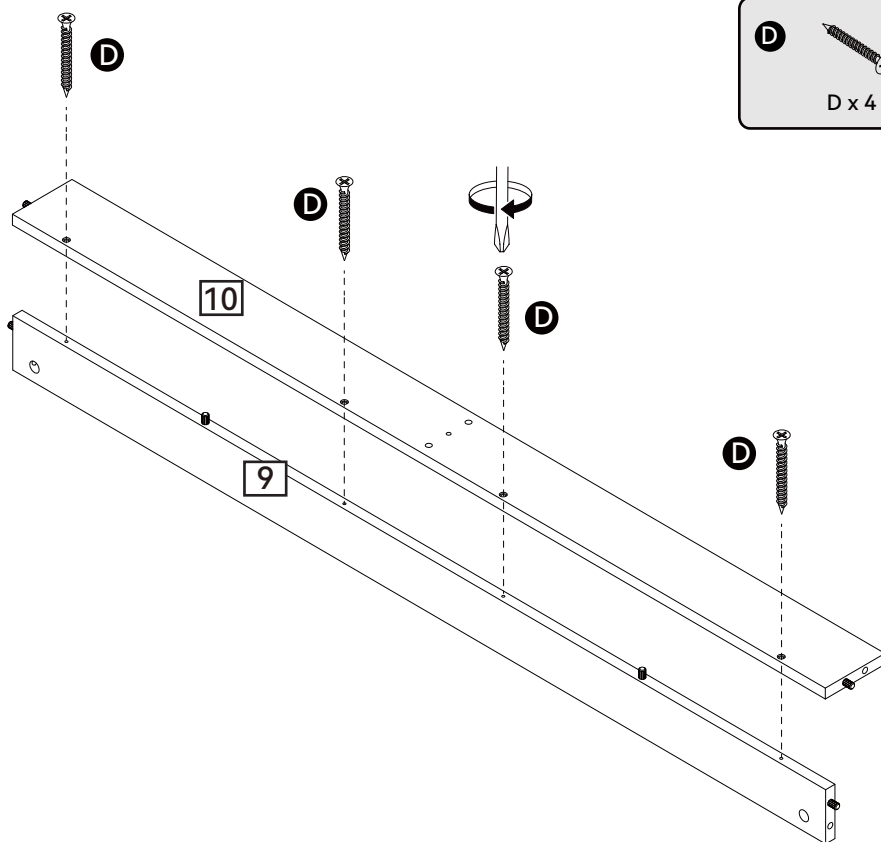

Attach part (10) to part (9) using screw (D) with a screwdriver.


 
Step 11

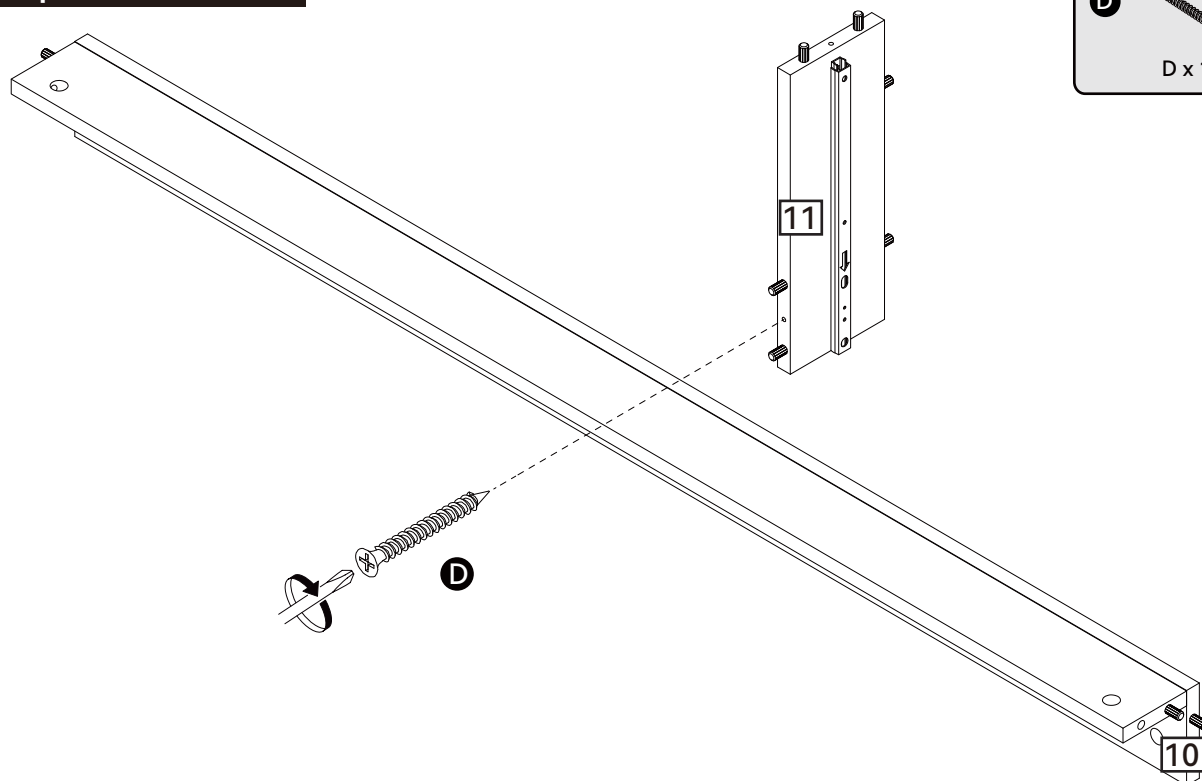

Attach Part (11) to Part (10) using Screw (D) with a screwdriver.



Assembly Instructions

  Step 12

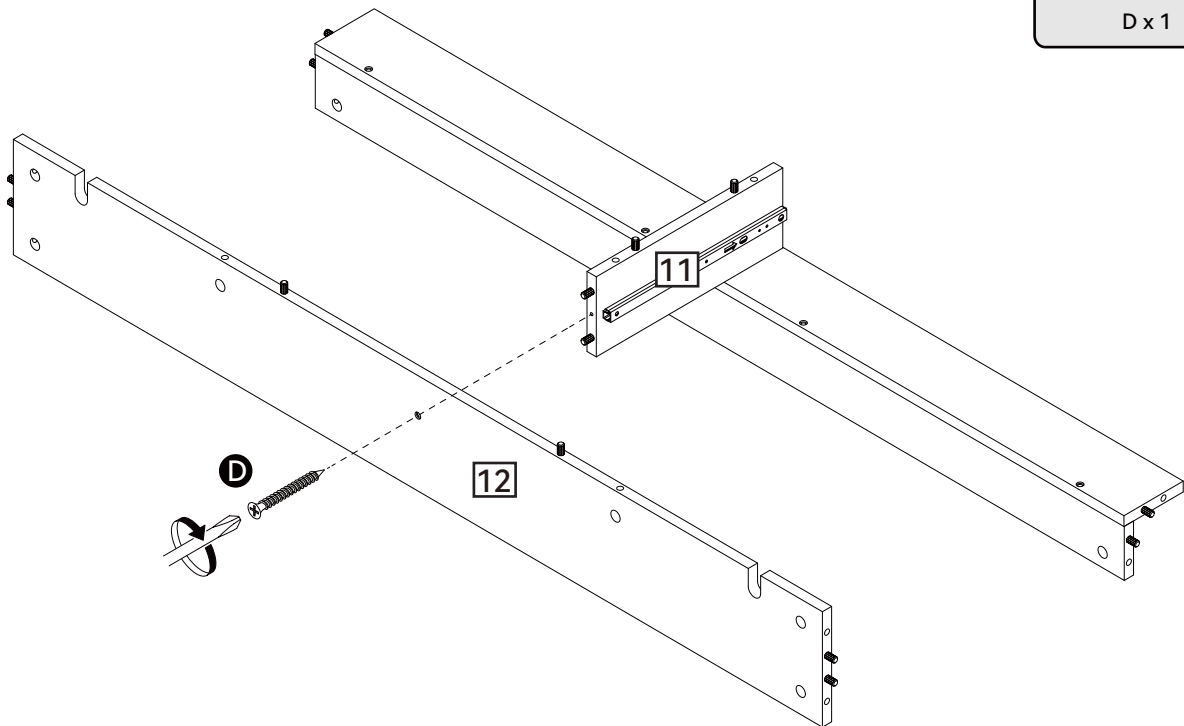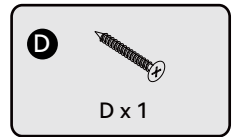

Attach part (12) to part (11) using screw (D) with a screwdriver.

 
 
Step 13

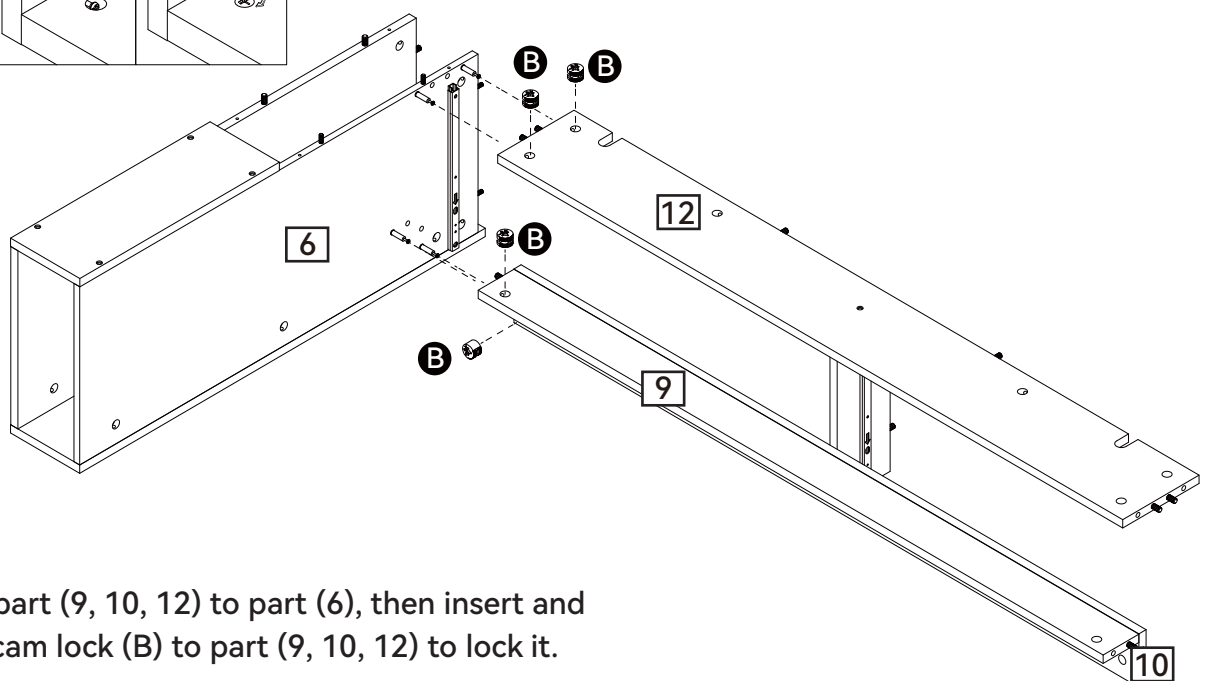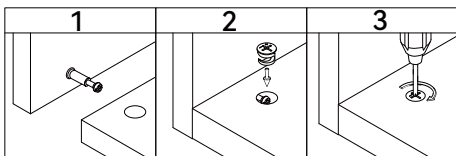

Attach part (9, 10, 12) to part (6), then insert and secure cam lock (B) to part (9, 10, 12) to lock it.

Assembly Instructions

  Step 14

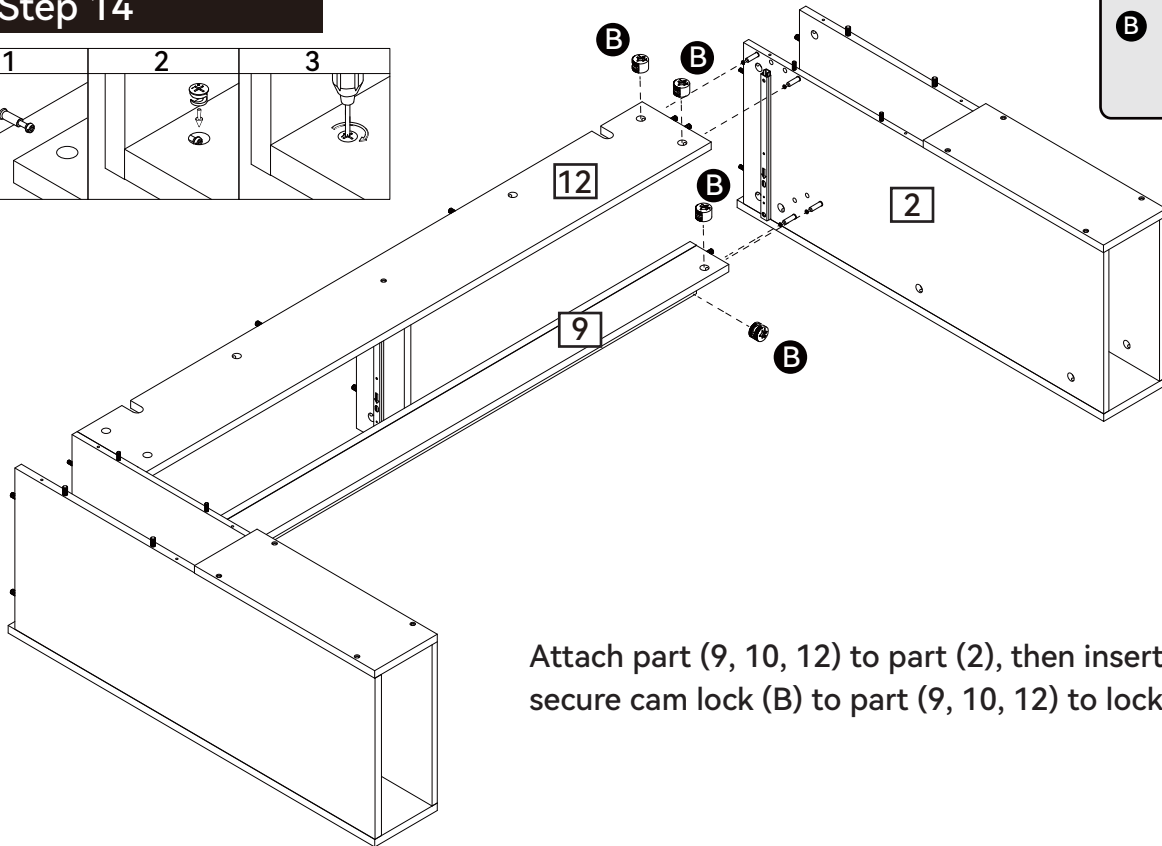
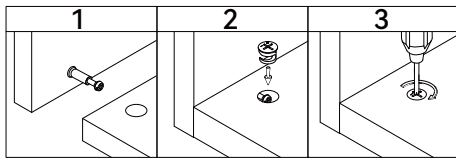


Attach part (9, 10, 12) to part (2), then insert and secure cam lock (B) to part (9, 10, 12) to lock it.

Step 15

CAM-LOCK

  
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

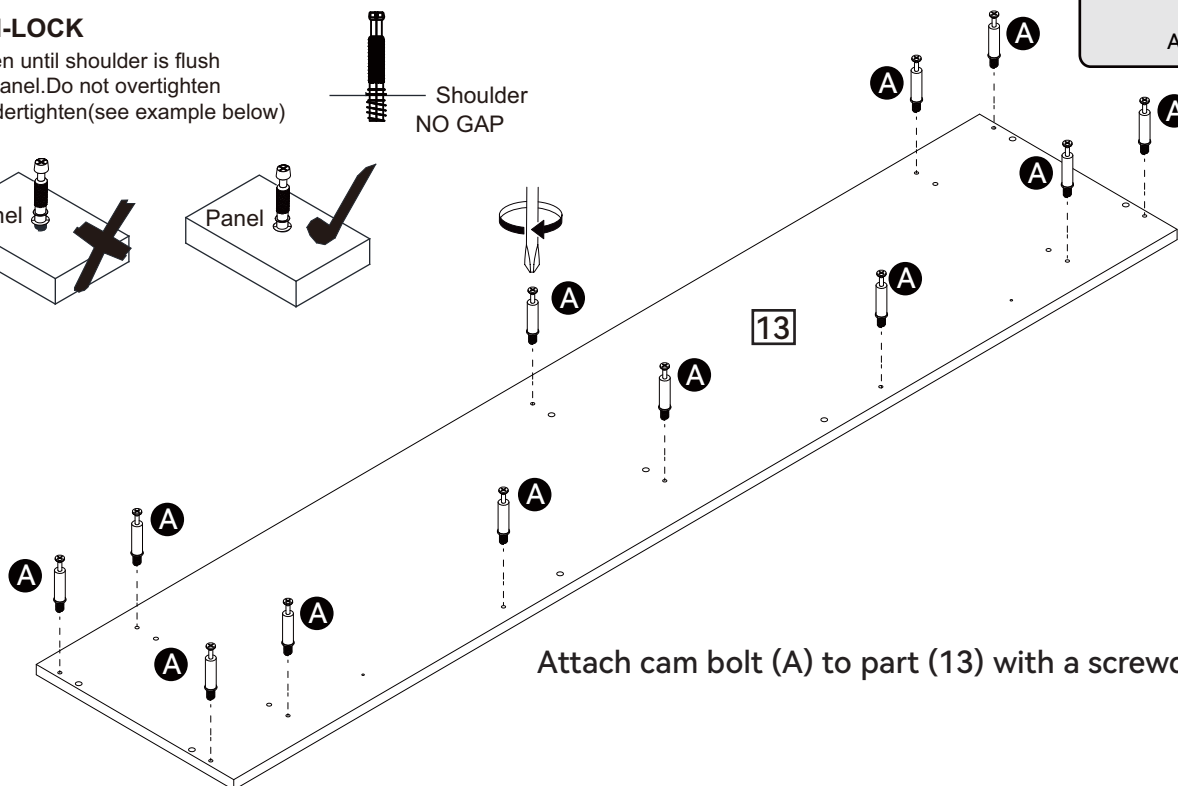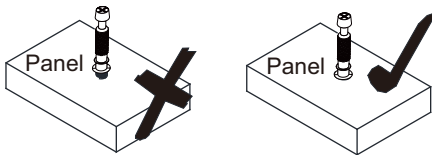

Attach cam bolt (A) to part (13) with a screwdriver.

Assembly Instructions

 Step 16

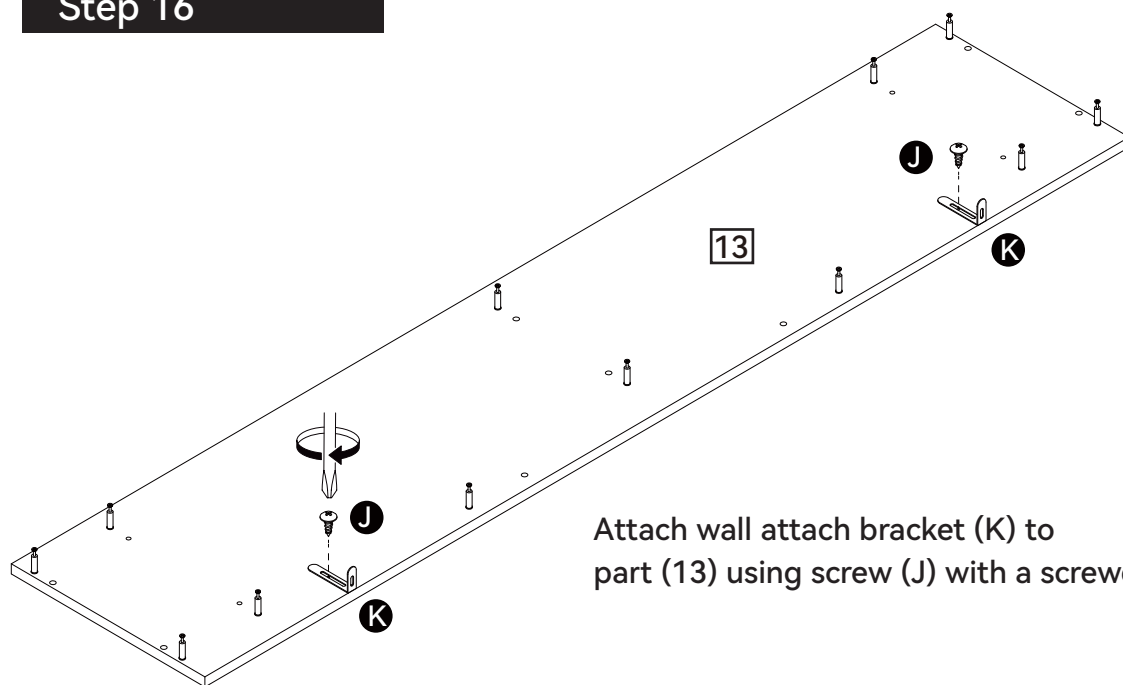


J 
J x 2

K 
K x 2

Attach wall attach bracket (K) to part (13) using screw (J) with a screwdriver.

 Step 17

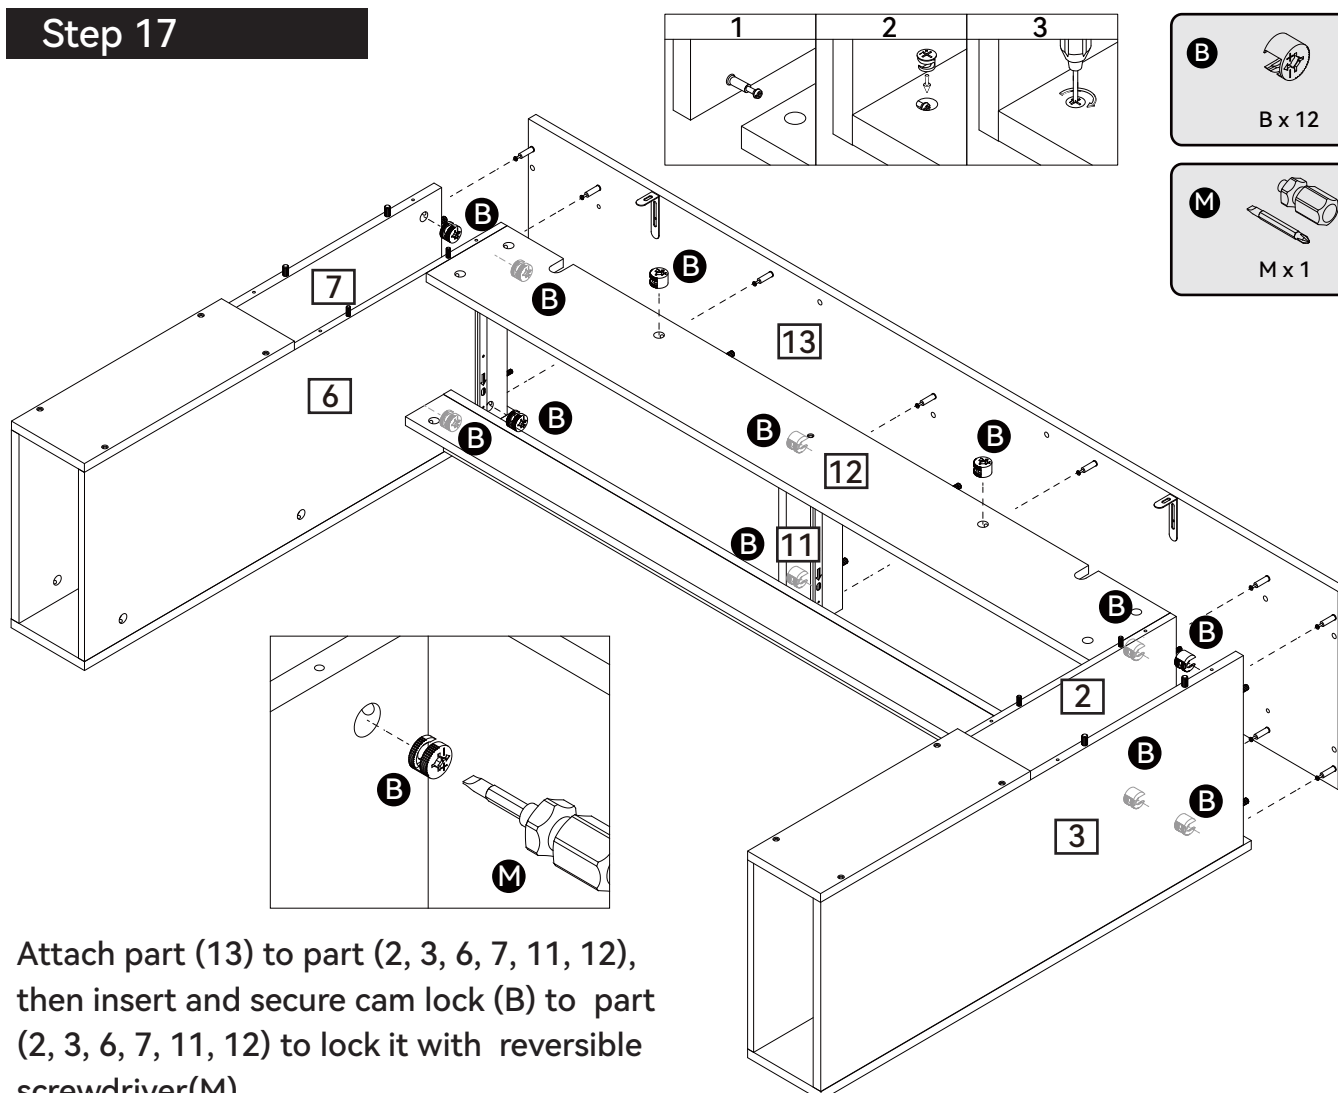


B 
B x 12

M 
M x 1

Attach part (13) to part (2, 3, 6, 7, 11, 12), then insert and secure cam lock (B) to part (2, 3, 6, 7, 11, 12) to lock it with reversible screwdriver(M).


Assembly Instructions

 Step 18

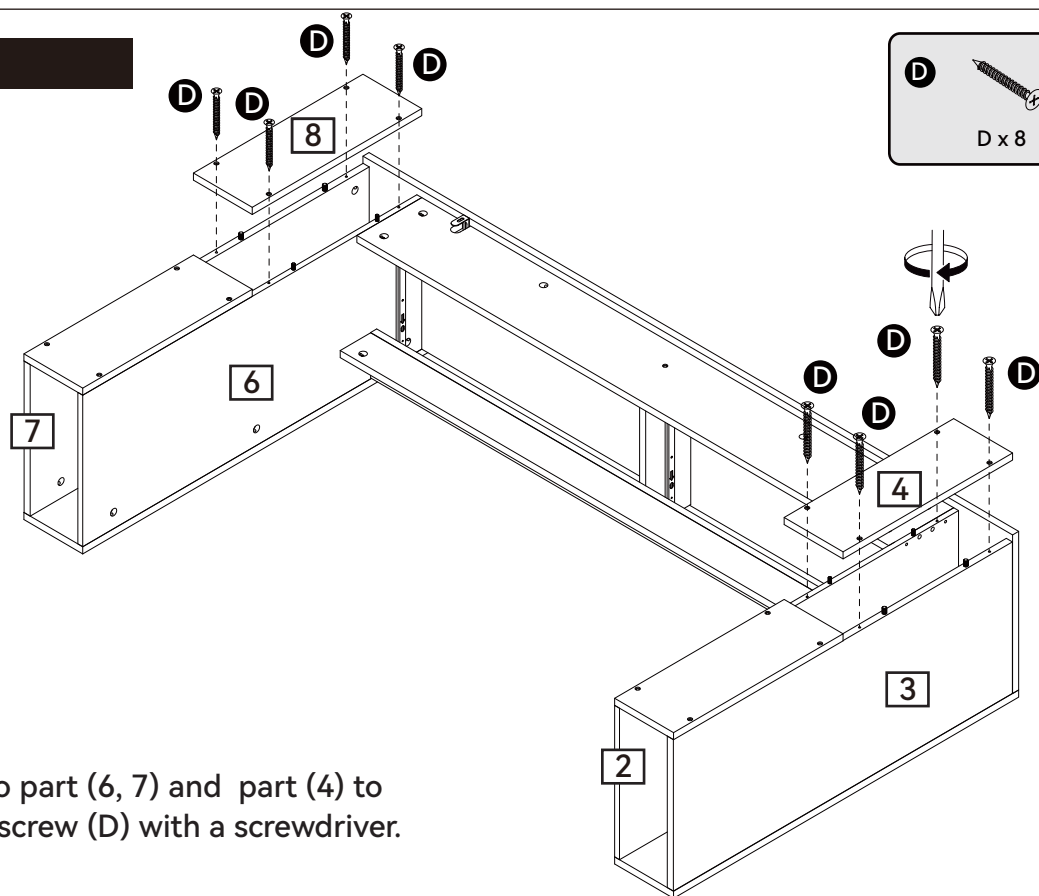

Attach part (8) to part (6, 7) and part (4) to part (2, 3) using screw (D) with a screwdriver.


 
Step 19

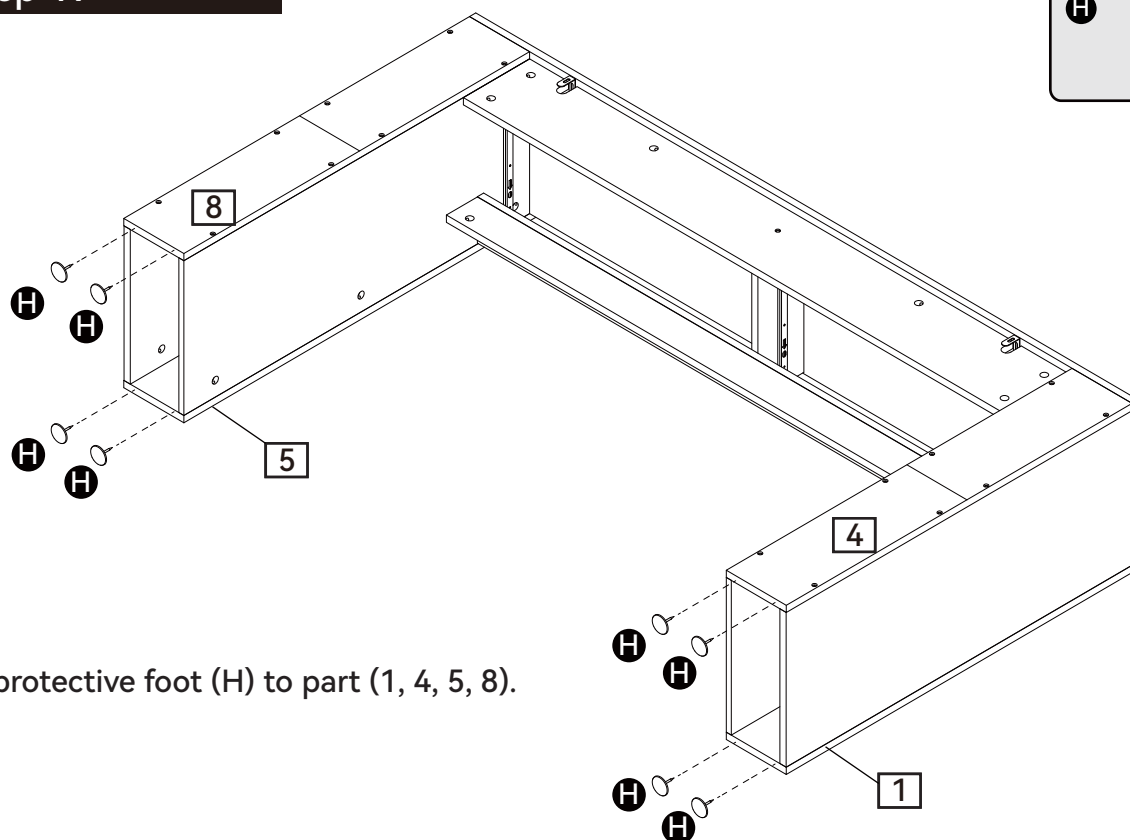

Insert protective foot (H) to part (1, 4, 5, 8).

Assembly Instructions

  
Step 20

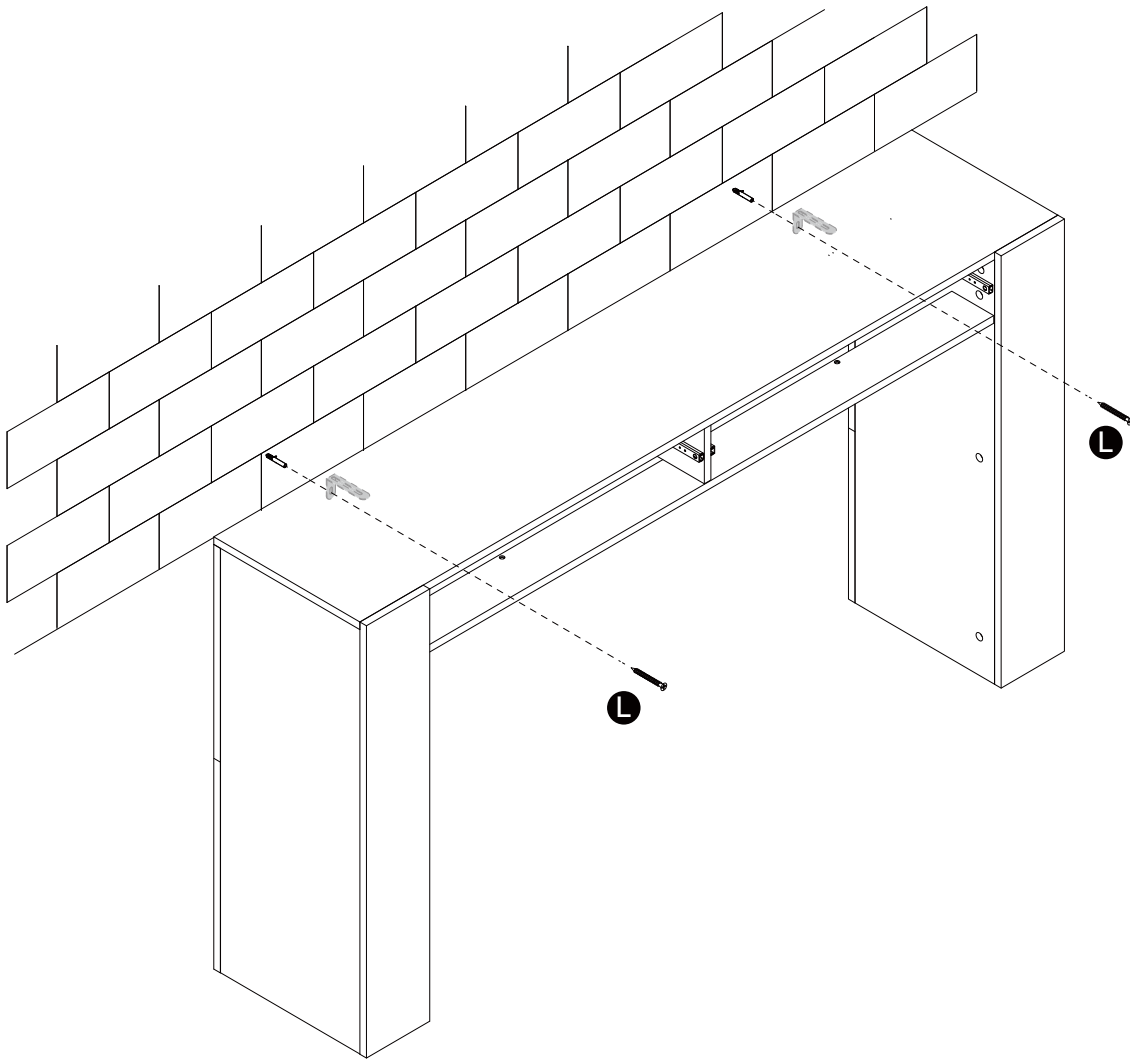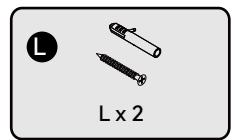

Secure dresser chest to the wall by using appropriate wall plus and screw(L).

Assembly Instructions

 Step 21

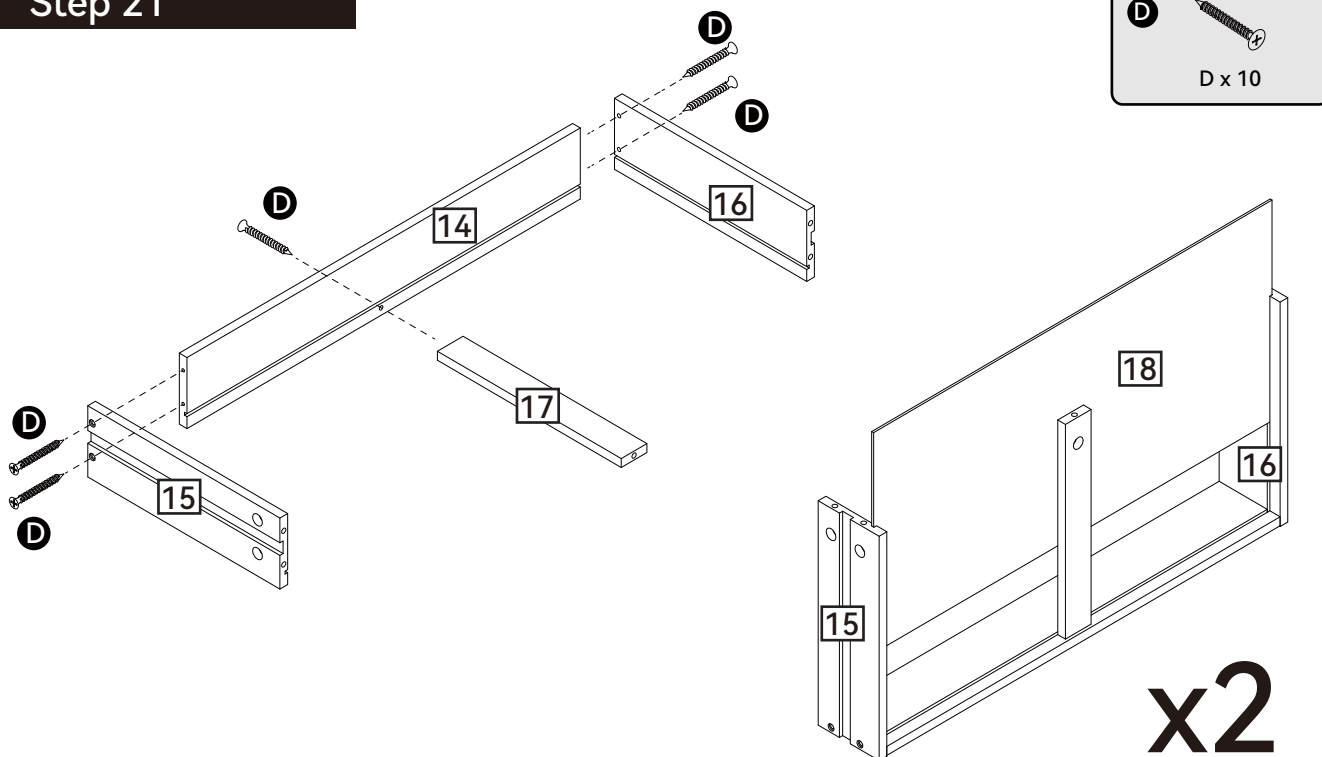


Attach part (15, 16, 17) to part (14) using screw (D) with a screwdriver.
Slide part (18) into grooves.


Step 22

CAM-LOCK

 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)



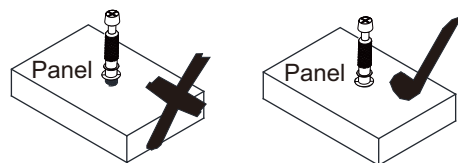


 Attach cam bolt (A) to part (19, 20) with a screwdriver.

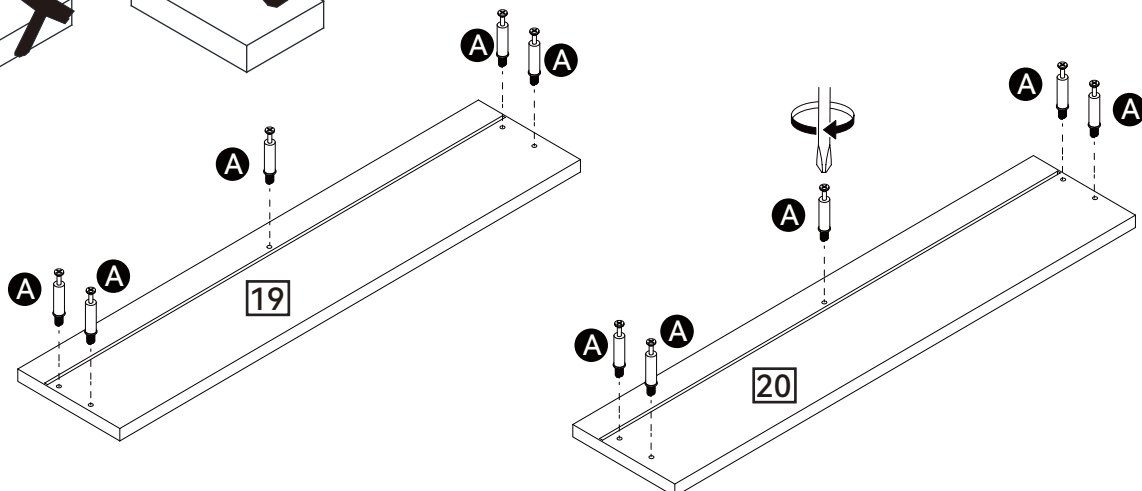

Assembly Instructions

  
 
Step 23

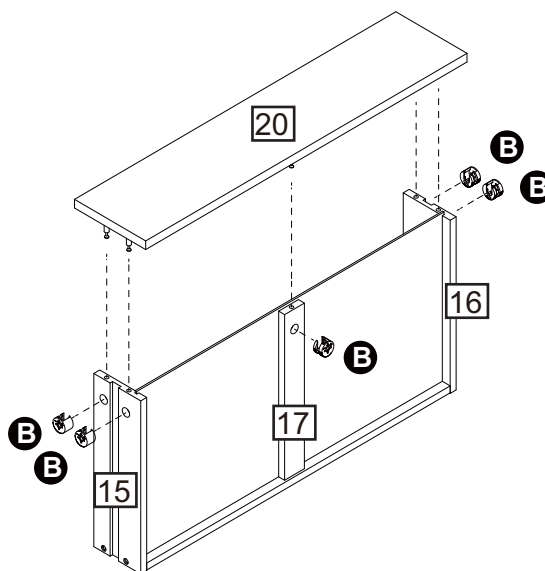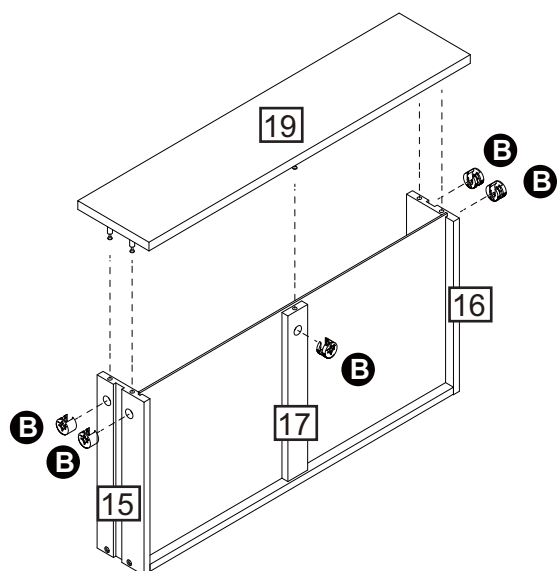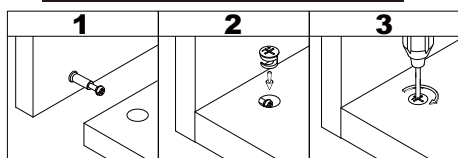

Attach part (19) to part (15, 16, 17), then insert and secure cam lock (B) to part (15, 16, 17) to lock it.
Attach part (20) to part (15, 16, 17), then insert and secure cam lock (B) to part (15, 16, 17) to lock it.




Step 24

  Slide the drawer slide (F) into grooves on both side of the drawer as per diagram.

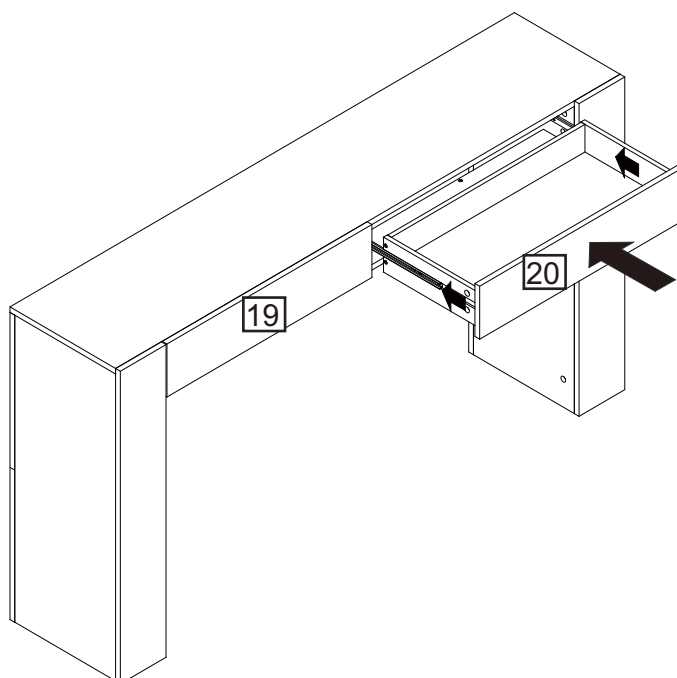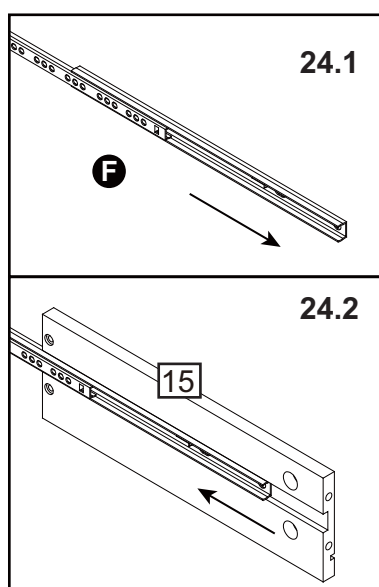

Assembly Instructions

   Step 25

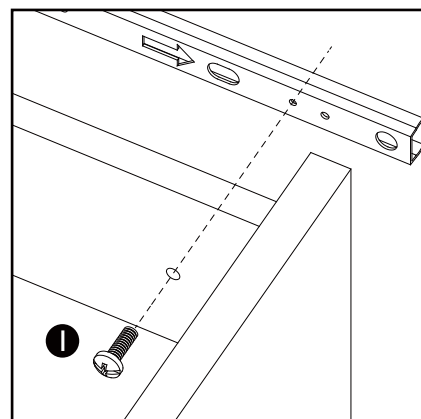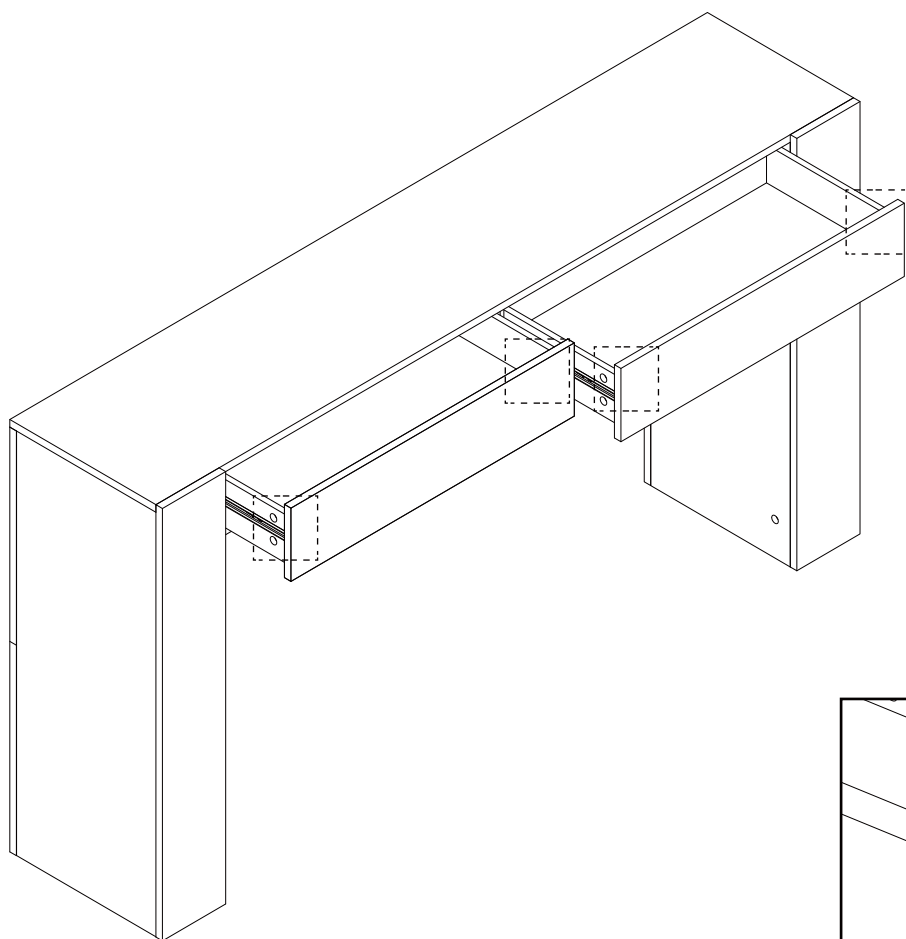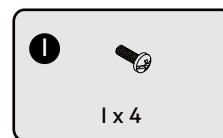

Use screw (I) to secure drawer slide (F) to the drawer.
Assembly is complete.

| 2 Drawers Dresser Chest

V1.0