

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key.

*Using an electric drill can damage the chair. Please re-tighten bolts manually.





Safety Information



Sit in the center of the chair, let your back fit the



Do not sit at the front edge of the chair



Do not stand on the chair



Do not use the chair with more than one person



Do not push the chair is sitting in it



Do not push down around when a person the backrest when a person is reclining



Do not place all your weight on only the backrest

 


INSTRUCTION **MANUAL**

Package List








(B)*1

 Seat Cushion











(E)*1Gas Lift





(G)*1

Head Pillow





Casters



(I)*5

Legs













(F)*1

Base



M6*25mm







(N)*4**Bolts** M6*45mm




M6*14mm

(P)*1**Plastic Cover**




Wrench


Assembly Instruction

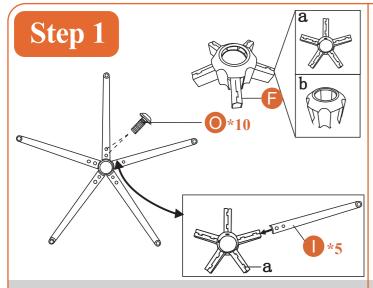


Divide Base (F) into two parts, a and b. Using Wrench (Q), install Legs (I)*5 to the Base (a) with Bolts (O)*10.

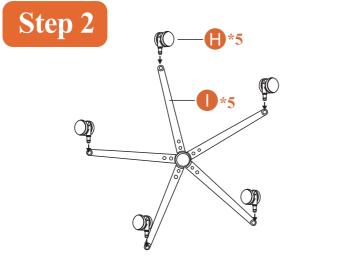


Press Casters (H)*5 into the holes at the end of Legs (I)*5.

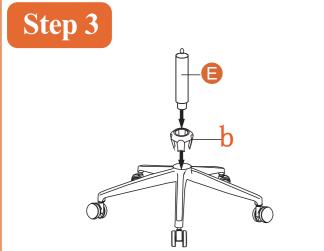


Put Base Cover **(b)** back on the Base. Then insert Gas Lift **(E)** into the center hole of the Base **(F)**.

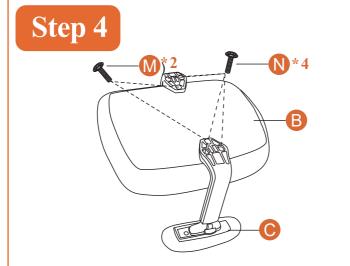

Turn the Seat Cushion(B) upside down. Install Armrests (C)*1L*1R to the Seat (B) with Bolts (M)*2 and (N)*4.

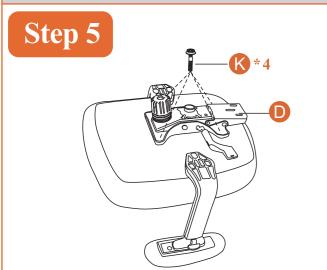


Attach Mechanism **(D)** to the Seat Cushion **(B)** with Bolts **(K)***4.

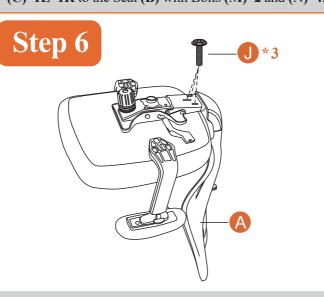

Align the screw holes of the Backrest (A) and Mechanism (D). Using Wrench (Q), secure both completely with Bolts (J)*3.

Step 7

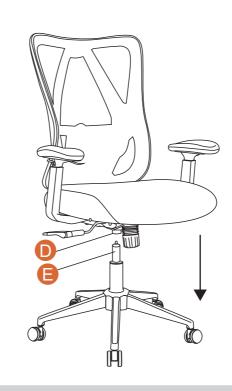

Align the hole on Mechanism **(D)** with Gas Lift **(E)**, and press the Chair down until it is fully secured.



Using Wrench (Q), attach Head Pillow (G) to the Backrest (A) with Bolts (L)*2. Then, attach the Plastic Cover (P) to the hole.

CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.