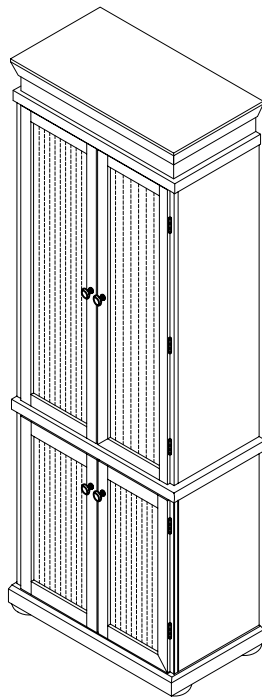 


Kitchen Pantry



Congratulations! You have purchased a stylish piece
We strive to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

The product are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.

Please see included Care and Maintenance Instructions for this Product.

Care and Maintenance Instructions

Keeping Your Furniture Beautiful

Quality furniture is a significant investment expected to last for generations. To maintain its beauty and help it last, furniture needs the right care. No finish is totally indestructible. But with regular care, the finish will last much longer, providing years of enjoyment to you.

Tips to Protect and Care for Your Furniture

1. Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2. Avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents and air conditioning units.
3. Avoid placing plastic or rubber materials (lamp bases, notebooks, placemats, etc.) on your furniture, as certain plastics contain ingredients that may damage the finish.
4. Periodically rotate accessories on furniture so they do not sit in the same spot all the time.
5. Use pads, cloth or felt to protect the furniture surface from plastic, rubber, hot dishes, beverages, bookends, flowerpots and vases.
6. Clean up spills immediately. Use a blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish. Alcohol, perfume, after-shave and medications can cause severe finish damage.
7. Use a protective pad when writing on the furniture surface.
8. Lift and place objects rather than dragging them across the furniture surface.
9. Avoid placing furniture directly under windows.

Wood Furniture Care: We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Clean the surface by rubbing in the direction of the grain. We recommend polishing your furniture approximately every six months, using a clean, soft, lint-free cloth and rubbing the polish in the direction of the grain. Guardsman furniture polish or any furniture polish that doesn't contain silicone is recommended.

Leather Furniture Care: Wipe spills immediately with clean cloth or sponge. For spots or stains and daily cleaning, clean with mild non-detergent soap. Rinse well, gently wipe off, and allow to air dry. Cleaning Butter, Oil or Grease from Leather: Wipe leather with a clean cloth, and leave alone. The oil will be absorbed by the leather. DO NOT APPLY WATER. Also, do not use saddle soap, cleaning solvents, furniture polish, oils, varnish, abrasive cleaners, ammonia or any other type of chemical solution.

Granite Furniture Care: Our granite is not sealed, so you may want to apply an over-the-counter sealant, which will provide a small amount of surface protection, but we still recommend cleaning spills promptly. Use a slightly damp cloth to clean as needed. Wipe dry. We also do not recommend using abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish. Be sure to use trivets, coasters, placemats, and adhesive felt pads to help prevent scratches.

Wicker Furniture Care: Regular cleaning is recommended for wicker, as it generally cannot endure harsh or abrasive treatments. This also minimizes mildew buildup. To remove dirt and debris, vacuum with a dust-brush attachment or use a dry paintbrush. Clean with a mild soap solution. Scrub, and rinse. Avoid using too much water, which can weaken the fibers. Avoid sitting on the wicker when still damp, which can cause wicker to sag.

Metal Furniture Care: Because most metals, except aluminum, are subject to rust, metal furniture is usually finished with layers of clear varnish, paint, or a durable powder coating. Use a mild soap solution, and scrub, rinse, and dry. After cleaning, apply a coat of quality liquid or paste auto wax with a lint-free cloth if recommended by the furniture's manufacturer. Use a silicone spray to lubricate swivels and glides on chairs

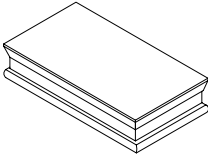
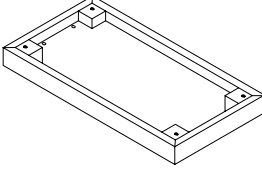
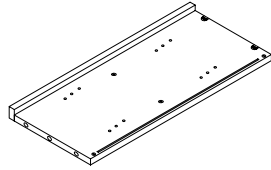
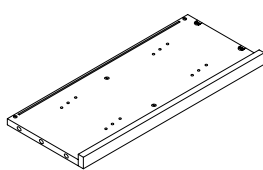
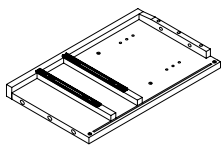
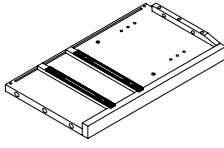
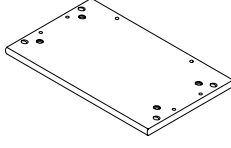
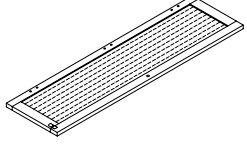
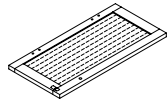
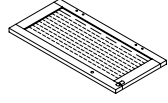
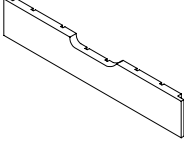
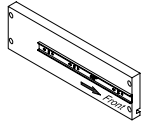
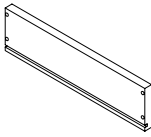
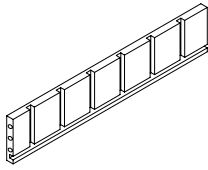
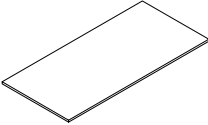
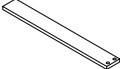
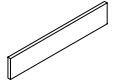
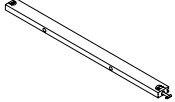


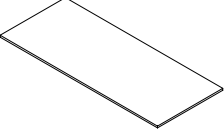
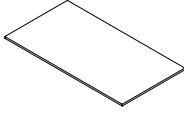
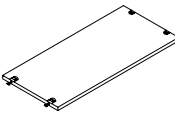
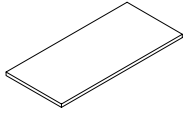

Butcher Block Care: For best results, clean finished butcher block surfaces with soapy water or commonly available kitchen counter top cleaners. Do not use abrasives or powder cleansers. Do not allow moisture stand on the surface for prolonged periods of time. To sanitize, rinse the butcher block with white vinegar by using a vinegar-water solution in a spray bottle, spritz the butcher block all over. Let sit for a while. While that sits, make a lemon salt mixture by pouring about 1/4 cup salt into a bowl, and stir in enough lemon juice to make a paste, adjust the consistency as you go, to make a workable paste. The final step, using a scrub brush, thoroughly scrub your butcher block with the lemon-salt paste. If the paste gets too dry, sprinkle on a little more lemon juice. Rinse well, and squeegee off as much water as you can, and then let it dry overnight. Make sure to seal it before you get it dirty

again. Pour out a small amount of oil, and rub it into the wood using a cloth or paper towel. As the oil soaks in, add more and continue rubbing and polishing with the grain until the oil is absorbed. The first time you seal your butcher block, it may take several applications before it stops "drinking" oil, but in later cleanings you'll just need to refresh it. Keep adding oil until no more soaks in, remove any excess with a cloth.


 



 
 
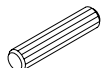



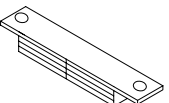

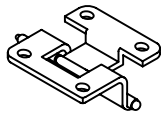
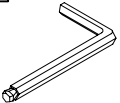

Outdoor Cushion Care: Please note our cushions are made from a polyester foam, and the covers are made from a moisture resistant polyester blend. This does not mean they are waterproof! Cushions should be stored and covered when not in use to protect them from rain, sunlight, and other staining agents. We do not recommend leaving cushions out in inclement weather, and if cushions become wet, please dry them immediately by removing the cushion from the cover so they can dry separately. Wring out any excess moisture before drying. Air dry only!

Outdoor Furniture Storage: We highly recommend storing any outdoor furniture during the winter and/or rainy seasons. Before storing your furniture, please ensure all moisture collected in the frame tubes has been drained out and dried. When outdoor furniture is not in use, we recommend covering all the furniture to protect it against the elements.

PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Upper Left Side Panel 1 PC</p>	<p>Upper Right Side Panel 1 PC</p>	<p>Lower Left Side Panel 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Lower Right Side Panel 1 PC</p>	<p>Middle Shelf 1 PC</p>	<p>Upper Door 2 PCS</p>	<p>Lower Left Door 1 PC</p>	<p>Lower Right Door 1 PC</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Drawer Front Panel 2 PCS</p>	<p>Drawer Left Side Panel 2 PCS</p>	<p>Drawer Right Side Panel 2 PCS</p>	<p>Drawer Back Panel 2 PCS</p>	<p>Drawer Bottom Panel 2 PCS</p>
<p>P</p> 	<p>Q</p> 	<p>R</p> 	<p>S</p> 	<p>T</p> 
<p>Drawer Bottom Rail 2 PCS</p>	<p>Drawer Vertical Panel 12 PCS</p>	<p>Back Rail 4 PCS</p>	<p>Back Long Partition Rail 1 PC</p>	<p>Back Short Partition Rail 1 PC</p>
<p>U</p> 	<p>V</p> 	<p>W</p> 	<p>X</p> 	<p>Y</p> 
<p>Upper Back Panel 2 PCS</p>	<p>Lower Back Panel 2 PCS</p>	<p>Shelf 2 PCS</p>	<p>Adjustable Shelf 3 PCS</p>	<p>Bun Foot 4 PCS</p>

HARDWARE LIST


<p>#1</p>  <p>Ø1/4"*1-3/4"</p>	<p>#2</p>  <p>Ø1/4"*1"</p>	<p>#3</p>  <p>Ø4mm*7/8"</p>	<p>#4</p>  <p>Ø3mm*5/8"</p>	<p>#5</p>  <p>Ø3mm*1/2"</p>
<p>Long Hex Socket Head Bolt 13 PCS(Extra 1)</p>	<p>Short Hex Socket Head Bolt 5 PCS(Extra 1)</p>	<p>Long Flat Head Screw 25 PCS(Extra 1)</p>	<p>Short Flat Head Screw 41 PCS(Extra 1)</p>	<p>Screw 31 PCS(Extra 1)</p>
<p>#6</p>  <p>Ø4.5mm*7/8"</p>	<p>#7</p>  <p>Ø8mm*1-1/8"</p>	<p>#8</p>  <p>Ø8mm*2"</p>	<p>#9</p>  <p>Ø1/4"*11mm</p>	<p>#10</p>  <p>Ø1/4"mm*13"</p>
<p>Knob Bolt 5 PCS(Extra 1)</p>	<p>Wood Dowel 11 PCS(Extra 1)</p>	<p>Long Wood Dowel 5 PCS(Extra 1)</p>	<p>Spring Washer 17 PCS(Extra 1)</p>	<p>Flat Washer 17 PCS(Extra 1)</p>
<p>#11</p> 	<p>#12</p> 	<p>#13</p> 	<p>#14</p> 	<p>#15</p>  <p>4mm</p>
<p>Knob 4 PCS</p>	<p>Magnet 3 PCS</p>	<p>Shelf Holder 13 PCS(Extra 1)</p>	<p>Door Hinge 10 PCS</p>	<p>Allen Wrench 1 PC</p>
<p>#16</p>  <p>Safety Strap Kit 1 PC</p>				

ADDITIONAL TOOLS(Not Provided)

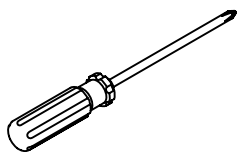 Note:It is not recommended to use power tools during assembly




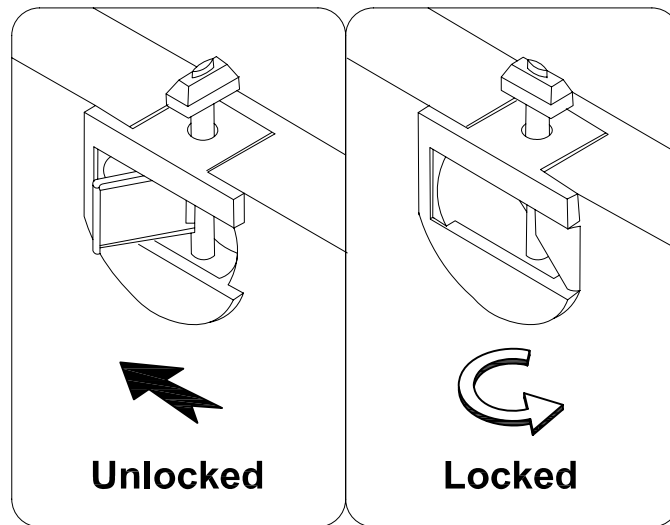 

Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

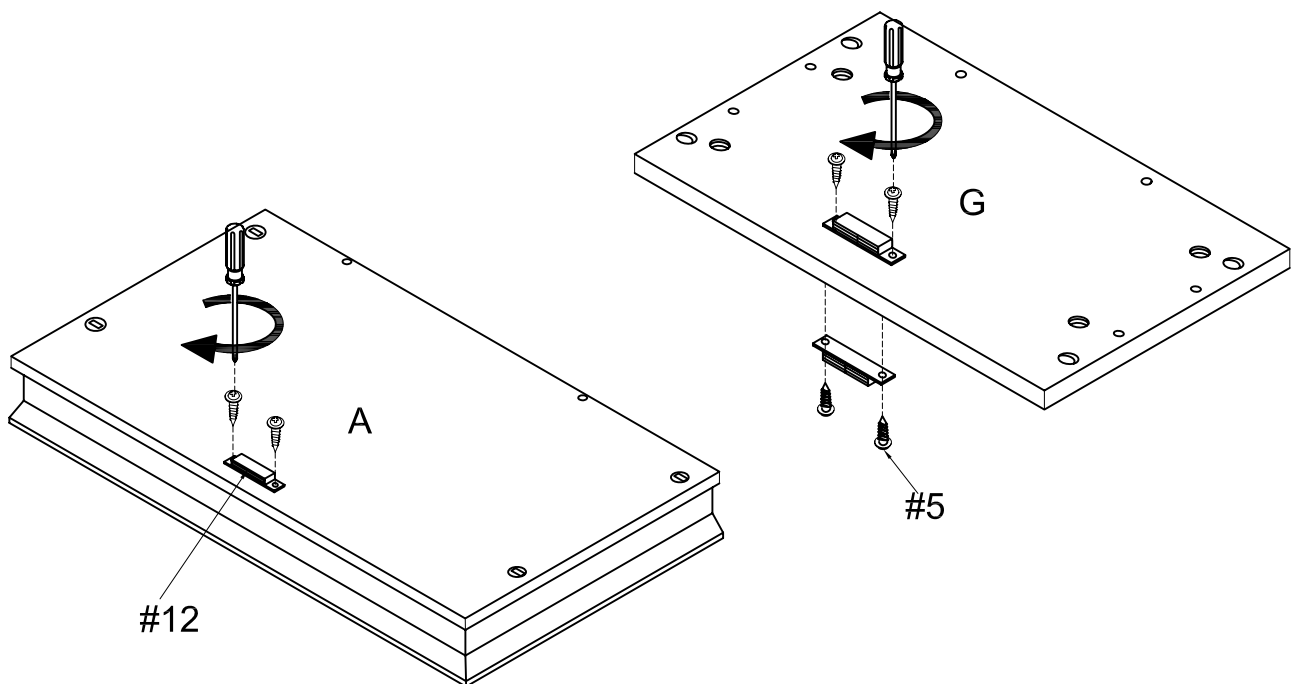  Step 1. Attach magnets (part #12) to top panel (part A) and both sides of middle shelf (part G) using screws (part #5) and Phillips head screwdriver.




#12  x 3
#5  x 6

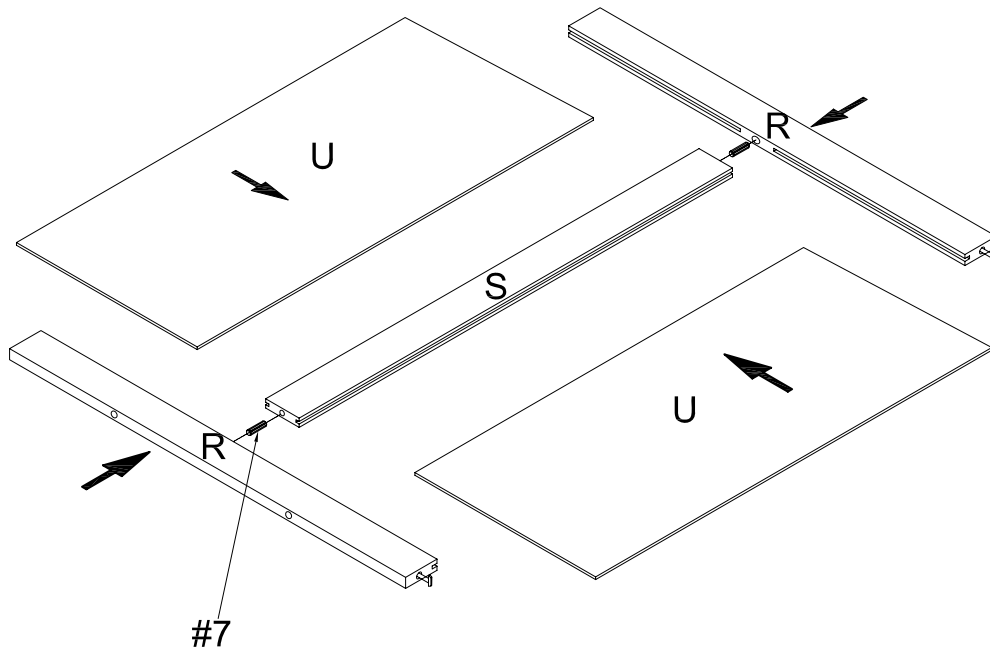 Step 2. Attach back rails (part R) to back long partition rail (part S) using wood dowels (part #7), then slide upper back panels (part U) into grooves of parts R & S as shown.




#7  x 2

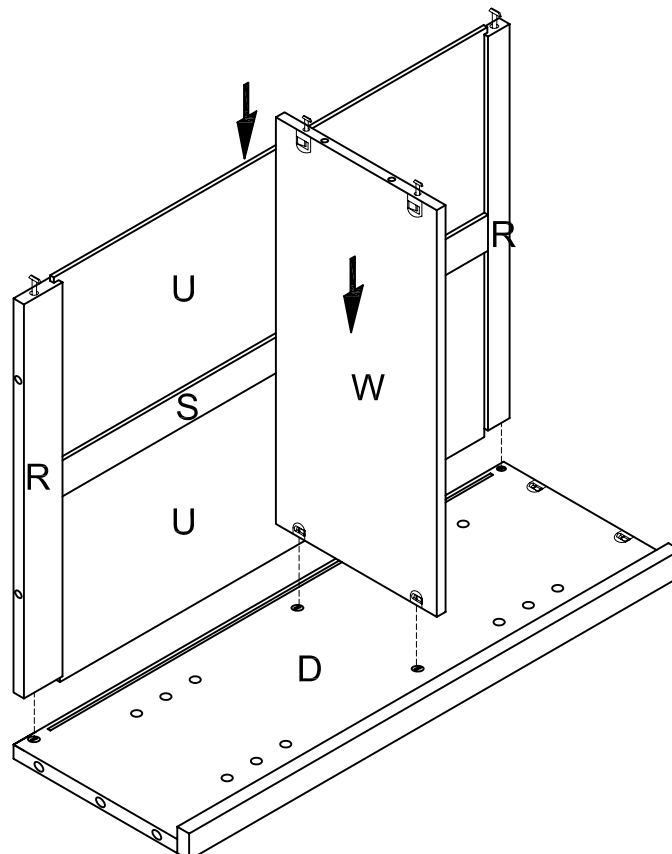 
Step 3. Carefully lay down upper right side panel (part D) on a soft surface such as carpet as shown. Attach back rails (part R) and shelf (part W) to upper right side panel (part D), and lock the hardware.



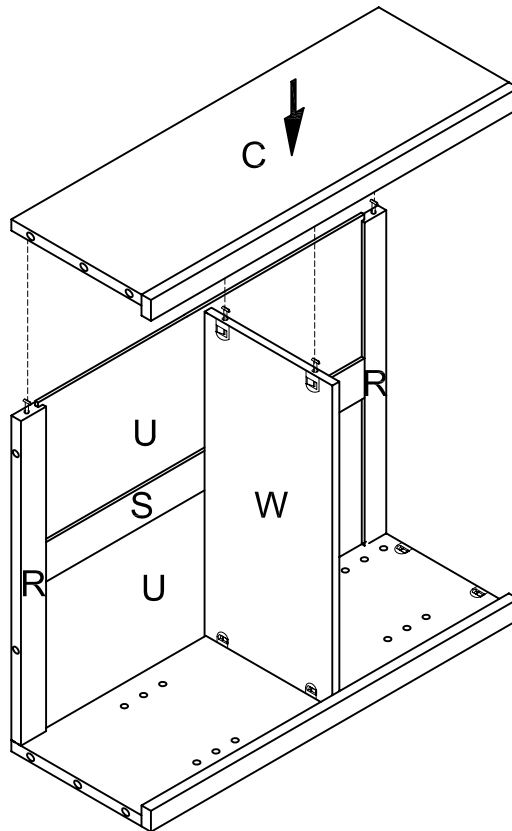 
Step 4. Attach upper left side panel (part C) to back rails (part R) and shelf (part W), and lock the hardware.



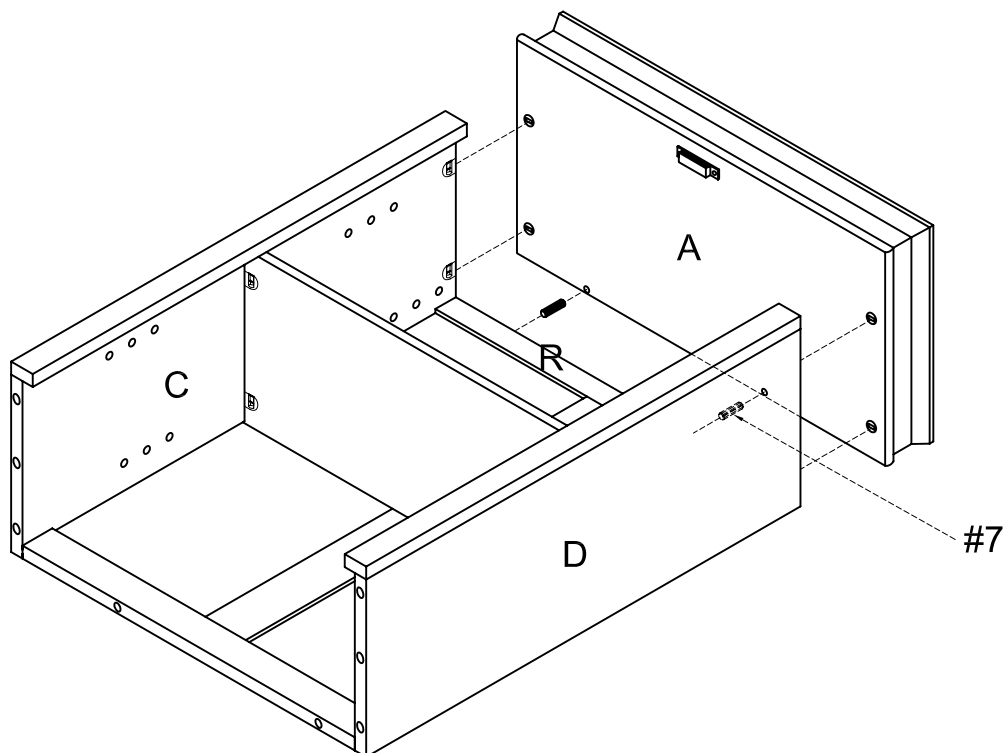 
Step 5. Carefully lay the assembled unit on a soft surface such as carpet as shown. Attach top panel (part A) to upper left side panel (part C), upper right side panel (part D) and back rail (part R) using wood dowels (part #7), and lock the hardware.



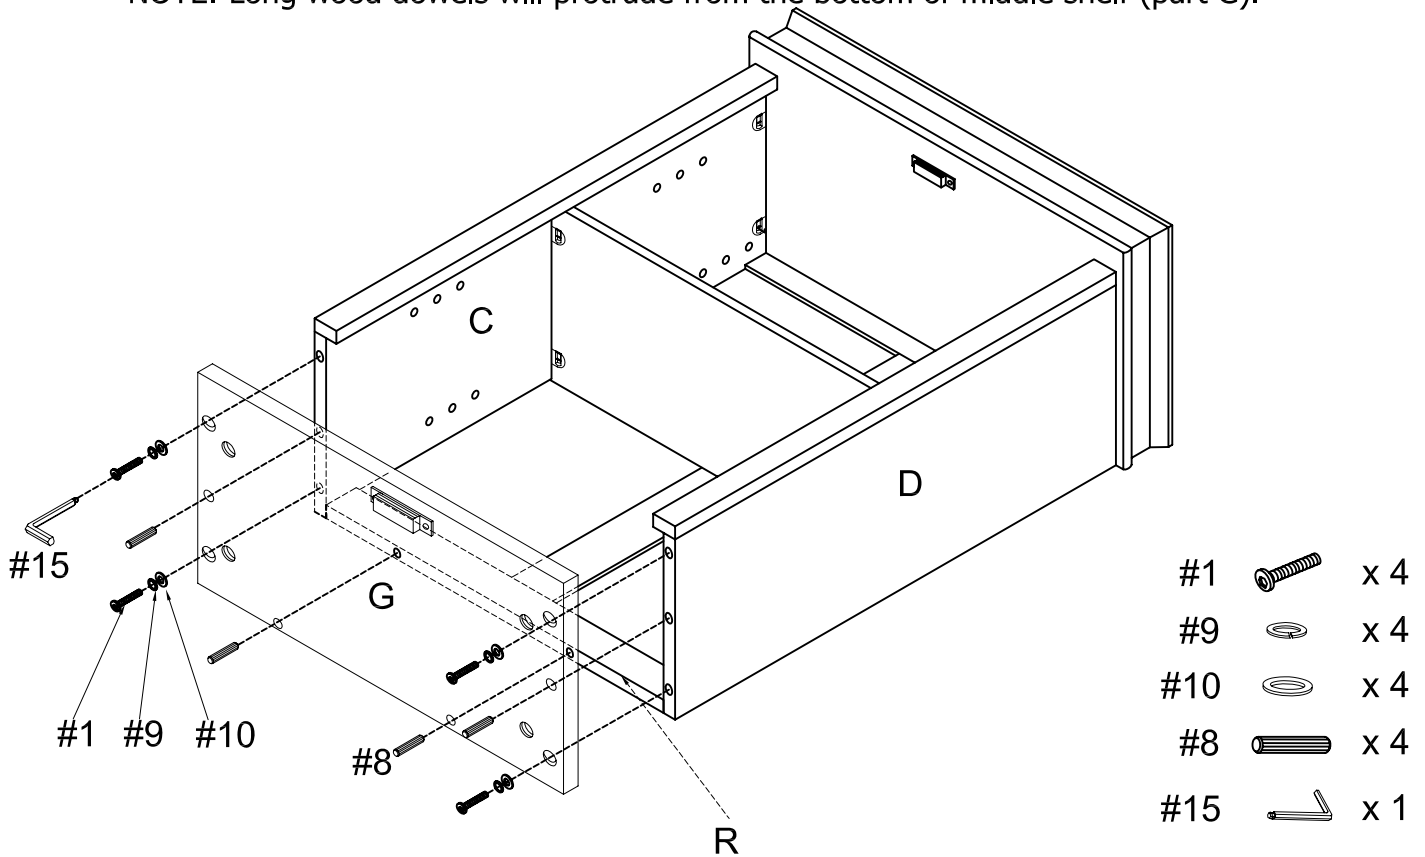 
Step 6. Attach middle shelf (part G) to upper left side panel (part C), upper right side panel (part D) and back rail (part R) using long wood dowels (part #8), long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).
 NOTE: Long wood dowels will protrude from the bottom of middle shelf (part G).



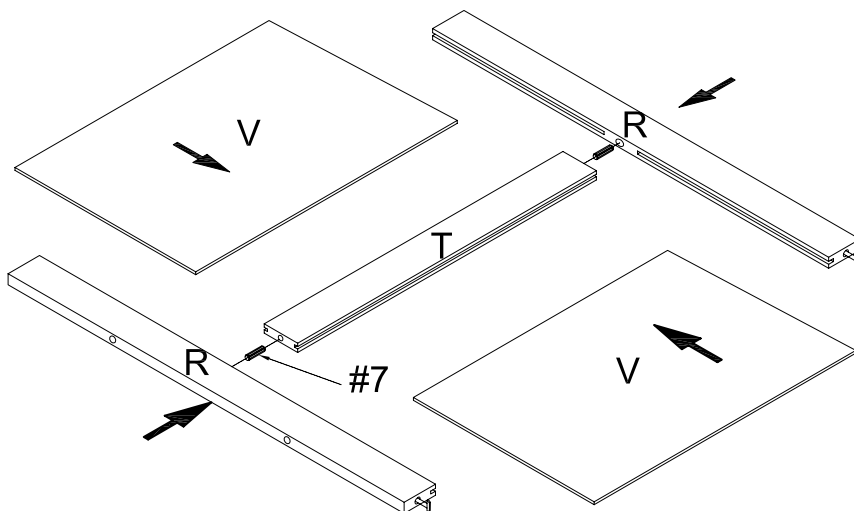 
Step 7. Attach back rails (part R) to back short partition rail (part T) using wood dowels (part #7), then slide lower back panels (part V) into grooves of parts R & T as shown.



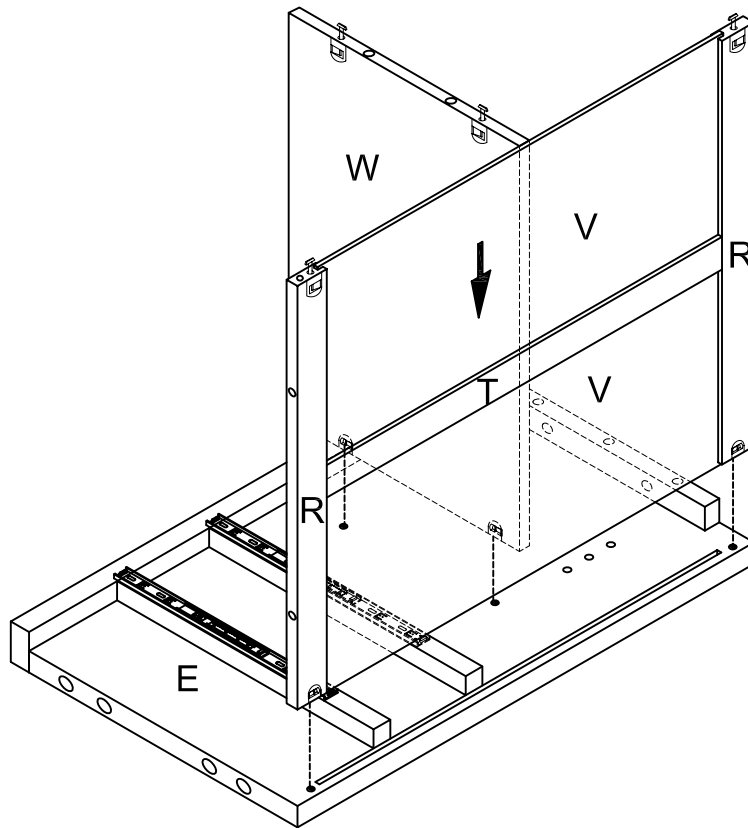 
Step 8. Carefully lay down lower left side panel (part E) on a soft surface as carpet as shown. Attach back rails (part R) and shelf (part W) to lower left side panel (part E), and lock the hardware.



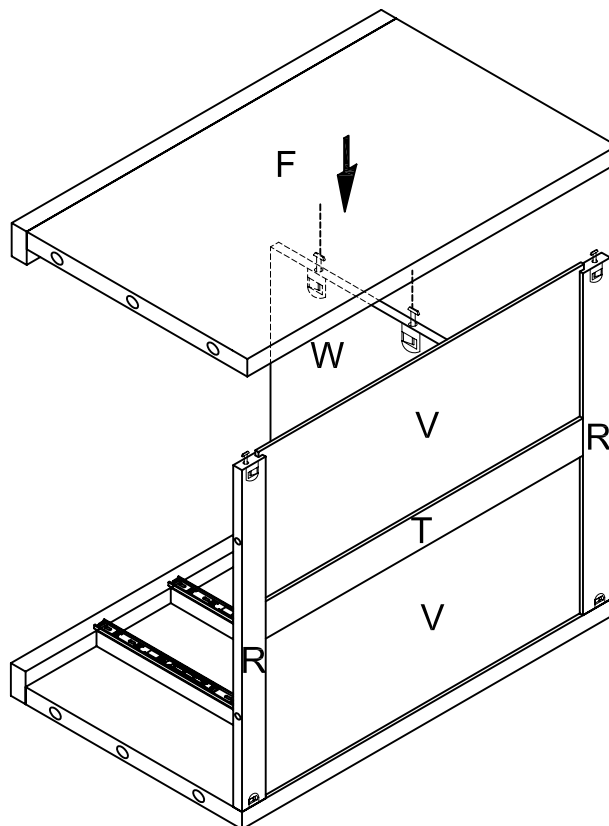 
Step 9. Attach lower right side panel (part F) to back rails (part R) and shelf (part W), and lock the hardware.



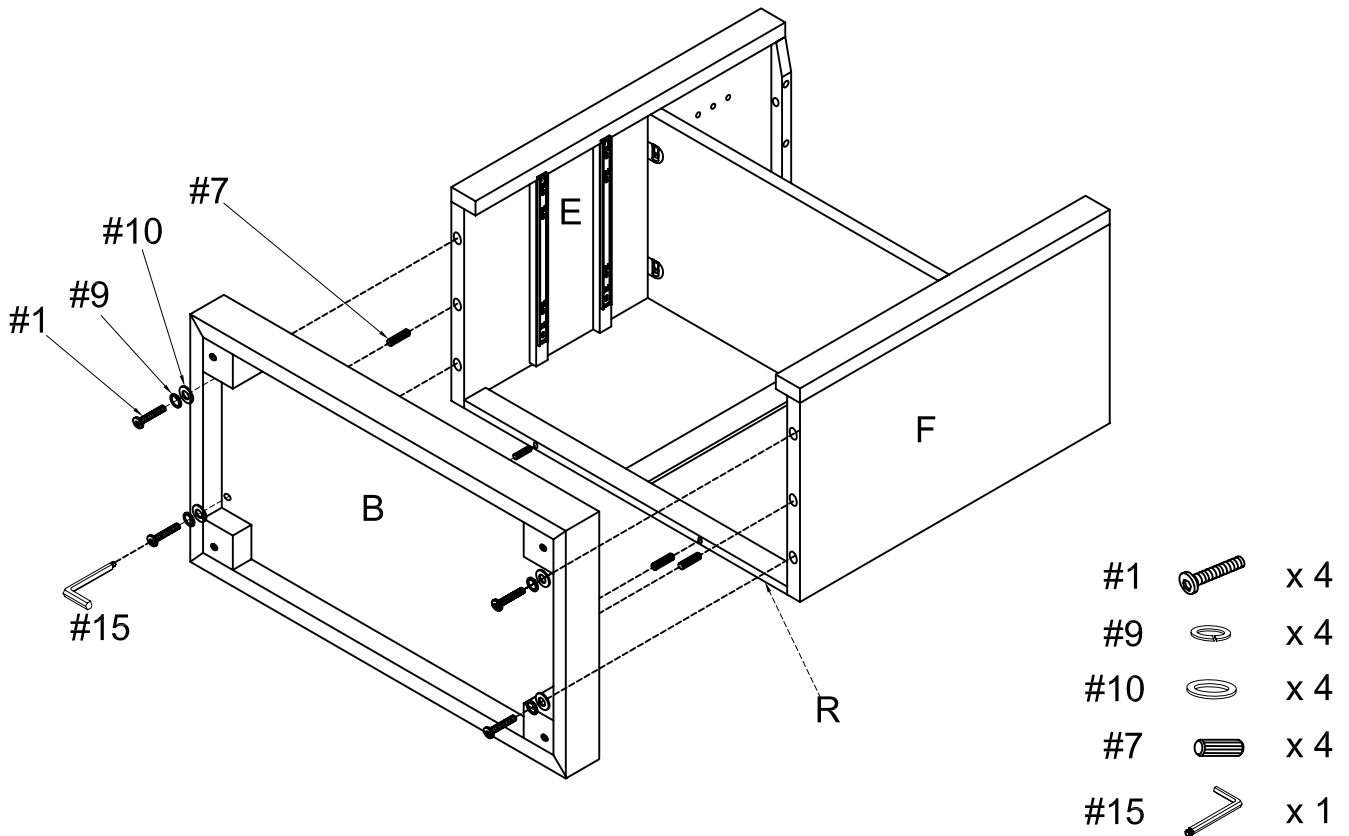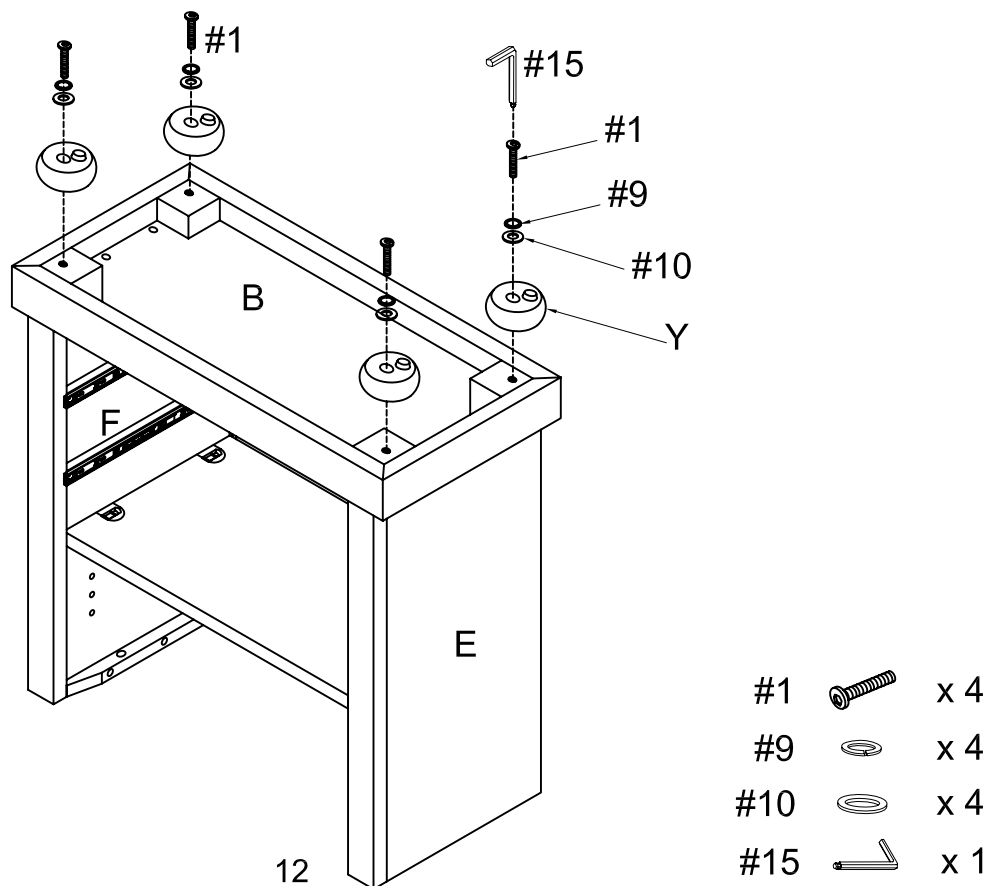  
Step 10. Carefully lay assembled bottom cabinet on a soft surface such as carpet as shown. Attach bottom panel (part B) to lower left side panel (part E), lower right side panel (part F) and back rail (part R) using wood dowels (part #7), long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).







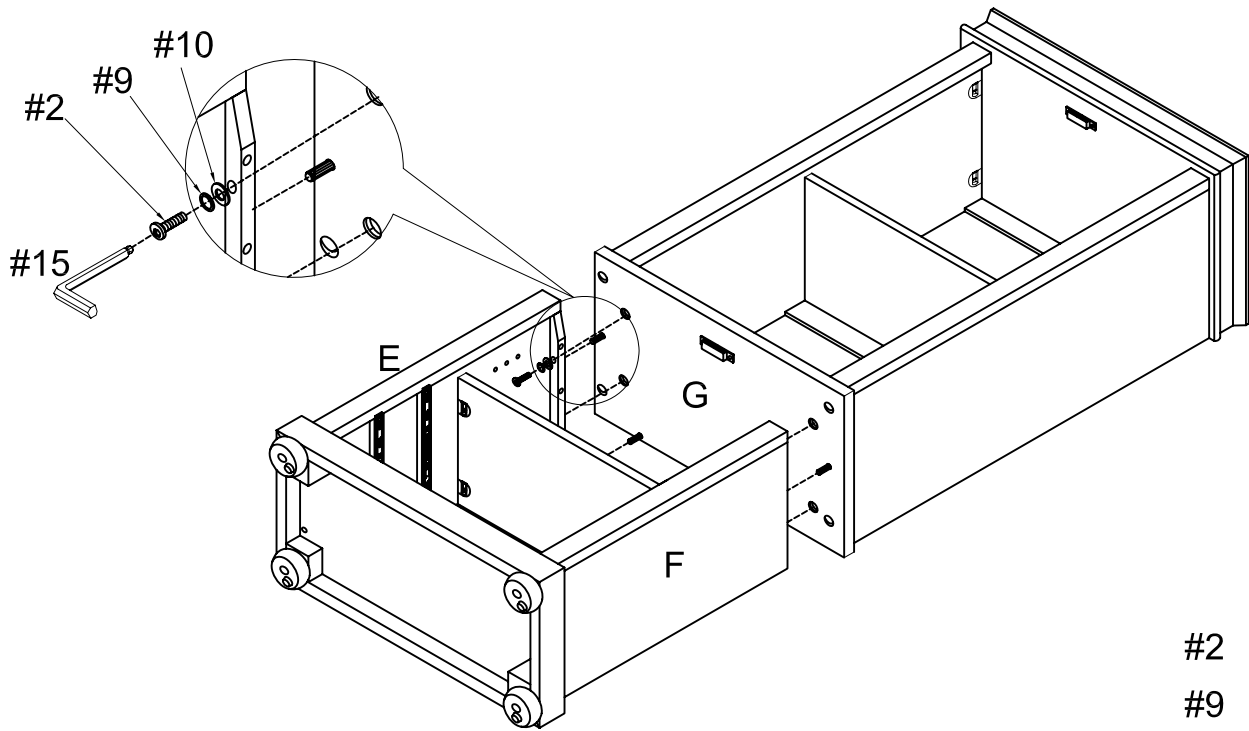 Step 11. Carefully turn the assembled bottom cabinet on a soft surface such as carpet as shown. Attach bun foot (part Y) to bottom panel (part B) using long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).

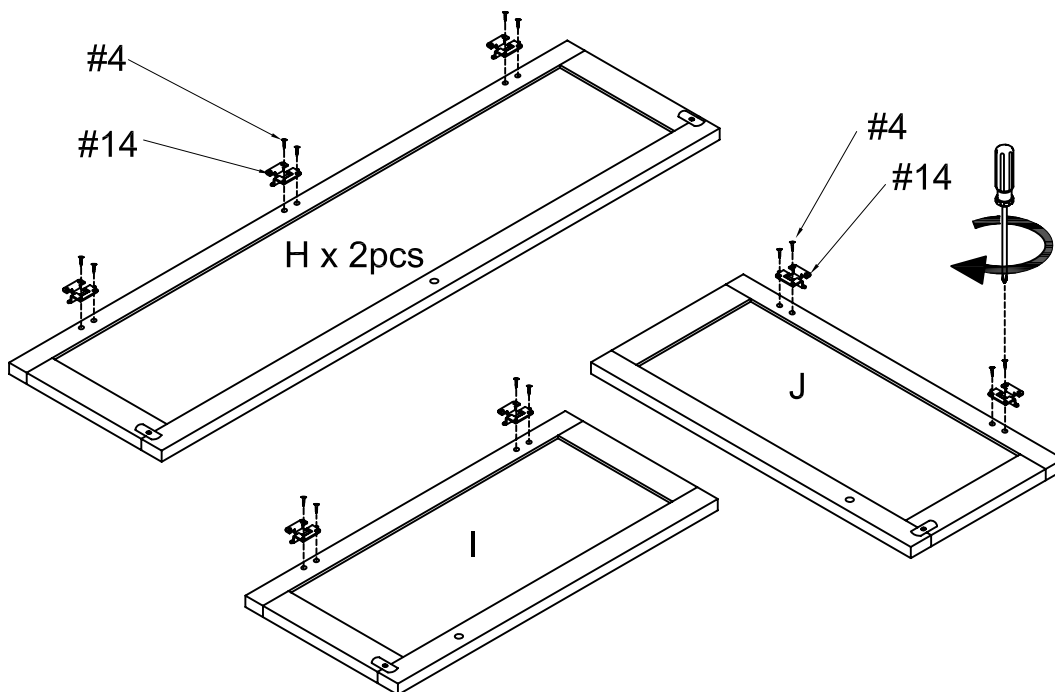 



 
Step 12. Carefully lay the assembled top and bottom cabinets on a soft surface such as carpet as shown and attach them together using short hex socket head bolts (part #2), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).




- | | | |
|-----|---------------------------------------------------------------------------------------|-----|
| #2 |  | x 4 |
| #9 |  | x 4 |
| #10 |  | x 4 |
| #15 |  | x 1 |

Step 13. Attach door hinges (part #14) to upper doors (part H), lower left door (part I) and lower right door (part J) using short flat head screws (part #4) and Phillips head screwdriver.




- | | | |
|-----|---------------------------------------------------------------------------------------|------|
| #14 |  | x 10 |
| #4 |  | x 20 |

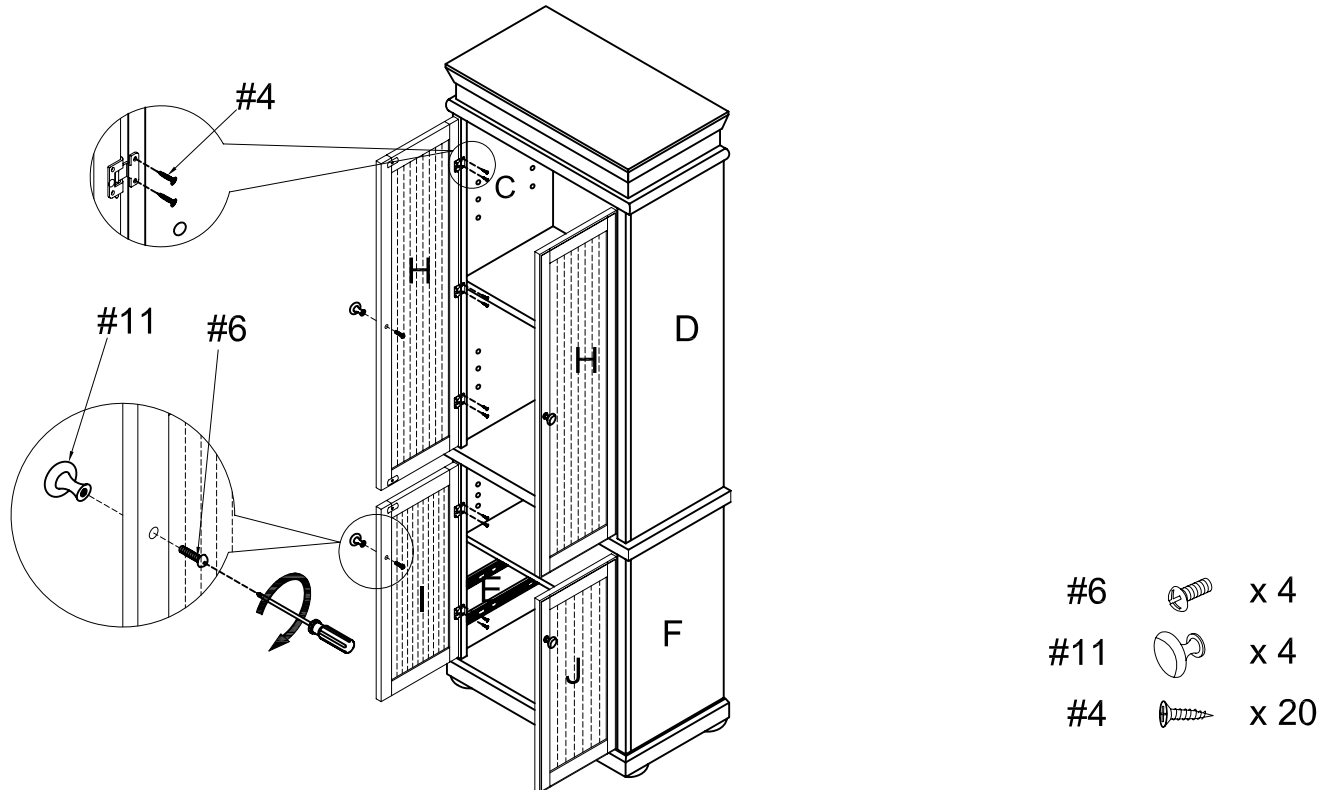 
Step 14. IMPORTANT: DOORS ARE HEAVY! Please use more than one person when installing doors. Carefully turn cabinet upright as shown. Fasten upper doors (part H) to upper left side panel (part C) and upper right side panel (part D) using short flat head screws (part #4) and Phillips head screwdriver. Fasten lower left door (part I) and lower right door (part J) to lower left side panel (part E) and lower right side panel (part F) using short flat head screws (part #4) and Phillips head screwdriver. Attach knobs (part #11) to all doors (parts H, I & J) using knob bolts (part #6) and Phillips head screwdriver.



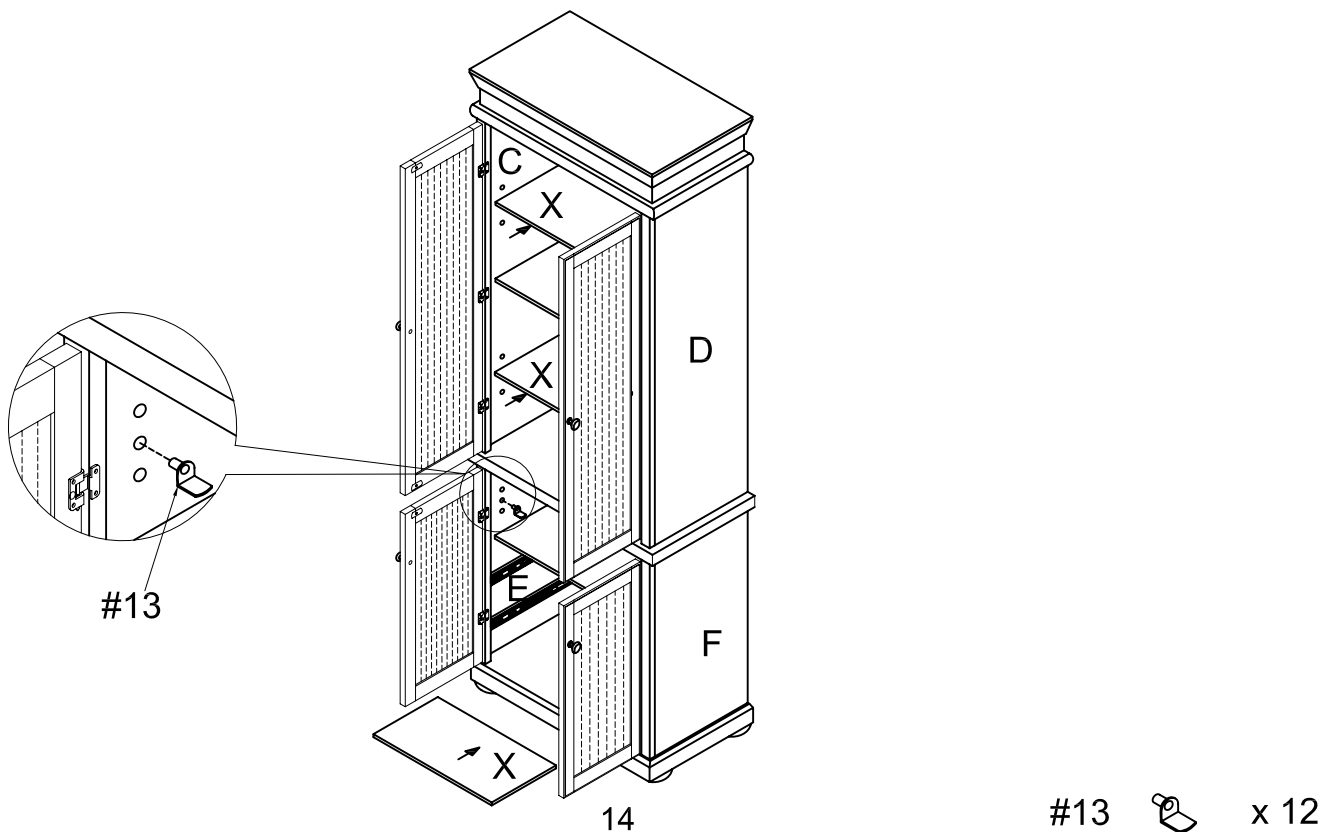 Step 15. Insert shelf holders (part #13) into desired position, slide adjustable shelves (part X) in place. **NOTE:** For the bottom cabinet, the shelf (part X) must be placed inside the cabinet BEFORE installing the shelf holders (part #13) due to the limited space.




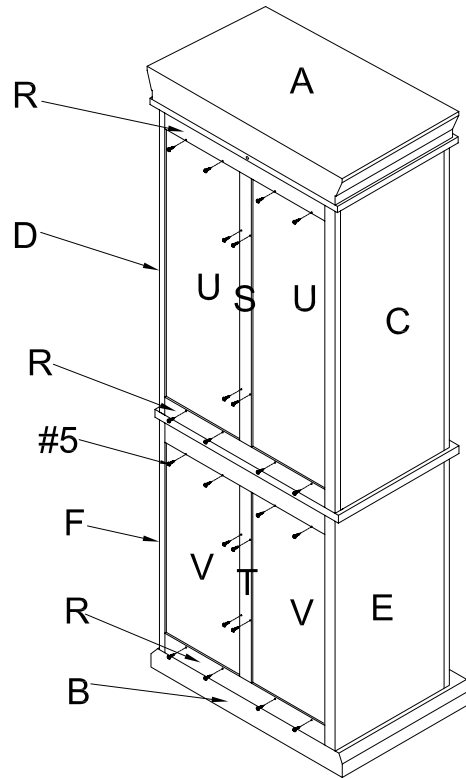 Step 16. Fasten back rails (part R), back long and short partition rails (parts S & T) to upper and lower back panels (parts U & V) using screws (part #5) and Phillips head screwdriver.




#5  x 24

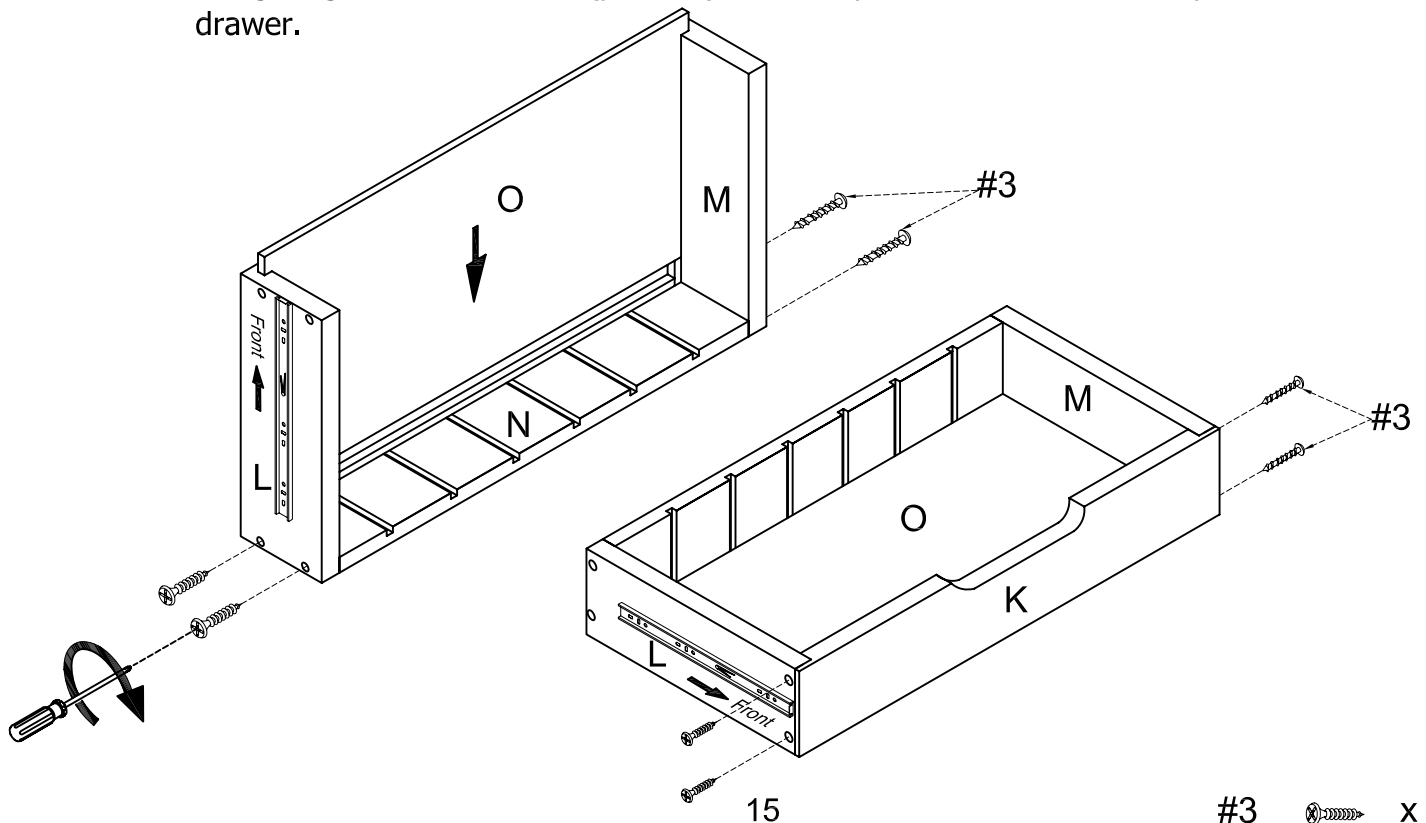 Step 17. Attach drawer left and right side panels (parts L & M) to drawer back panel (part N) using long flat head screws (part #3) and Phillips head screwdriver. Insert drawer bottom panel (part O) into grooves of drawer panels (parts L, M & N) as shown. Attach drawer front panel (part K) to drawer left and right side panels (parts L & M) using long flat head screws (part #3) and Phillips head screwdriver. Repeat for remaining drawer.




#3  x 16

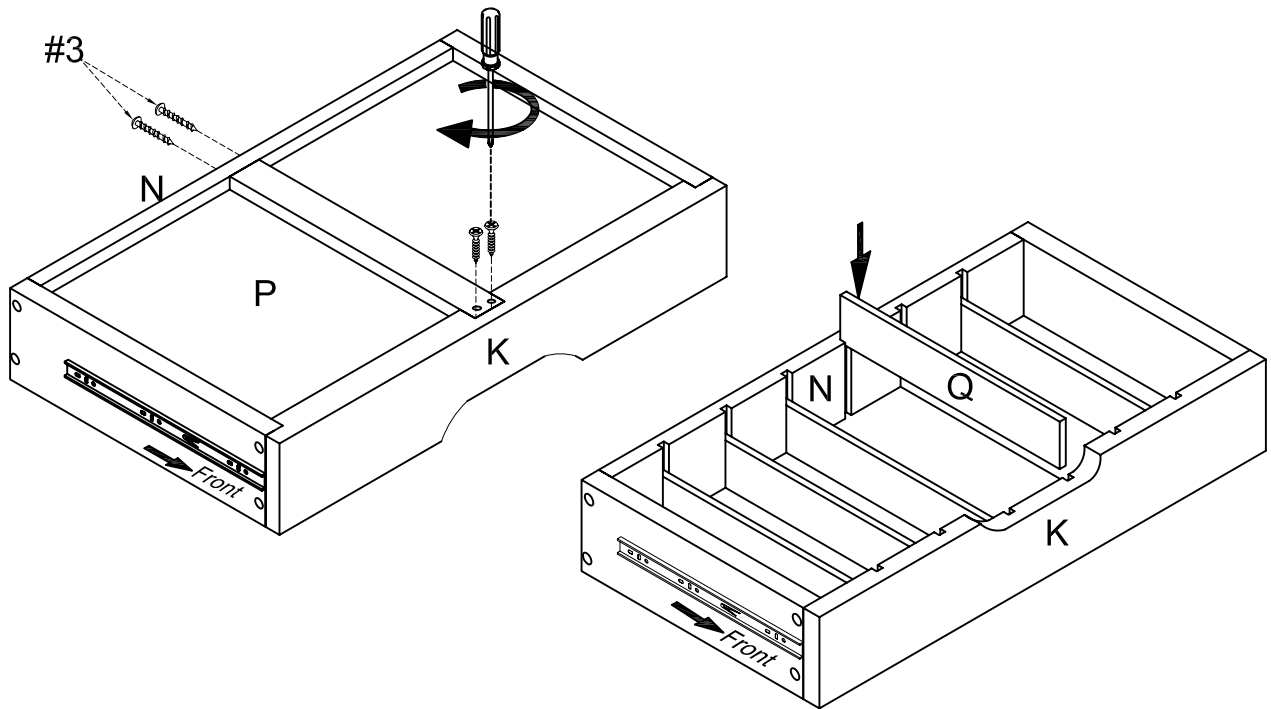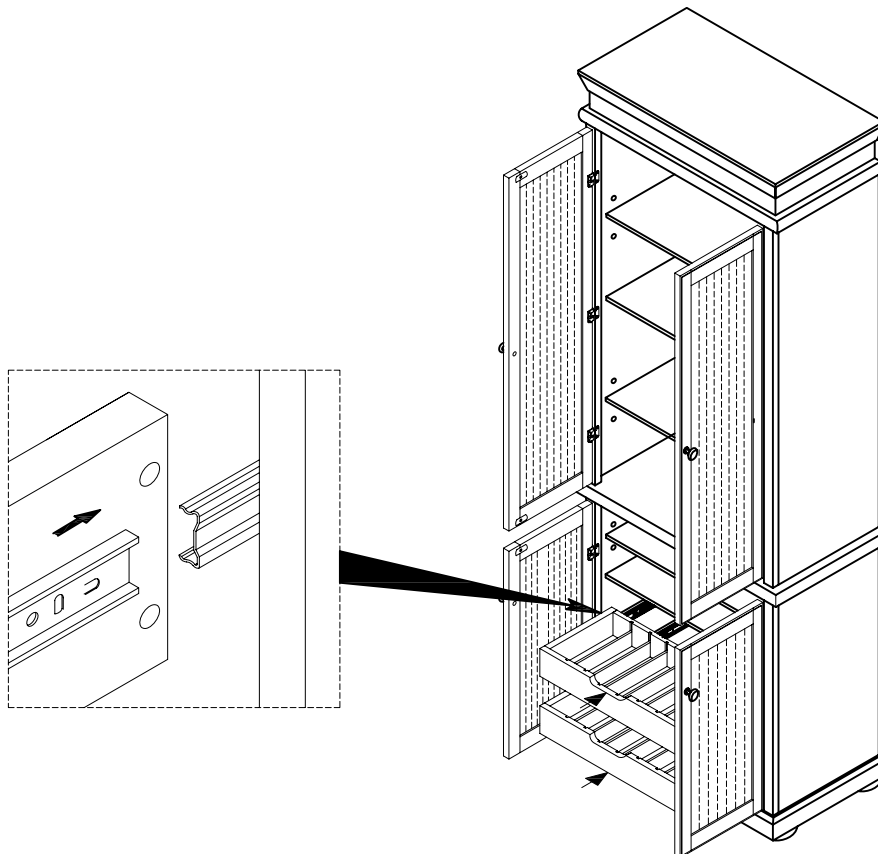  
 



 
Step 18. Carefully turn the drawer over as shown, and attach drawer bottom rail (part P) to drawer back panel (part N) and drawer front panel (part K) using long flat head screws (part #3) and Phillips head screwdriver.
Carefully turn drawer back over as shown, and slide drawer vertical panels (part Q) into place. Repeat for remaining drawer.



#3  x 8

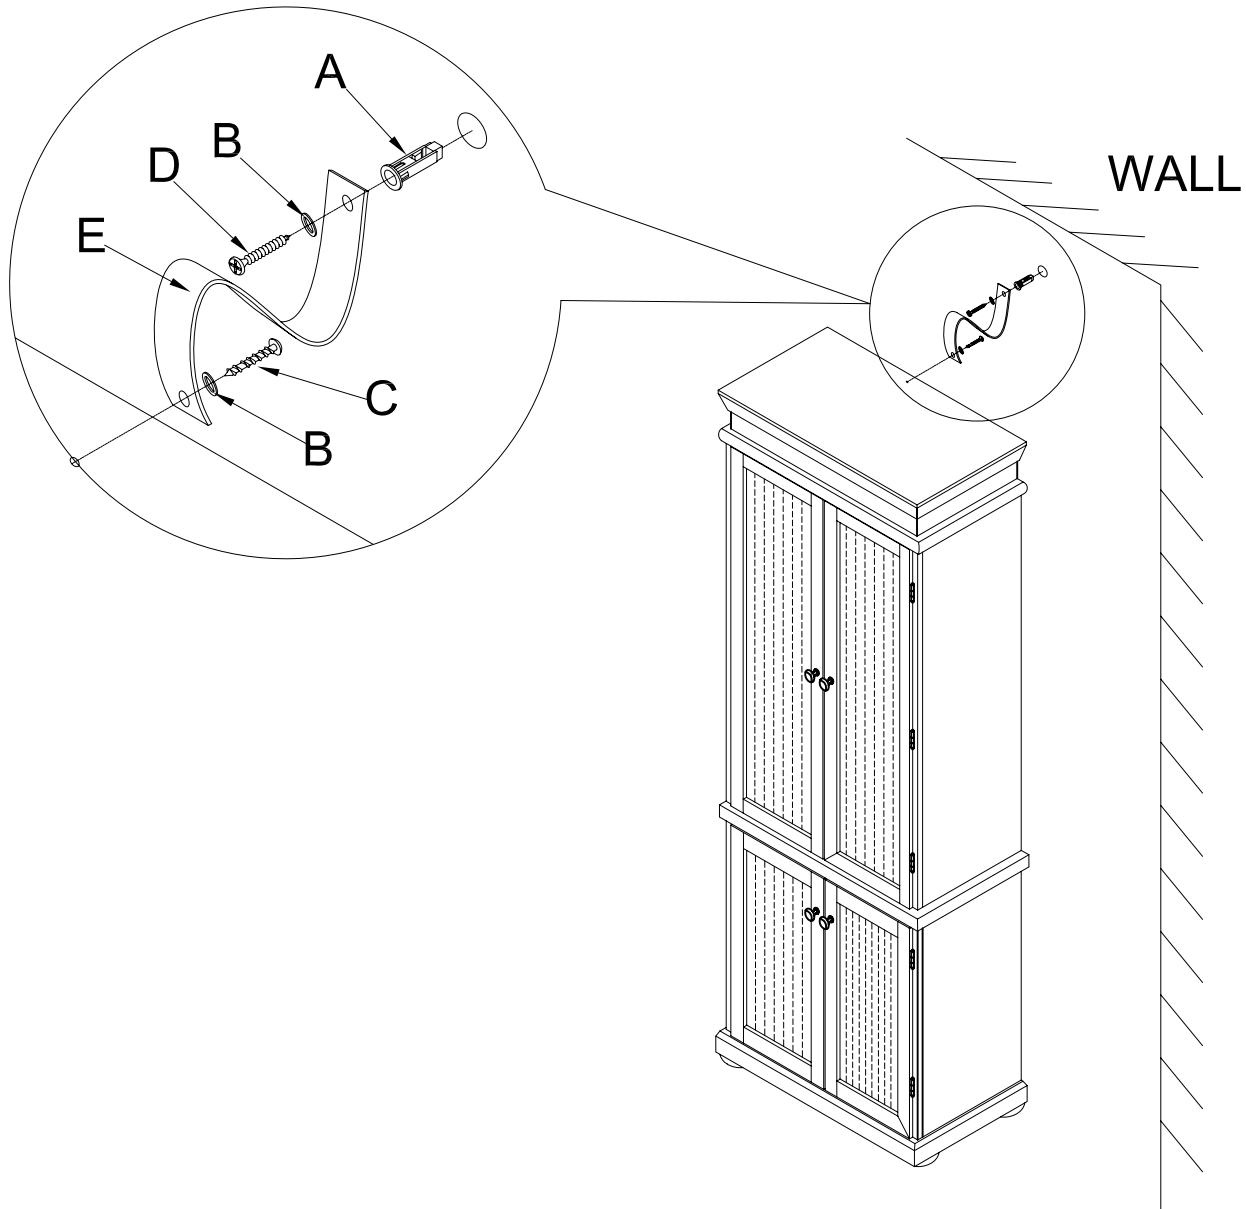 
Step 19. Slide drawers into place.



#16	A	B	C	D	E
					
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 PC	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY STRAP WALL ASSEMBLY INSTRUCTION

- 1.) Insert short screw (part C) through washer (part B) and safety wall strap (part E), and attach to top panel (part A) using Phillips head screwdriver.
- 2.) Drill a 11/32"(6mm) hole where you want to secure the unit . The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (part E) is attached. Tap wall anchor (part A) into the hole.
- 3.) Insert long screw (part D) through washer (part B) and safety wall strap (part E) into wall anchor (part A) using a Phillips head screwdriver.



Limited Manufacturers Warranty

Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale.

Should you experience any damaged, defective, or missing parts, or need help with assembly, please call us directly before contacting the retailer.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

RETURNS POLICY

- All returns must be authorized through the Service Team and must be for valid reasons associated with defects, damages, mislabeling or misrepresentation of the product. Requests for Return Authorizations (RA) resulting from 'Buyer's Remorse', partially assembled products, or products displaying damage from neglect or abuse on the part of the consumer will not be approved. Products returned without an RA will not be eligible for a refund.
- For any questions about or to be issued a Return Authorization (RA) number, please call the Consumer Services
- Our products usually ship within two business days. If you change your mind about a purchase, please contact Consumer Services as soon as possible. If we are able to stop the order before it has been released for shipment, we will cancel the order without penalty. If the item has already shipped, please see our Returns Policy above for more information.
- Authorized returns are inspected immediately upon receipt. Any approved exchanges, credits and refunds will be issued for the purchase price of the item(s) at that time less any applicable fees; taxes are refunded in accordance with state law.
- Refunds and credits are issued based on the payment method used at the time of purchase. Please allow up to 21 days following receipt of the authorized return (not including weekends and holidays) for any credit or refund to show up on a credit card statement. A copy of the refund transaction can be requested from a Consumer Services Team member.

FREIGHT DAMAGE OR DEFECTS

On occasion, freight damage and factory defects may occur, and we will do our best to promptly replace any parts that are covered by our limited warranty included for all furniture products. Please note that parts replaced under warranty will be shipped via Ground Shipping only. Replacement parts will not be expedited unless the consumer is willing to pay for the extra charges. (See Warranty Policy Page). Please take pictures or note any damage upon delivery and provide this information to Consumer Services Team member when you contact us. With this feedback, we will continue to improve our products, packaging and shipping methods, and when necessary, we will file claims with the shipping company