Thank you for purchasing this quality product. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all parts and compare with the parts list below. Do not tighten all screws / bolts until all completely assembled.

Q.ty
IPC
IPC
PCS
1PC
1PC
IPC
IPC
IPC
PCS
PCS
1PC
IPC
IPC
IPC
PC 1P 1P IP PC 1P


Hardware List				
No.	Description	Sketch	Size	Q.ty
Α	Wood Dowels		M8x 30mm	24pcs
В	Screws	<i>₹1111111111</i>	M4x 45mm	8pcs
С	Cam Lock		D15mm x T10mm	22pcs
D	Cam Bolts		M6 x 40mm	22pcs
Е	Cam Hole Cover		D15mm	22pcs
F	Shelf Holder	C	D5mm x 16mm	8pcs

NOTE: YOU WILL ALSO NEED A SCREWDRIVER (NOT PROVIDED)


These parts are cumbersome and heavy. Therefore, two ople are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

/\ Important Notes


- *Keep all hardware parts out of reach of children!
- *Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- *Don't attempt to modify parts!

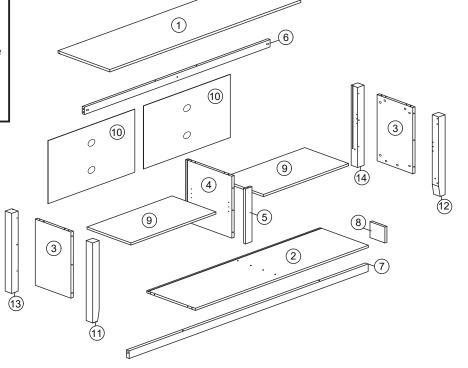


STEP 1:

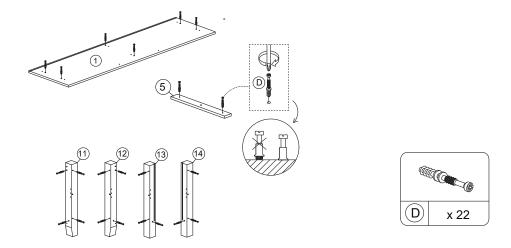


STEP 2:

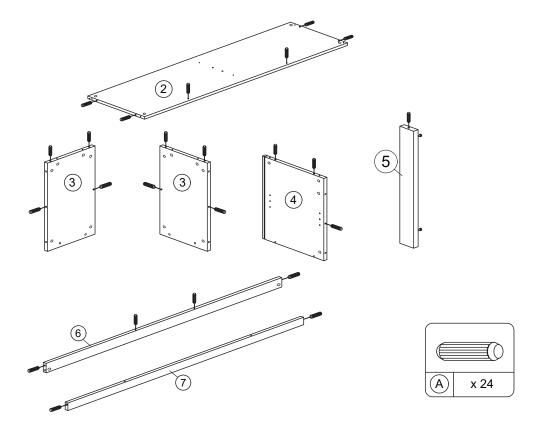


 STEP 3:



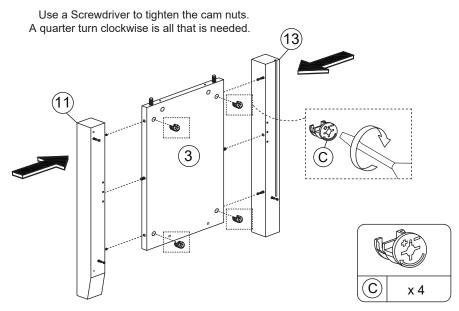


STEP 4:

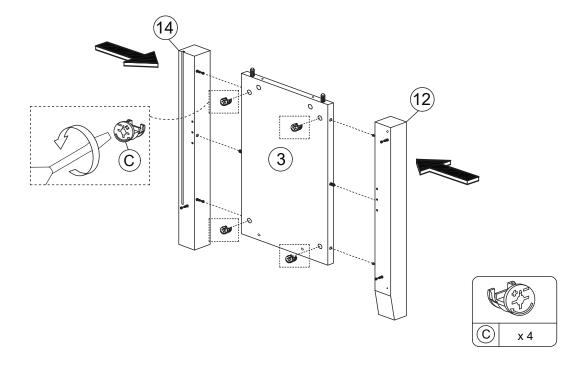


ASSEMBLY INSTRUCTIONS

TV STAND

STEP 5:

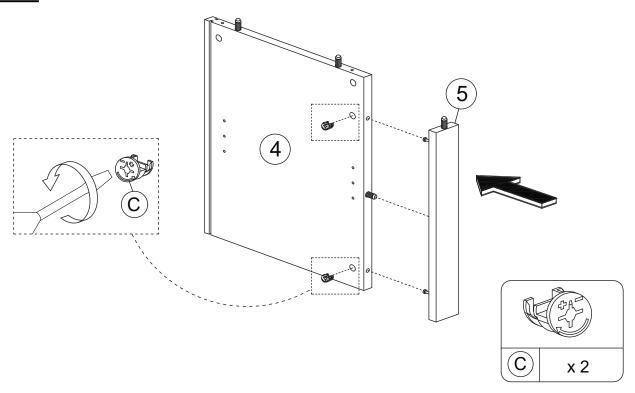


STEP 6:

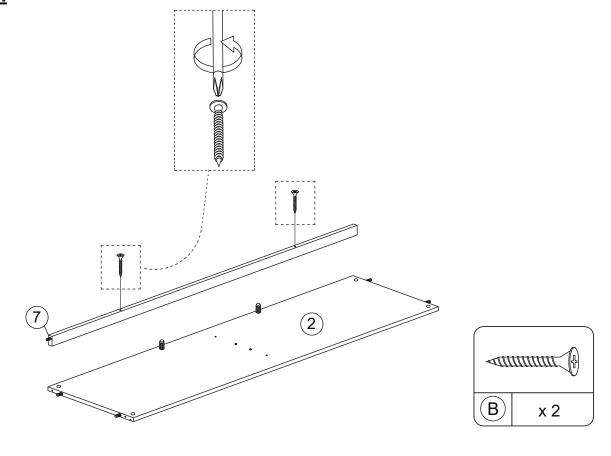

ASSEMBLY INSTRUCTIONS

TV STAND

STEP 7:

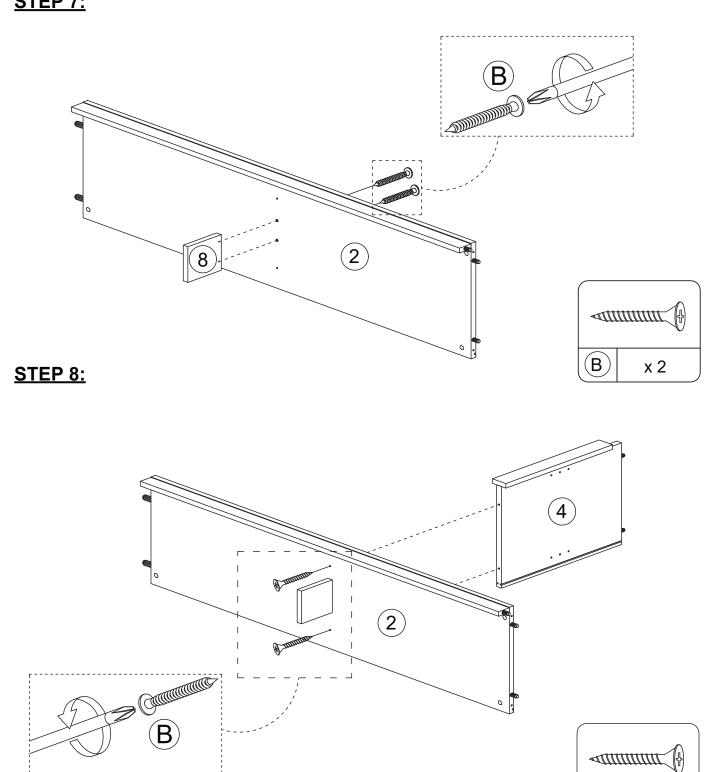

Cleaning instruction: Clean using soft cloth


 $\widehat{\mathsf{B}}$

x 2


ASSEMBLY INSTRUCTIONS

TV STAND


STEP 9:

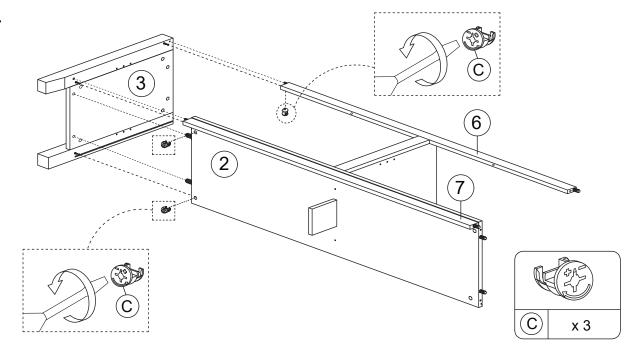


STEP 10:

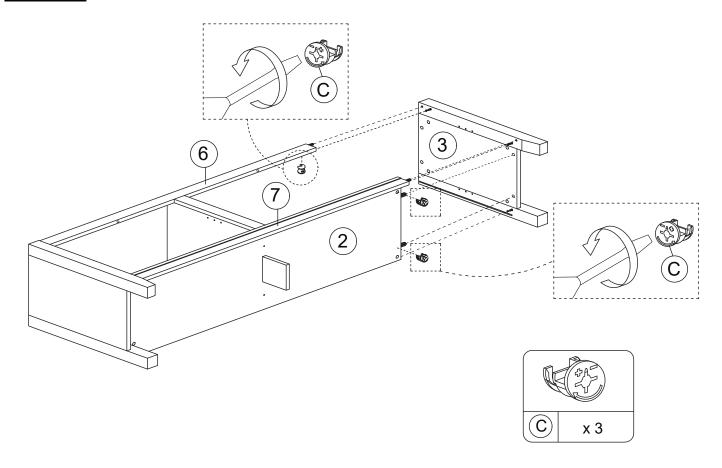

STEP 11:

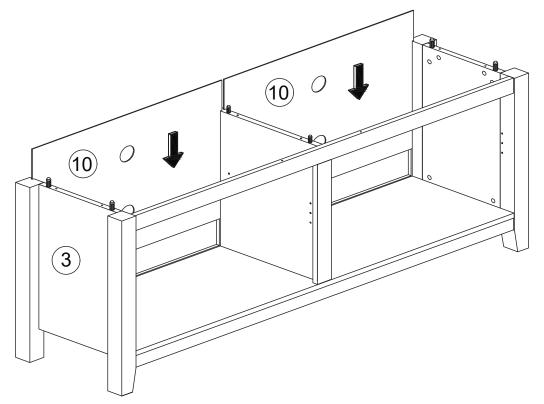

STEP 12:

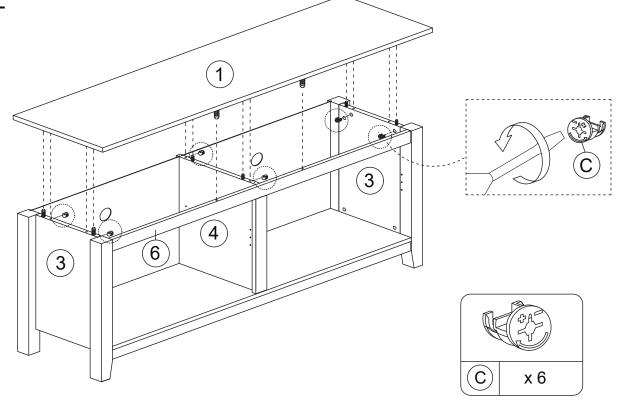

ASSEMBLY INSTRUCTIONS

TV STAND

