
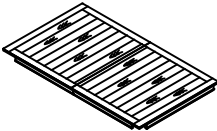


ASSEMBLY INSTRUCTION

BURNISHED DARK OAK FINISH 18" LEAF DINING TABLE


A	Table Top	B	Leaf	C	Leg	D	Lock Washer Ø5/16
							
1 pc		1 pc		4 pcs		16 pcs	
E	Flat Washer Ø5/16 x 19 mm	F	Nut Ø5/16"	G	Open wrench Ø5/16"		
							
16 pcs		8 pcs		1 pc			

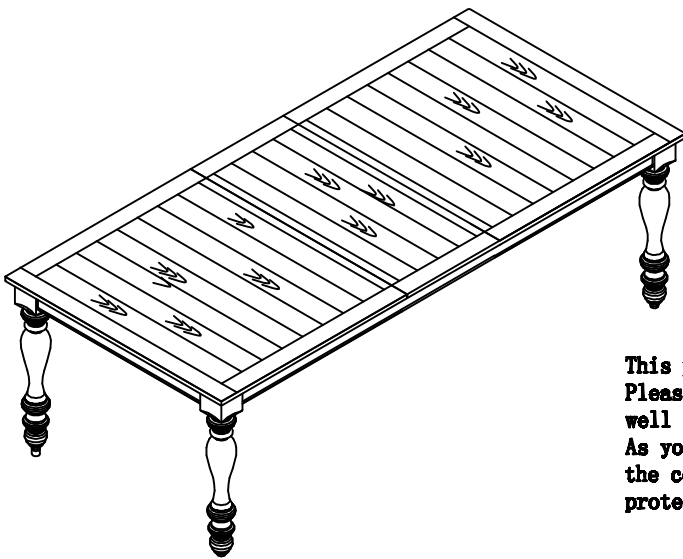


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

1 Replace corner MDF support from table top.

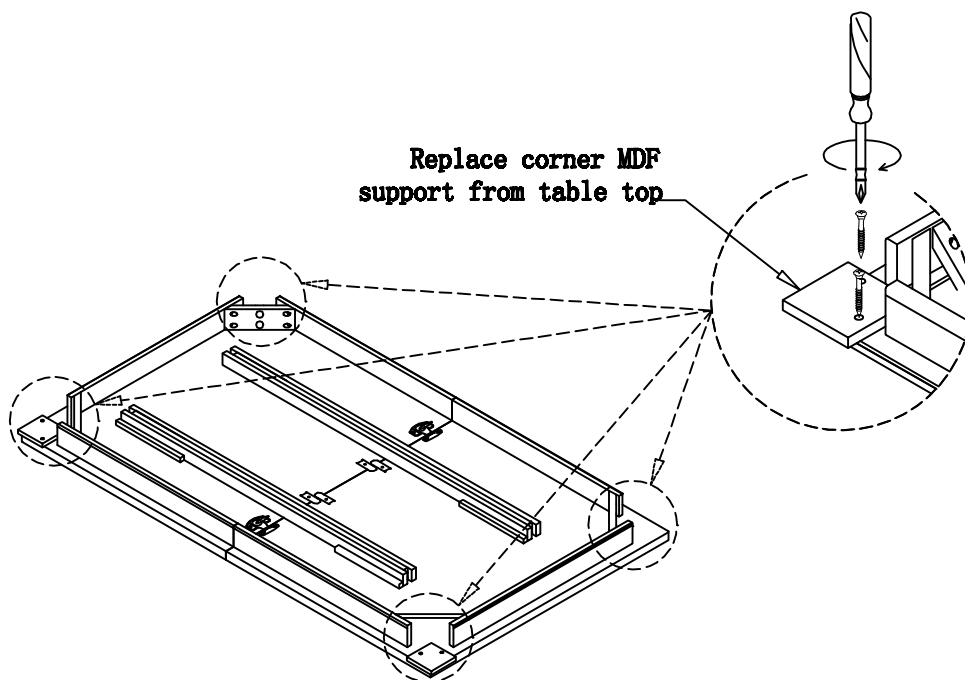


2 Attach Leg(C) to Table Top(A), using Flat Washer(E), Lock Washer(D), Nut(F) and Open Wrench(G). Open the Sash Lock.

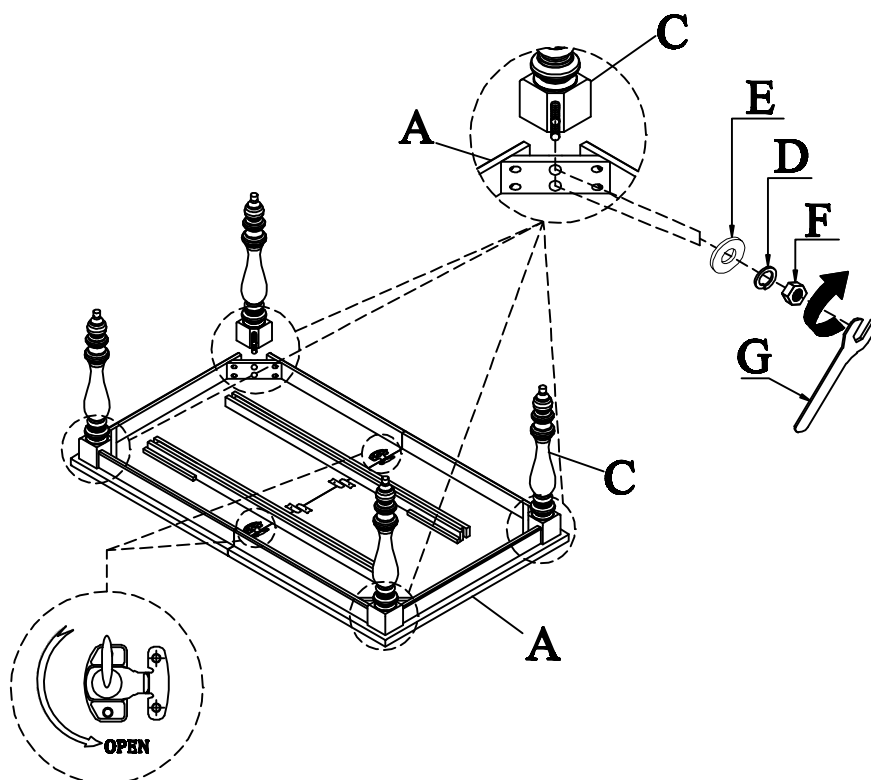


3

Pull out Table Top each side.

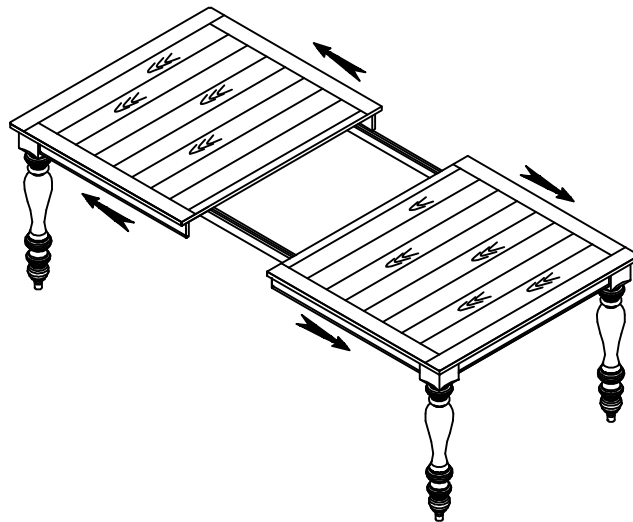

4

Attach Leaf(B) to Table Top(A), push two side tops that reach these leaves then lock them by using Saash Lock.

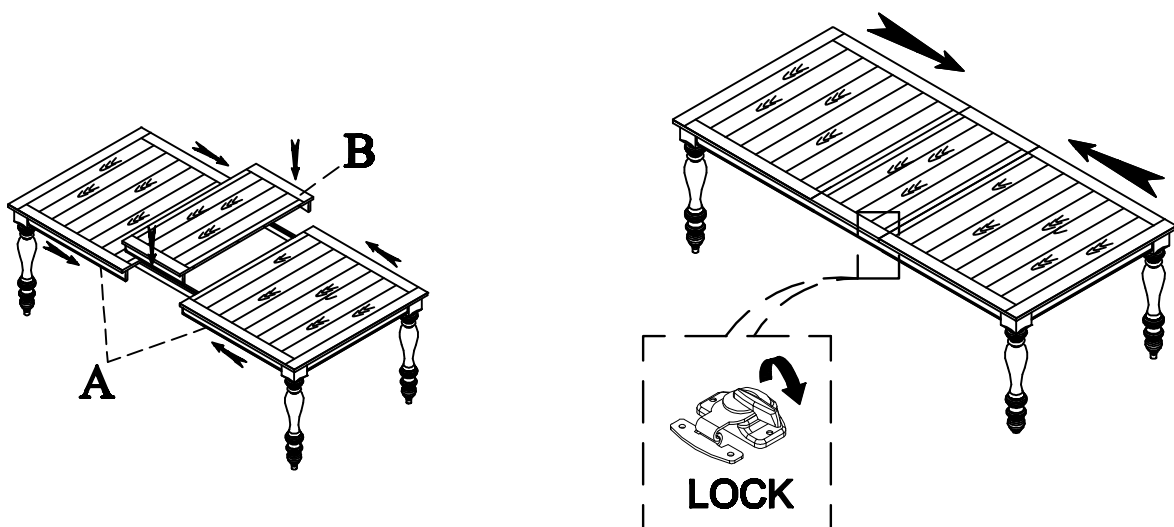

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.