


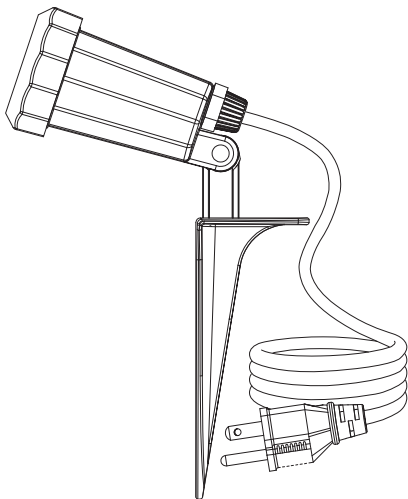

Portable Spike Light

SKU: HGSL11A / HGSL11B

[Instruction Manual]



Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

Warning

To reduce the risk of FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSON:

- Turn off/unplug the lamp to cool down before replacing bulb.
- Bulb gets HOT quickly!
- Do not touch hot lens, guard, or enclosure.
- Do not remain in light if skin feels warm.
- Do not look directly at lighted lamp.
- Keep away from materials that may burn.
- Use only with 150 Watt or smaller bulb.
- Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage bulb.
- Do not operate the portable flood lamp with missing or damaged guard, lamp containment barrier, or UV filter.
- Do not operate the portable luminaire with missing or damaged guard or lamp containment barrier.

Warning

When using outdoor use products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following...

Read All Instructions

- a) Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
- c) Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOWW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW

Caution


USE 150 WATT OR SMALLER 120 VOLT, TYPE PAR38 BULB (BULB NOT INCLUDED)

- Use with caution when plugging in or handling lamp or cord as you would be with any outdoor electrical equipment.
- When installing or replacing floodlight, ensure that gasket be properly in place for a safe weatherproof installation.

Assembly Instructions:

1. Align ribbed sections on mounting plates and insert Screw (C)
2. Adjust to desired angle.
3. Tighten wing nut (D) onto Screw (C)
4. Insert Light Bulb (E) and tighten into Fixture (A)

NOTE: BULB NOT INCLUDED;
USE ONLY PAR38 BULB;

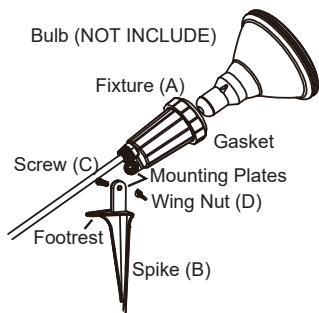

Usage Instructions and Use

1. Use spike at all times
2. Insert into the soft ground with a footrest.
3. Be sure that the lamp does not touch the ground and prevent from dried leaves and other debris.
4. The fixture is all aluminum and has no rust, weather resistance and wear resistance.

Trouble Shooting

1. Be sure you have power at the source and fixture be properly plugged into the power source.
2. Check that bulb is functioning properly. If not, replace the bulb.

Specifications

- Model: GL-005-1
- Input Voltage: 120VAC 60Hz
- Cord: 6ft
- Wattage Max. : 150W

Package Includes

- Portable Spike Light x 2
- Instruction Manual x 1

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.



Made in China