




MULEPRODUCTS.COM

OSCILLATING OUTDOOR WALL FAN

Model #52047


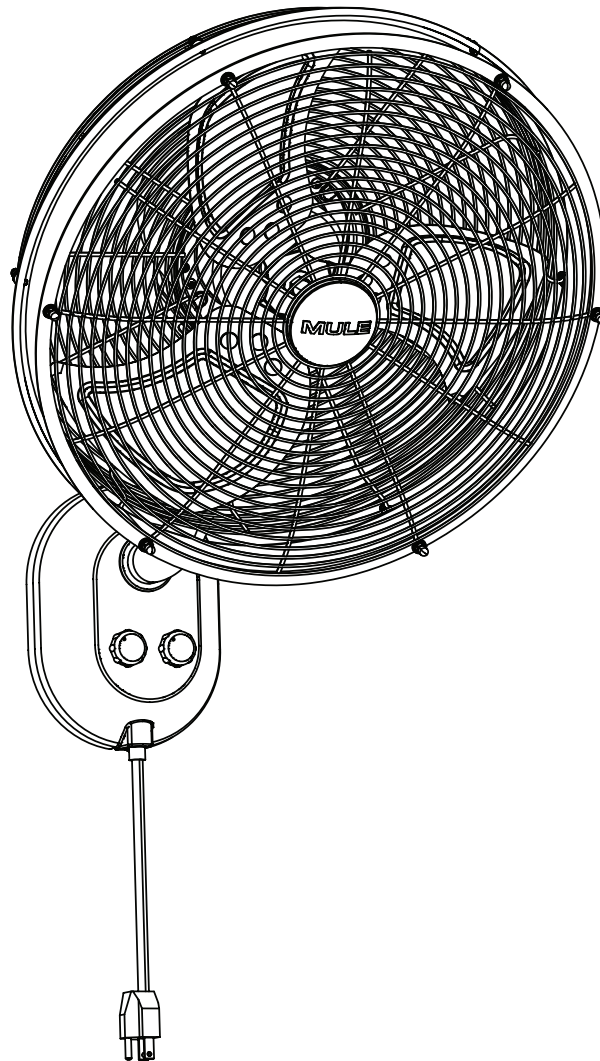


RATED FOR
OUTDOOR
LOCATIONS




Thank you for purchasing this **MULE PRODUCT**. We know you will enjoy the easy-to-follow instructions. If you have any questions, problems, or missing parts, please visit MULEPRODUCTS.COM or call customer service at 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday.

PACKAGE CONTENTS

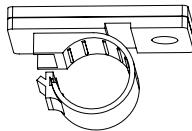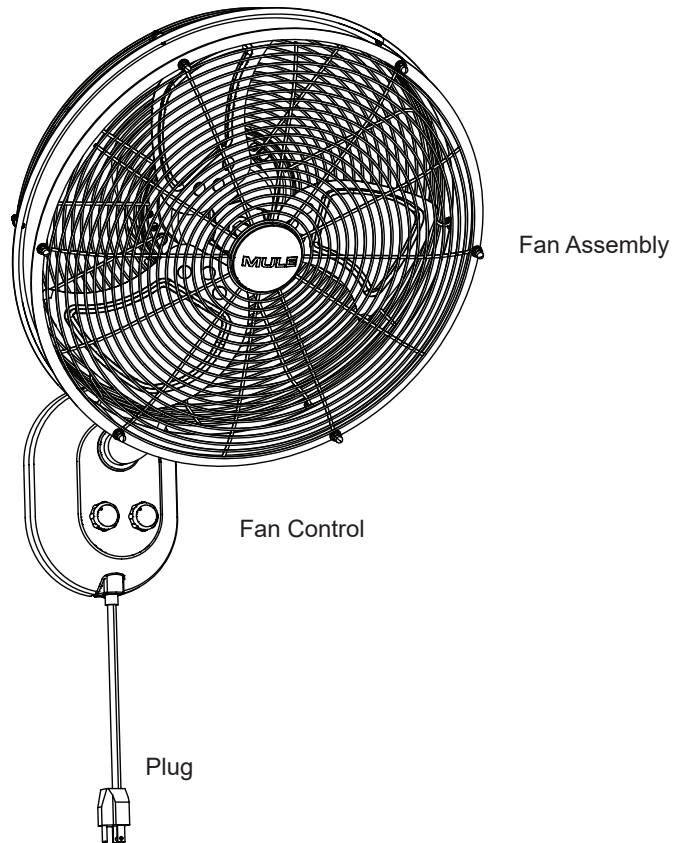

Cord Clip (x6)

 HARDWARE CONTENTS




Bracket Screw
(x2)
+2 extra


TOOLS REQUIRED

Tools required for assembly: Phillips screwdriver, level, drill, 1/8" drill bit, stud finder and pencil.


ASSEMBLY INSTRUCTIONS

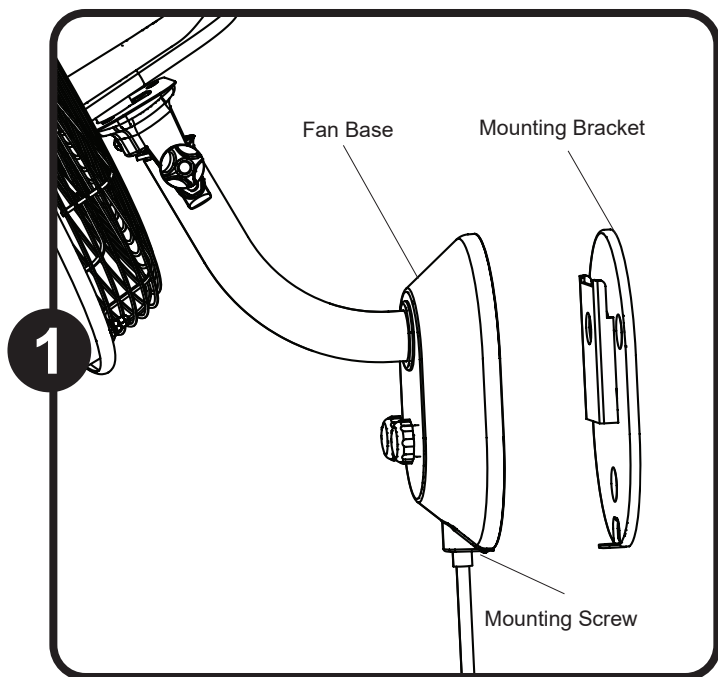


Remove the mounting screw from the underside of the fan base. Then remove the mounting bracket.

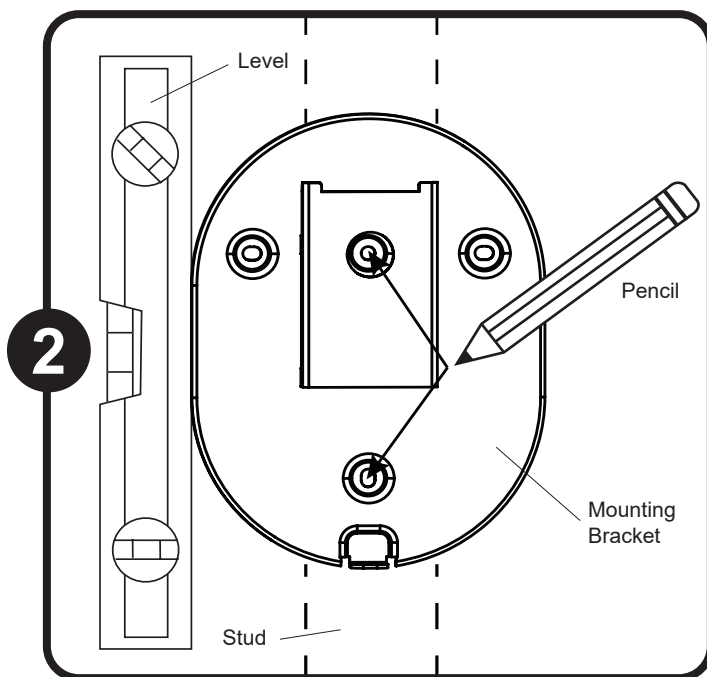

Use a stud finder (sold separately) to locate the stud to which the fan will be mounted. Determine the desired height of the mounting bracket. Hold the mounting bracket against the wall and use a level (sold separately) to ensure the mounting bracket is level with the horizon. Then, use a pencil and mark the center of the two holes in the center of the mounting bracket. **Note:** When determining the location of the fan, ensure proximity to 120 V grounded outlet. The wall fan's power cord is 9 feet in length.

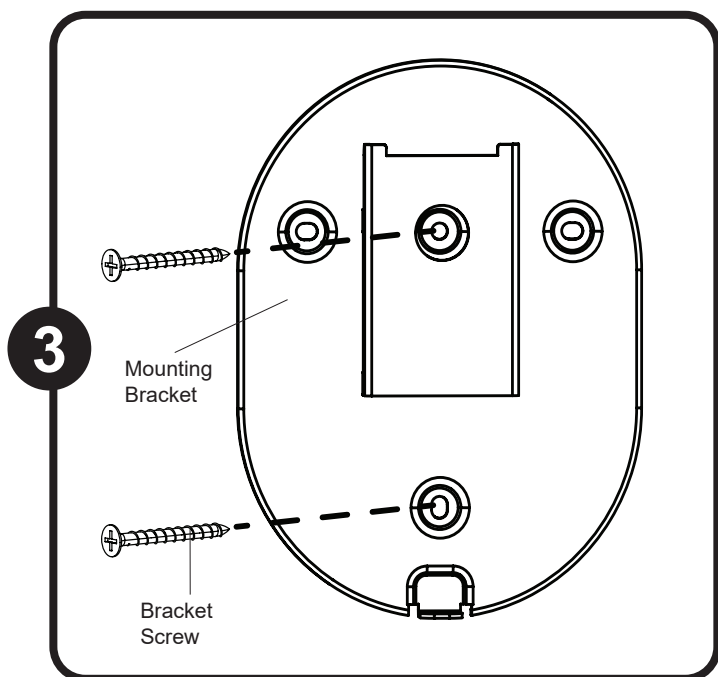


Use a Phillips screwdriver to install the two bracket screws through the mounting bracket, drywall (if applicable), and into the stud. **Note:** Drilling pilot holes can make screw installation easier. If desired, use a drill with an 1/8" diameter drill bit (or smaller) to drill the pilot holes.

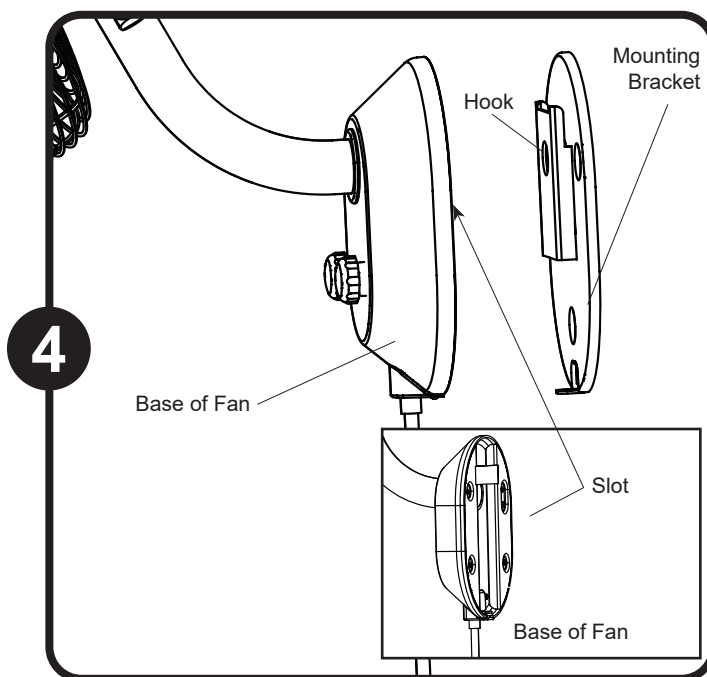


Hang the slot in the base of the fan on the hook preassembled to the mounting bracket.


ASSEMBLY INSTRUCTIONS

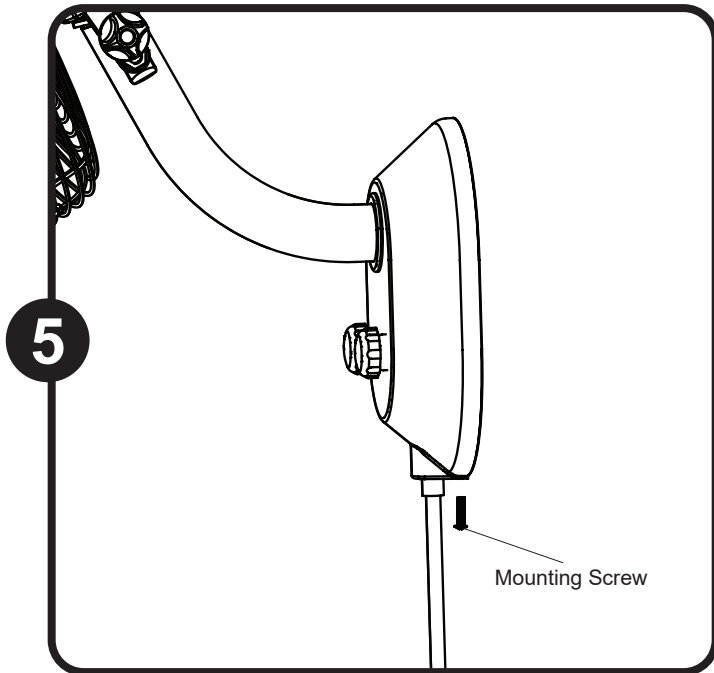


Replace the previously removed mounting screw into the fan base to secure the base to the mounting bracket.

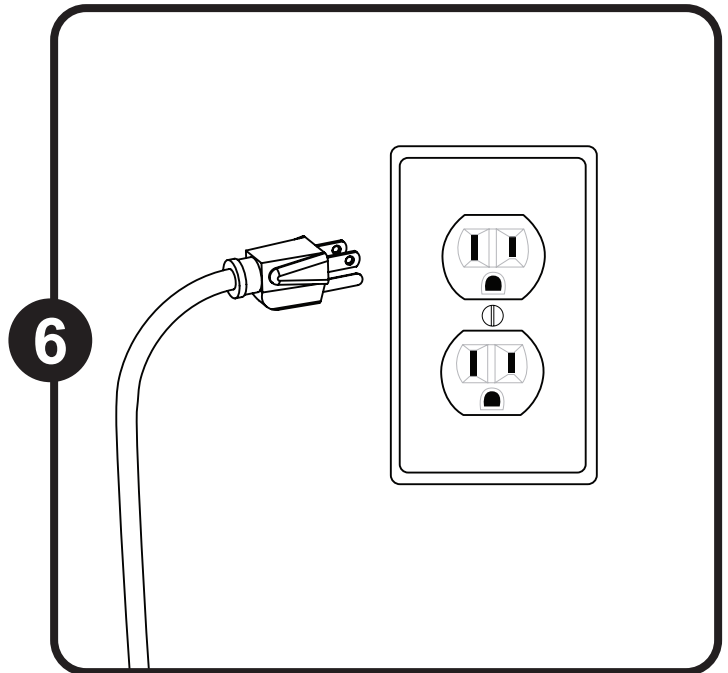

Plug the fan's power cord into a 120 V grounded outlet.

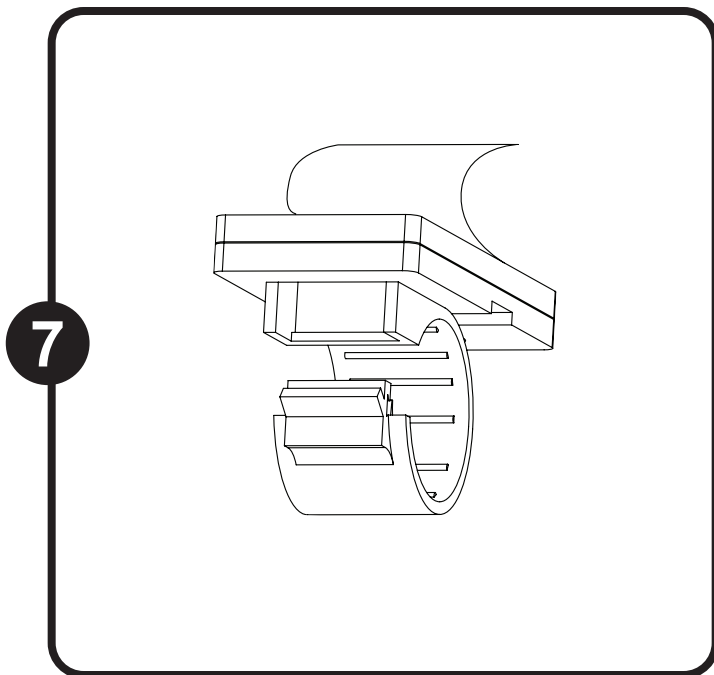


Use cord clips to secure the fan's power cord to wall in a path toward the power outlet. Peel the backing off of the double-sided tape preassembled to back side of each cord clip.

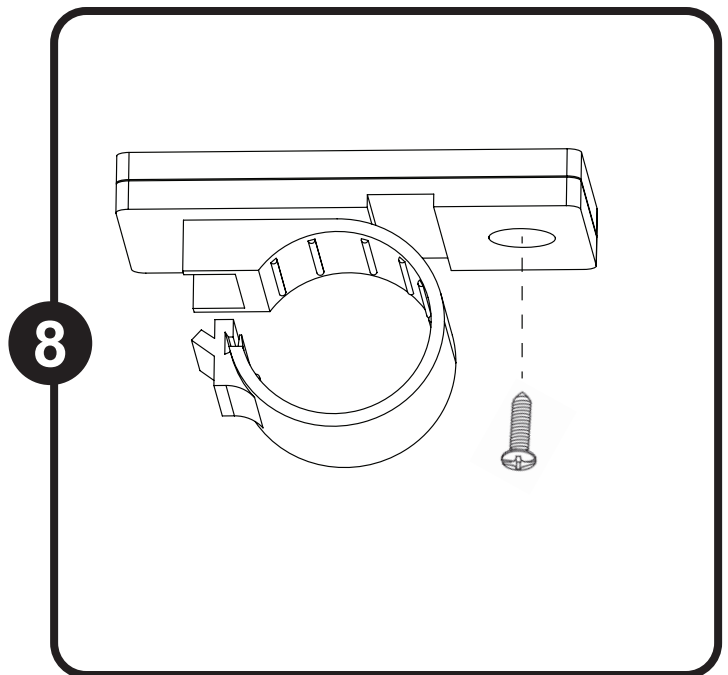


(Optional) Cord clips have a round hole to accommodate a wood screw (sold separately) as an option to the taping method.

ASSEMBLY INSTRUCTIONS

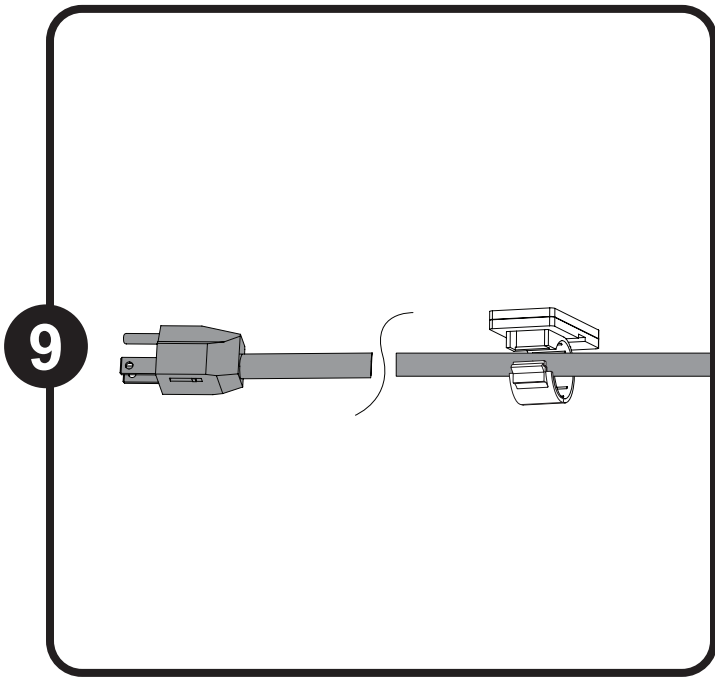

Secure each cord clip to the ceiling. Then insert the cord into each clip and press the clip closed to secure the cord. Note: Leave adequate slack near the fan to allow fan to swivel and/or tilt.


OPERATING INSTRUCTIONS

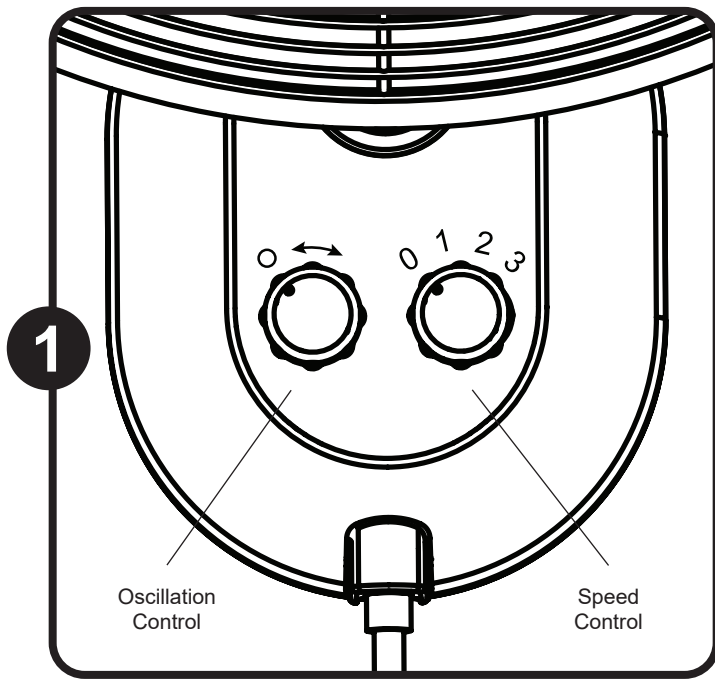

Use the two knobs on the front of fan base to control the fan.


Oscillation Control - Turns oscillation off and on.

Speed Control - Turn knob to 1 for Low Speed, 2 for Medium Speed, or 3 for High Speed.

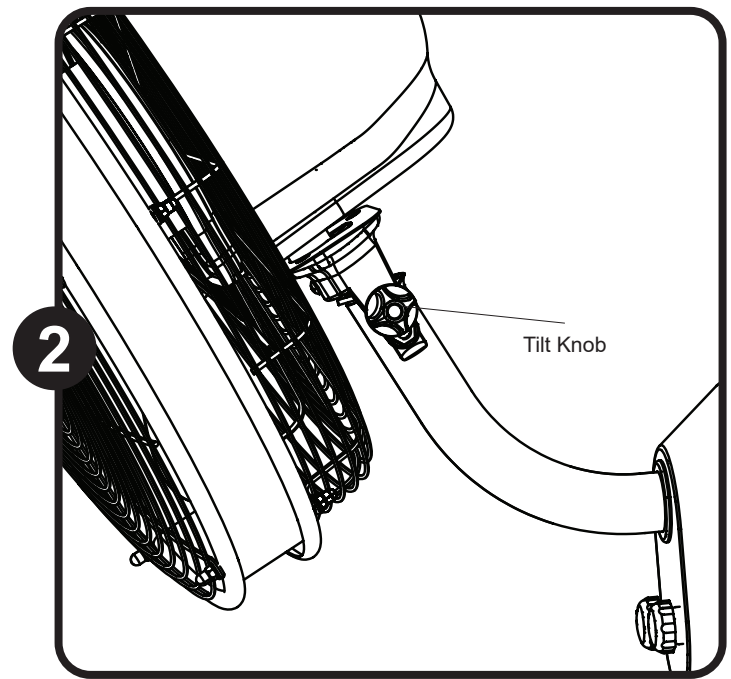

Use the tilt knob on side of fan to adjust airflow up or down. Loosen tilt knob by turning counterclockwise, adjust fan, and retighten tilt knob.

MAINTENANCE

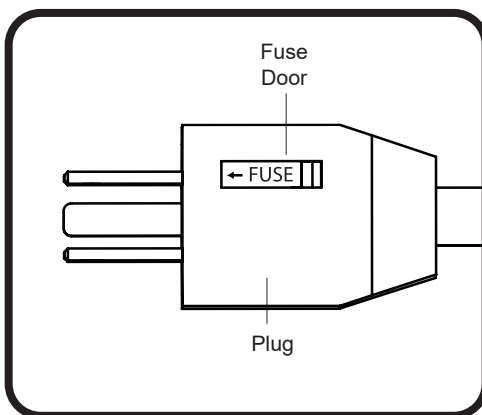

The plug is a safety feature, it contains a safety device (fuse), if your replaceable fuse (5 Amp, 125 Volt) blows, please follow below instructions to replace the fuse:

- Unplug your fan, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Slide open the fuse cover at the side of the plug by using your thumb or a flat screwdriver.
- Remove the fuse carefully.
- Put in a new 5 Amp 125 Volt fuse and make sure it is secured in place.
- Slide back the fuse cover completely.
- Risk of fire. Do not replace attached plug. Contains a safety device (fuse) that should not be removed. Discard product if the attached plug is damaged.

TROUBLESHOOTING

- Fan does not work - A) Ensure the main power cord is plugged into a 120V receptable.
B) Replace fuse in plug (see MAINTENANCE, page 6).

SAFETY INFORMATION

CAUTION:

- Read and follow all instructions before operating fan.
- **RATED FOR WET LOCATIONS.** This fan is intended for indoor, damp, or outdoor use.
- The weight of the fan is 13.86 lbs.
- Do not use fan if any part is damaged or missing.
- This garage fan is rated for indoor and damp locations.
- Connect to properly grounded outlets only.
- Do not insert fingers or any other objects through the grill guard when fan is in operation.
- Disconnect the fan when moving from one location to another.
- Disconnect the fan when removing guards for cleaning.
- Do not use fan near windows. Rain and water may create an electrical hazard.
- Do not alter the fan's assembly.

WARNING:

- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

WARRANTY

The manufacturer warrants all of its utility fans against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover utility fans becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.

CUSTOMER SERVICE

To obtain service, please contact Customer Service: 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday.

To order additional Mule products, visit [MULEPRODUCTS.COM](https://muleproducts.com). Follow us on social media at:

-  [FACEBOOK.COM/GETTHEMULE](https://facebook.com/getthemule)
-  [YOUTUBE.COM/@GETTHEMULE](https://youtube.com/@getthemule)
-  [TIKTOK.COM/@GETTHEMULE](https://tiktok.com/@getthemule)
-  [INSTAGRAM.COM/GETTHEMULE](https://instagram.com/getthemule)
-  [TWITTER.COM/GETTHEMULE](https://twitter.com/getthemule)
-  [PINTEREST.COM/GETTHEMULE](https://pinterest.com/getthemule)

