


ASSEMBLY INSTRUCTIONS

DINING CHAIR

ASSEMBLY REQUIREMENTS:

1-Person
Assembly

20 Minutes
Assembly Time Per Chair
(Approximate)

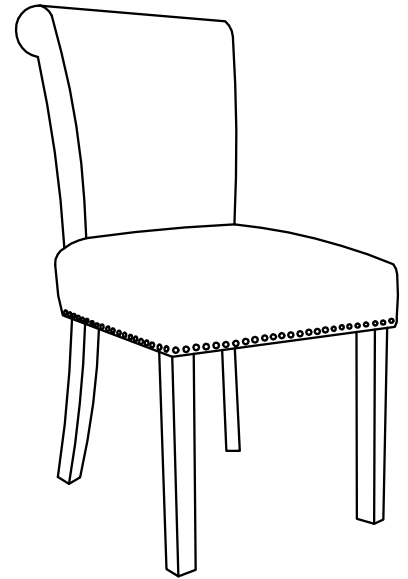

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

 



1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


Hardware

A M8x75mm  Hex Bolt x8	B Ø22x1.5mm  Flat Washer x8	C M8  Spring Washer x8	D M8  Allen Key x1
--	---	--	---

Parts

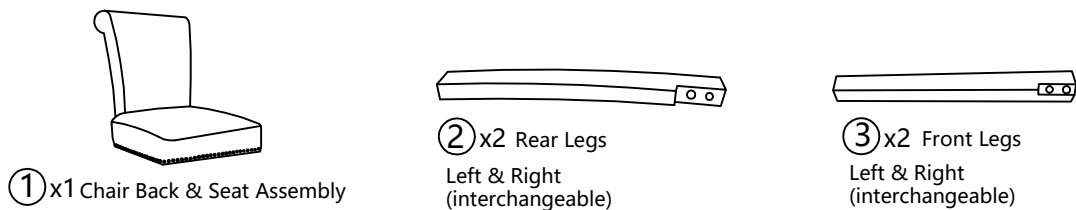


STEP 1

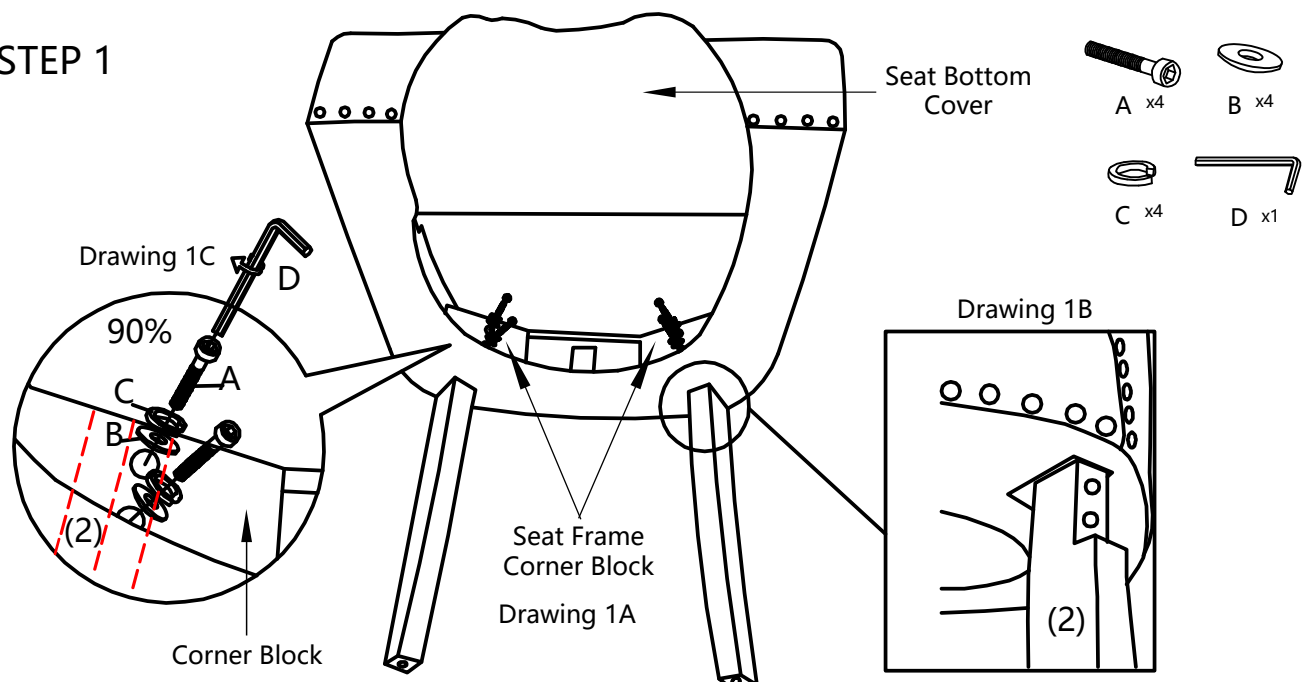


- Position the Chair Back & Seat Assembly (1) to lie flat on the Chair Back on a material that does not scratch or damage the exterior of the Assembly. Lift the Seat Bottom Cover (see Drawing 1A).
- Insert Rear Leg (2) - note the direction of the bolt holes on (2) - through the hole at the bottom of the seat (see Drawing 1B) to fit behind the Corner Block of the Seat Frame.
- Align the bolt holes on Rear Leg (2) to the bolt holes on the Corner Block.
- Insert Hex Bolt (A) fitted with Spring Washer (C) and Flat Washer (B) into the upper bolt hole on the Corner Block to screw into the upper bolt hole on Rear Leg (2). Use Allen Key (D) to loosely fasten this Hex Bolt.
- Insert the second Hex Bolt fitted with Spring Washer (C) and Flat Washer (B) into the lower bolt hole to screw into the lower bolt hole on Rear Leg (2). Use Allen Key to tighten both Hex Bolts until just snug (about 90% tight - will tighten completely in STEP 4).
- Install the second Rear Leg using the above procedures.

STEP 2

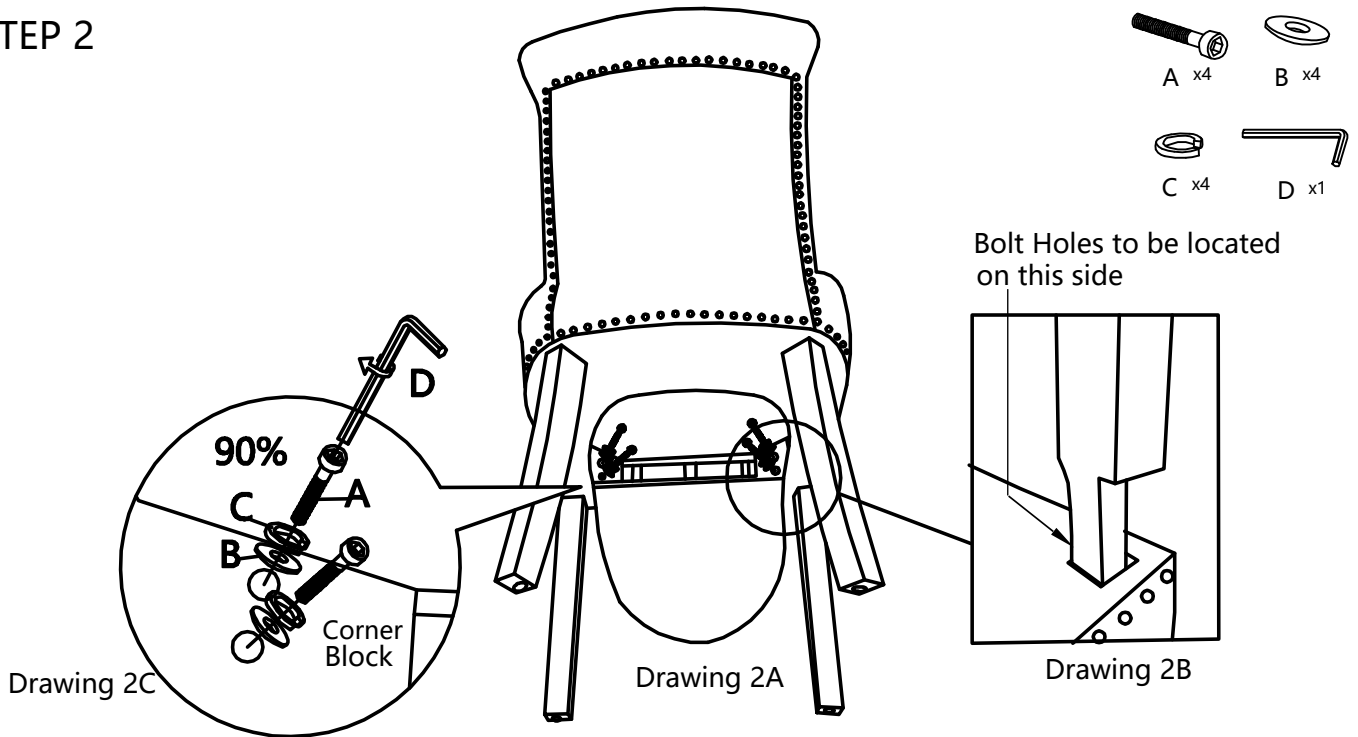


- Position the Chair Back & Seat Assembly (1) with the Chair Back and Seat Bottom facing up as in Drawing 2A on a material that does not scratch or damage the exterior of the Assembly.
- Insert Front Leg (3) - note the direction of the bolt holes on (3) - through the hole at the bottom of the seat (see Drawing 2B) to fit behind the Corner Block of the Seat Frame.
- Align the bolt holes on Front Leg (3) to the bolt holes on the Corner Block.
- Insert Hex Bolt (A) fitted with Spring Washer (C) and Flat Washer (B) into the upper bolt hole on the Corner Block to screw into the upper bolt hole on Front Leg (3). Use Allen Key (D) to loosely fasten this Hex Bolt.
- Insert the second Hex Bolt fitted with Spring Washer (C) and Flat Washer (B) into the lower bolt hole to screw into the lower bolt hole on Front Leg (3). Use Allen Key to tighten both Hex Bolts until just snug (about 90% tight - will tighten completely in STEP 4).
- Install the second Front Leg using the above procedures.

STEP 3

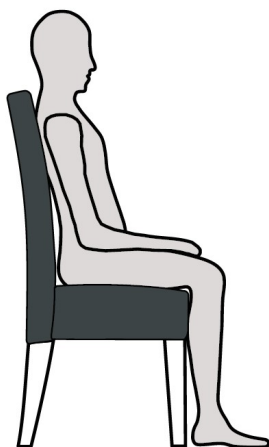


Sit on the chair to balance the chair squarely.

STEP 4

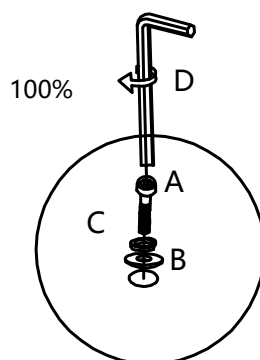

Tighten all the bolts completely to 100%.

Assembly of the chair is complete.

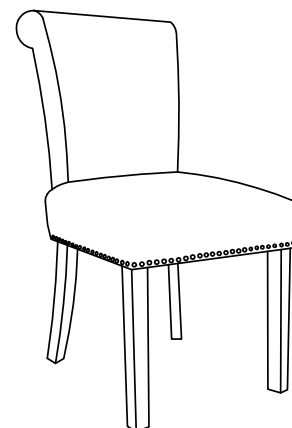

Note: As the chair gets acclimated to its new environment, please check and tighten all the bolts after a few days.