 




INSTALLATION

Product Manual

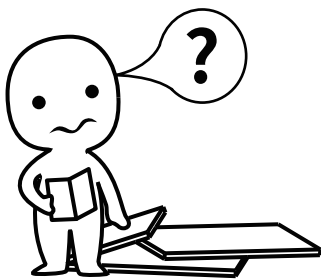


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

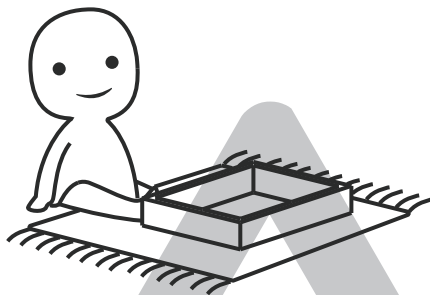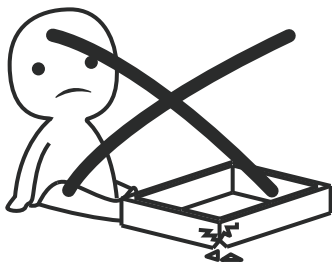



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

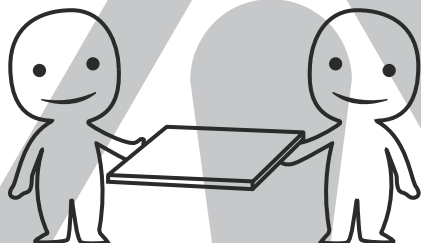

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

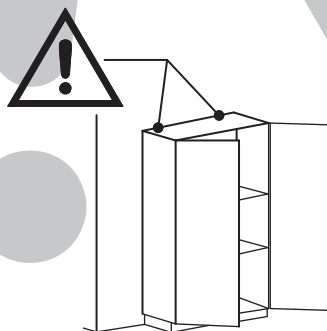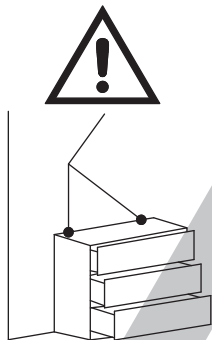

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

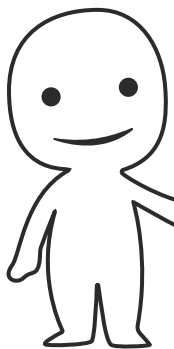


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 48

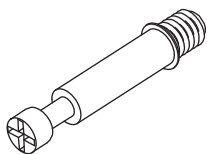


CRA0635A

B x 48




CRB1595A

 C x 4

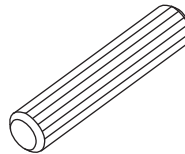


CRF0630A

 D x 60




CRD3514A

 E x 12

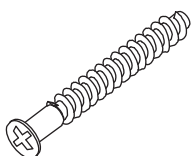


CRC0540A

 F x 8

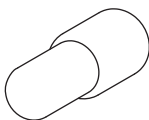


G x 4

 


DGA861C

 I x 3

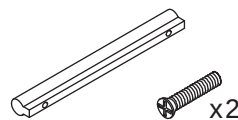


CRE0418A


 
K x 4



CRD3512A

   L x 8



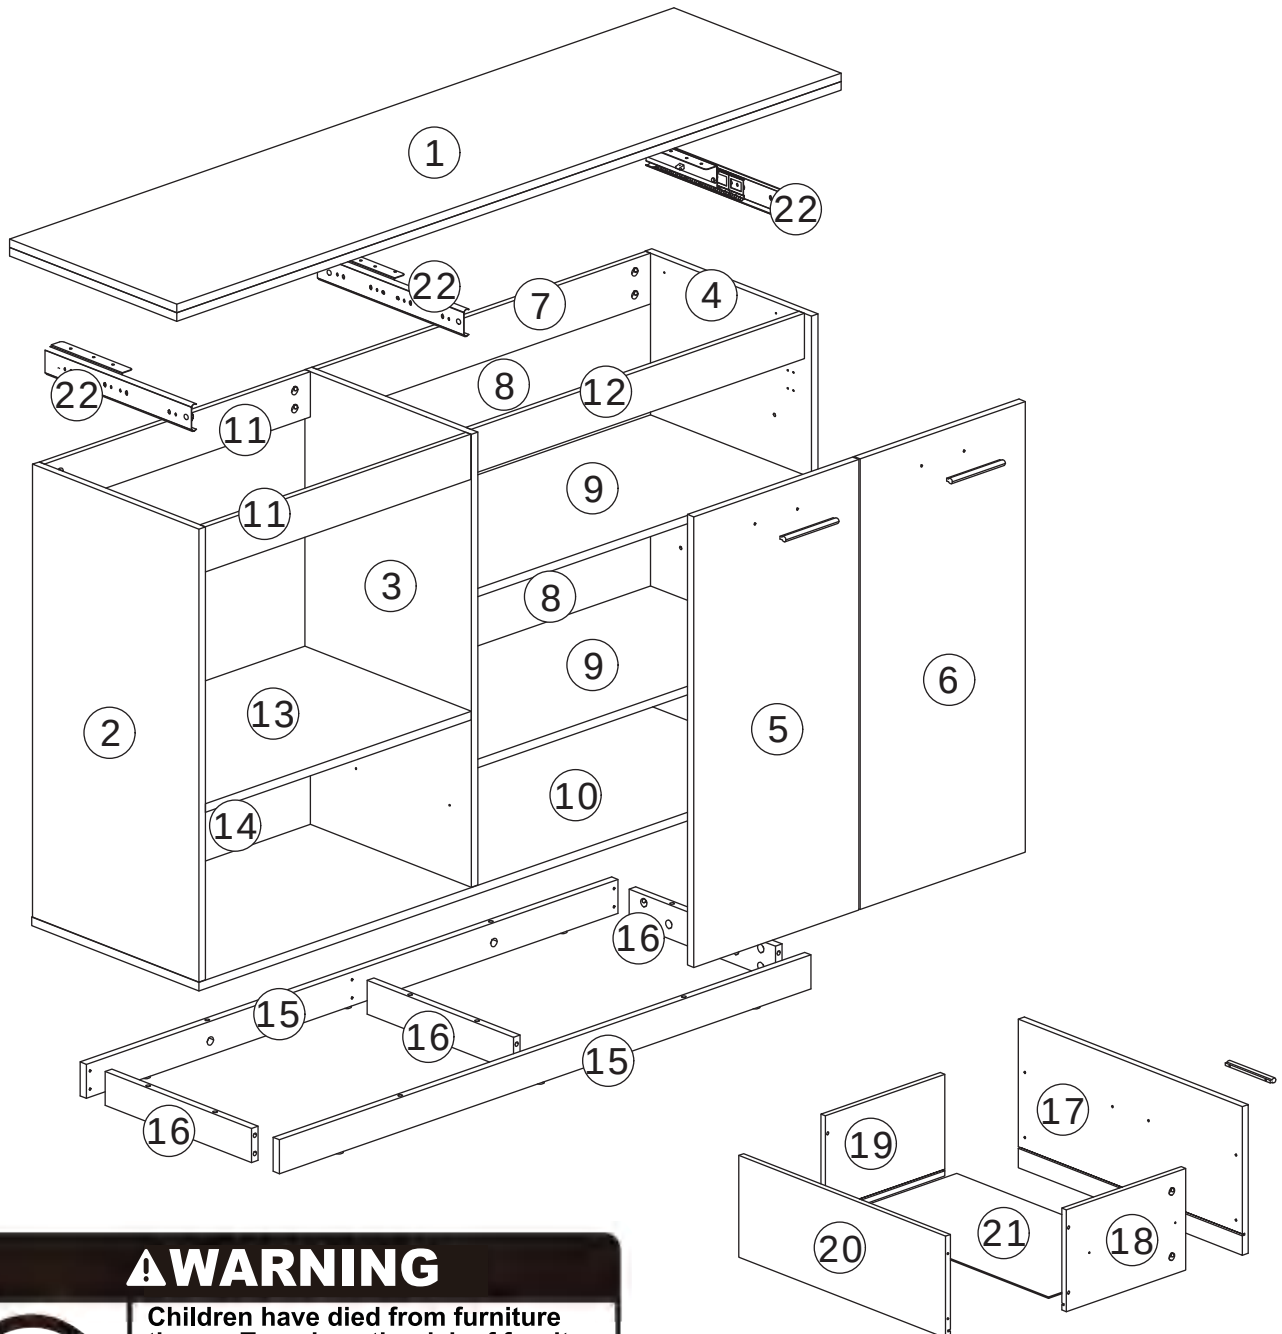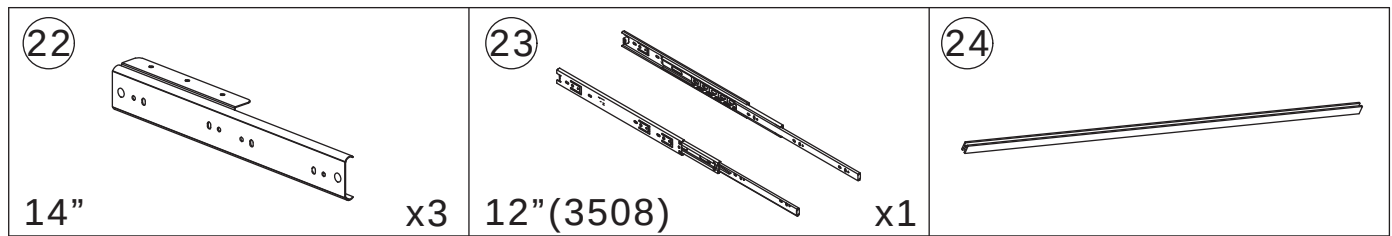


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

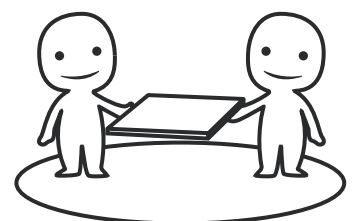


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

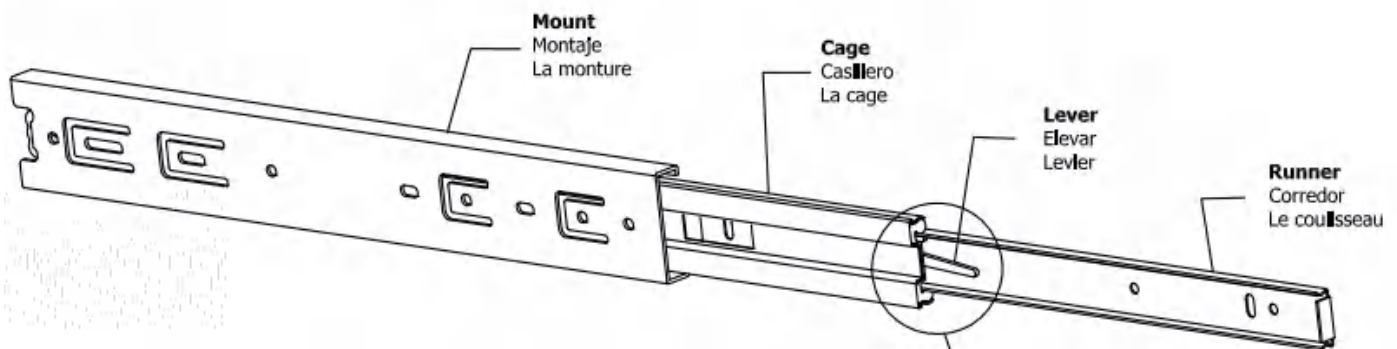

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

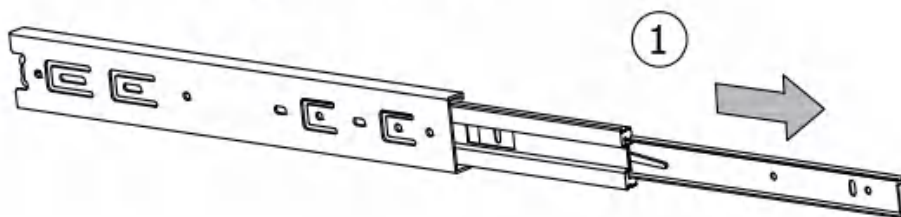

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

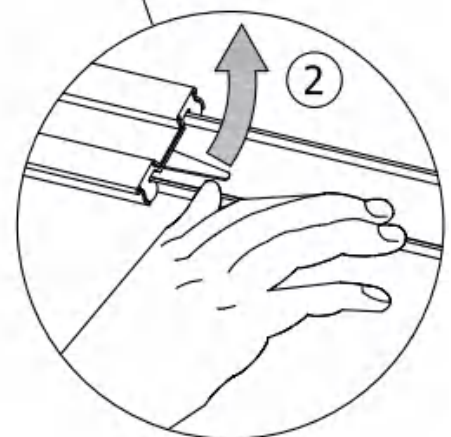

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur




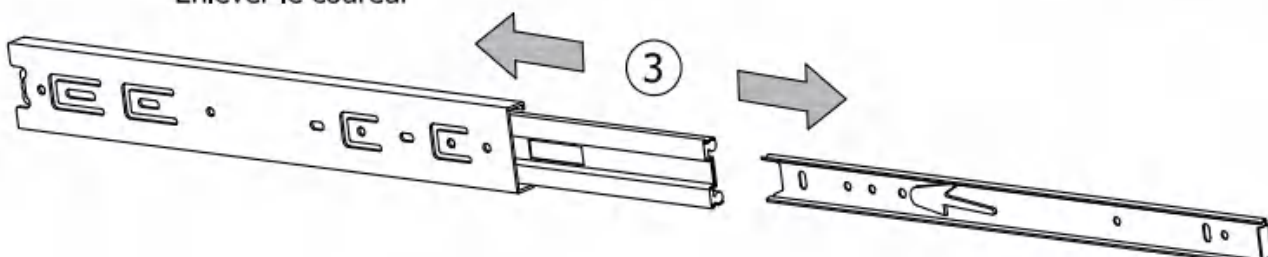


1

D x 4




    CRD3514A


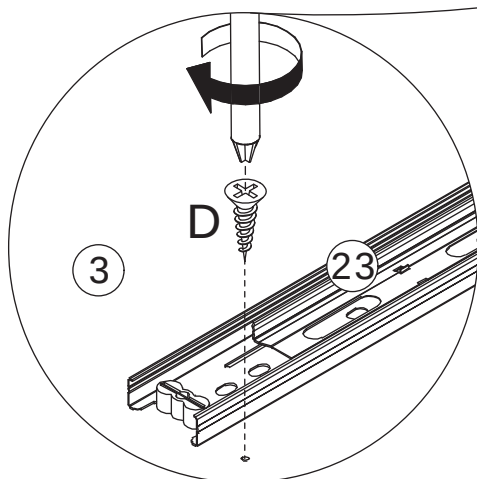
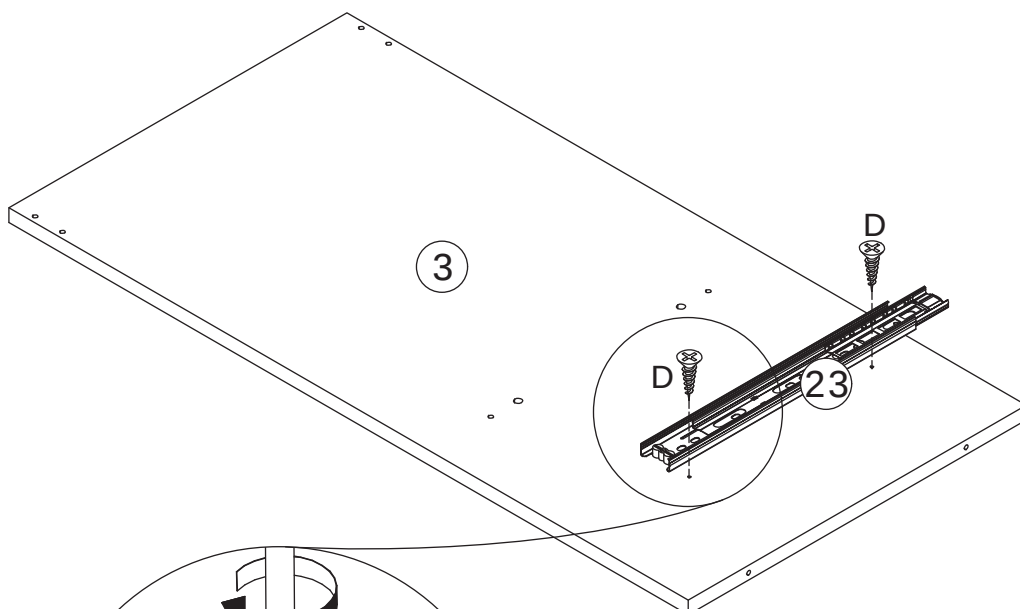
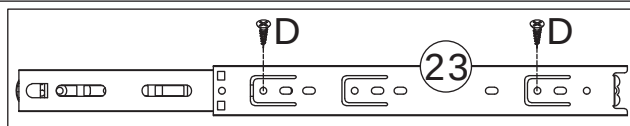



Separate glides into two parts at first.


 
Fix slide rail 23 to plate 2 and 3 respectively using screw(D) as shown.

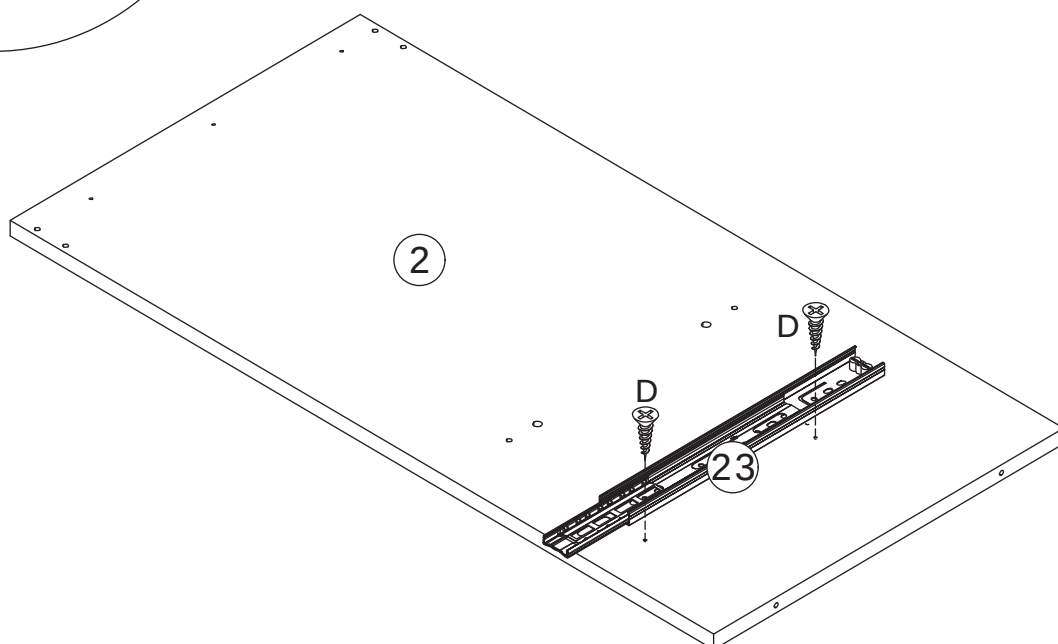





2

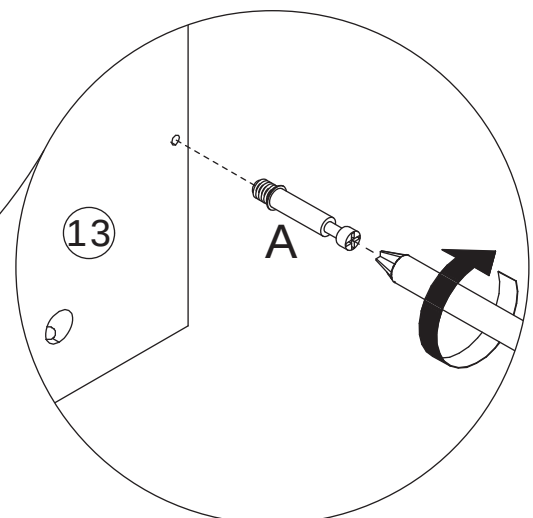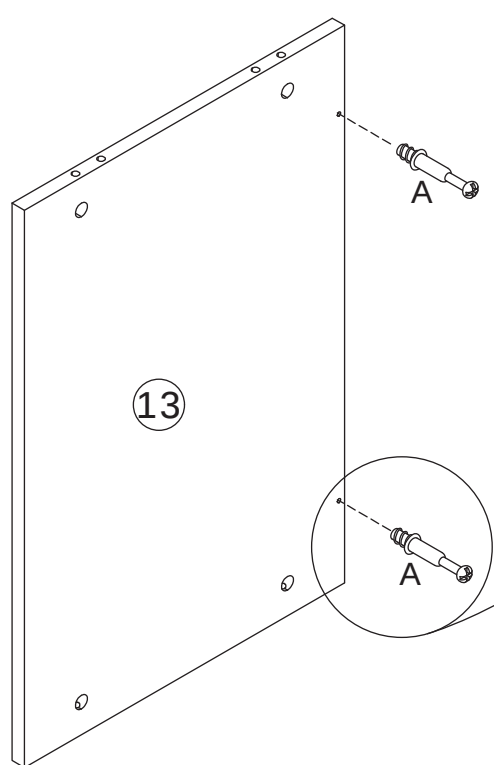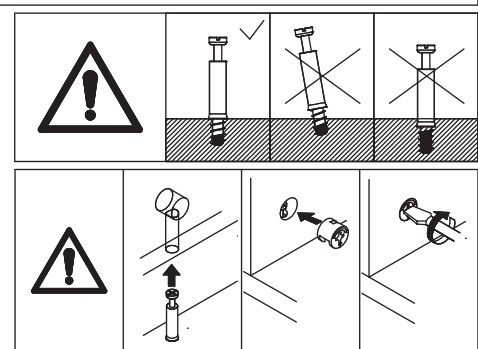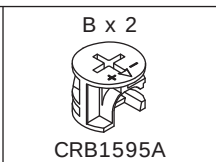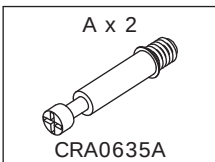     

 
 
Insert quickfit screw(A) into plate 13 as shown.
Connect plate 13 with 14, put cam lock(B) into holes in plate 14 and turn clockwise to tighten as shown.

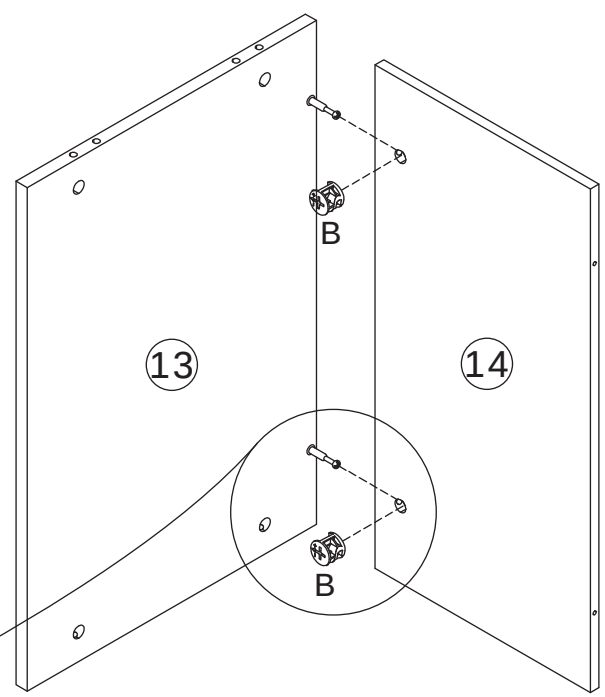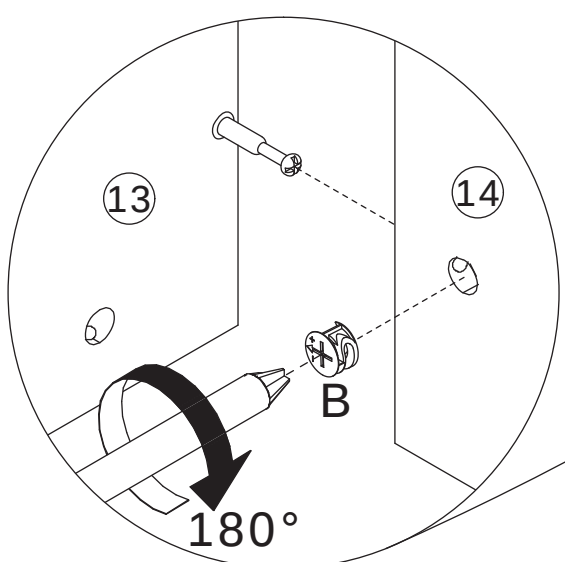

3

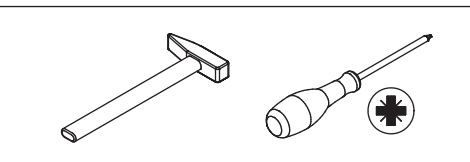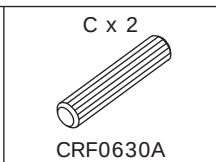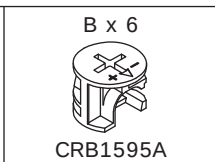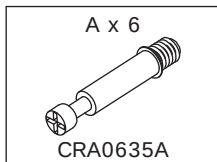    



 
 
Insert quickfit screw(A) into plate 2 as shown.

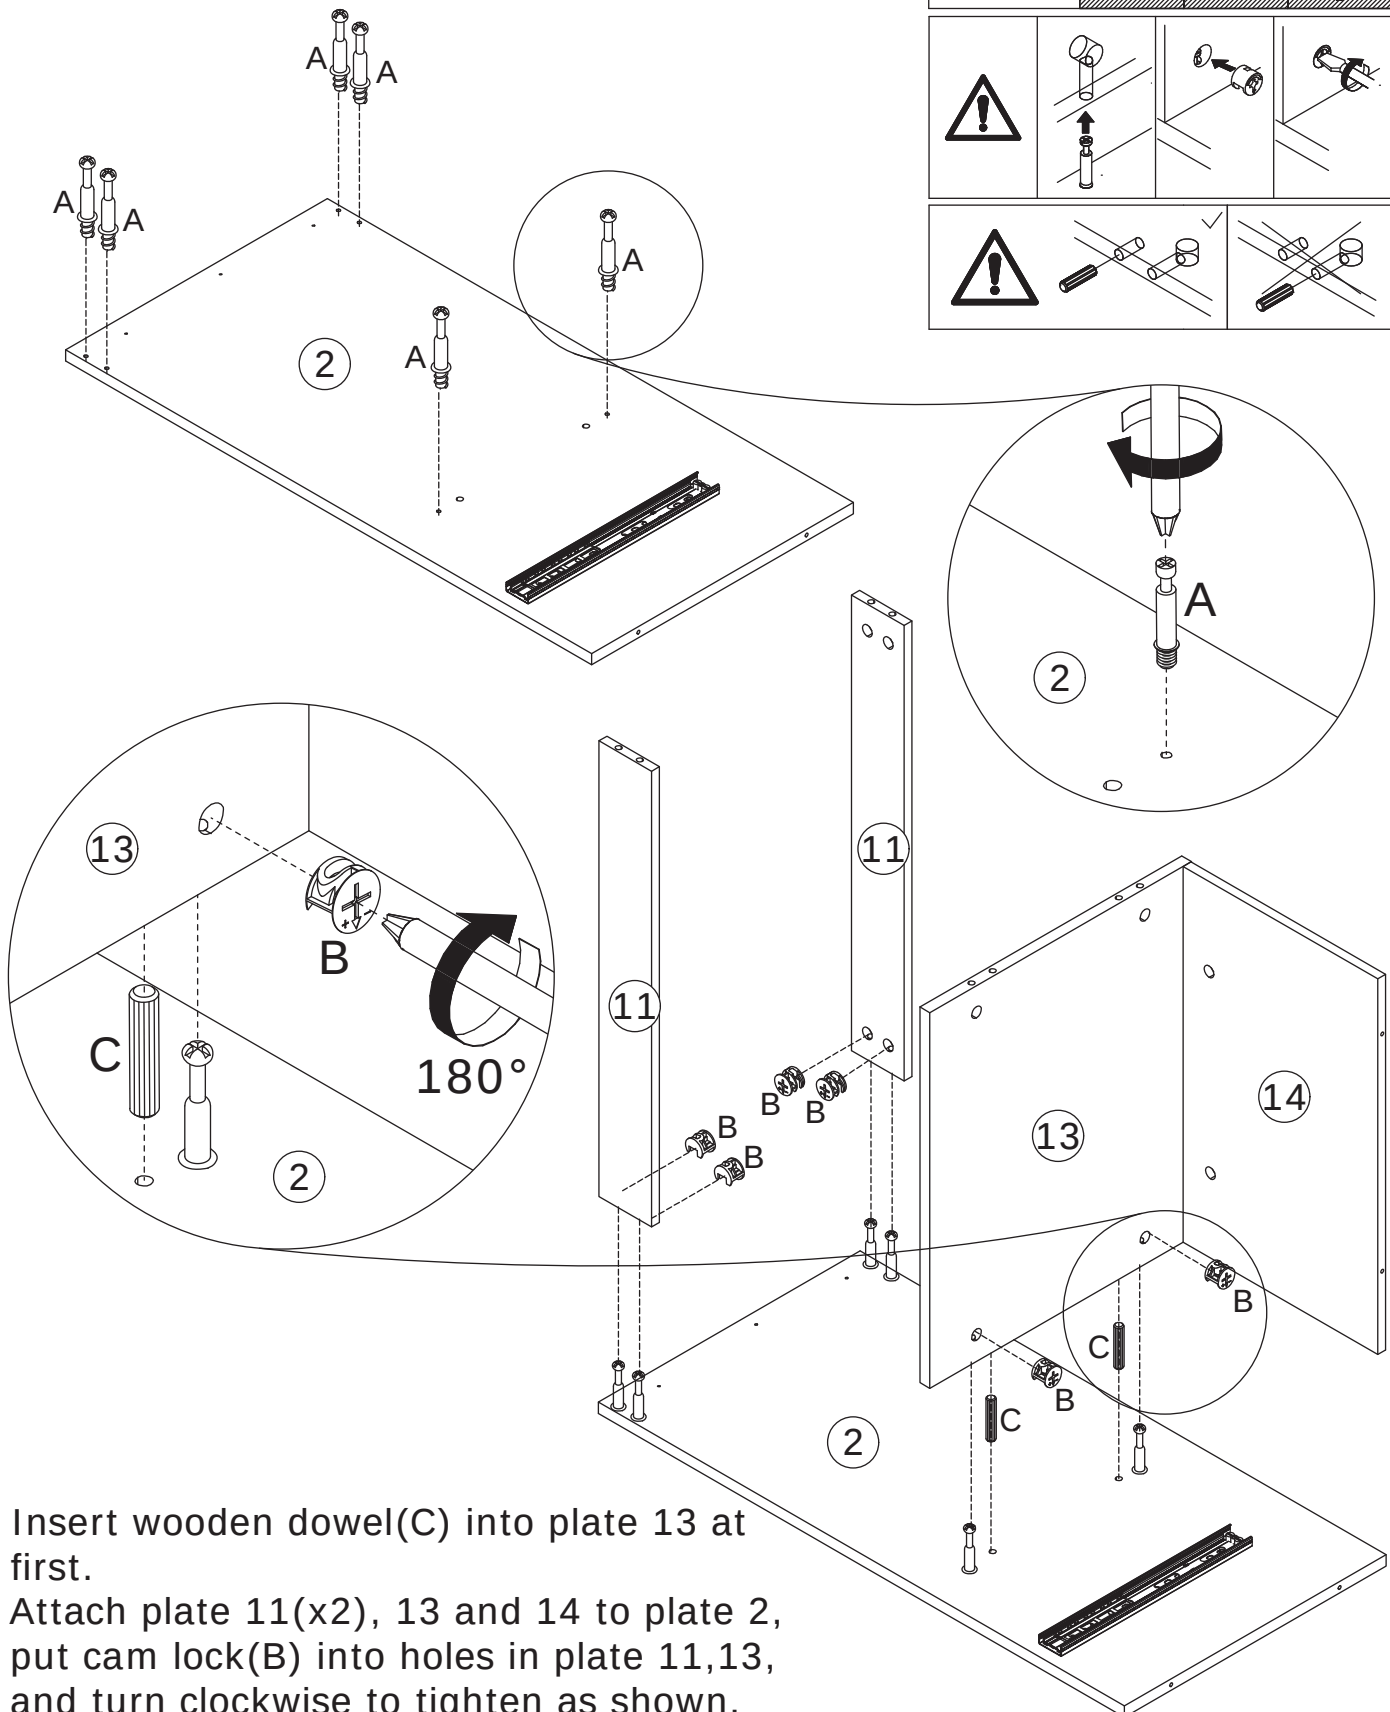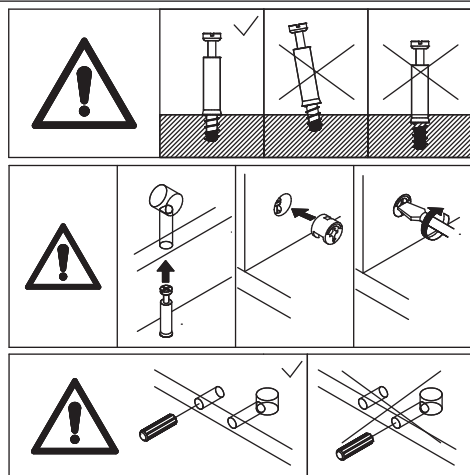



Insert wooden dowel(C) into plate 13 at first.

Attach plate 11(x2), 13 and 14 to plate 2, put cam lock(B) into holes in plate 11,13, and turn clockwise to tighten as shown.

 
 
 
 
4

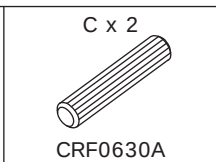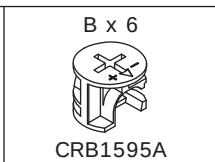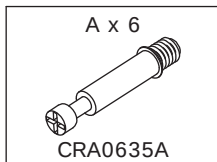

 
 
Insert quickfit screw(A) into plate 3 as shown.
Insert wooden dowel(C) into plate 13 at first.
Cover plate 3 to the component and put cam lock(B) into holes in plate 11,13 and turn clockwise to tighten as shown.

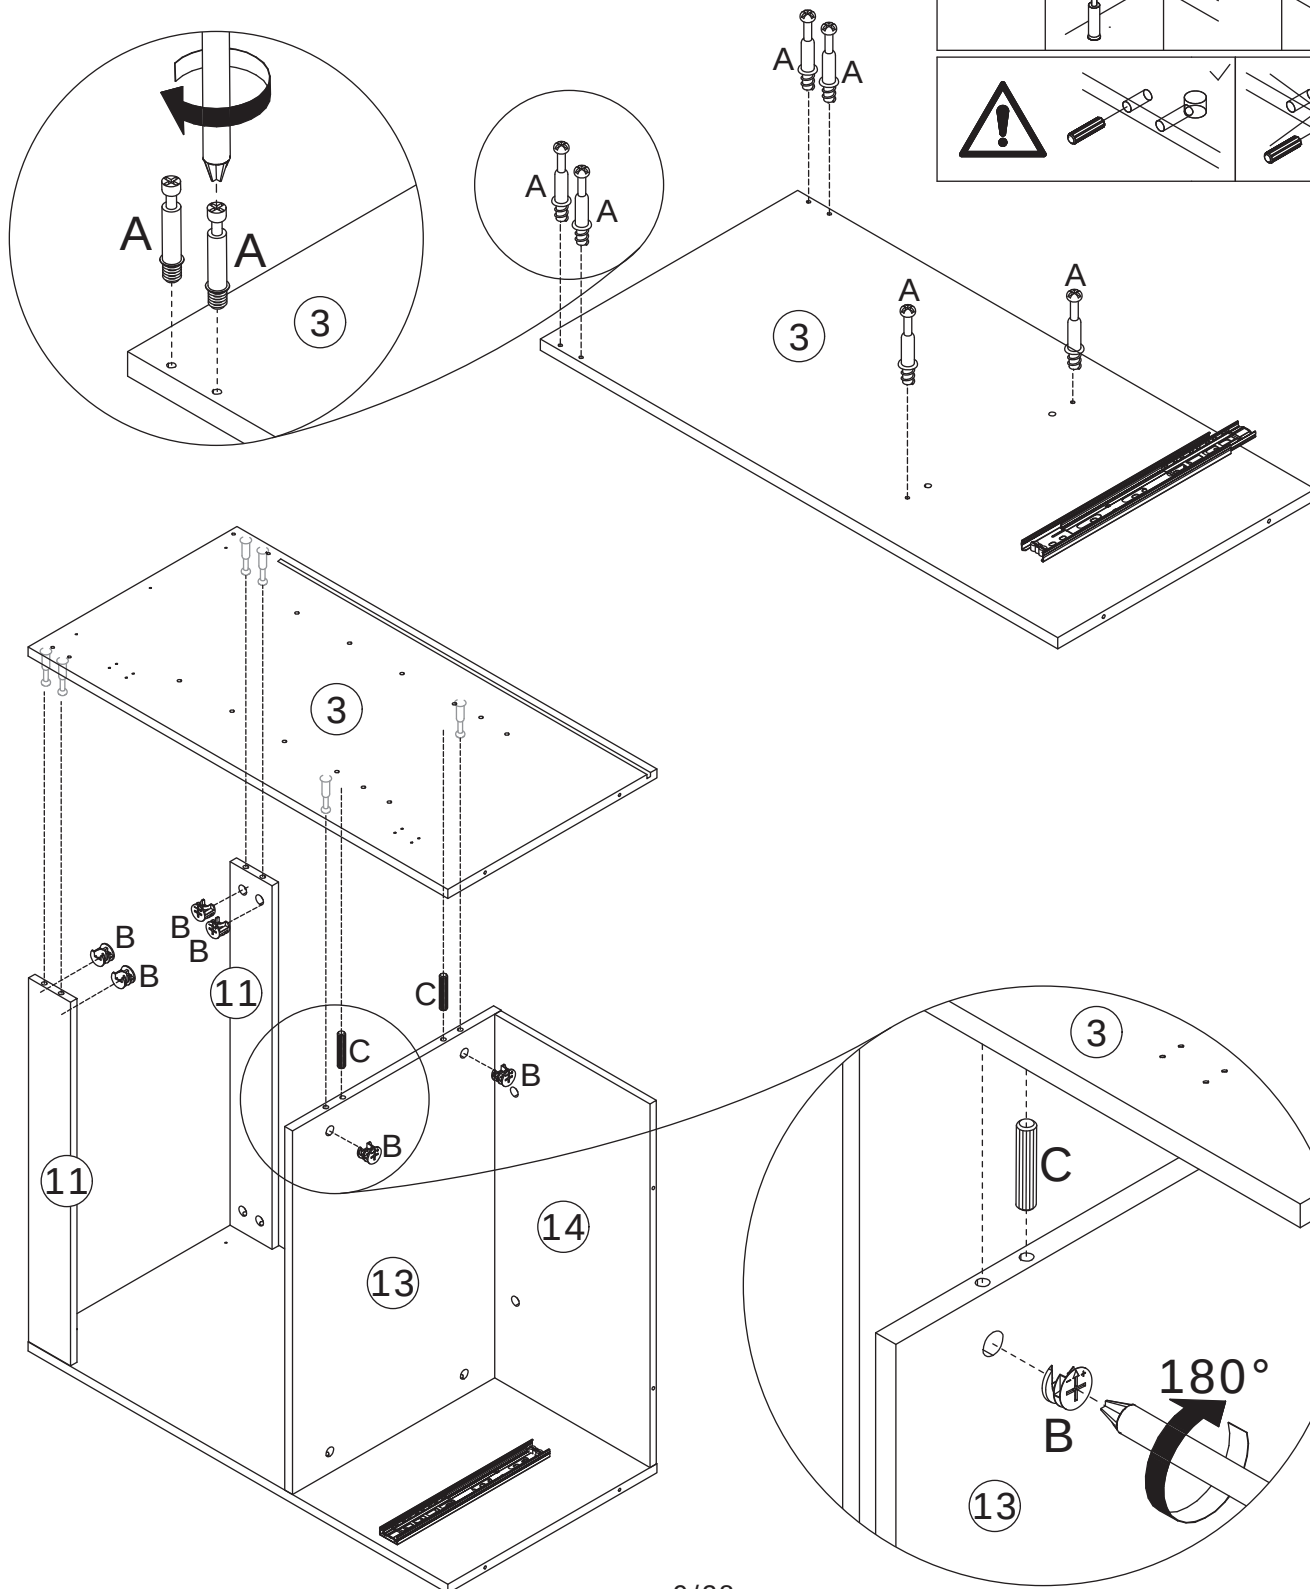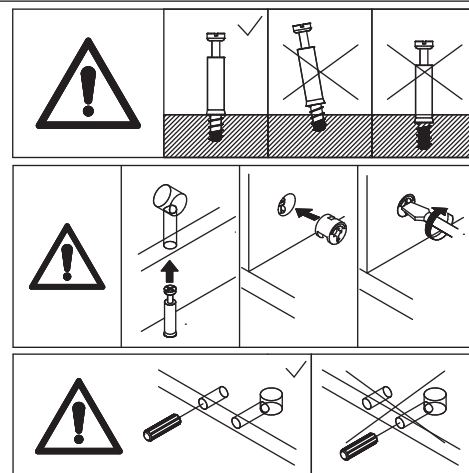

5

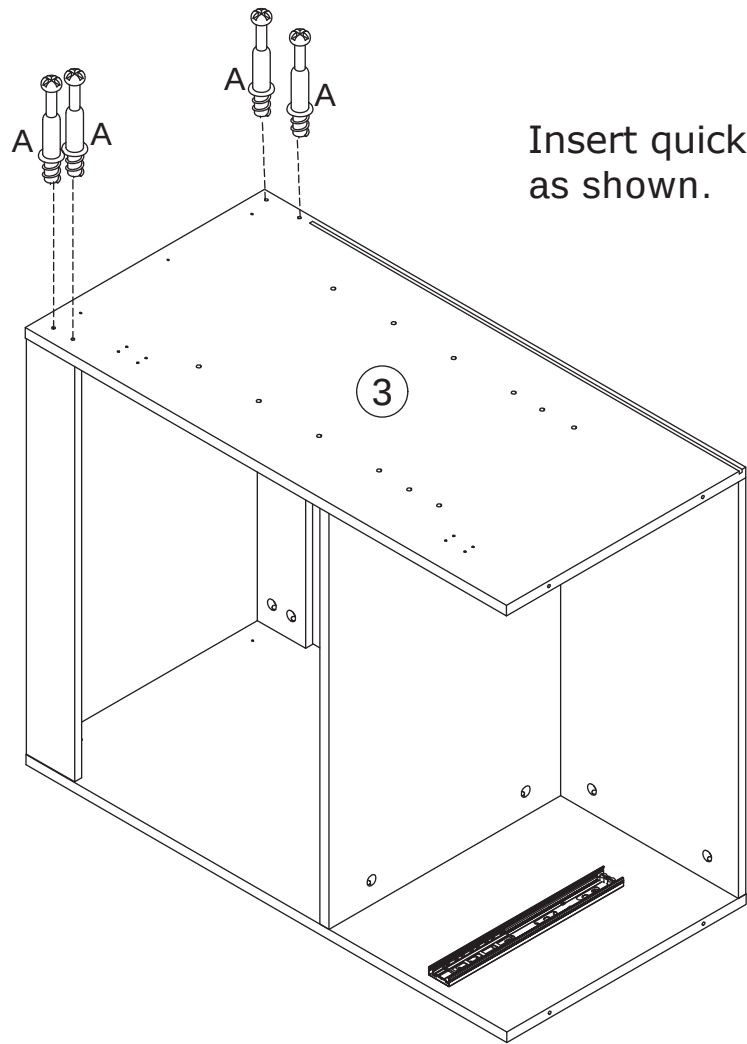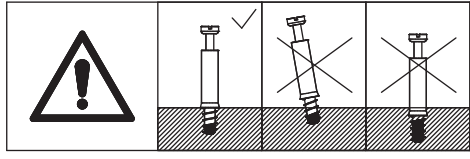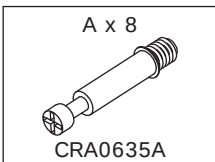    


  Insert quickfit screw(A) into plate 3 and 4 as shown.

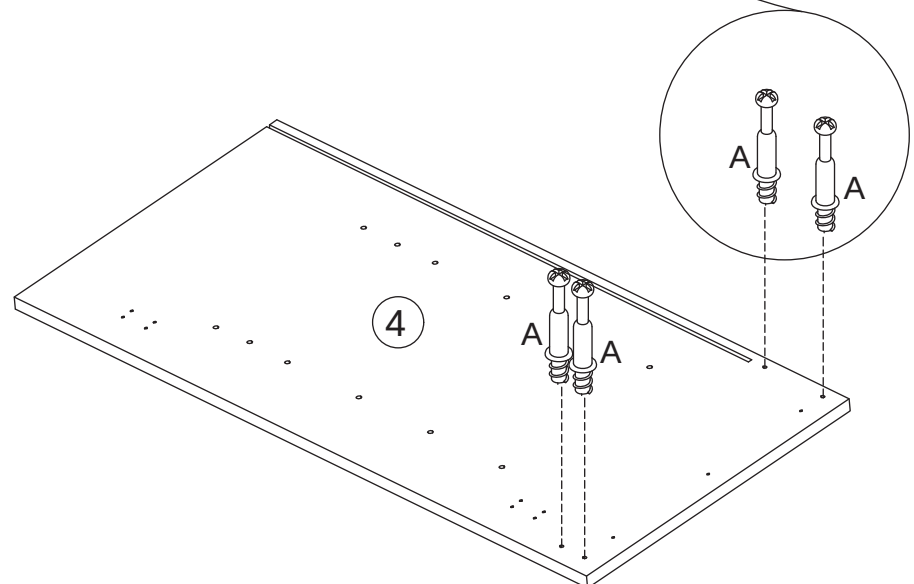
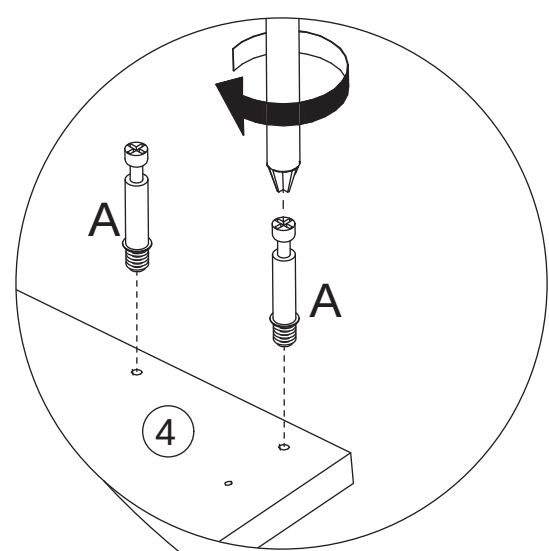


6

 B x 8
CRB1595A




 
 
Attach plate 7 and 12 to plate 3 and 4, put cam lock(B) into holes in plate 7,12 and turn clockwise to tighten as shown.

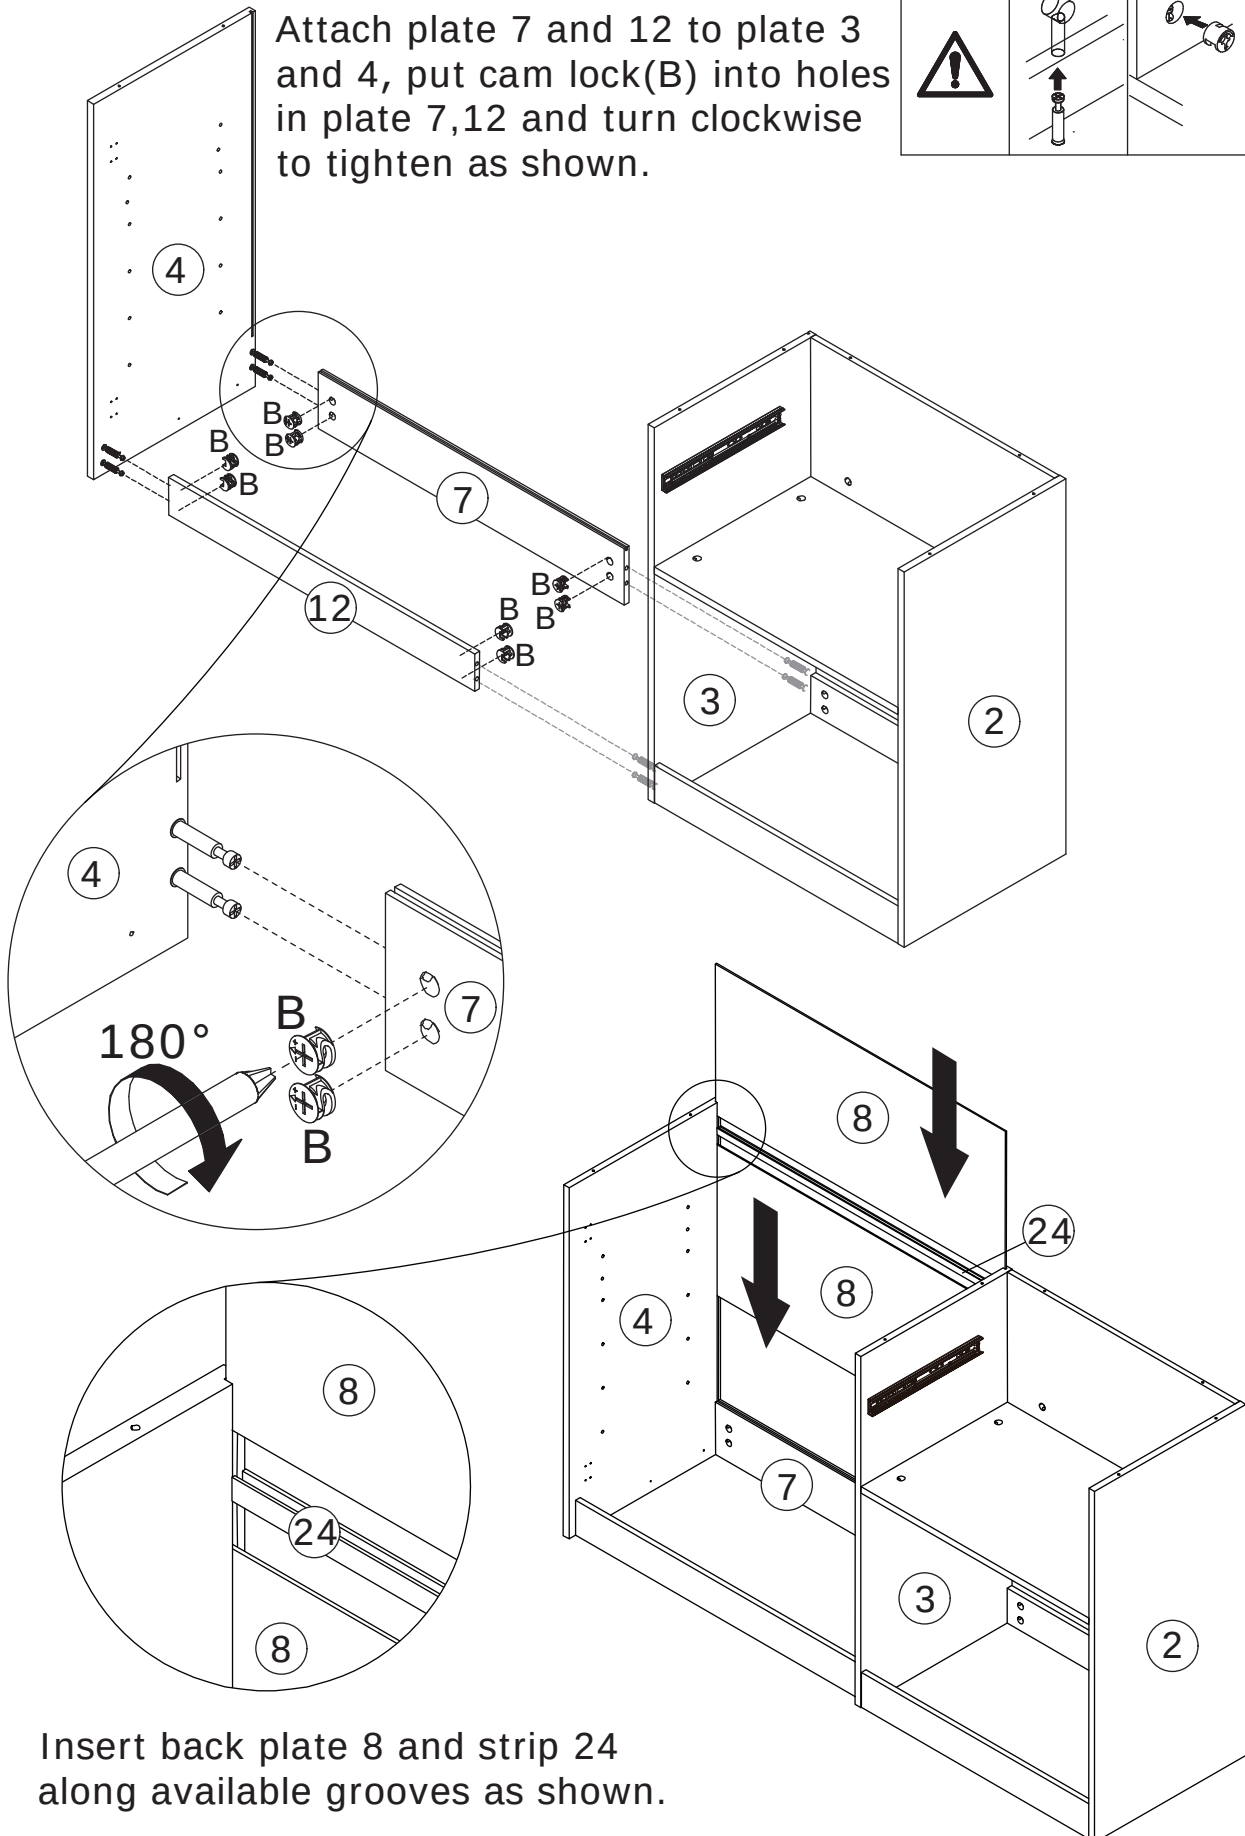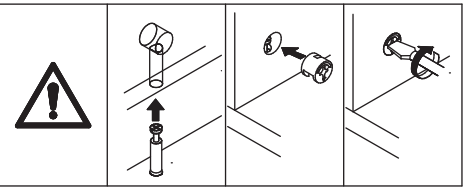

Insert back plate 8 and strip 24 along available grooves as shown.


7

   E x 8
CRC0540A

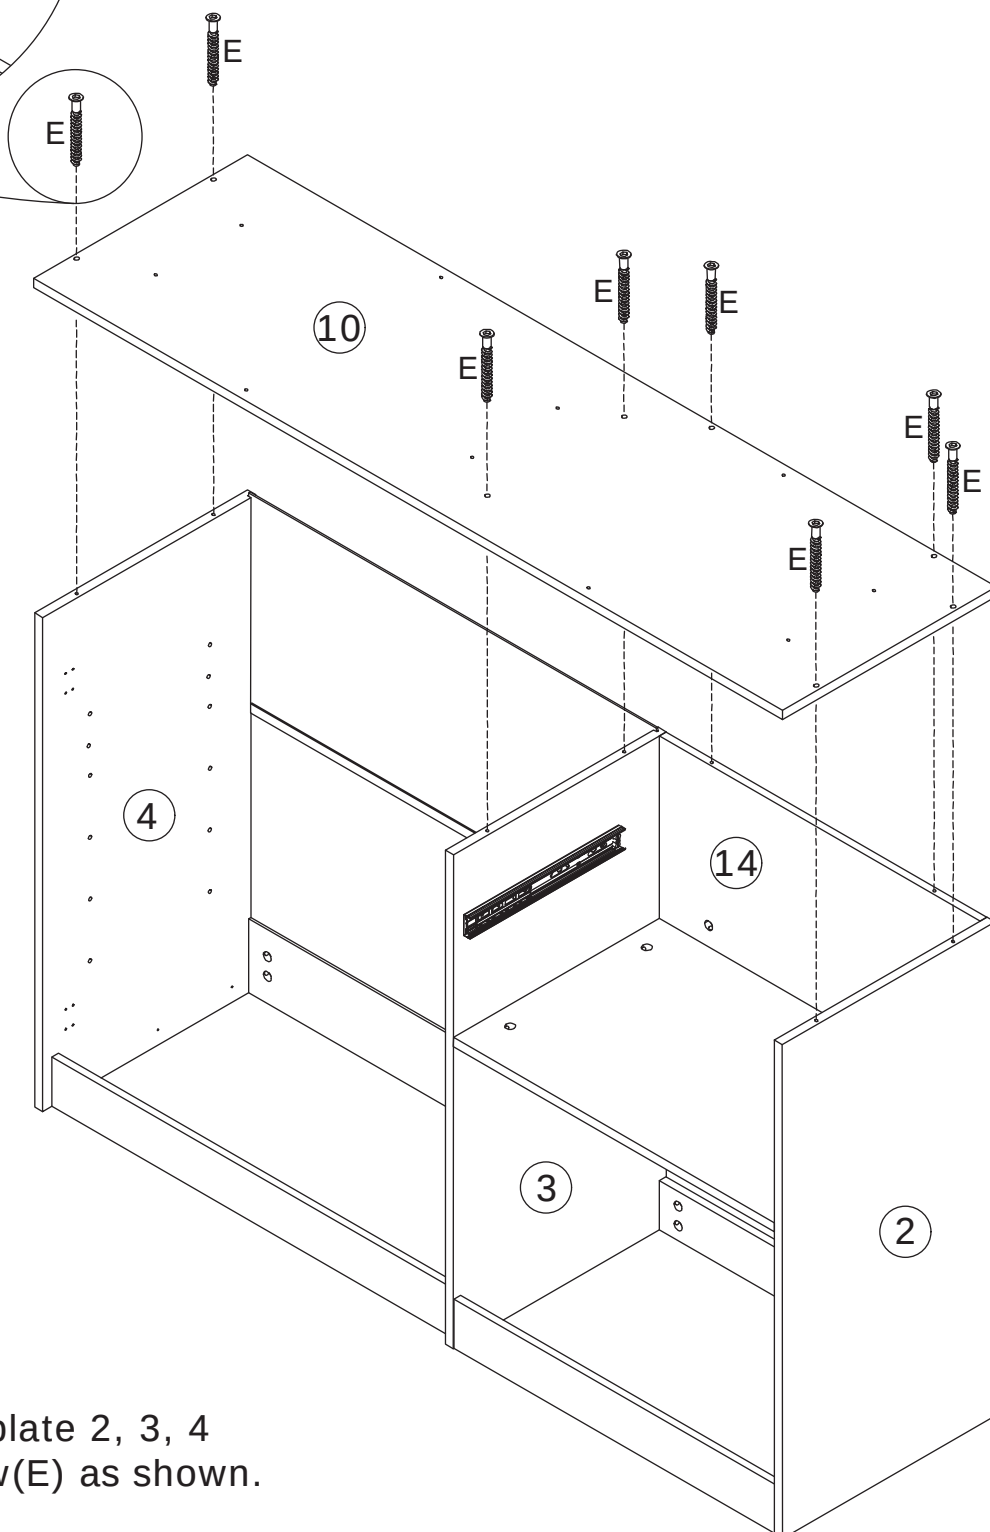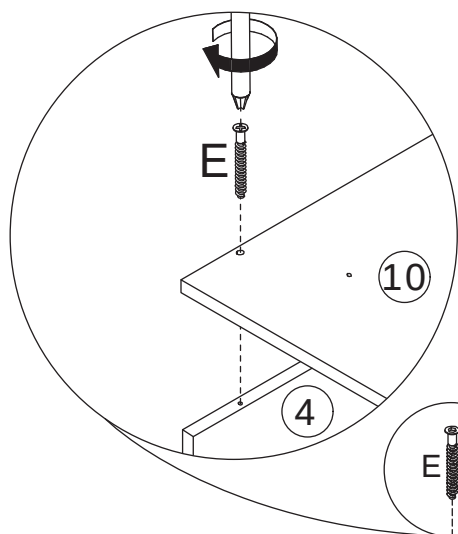



Cover plate 10 to plate 2, 3, 4
and 14 using screw(E) as shown.



 
8



 
 
Insert quickfit screw(A) into plate 15 as shown. Connect plate 15 with 16, put cam lock(B) into holes in plate 16 and turn clockwise to tighten as shown.

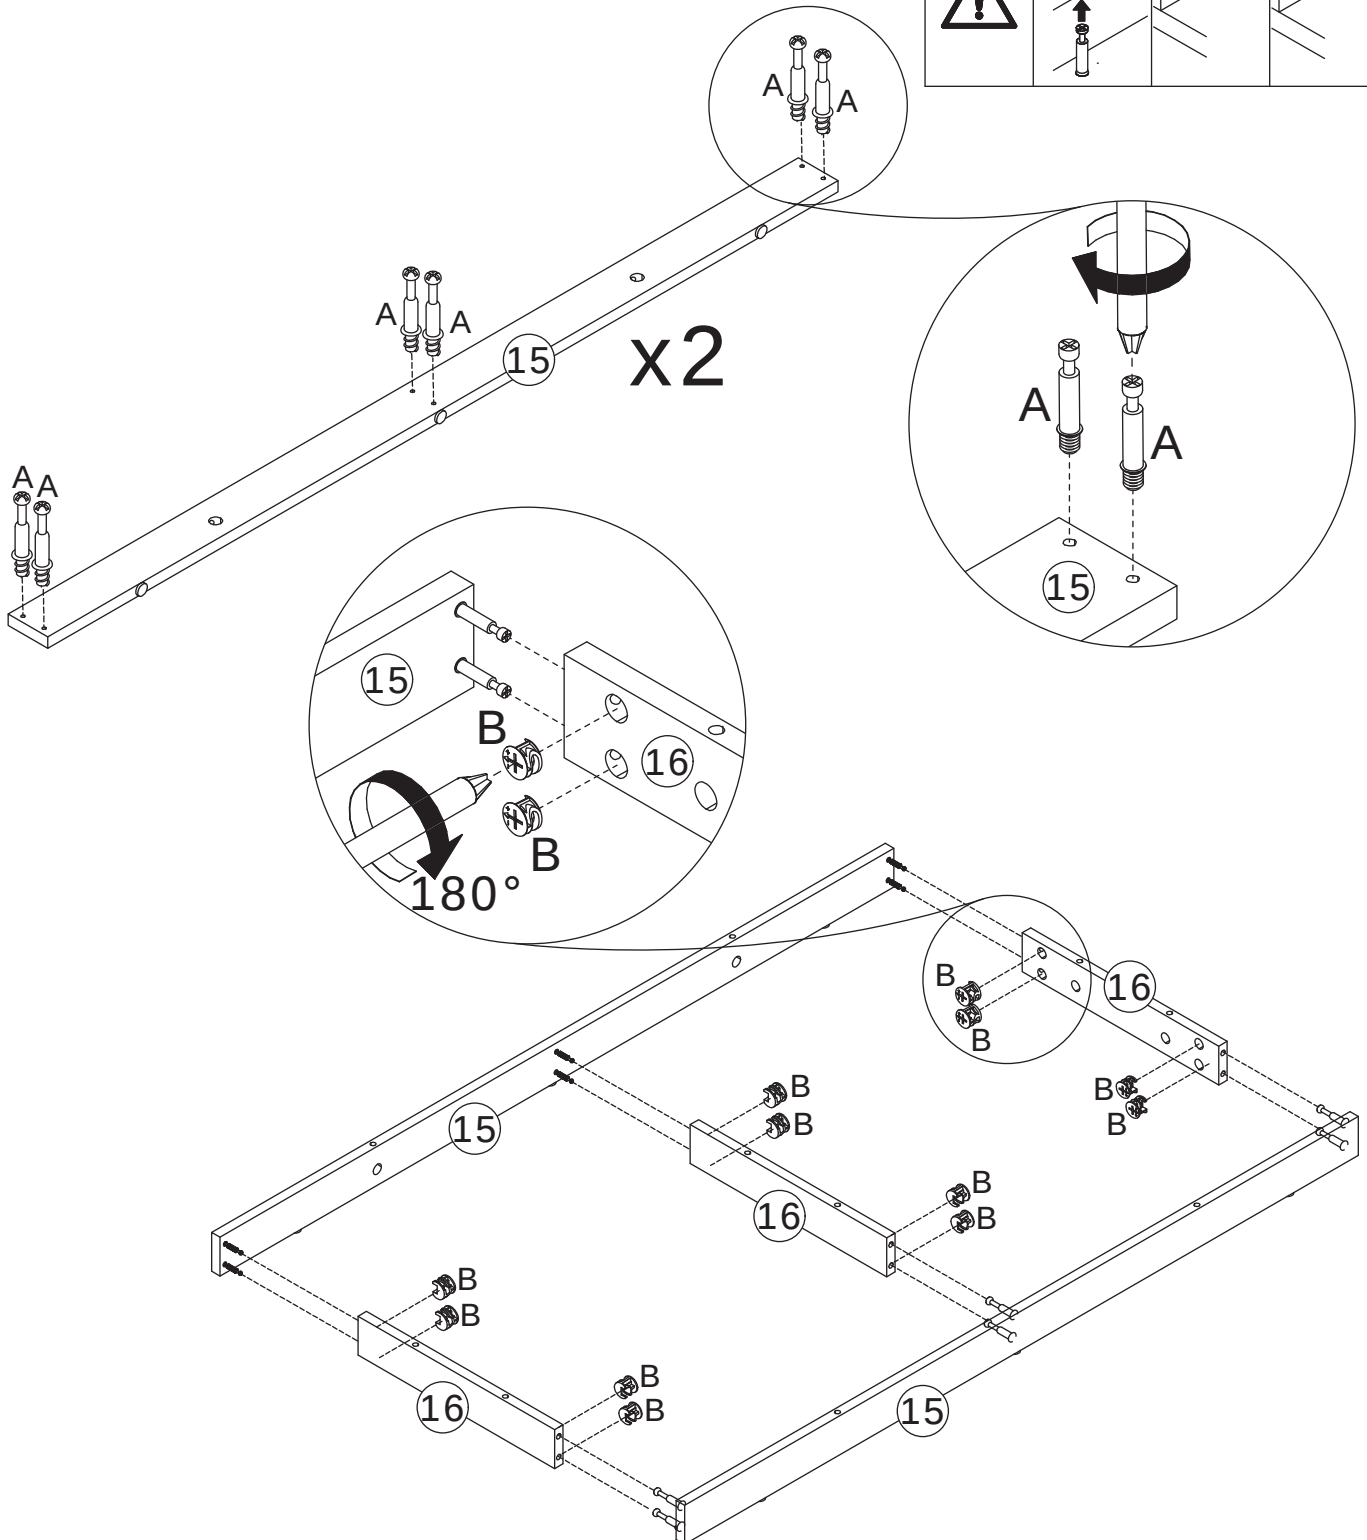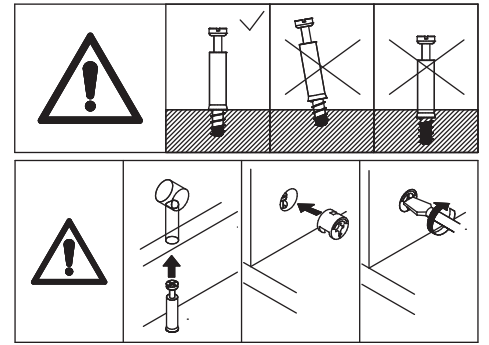



9

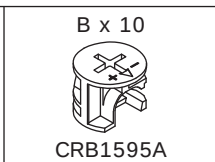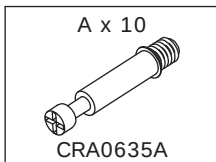   

  
Insert quickfit screw(A) into plate 10 as shown.
Attach the base component to plate 10, put cam lock(B) into holes in plate 15,16 and turn clockwise to tighten as shown.

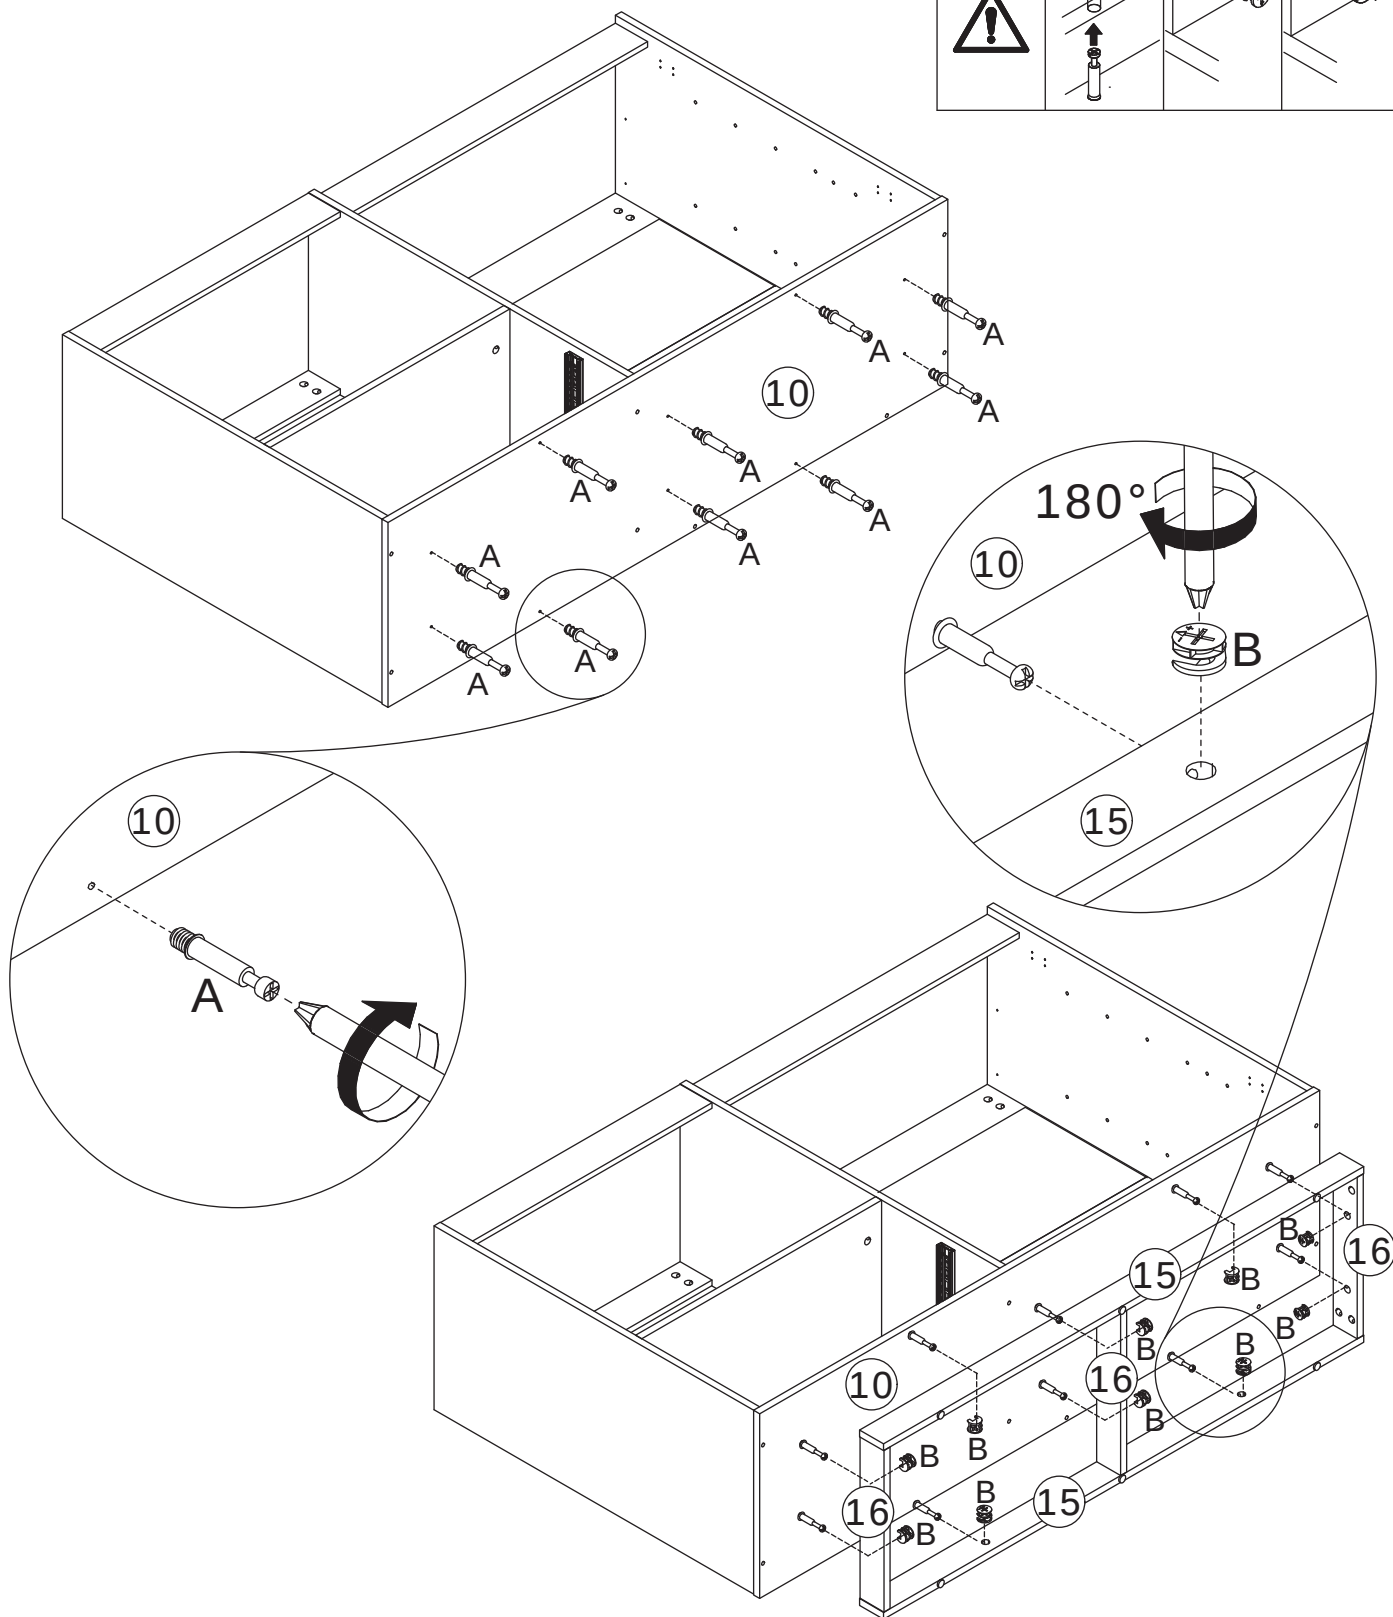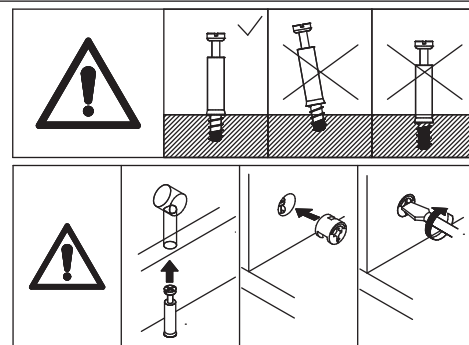

10

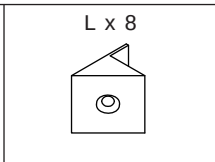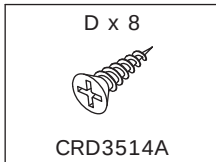  

 Insert buckle(L) into back slots and fix with screw(D) as shown.



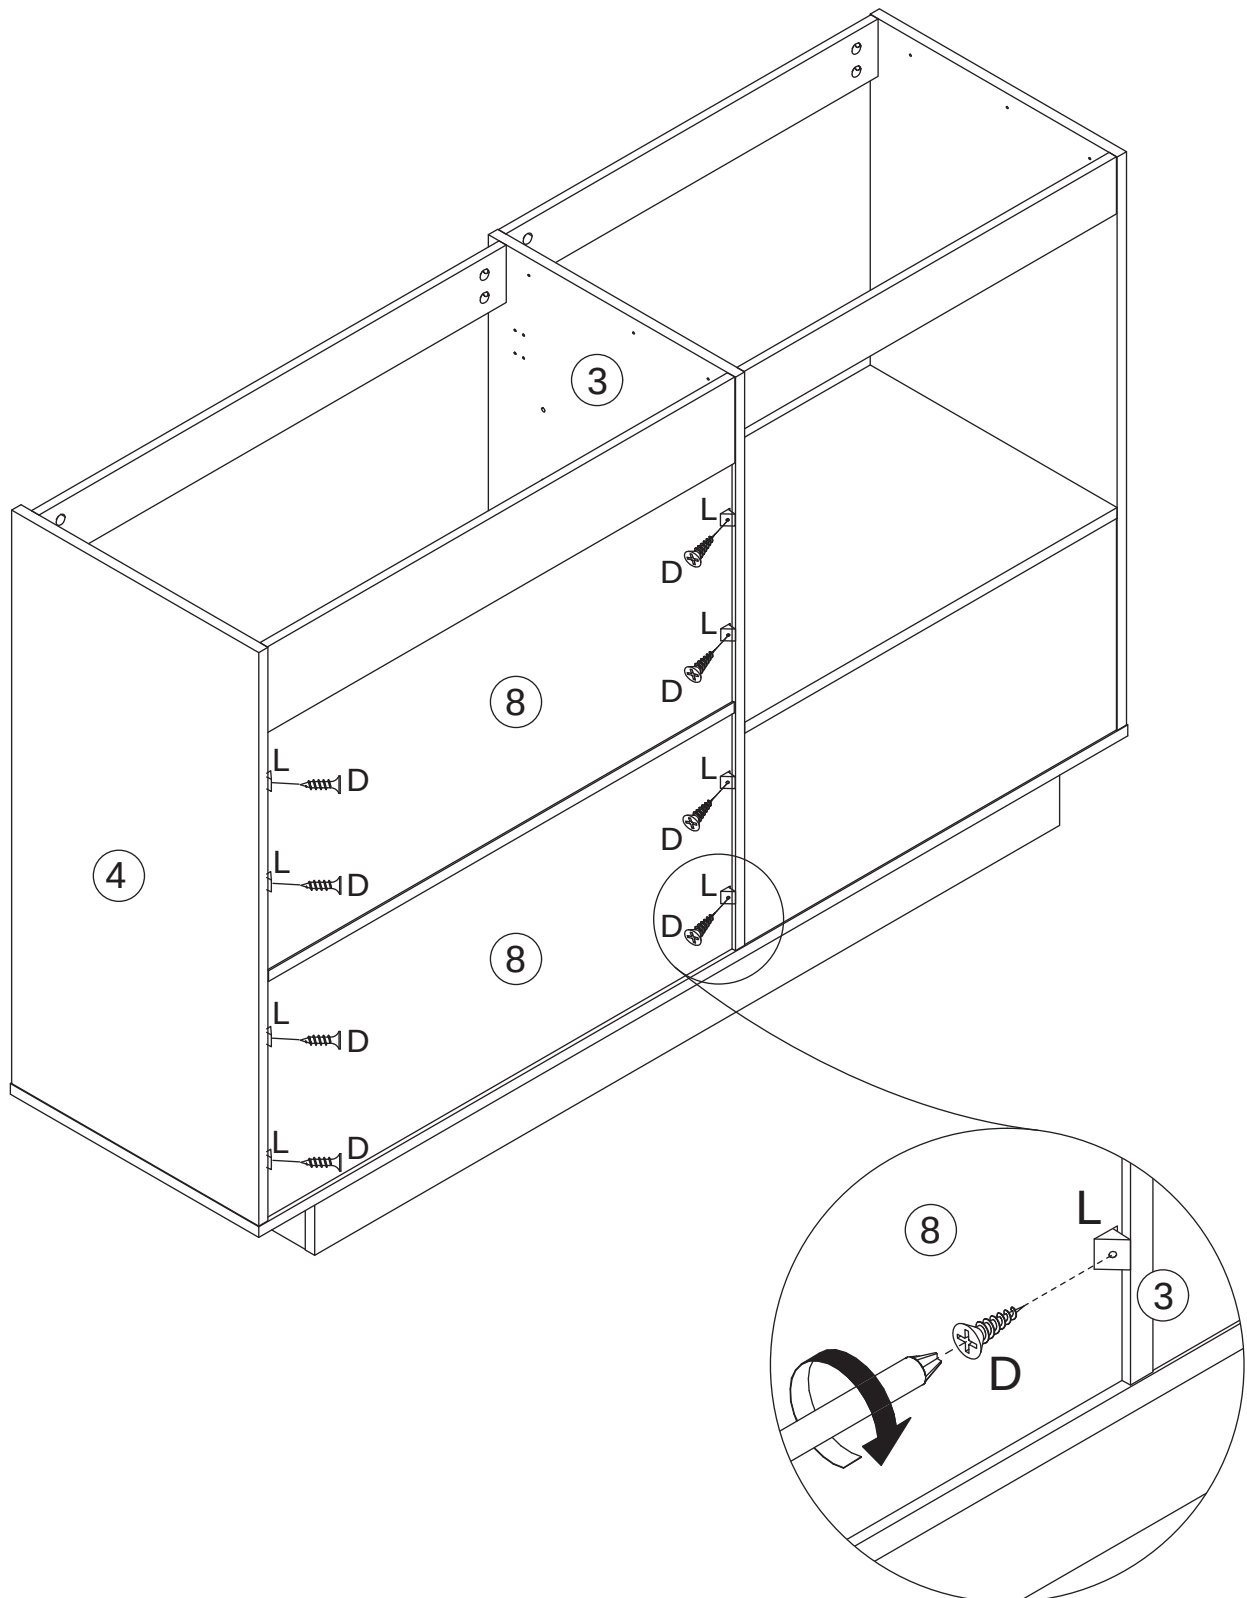


11


D x 15



  
 
CRD3514A

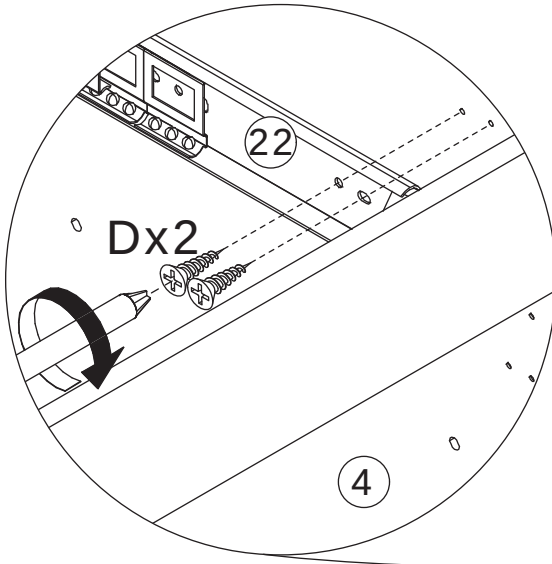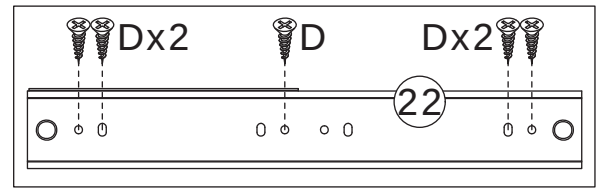


 
Fix track 22 to plate 2, 3 and 4 using screw(D) as shown.

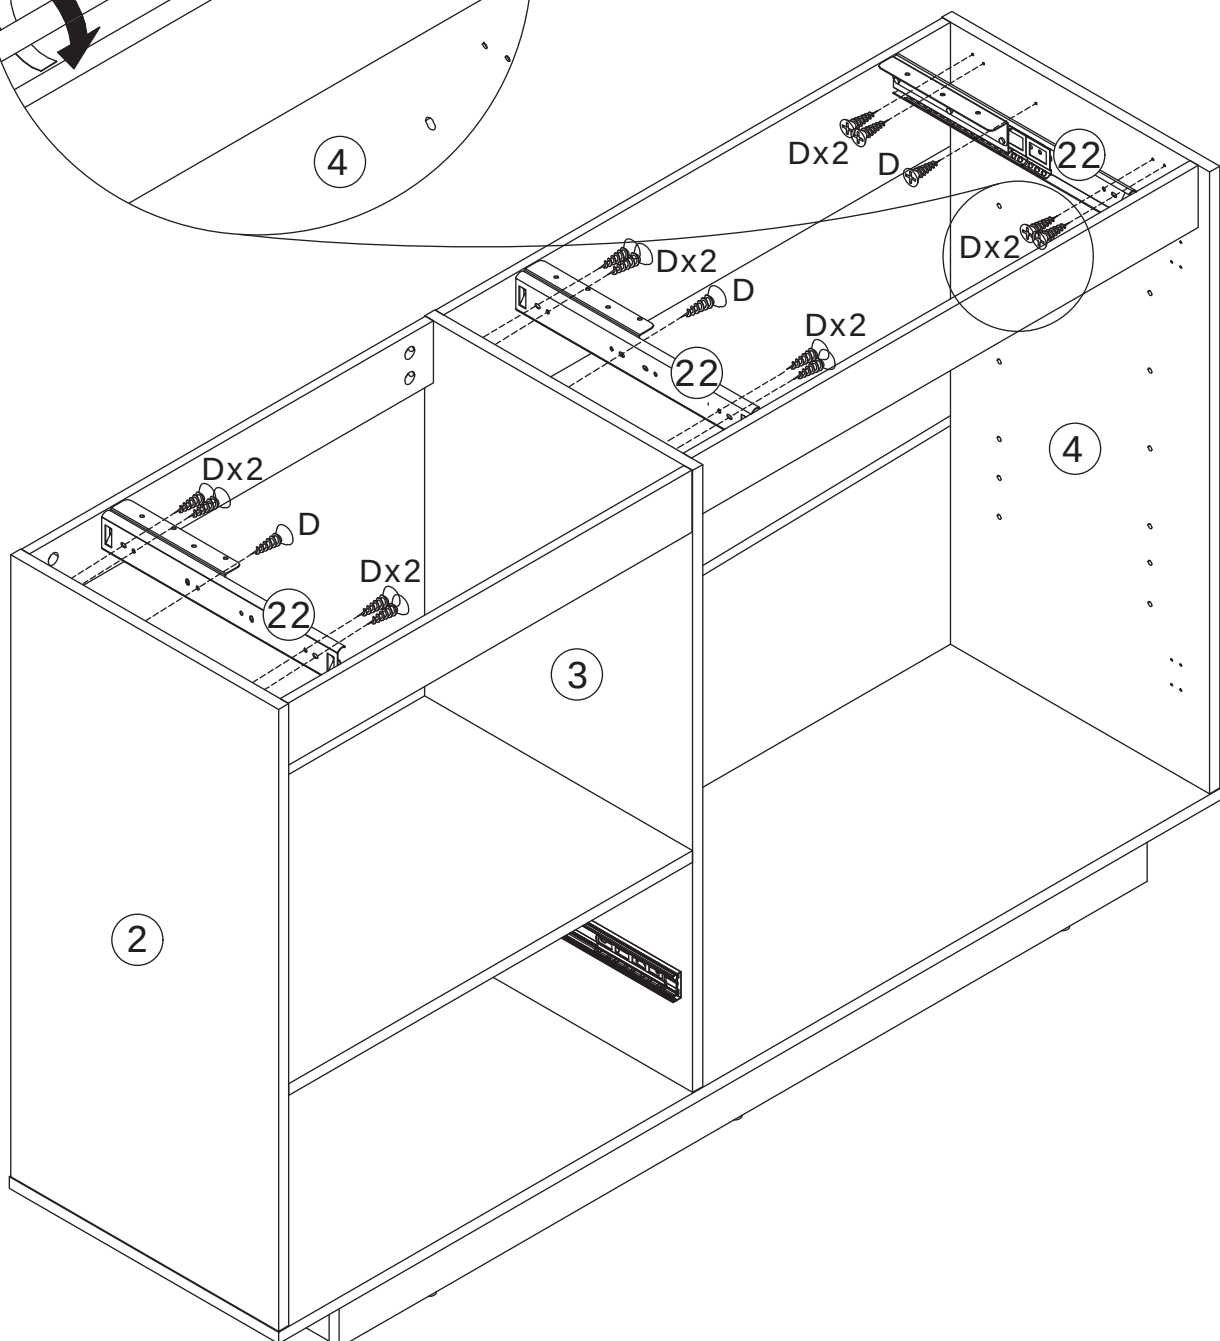

12

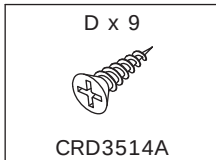  


  Fix plate 1 to part 22 using screw(D) as shown.

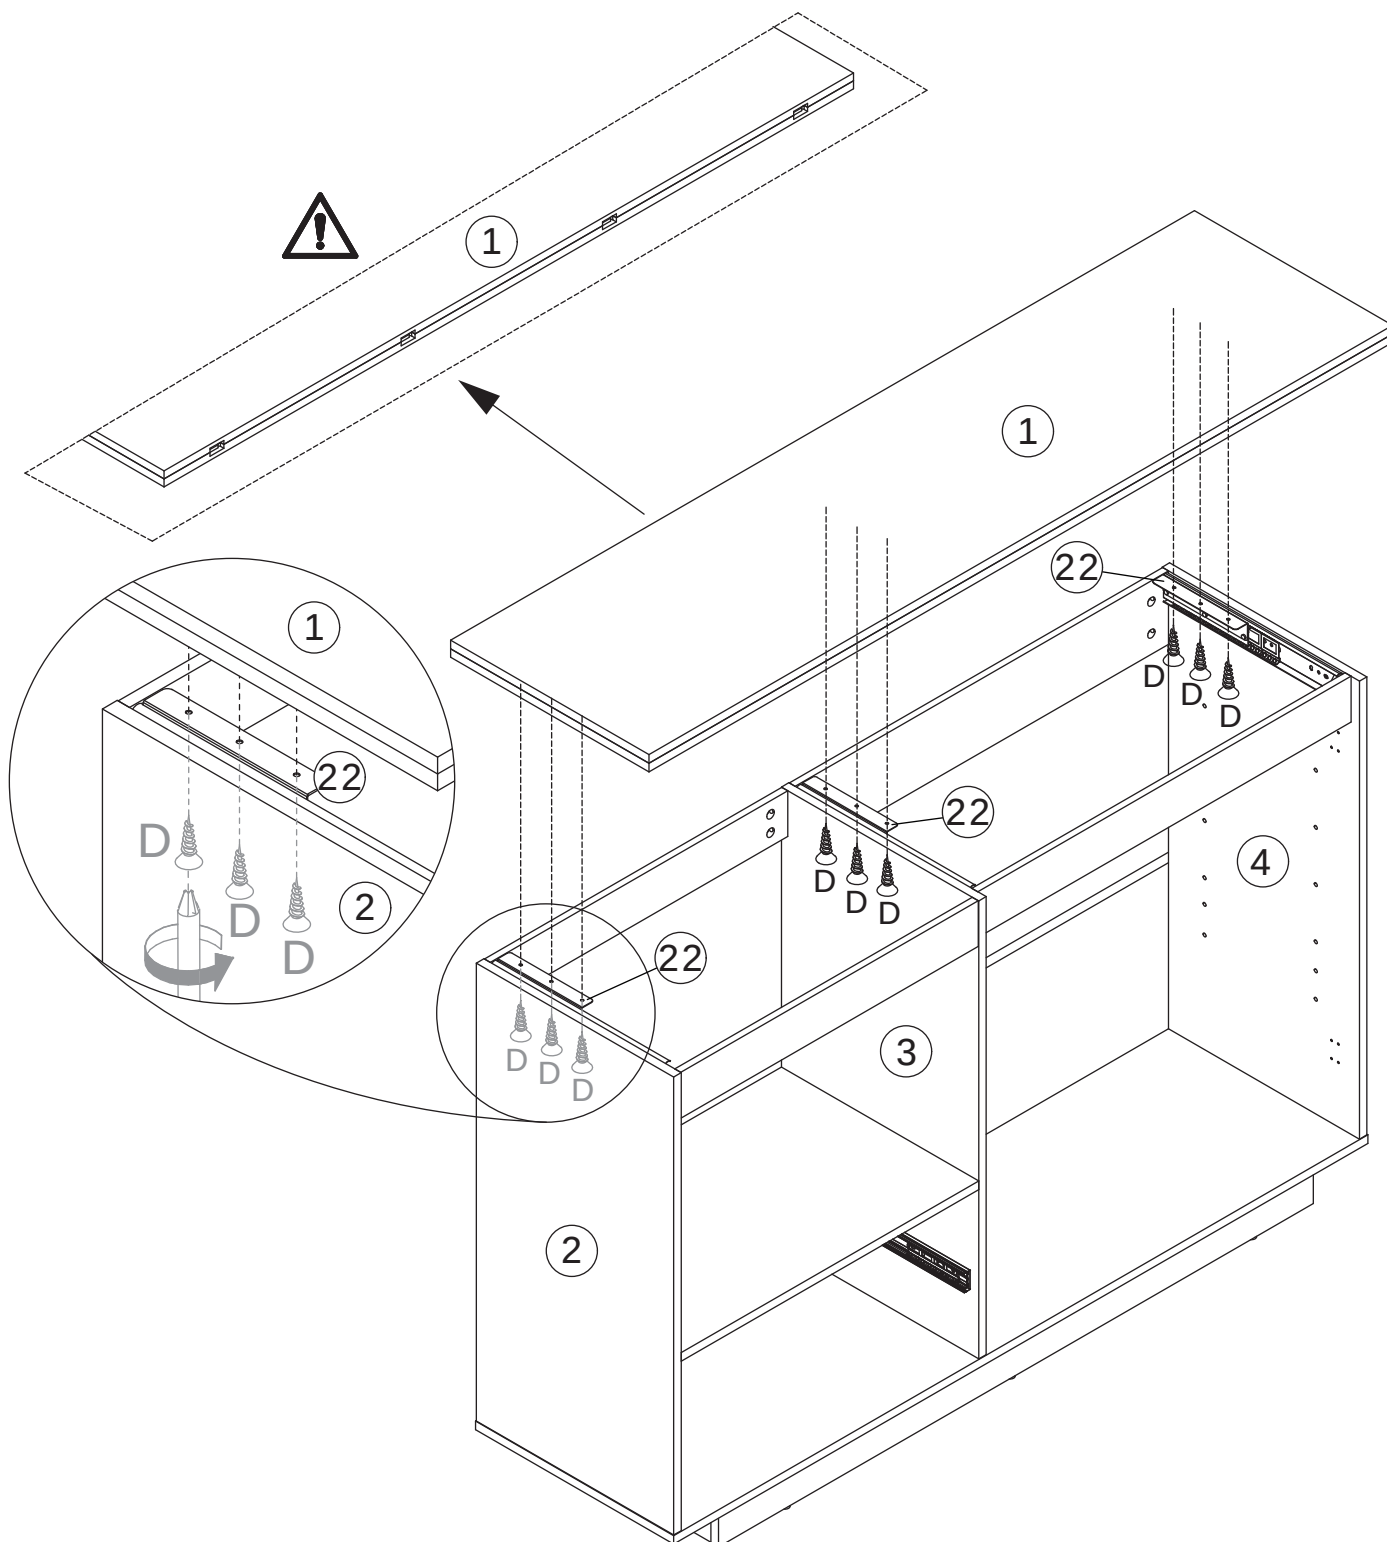
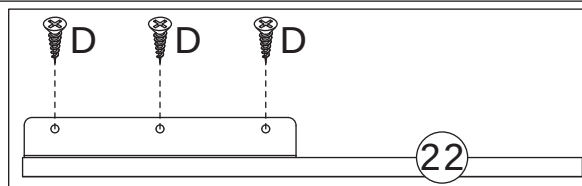


13


 
F x 8



  
Insert part(F) into plate 3 and 4, place shelf 9 in as shown.

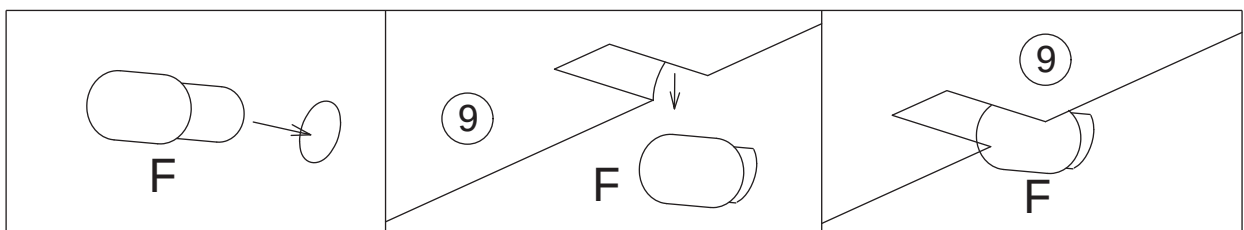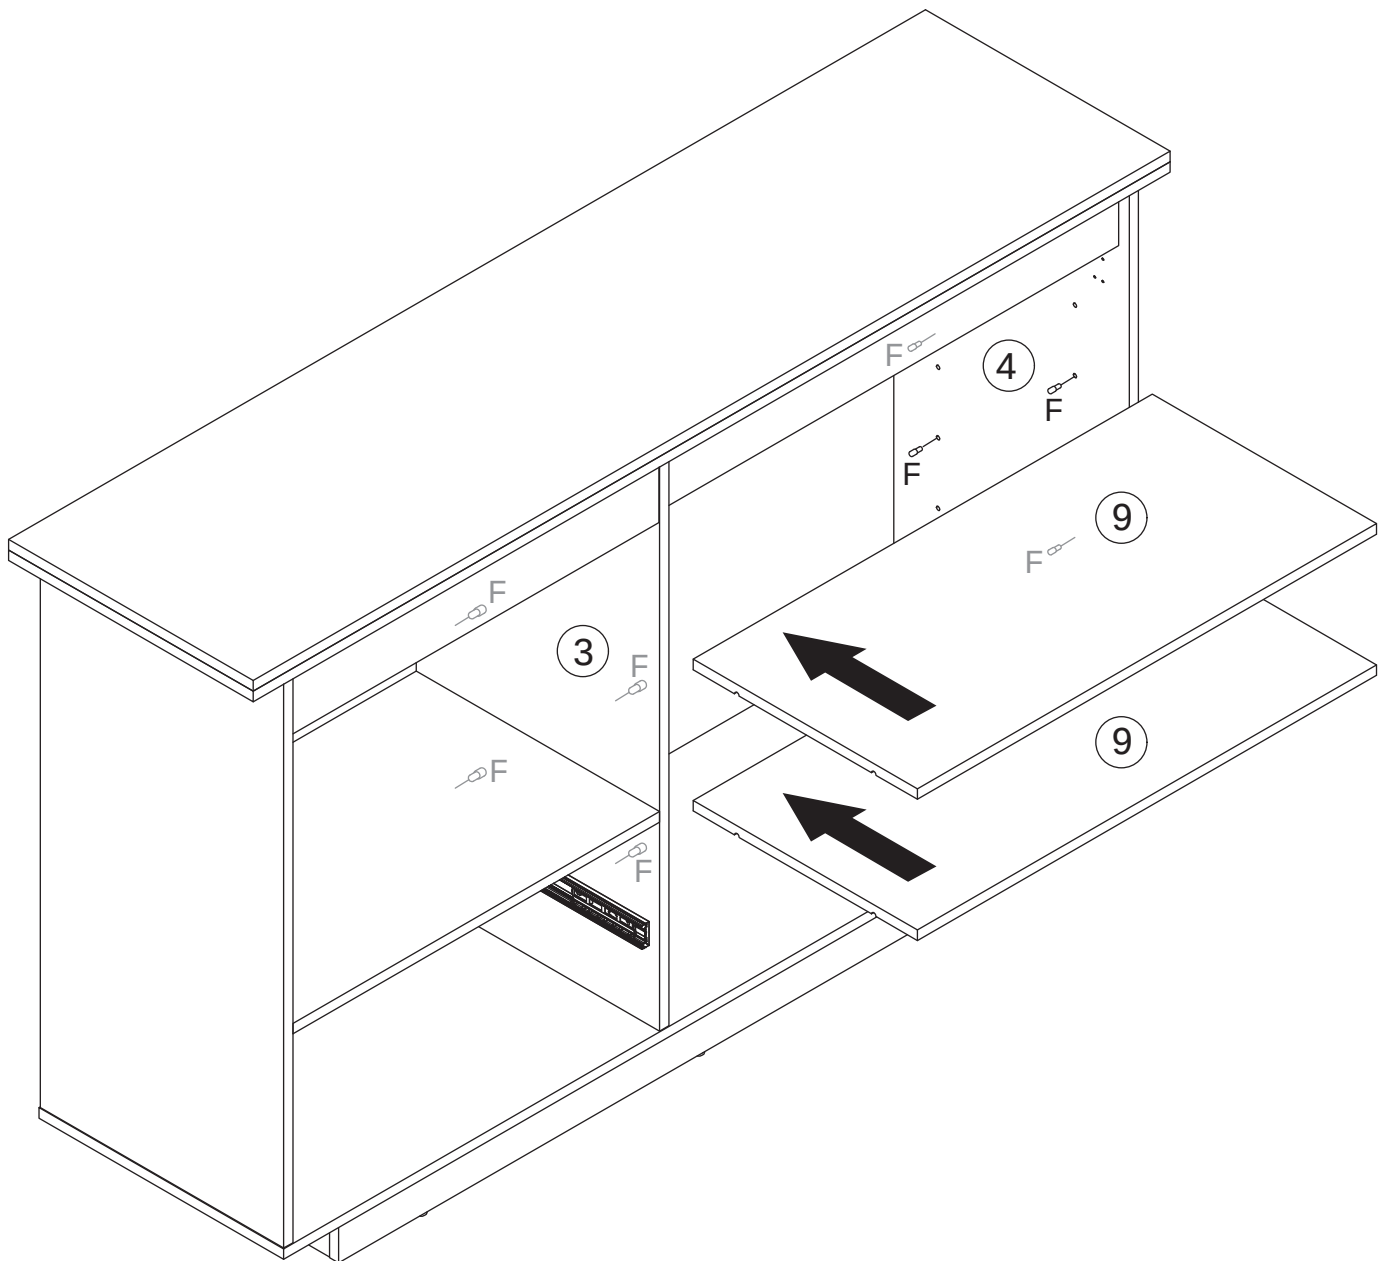

14

  D x 8  CRD3514A	G x 4  DGA861C	I x 2  CRE0418A	
--	---	--	---

 Fix hinge(G) to plate 5 and 6 using screw(D) as shown.
Fix handle(I) to plate 5 and 6 as shown.


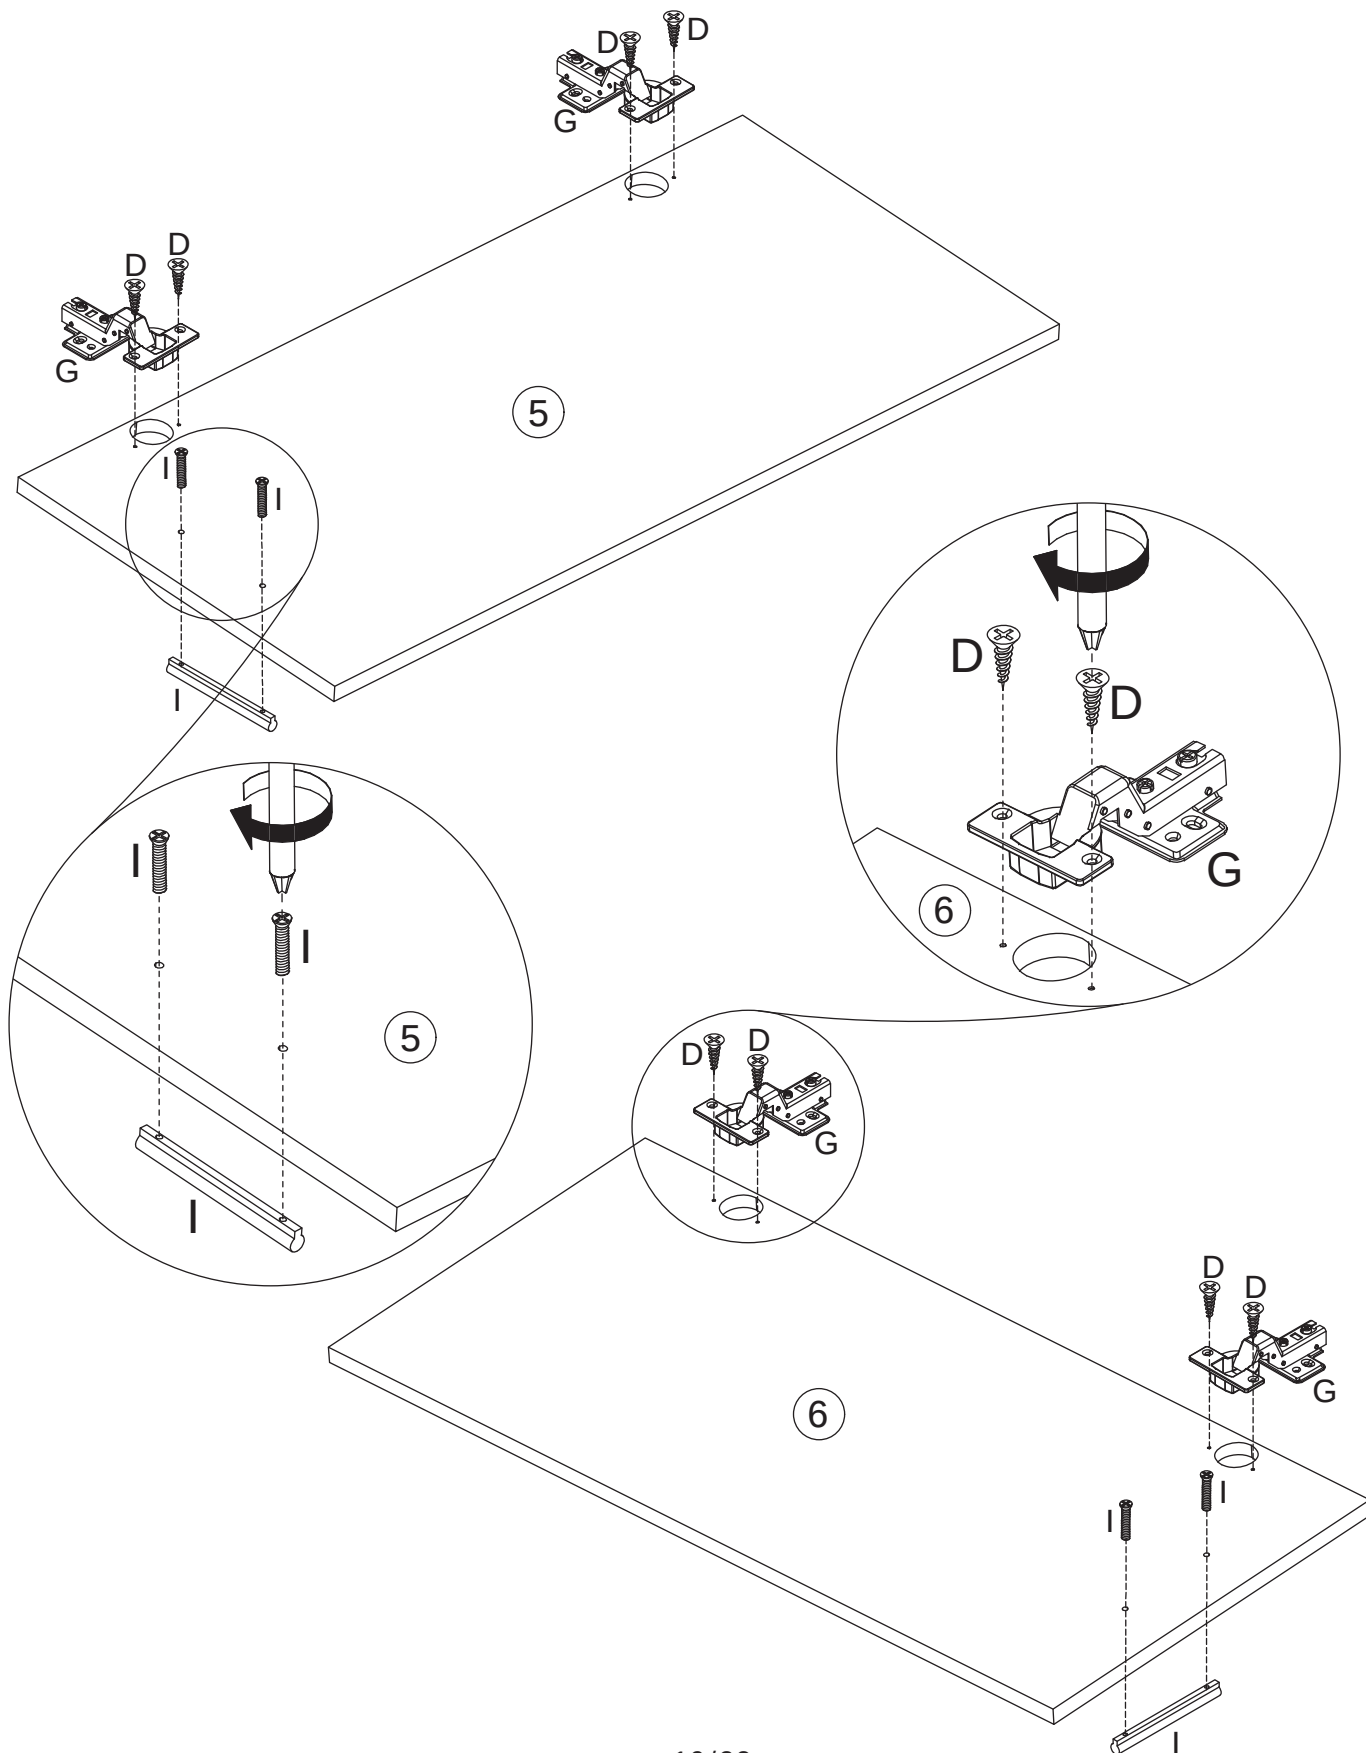


15



D x 16



  CRD3514A

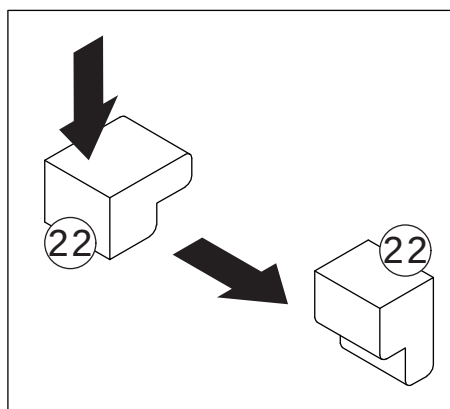

  Attach plate 5 to plate 3; plate 6 to plate 4 by fixing hinge with screw(D) as shown.
To secure the desktop, please press the locking catch.

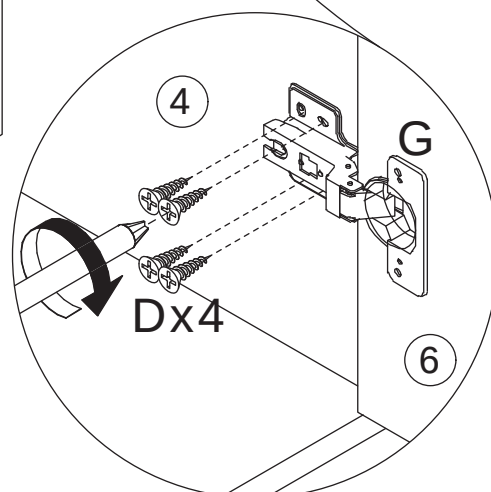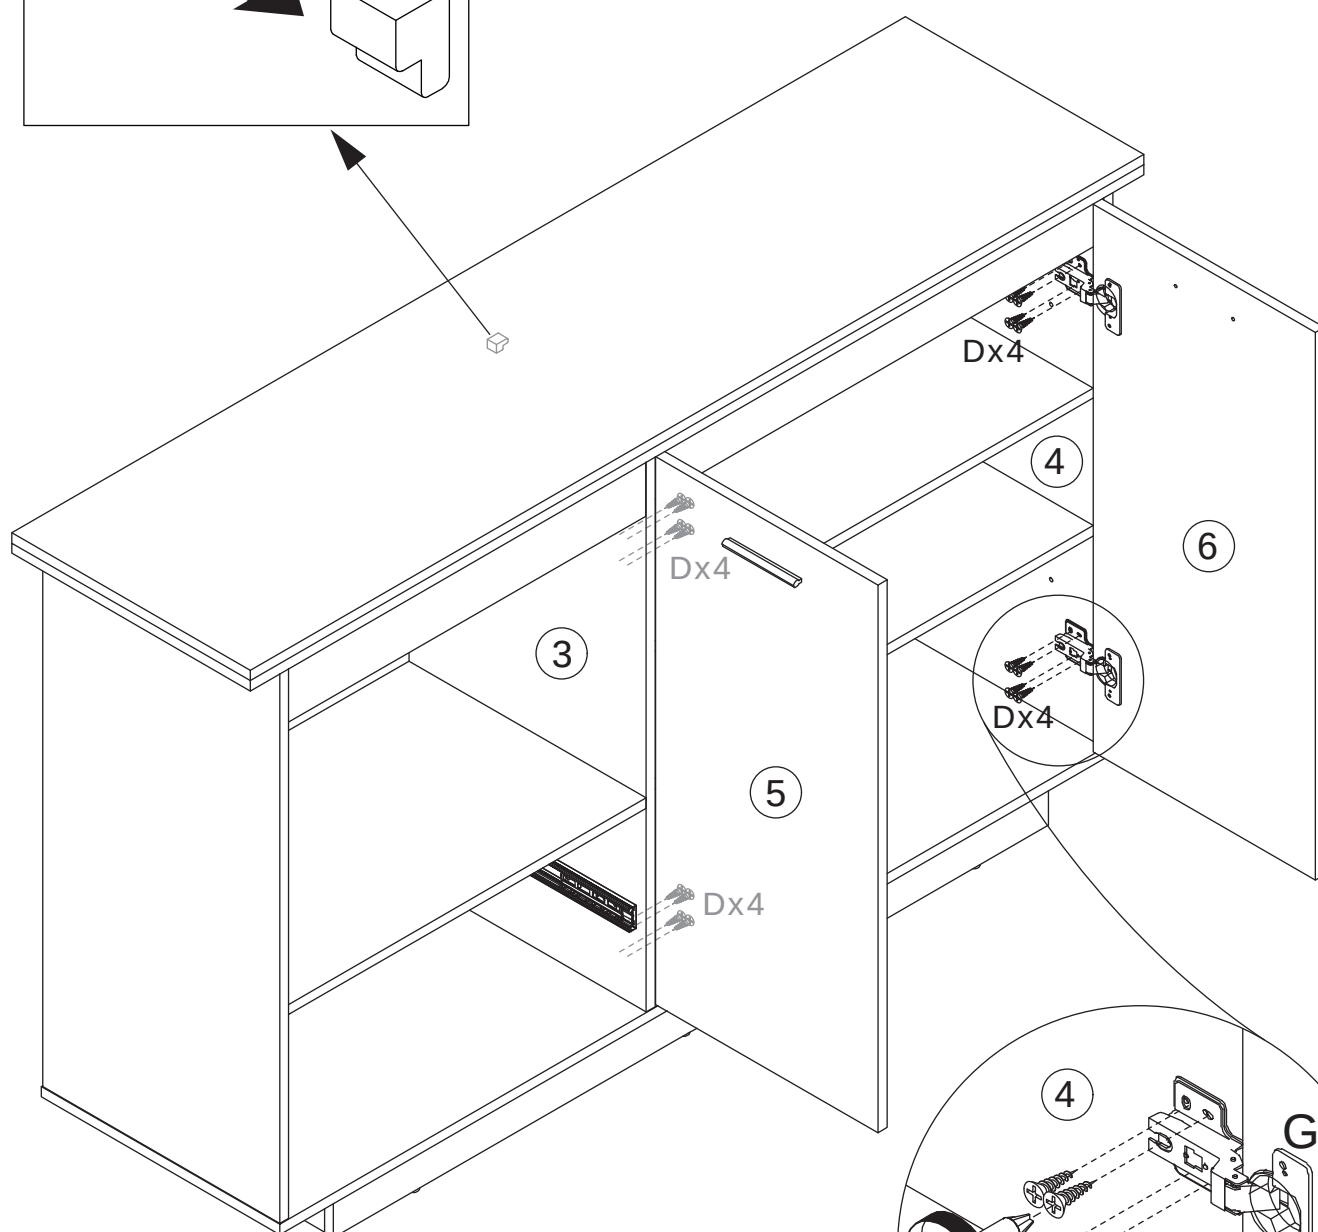


16

E x 4





 CRC0540A







Fix plate 18 and 19 with plate 20 using screw(E) as shown.

  Slide plate 21 along grooves as shown.

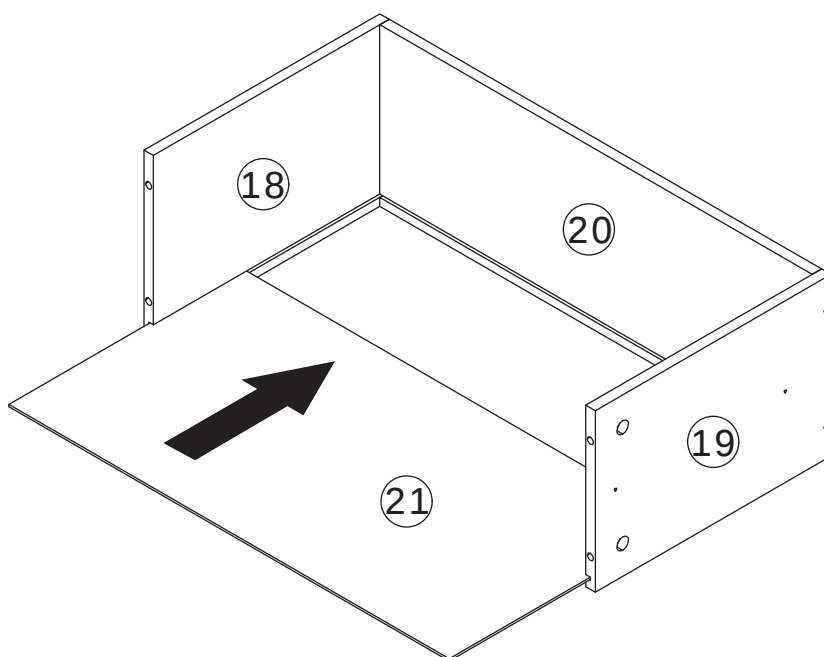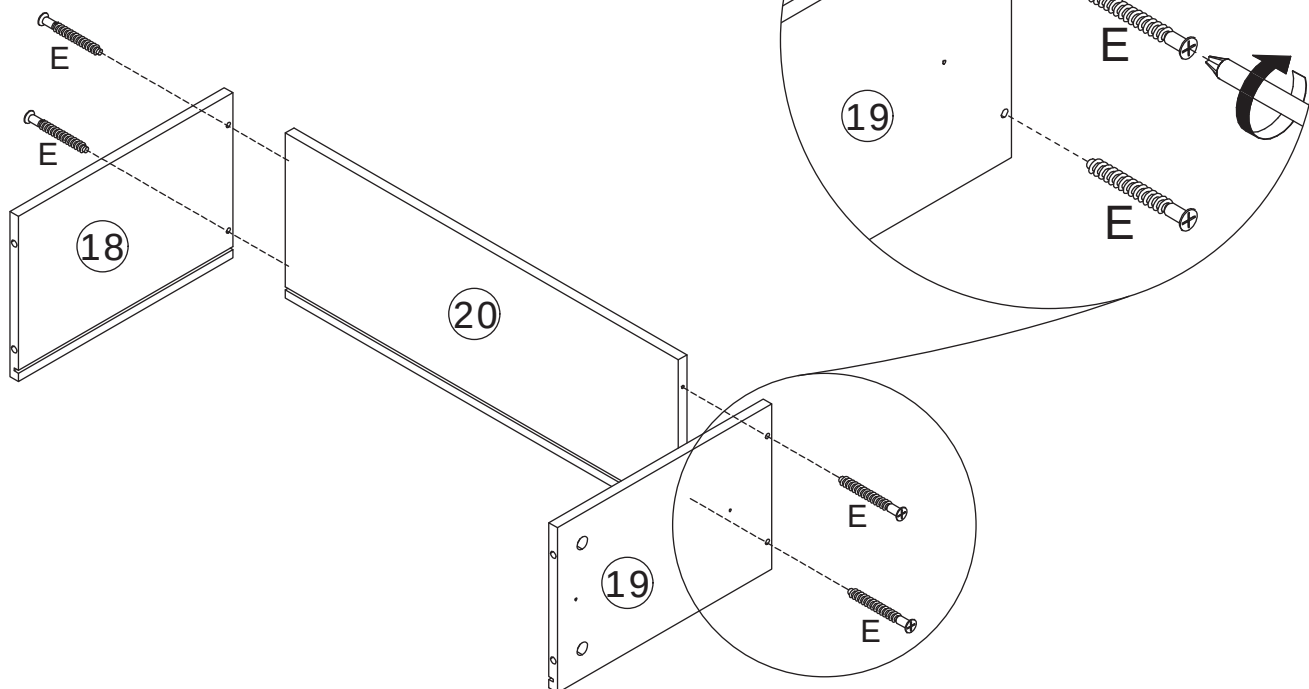



17

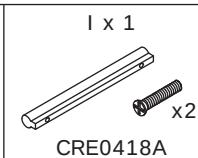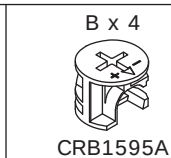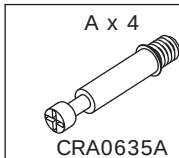    

Insert quickfit screw(A) into plate 17 as shown.


Fix handle(I) to plate 17.

  Attach plate 17 to the drawer, put cam lock(B) into holes in plate 18,19 and turn clockwise to tighten as shown.

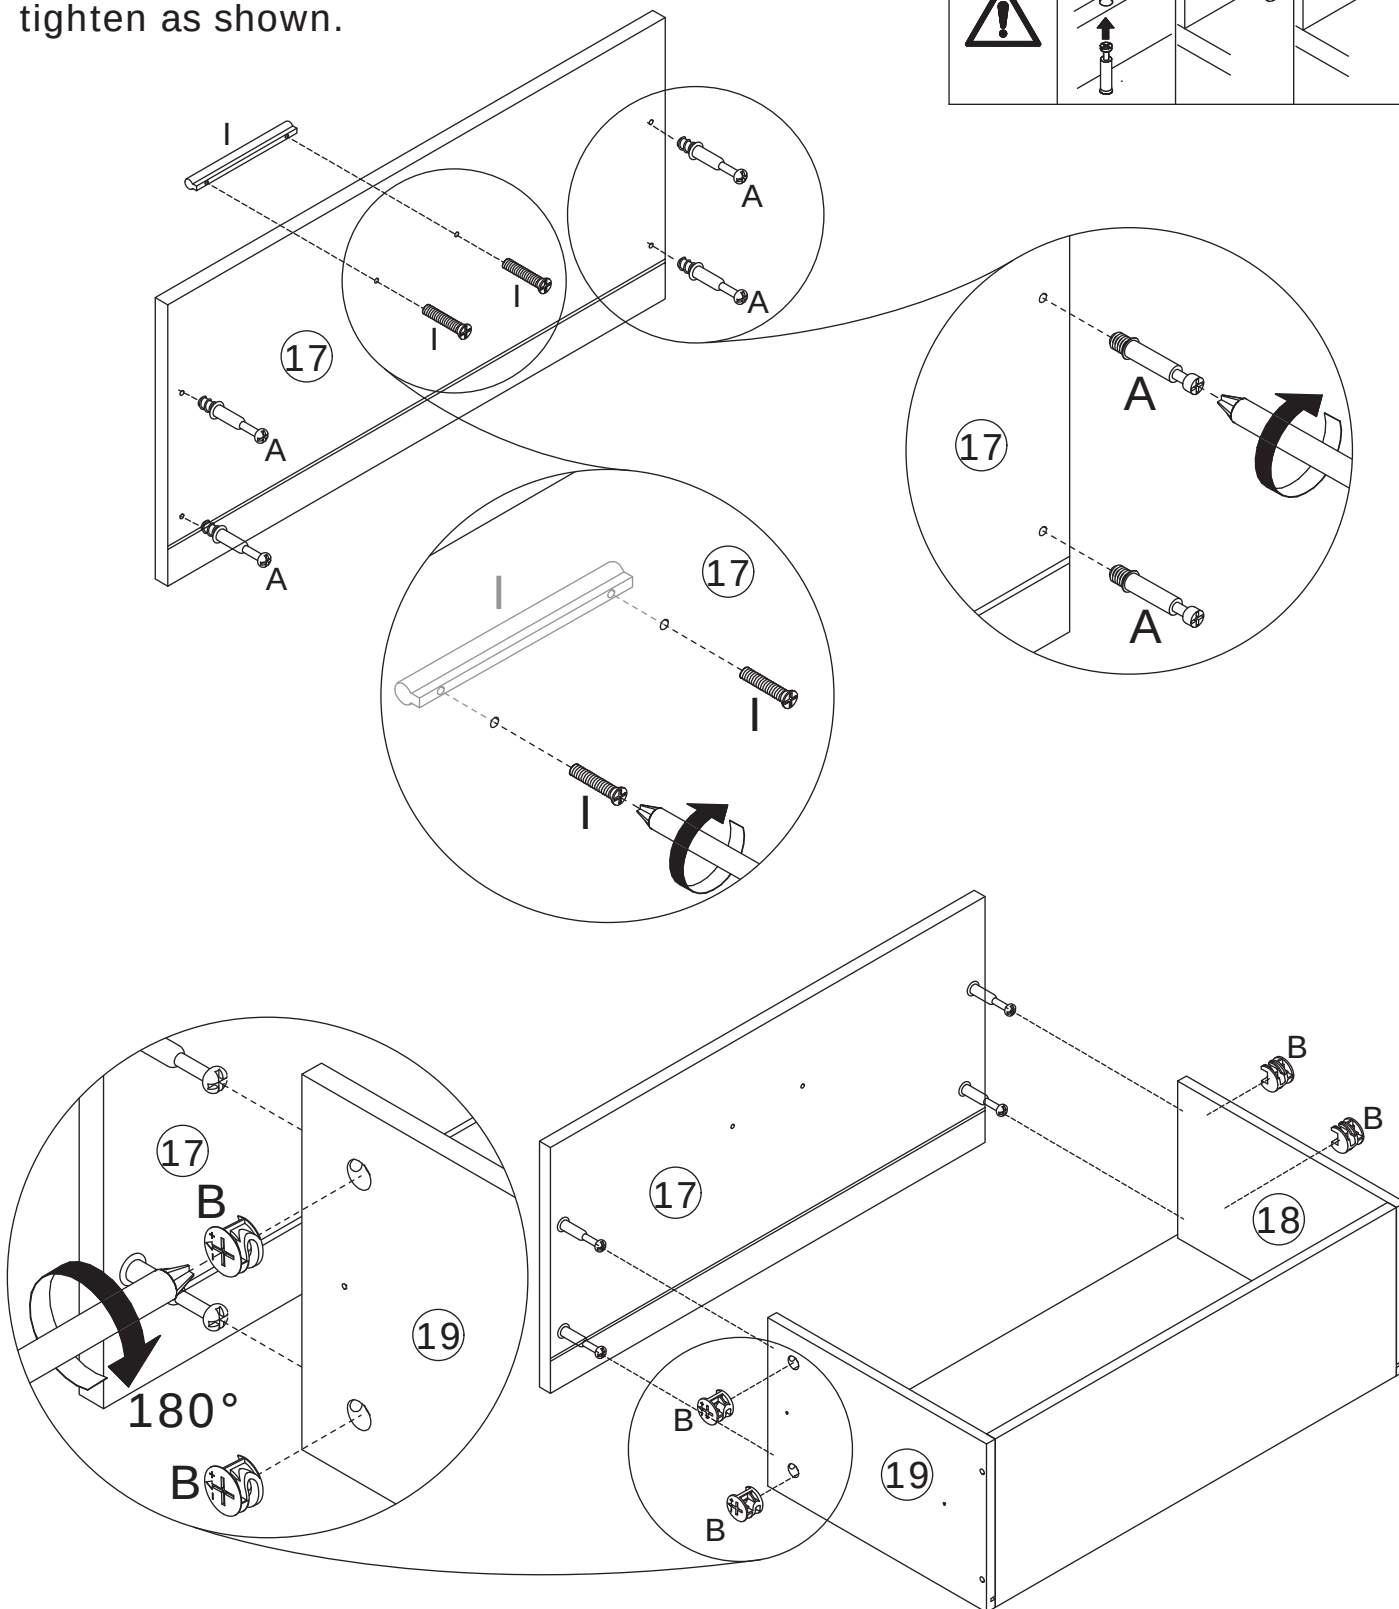
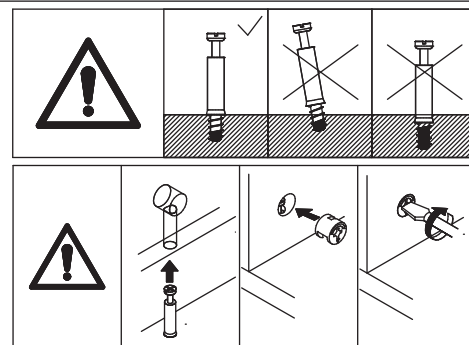


18

 
K x 4




CRD3512A

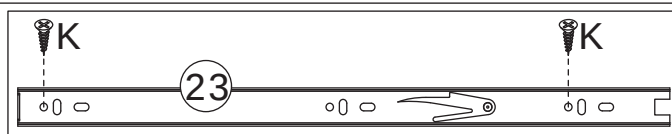  

 Fix track 23 to plate 18 and 19 using screw(K) as shown.

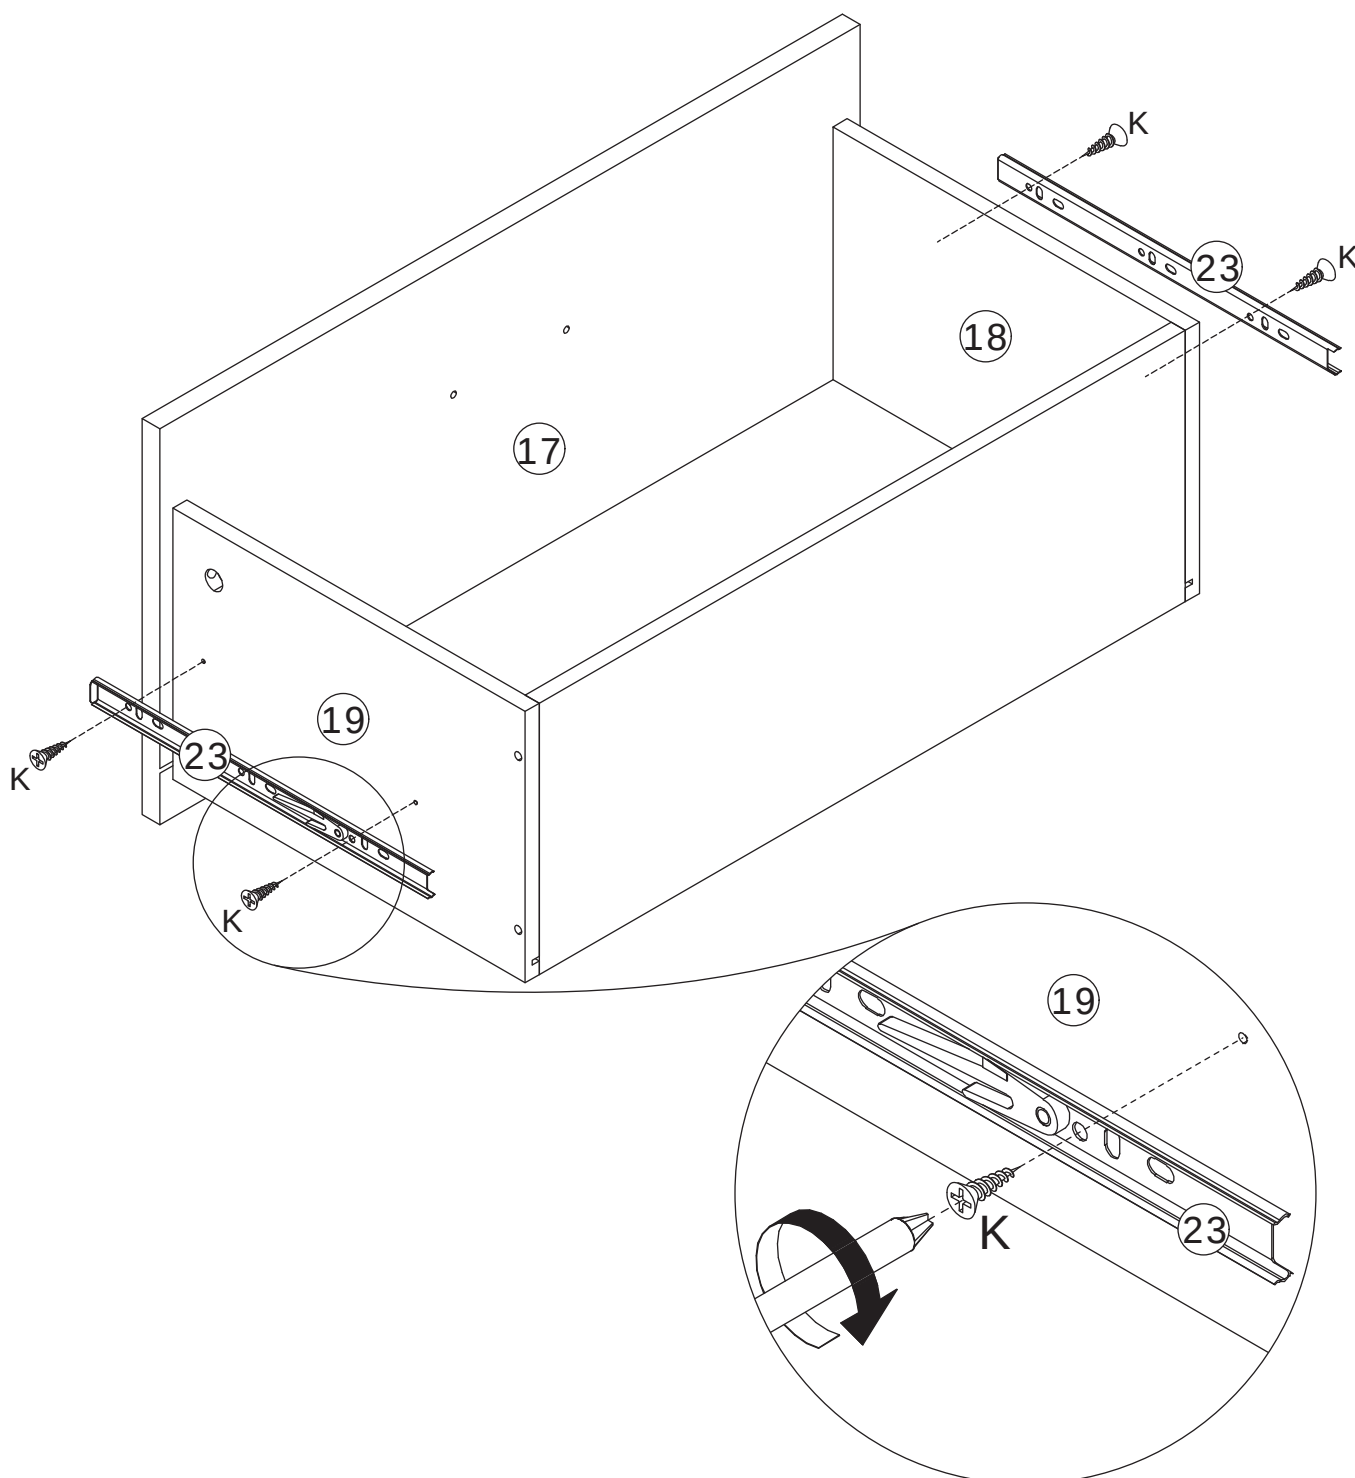


Align rails, slide the drawer.

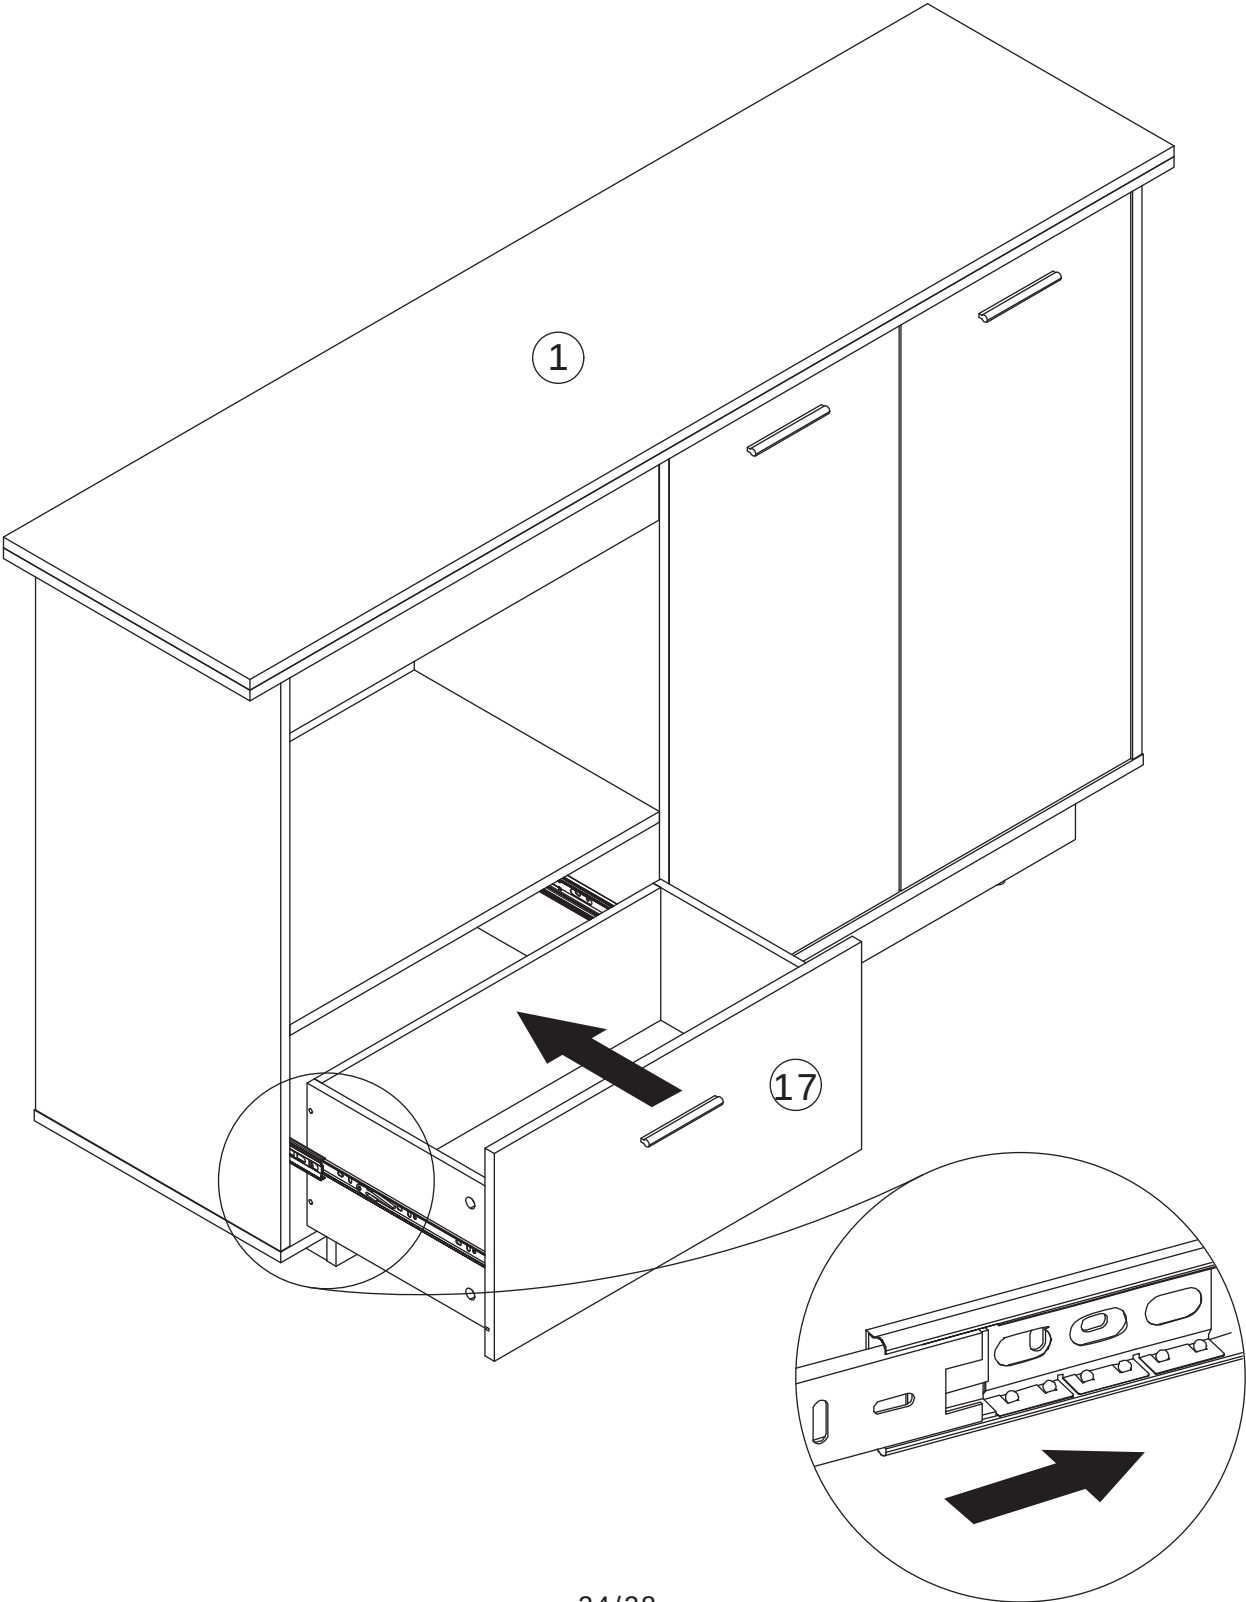 


20

 Do not open the table without support, otherwise the hinge will break.

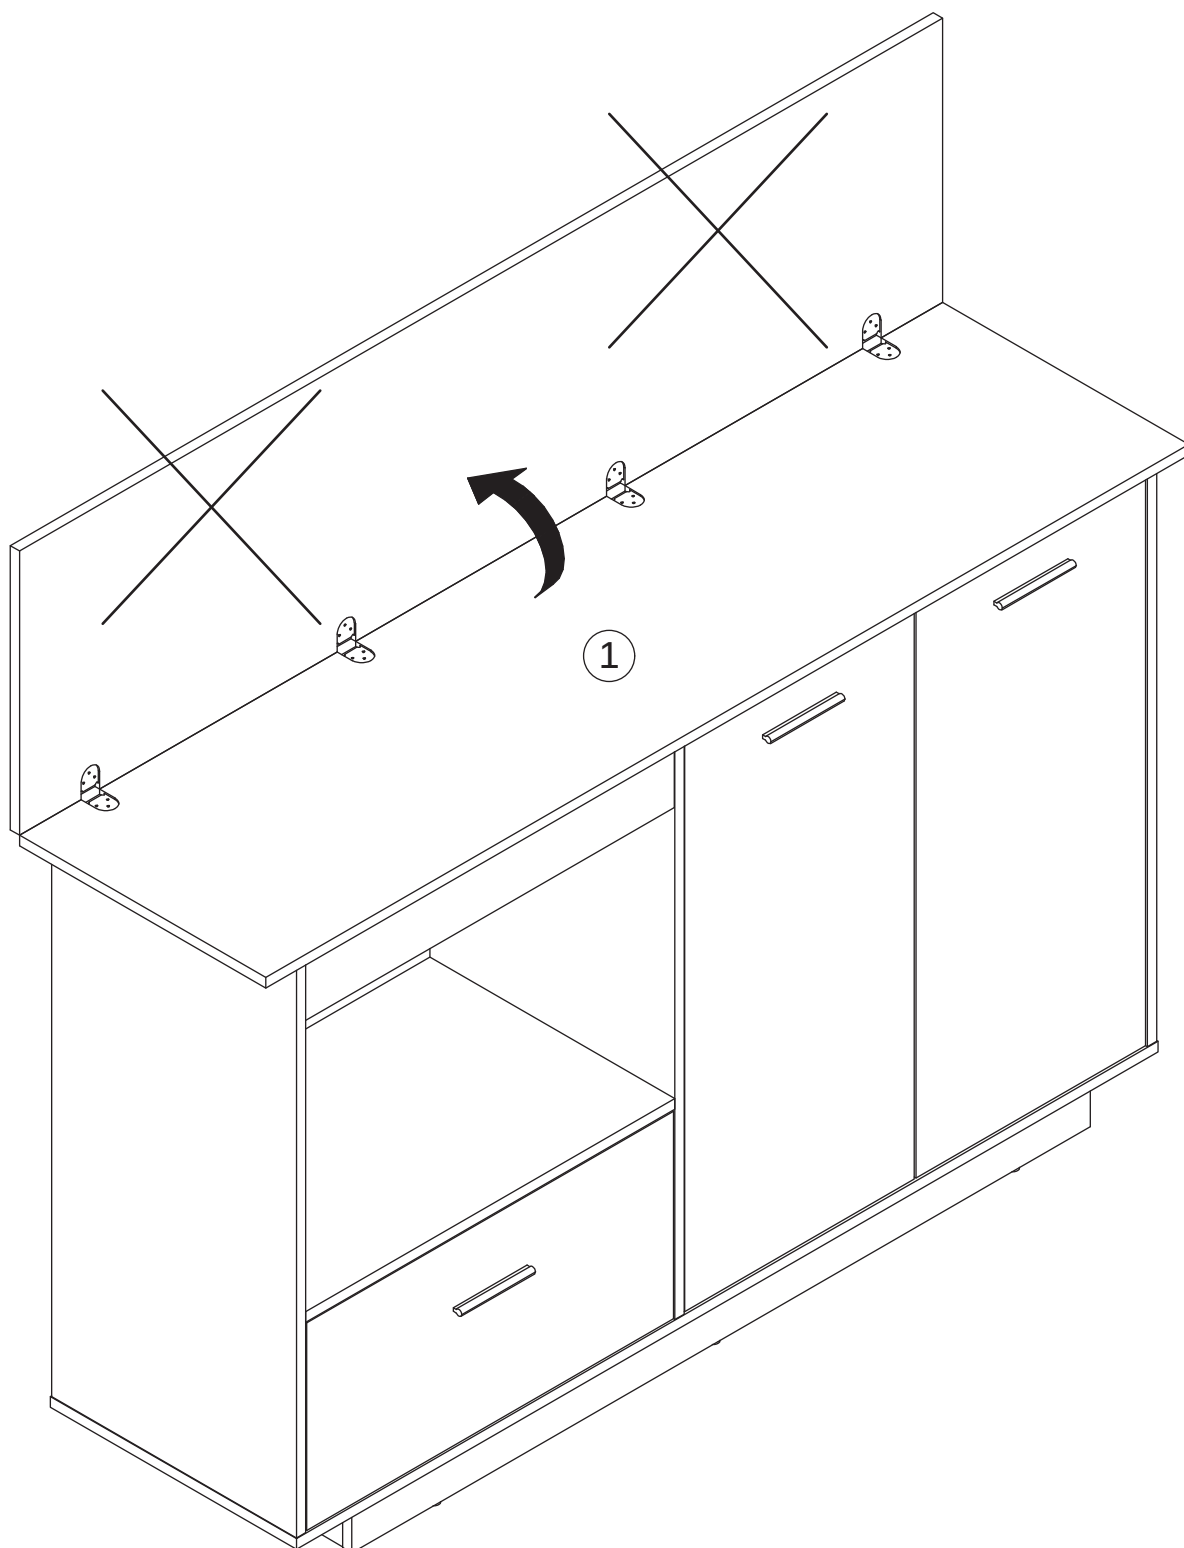



21



 
Spread out the table for use.

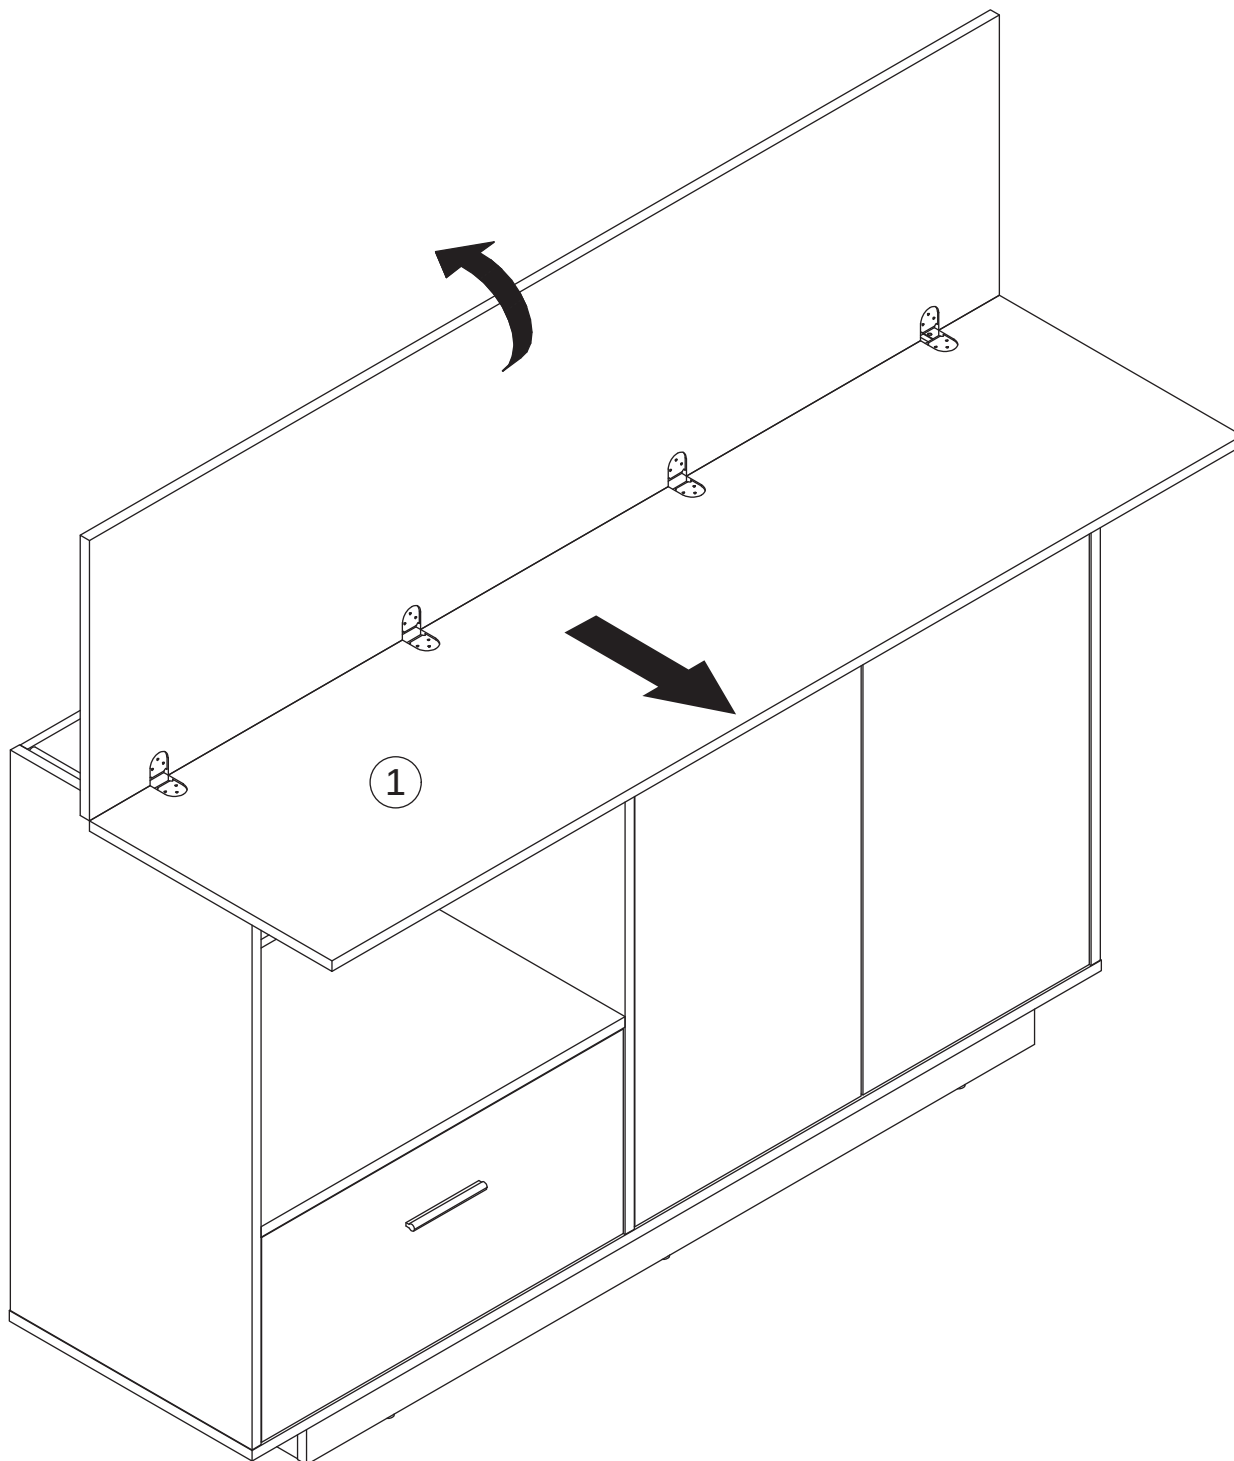


22

     To secure the desktop, please press the locking catch.

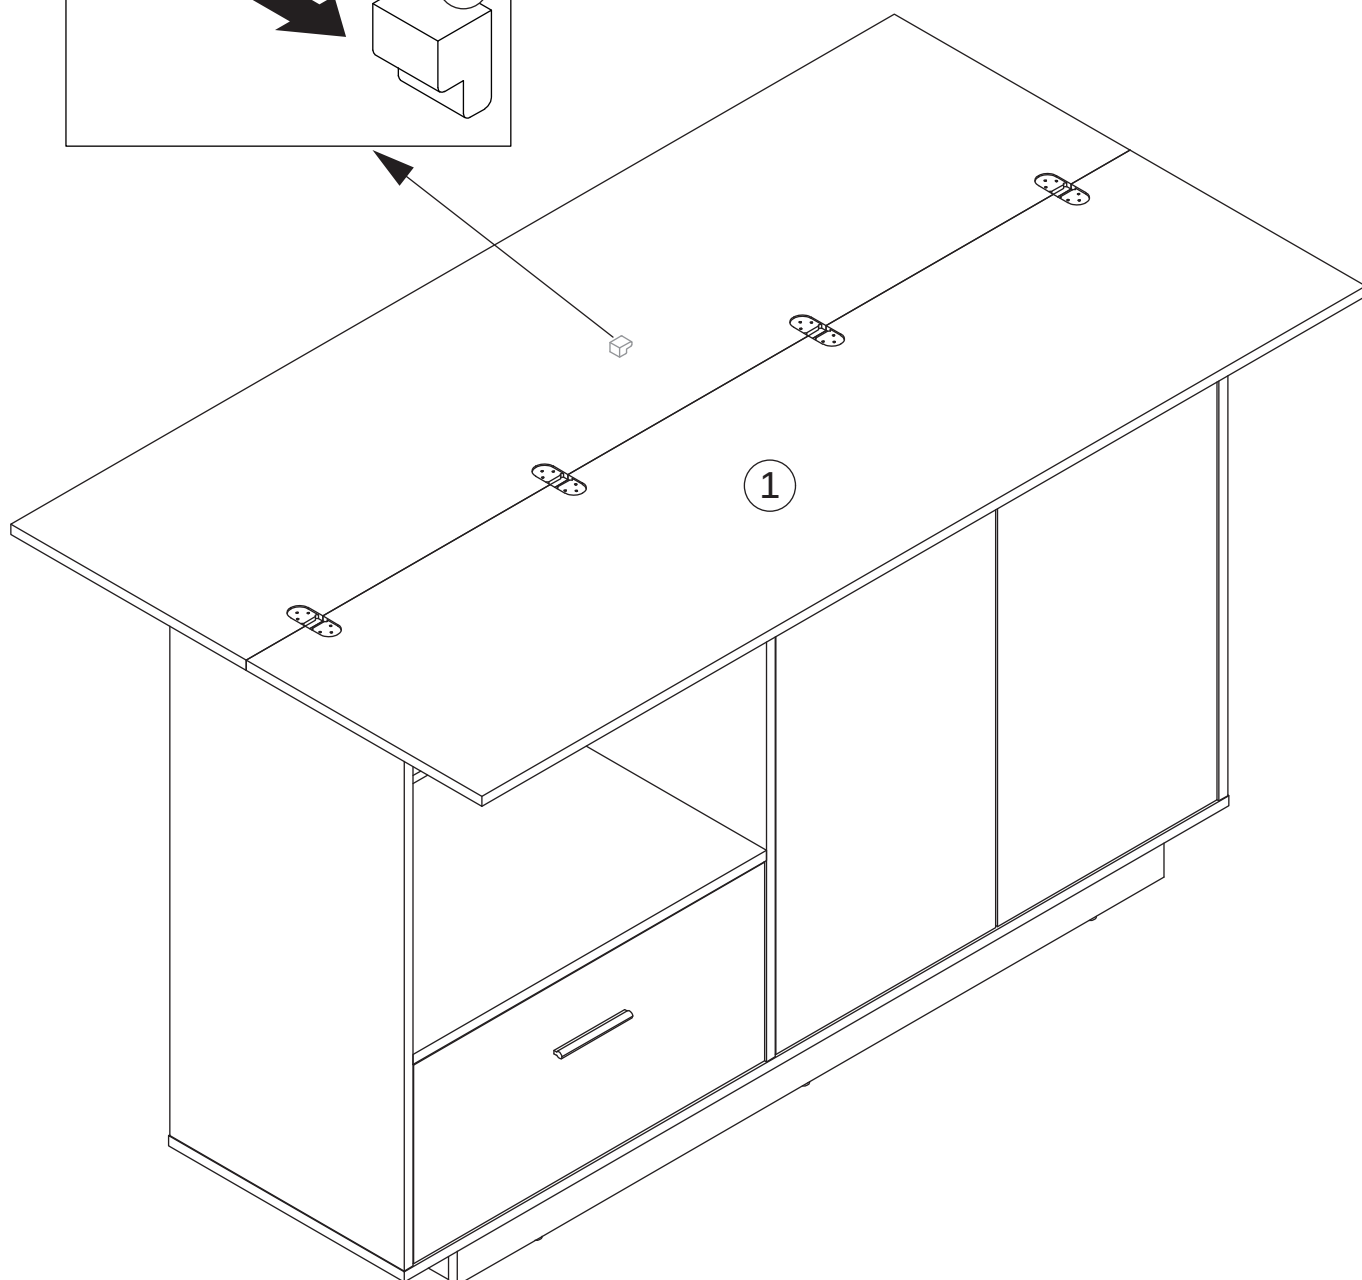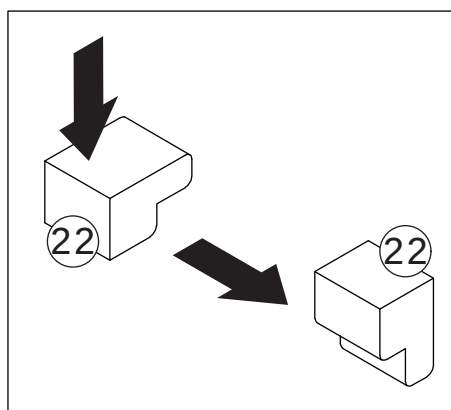


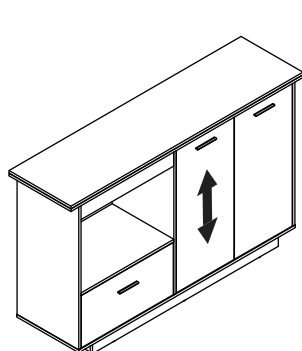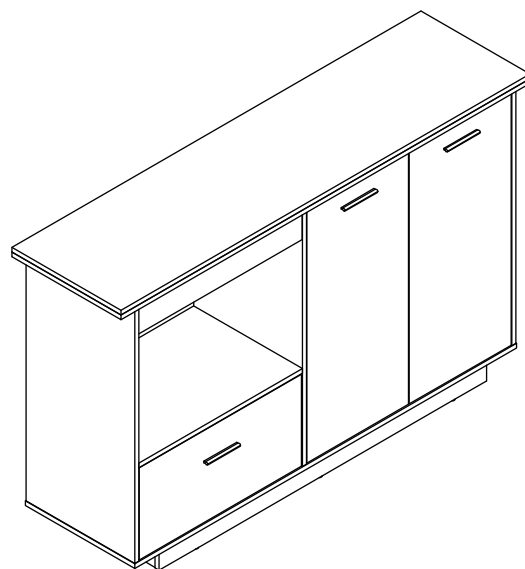



I

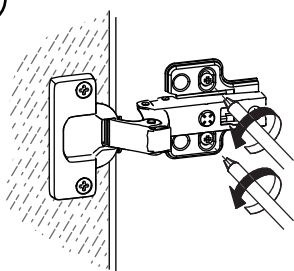 


II

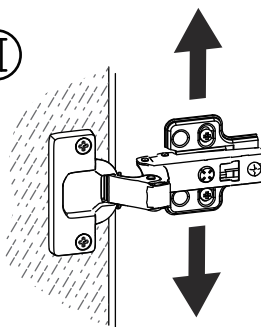 


III

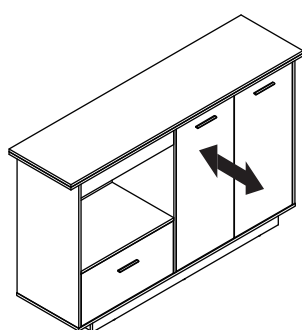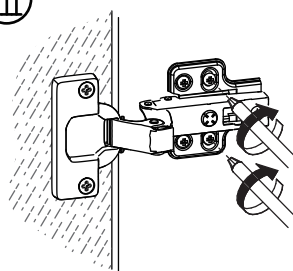  



I

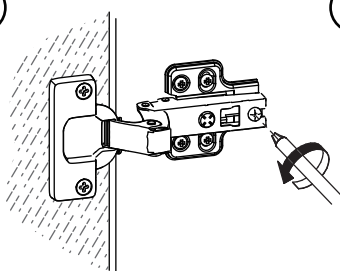 


II

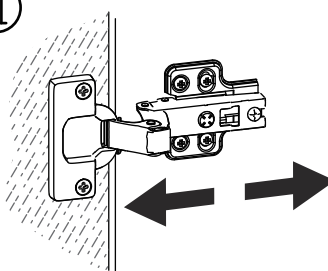 


III

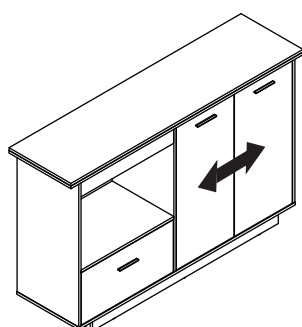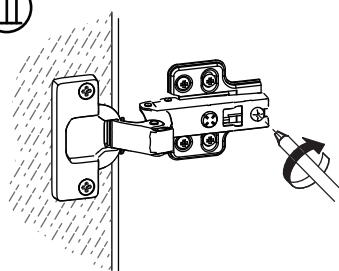  

I

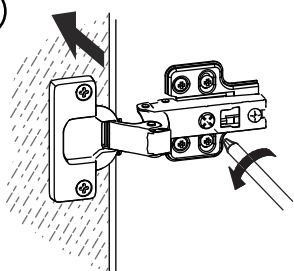 

II

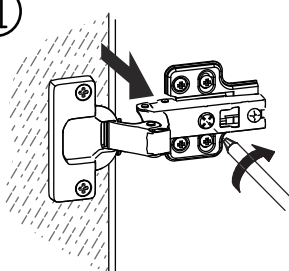 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.