

OWNER'S MANUAL

10FT. X 10FT. STRAIGHT LEG CANOPY



If you have any problem, please do not hesitate to contact us

Thank for choosing our tent!

Thank you very much for buying our products. Before signing for delivery Please check the tent, if it is damaged, please do not hesitate to contact us and take pictures of the damaged parts to send us by email before returning the product to our shop, We will give you the best solution.

It is your responsibility to read and save these instructions before attempting to set up your commercial canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your canopy.


1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your canopy and put you and others in potential danger. Please do not leave your sun shelter up during these conditions.
2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
3. Avoid setting up your canopy on steep inclines.
4. Keep your canopy away from heat and flames at all times. Do not barbecue or build fires under your canopy.
5. Never leave your canopy unattended.
6. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash fabric components.
7. Never fold or store your canopy when it is wet or damp. Let it dry completely to avoid mildew.
8. The frame **MUST** be staked or properly weighted down at all times.
9. Keep all flame and heat sources away from this sun shelter fabric.

Important Note:

1. If the light does not work, it is most likely that the battery is very low. Please leave it in the sun for 4 hours or charge it with USB
2. If The remote control doesn't work, maybe the battery is dead, please change the battery in time

SAVE THESE INSTRUCTIONS

DIAGRAM AND PARTS LIST

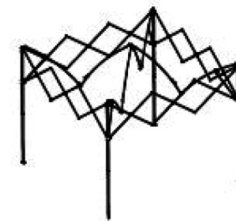

Canopy frame(1pc)



Top(1pc)




Backpack(1pc)




Stake(8pc)



Rope(4pc)

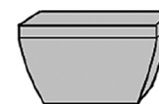

Solar receiver (1pc)

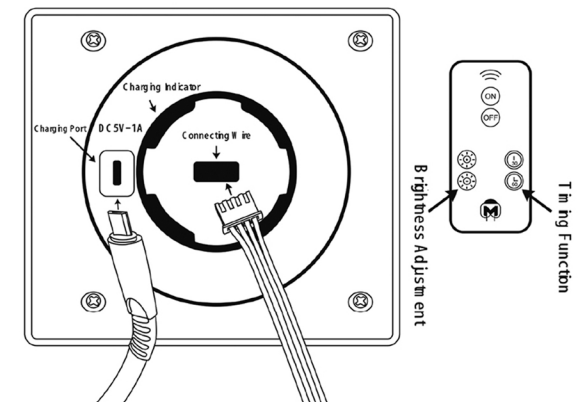

Solar Energy, Remote Control Inside
Please charge with USB before use. When The green light is on, it is fully charged

ASSEMBLY

STEP 1 : Verify package contents


Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

NOTE: Find the stakes in their pocket inside your carry bag. Verify all contents before you set it up.

STEP 2: Pull back the rack and put on the top cloth



Insert the wire into the solar panel, then align it and rotate it gently.

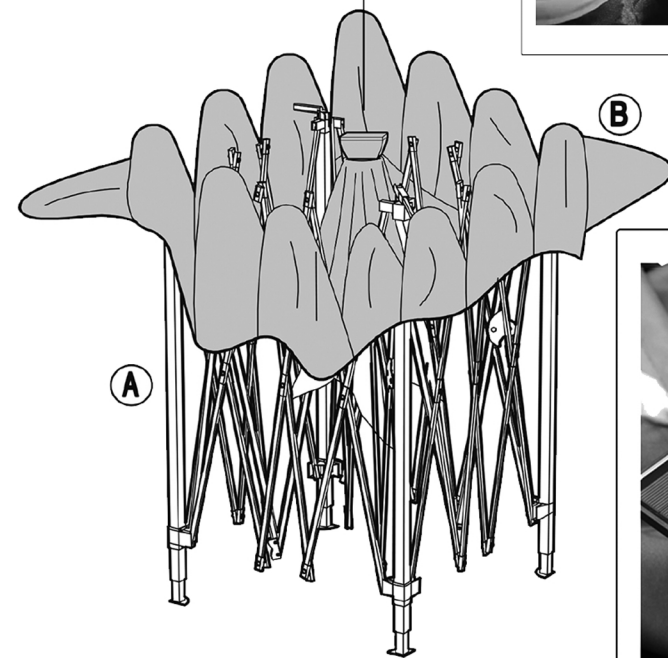

STEP 3: Cover the frame with fabric shell

A) Line up all corners, adjusting from opposite sides. Fabric will fit snugly.



B) Locate the nylon fasteners on the underside of fabric body, Attach to roof frame.

corners



inside top



STEP 4: Extend the legs

Step on frame leg base. Working from opposite sides, slide the roof lock mechanisms (located on upper leg portion) upwards until they lock into place.



TIP: You will hear and feel a click when the roof lock is correctly secured at each position

STEP 5: Stake canopy



To stabilize the canopy, unroll the guy rope on the corner of the canopy. Tie the other end to the stake and then drive the stake into the ground to secure. (Adjust the stake position to tighten up the guy rope.) Repeat for each guy rope.



DISASSEMBLY

Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

STEP 1 : Remove the stakes

Carefully remove stakes by pulling out the hook ends.

Remove excess soil from the stakes and store them in their bag.

STEP 2: Take down the canopy

A) Remove any accessories if installed. Fold for storage.

B) Press the push button located in the middle of each leg, and carefully lower each leg making sure all legs are level before proceeding. Repeat until frame is lowered to ground.

C) Remember the fasteners are inside roof line, on side scissors bars, and at corners. Detach all fasteners and remove fabric completely off frame and fold for storing.

NEVER STORE FABRIC ON FRAME. YOU MAY DAMAGE FABRIC, FRAME, OR BOTH.

D) Press the push buttons found on each leg at each upper corner of frame, making sure that all sides are detached from snap button. Slowly slide roof line downward while walking in. This should collapse frame completely.

STEP 3 : Store in carry bag

A) To prolong the life of your canopy, you will want to store it correctly.

B) Return stakes into their stake bag and place along side frame

C) Lastly, place folded fabric on top of frame legs, making sure all is completely tucked inside carry bag. Carefully zip carry bag closed.

Note: After fully packing the bag, double check the bag contents and surrounding area for loose parts.

MAINTENANCE

- **Maintain your canopy.** It is recommended that the general condition of any canopy be examined before it is used. Keep your canopy in good repair by adopting a program of conscientious repair and maintenance. Have necessary repairs made by qualified service personnel.
- **Store idle canopy.** When **canopy** is not in use, store it inside, and in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.
- **Always check of damaged or worn out parts before using the canopy.** Broken parts will affect the **canopy** operation. Replace or repair damaged or worn parts immediately.

For replacement parts and technical questions, please contact our customer service.