

OUTDOOR WOODEN CRECHE ASSEMBLY INSTRUCTIONS

HARDWARE

You will need a Philips screwdriver to assemble this item.




FOLDED WOODEN
CRECHE ROOF: 1PC



FOLDED WOODEN
CRECHE BACKDROP: 1 PC



METAL CORNER BRACKETS: 4 PCS
SMALL METAL SCREWS: 8 PCS
(2 PCS- right corner brackets,
2 PCS - left corner brackets)

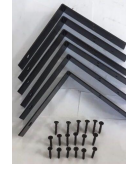

METAL L-BRACKETS: 6 PCS
LARGE METAL SCREWS: 18 PCS



METAL GROUND
STAKES: 6 PCS

ASSEMBLY



STEP 1

Please choose a level area to set up the display. Extend the sides out as shown in the diagram above.



STEP 2 (2 People required)

Unfold Roof so that it is flat. Place Roof onto posts and connect to the wooden dowels on the Backdrop.



STEP 3

Using the small screws, screw in corner brackets at inside position of posts (right and left) as shown in the diagram above.



STEP 4

For increased stability, use the large screws to attach the L-Brackets to the outside bottom positions of posts (front and back).



STEP 5 (if displayed outside)

Insert 6 ground stakes through the L-Brackets to secure the wooden creche to the ground.



STEP 6

Fully assembled wooden creche.