




the light wire to the
mp plug.



the water pump to
on the main body.

Step 3

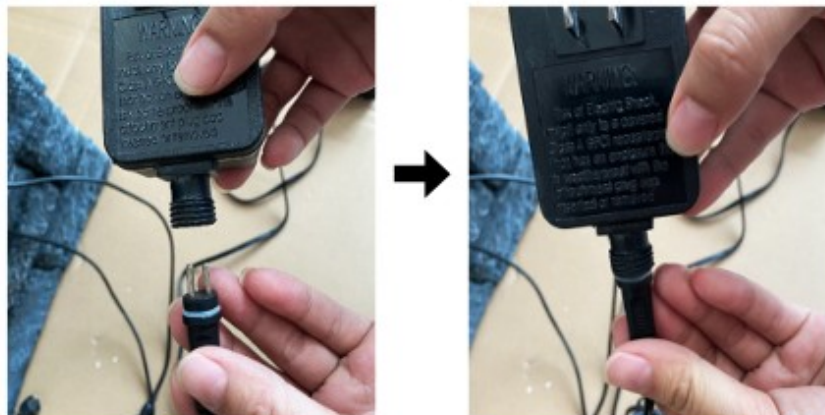

Connect the water pump to the power cord
plug and organize the cords into the main
body. Add water to submerge the pump
before plugging it in.

Step 4

Installation
is complete

If you have any questions,
please contact customer service.

If all the accessories are assembled, but no water comes out, or if it has been running for a while but the water fountain fails to flow, after disconnecting the power, there may be air accumulation in the pipe blocking the flow. The following steps can be tried:

Unplug the power, remove the water pipe of the water pump, blow out the air trapped in the water pipe by blowing into it, reconnect the water pipe and plug the power again.