
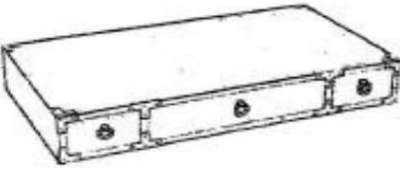



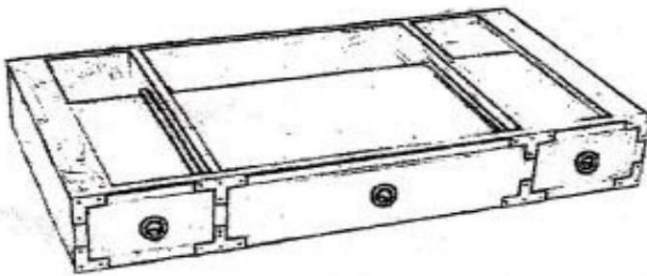




## ASSEMBLY INSTRUCTION OF CAMPAIGN DESK

1- Table top 	2- LEGS PAIR 	1- STRETCHER 	6- SCREWS  1- L-end key 
---	---	--	---


1. Keep the table top upside down on a clean surface.

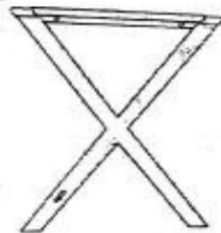


2. Fix screws on the front of both the legs, with the help of L-end key, as shown.

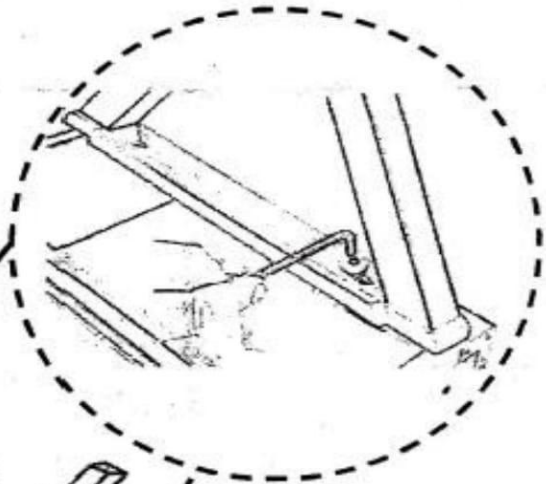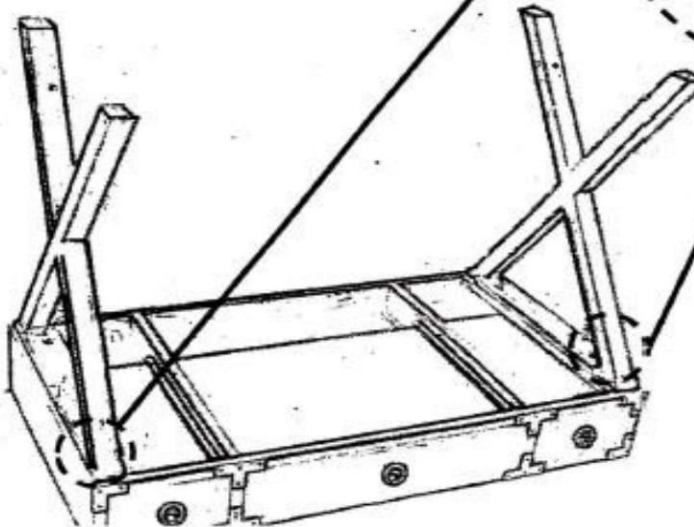

3. Fix the stretcher on both sides of back legs with the help of bolt and L-end key.

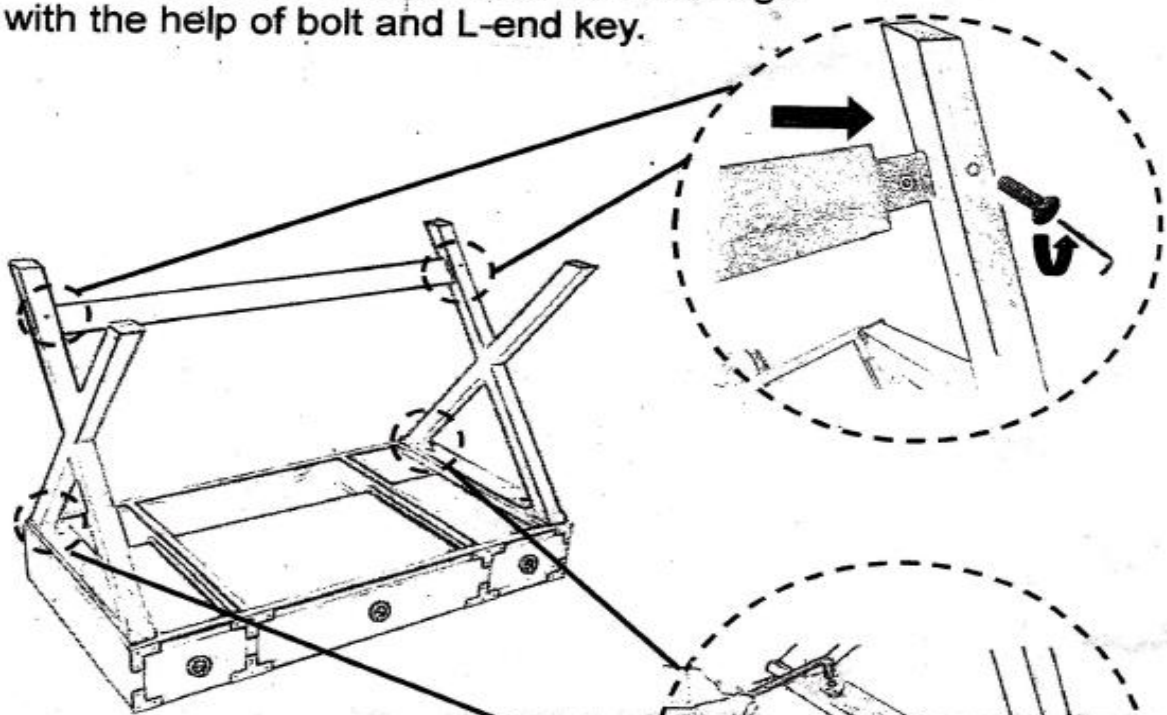

4. Now fix back of both legs with the table top, with the help of bolt and L-end key

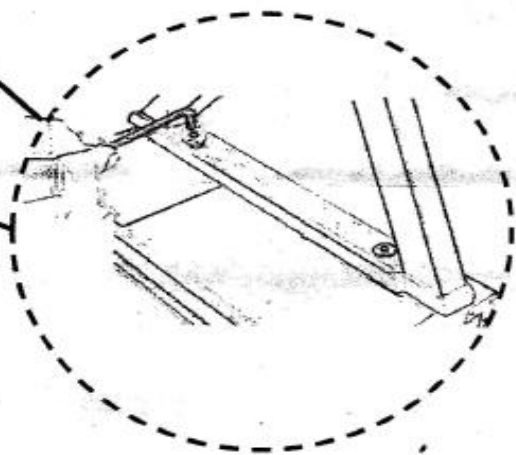

5. Keep the table in upright position.

