

# LED Panel Light Installation Instructions

Thanks for using our products. Please read these installation instructions before installing the luminaire, and keep them for future reference.


# Technical Data


| Product Name    | Dimensions | Input V olta ge | Frequency | Power Consumption | Installation Method  |
|-----------------|------------|-----------------|-----------|-------------------|--|
| LED Panel Light | 303x1213mm | 120-277Vac      | 50-60Hz   | 40W               | Recessed in plaster or grid ceilings<br>Utilization of Earthquick Clips<br>Surface - Mounted |
|                 | 603x603mm  | 120-277Vac      | 50-60Hz   | 40W               |  |
|                 | 603x1213mm | 120-277Vac      | 50-60Hz   | 50/70W            |  |

# Warning

- Luminaire must be installed, checked and repaired by an authorized electrician.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- For proper operation, make sure to connect the luminaire to the proper voltage and install it according to these instructions.
- For safety purposes, cut off the power and allow the luminaire to cool before installing or removing it.
- Don't install the panel light to an unstable ceiling or near combustible materials.
- · Cut off the power if there are any unexpected occurrences.
- Do not alter or modify the luminaire or change any of the components.
- Do not use the luminaire under conditions of direct sunlight, humidity, fog, rain, corrosive gas, dust, or liquid.

### Wire Connection

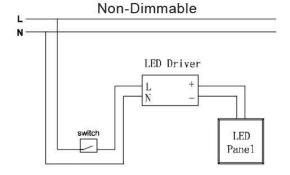

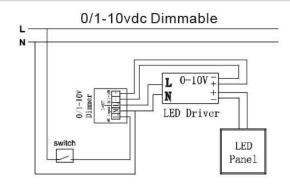









# Installation Instruction

# Recessed In Plaster Or Grid Ceilings

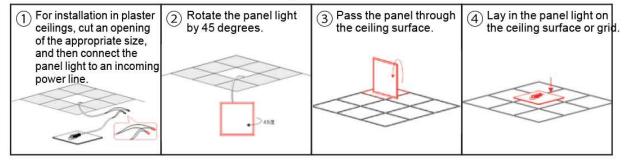

# Utilization of Earthquake Clips

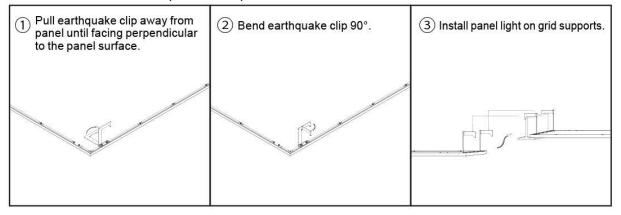

#### Surface-Mounted Installation

