

ASSEMBLY INSTRUCTIONS

WF195066-DINING TABLE

PLEASE DO NOT RETURN PRODUCT TO STORE

If you have any problem or concerns, please feel free to contact our customer
Service department. We will reply you as soon as possible



E-Mail: csr@merax.com


Tel: 626-912-8886 Ext.100

IMPORTANT NOTE :

 

 

 

 


** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID
THE PARTS FROM BEING SCRATCHED.

** BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

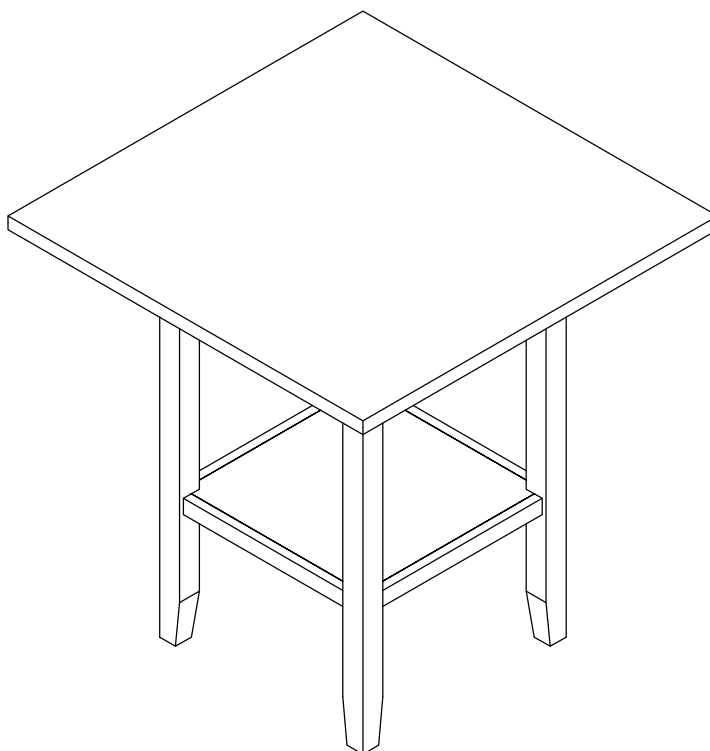**DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.




CARTONS ONLY ONE/ CARTONS SEULEMENT UN

PART LISTS				HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	Q'TY	NO.	DESCRIPTION	SKETCH	Q'TY
1	TABLE TOP		1 PC	A	BOLT Ø5/16" x 30mmL		10 PCS
2	LEGS		4 PCS	B	BOLT Ø5/16" x 50mmL		8 PCS
3	SUPPROT		2 PCS	C	SPRING WASHER Ø1/4" x 13mmL		18 PCS
4	SHELF FRAME		1 PC	D	FLAT WASHER Ø1/4" x 19mmL		18 PCS
				E	ALLEN KEY		4 PCS


ASSEMBLY INSTRUCTIONS

STEP 1:

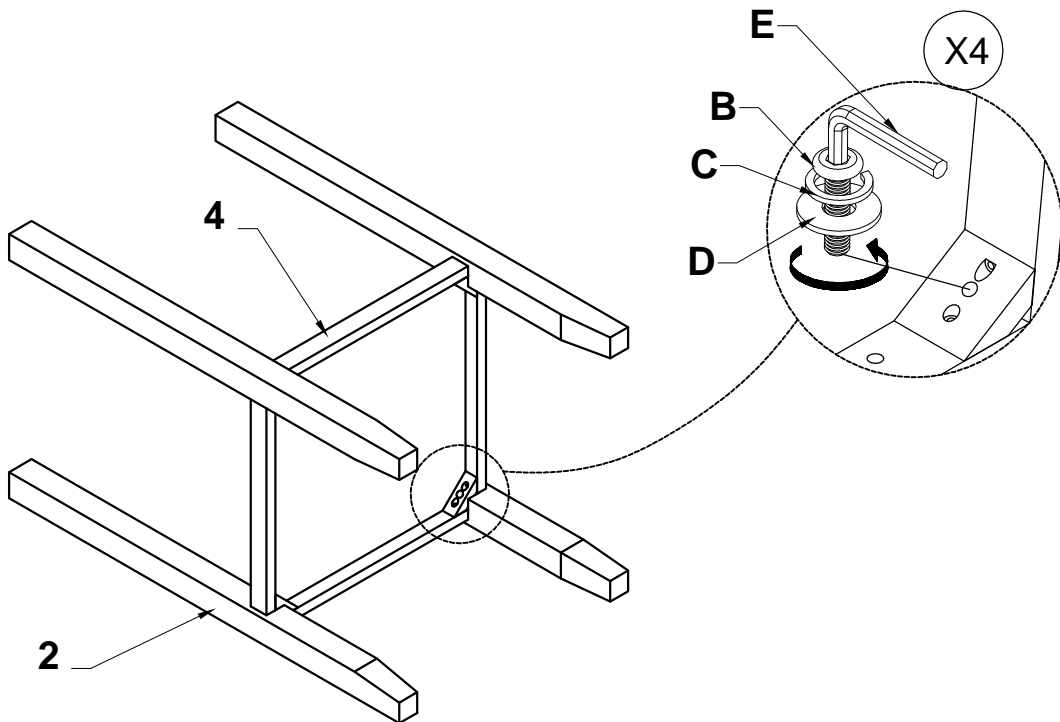


ASSEMBLY INSTRUCTIONS

STEP 2:

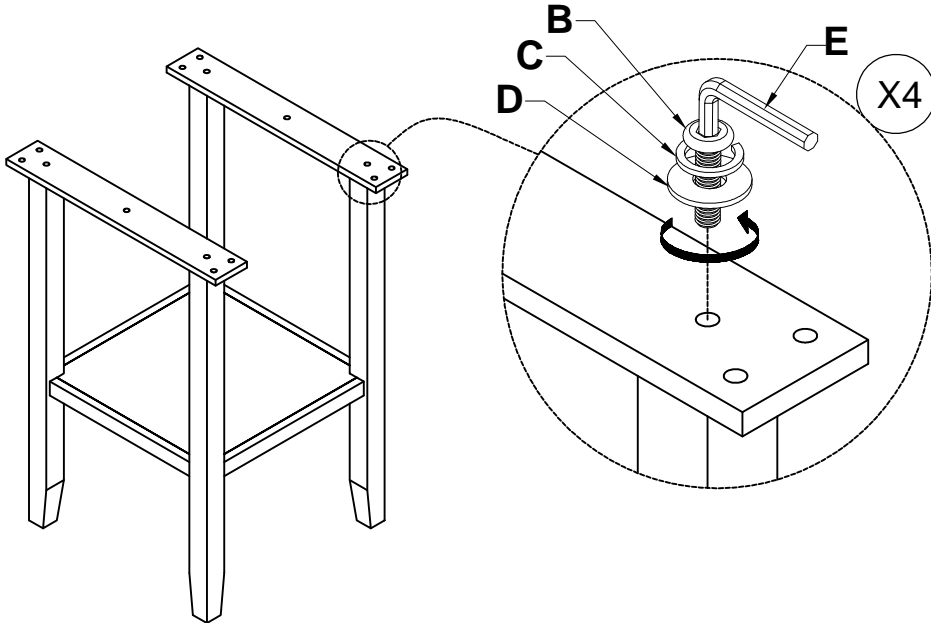

STEP 3:

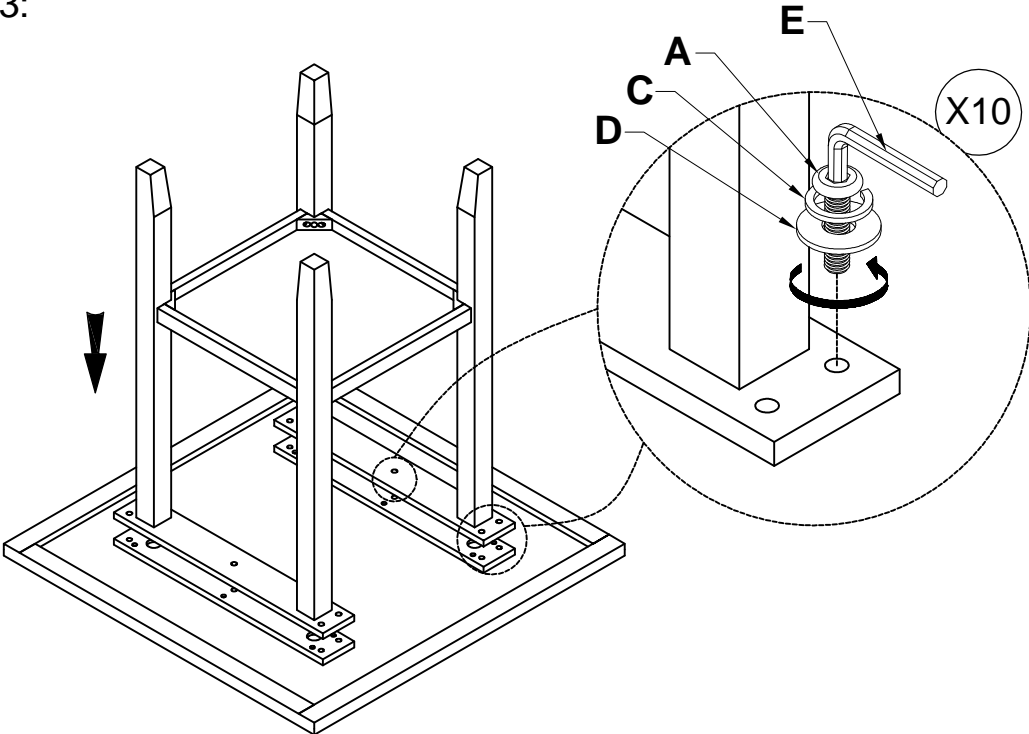

ASSEMBLY INSTRUCTIONS

STEP 4:

