



 


ASSEMBLY INSTRUCTION LOVESEAT




Legs and hardware are stored in box and place on seat, please take out for assembly.


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

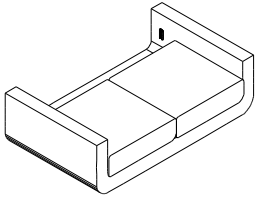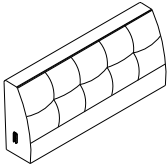NO.	DRAWING	QTY	DESCRIPTION
A		1	LOVESEAT
B		1	BACK REST
C		4	WOODEN LEG 2.5"*2.5"*7.25"
D		12	BOLT 5/16"*3/4"
E		12	FLAT WASHER 5/16"*19
F		12	SPRING WASHER 5/16"*12
G		1	ALLEN KEY 5/16"


STEP 1:

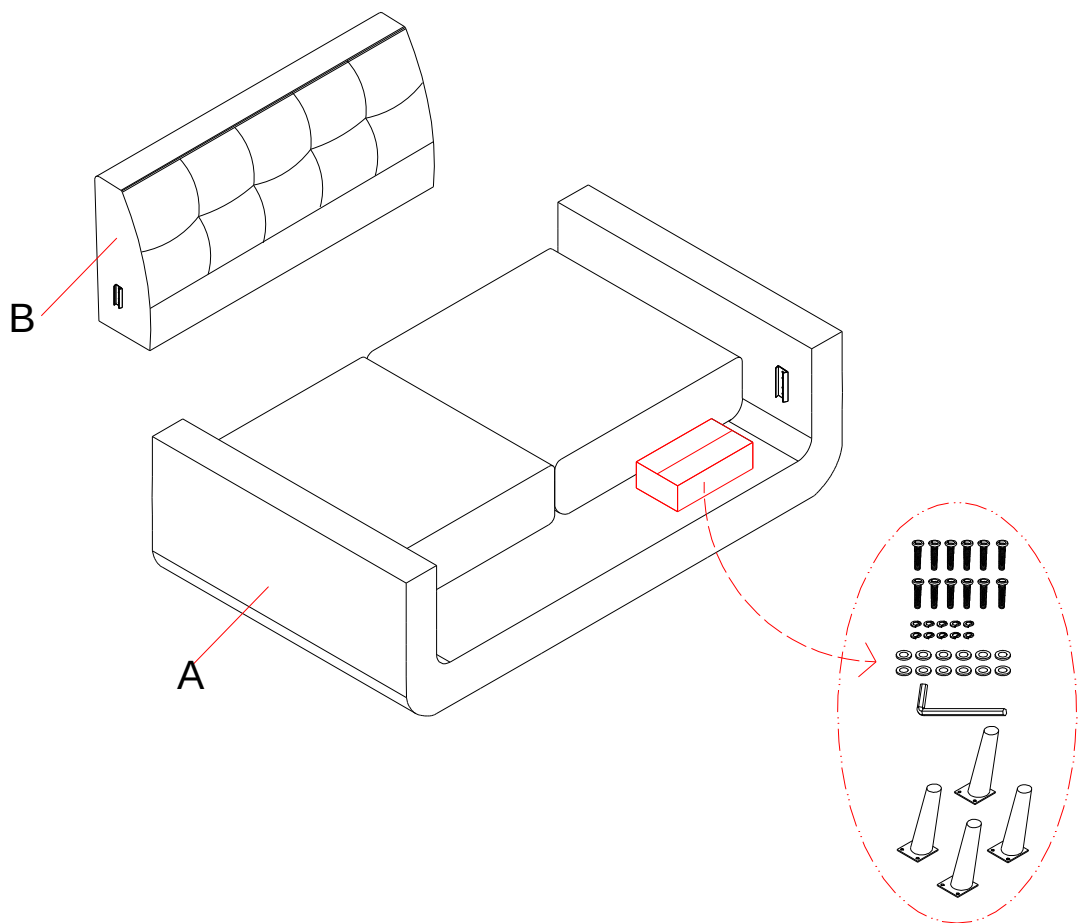


STEP 2:

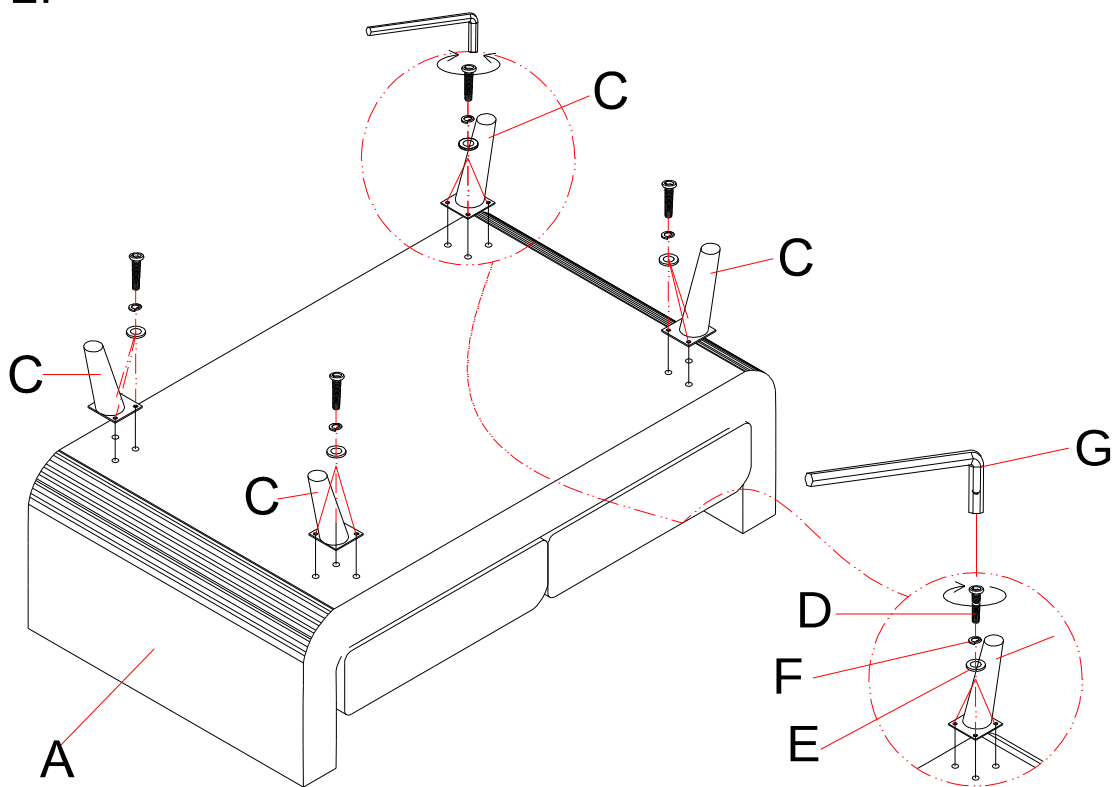

STEP 3:

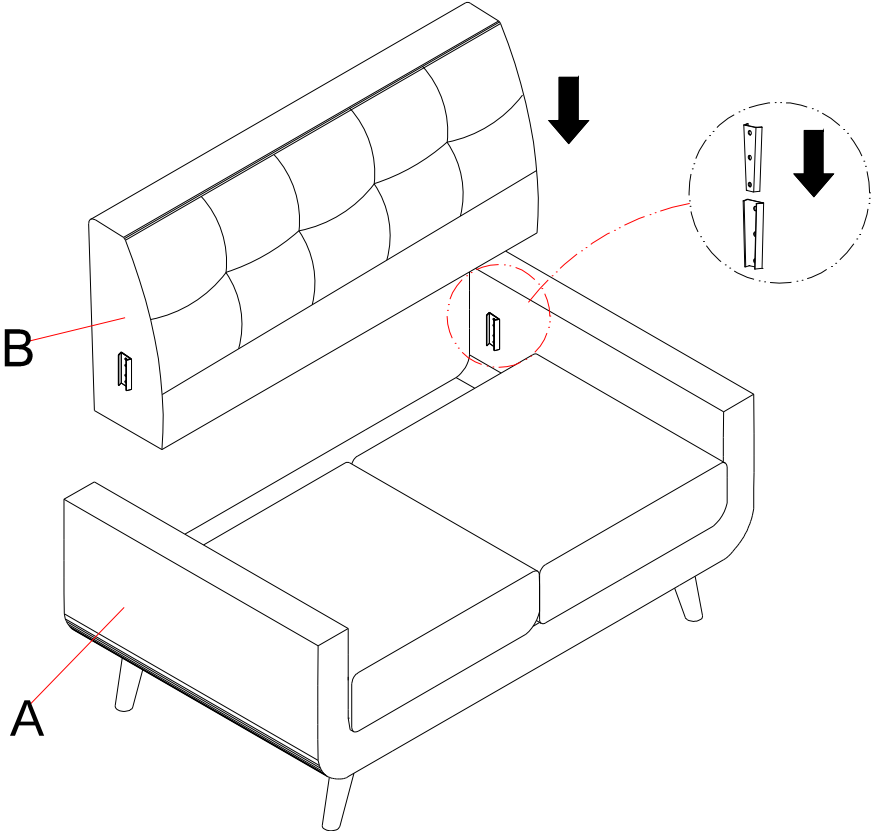

STEP 4:

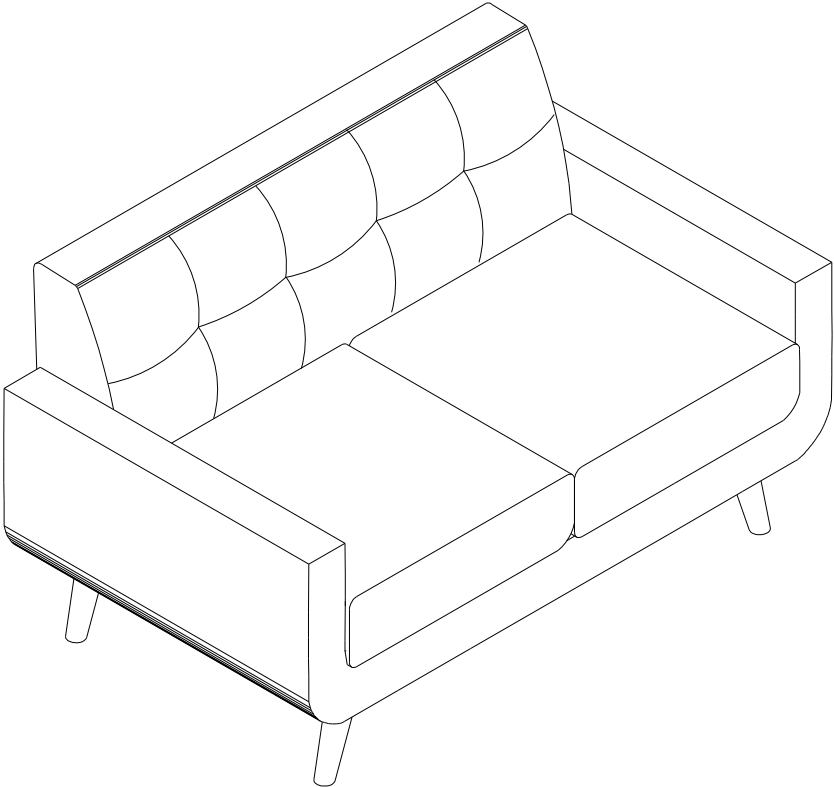

Care instruction for 100% polyester furniture.

In order to maintain the original appearance of your 100% polyester furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage fabric.
- Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a cloth regularly to remove dust.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches discoloration.