 


Swivel Curved Sofa

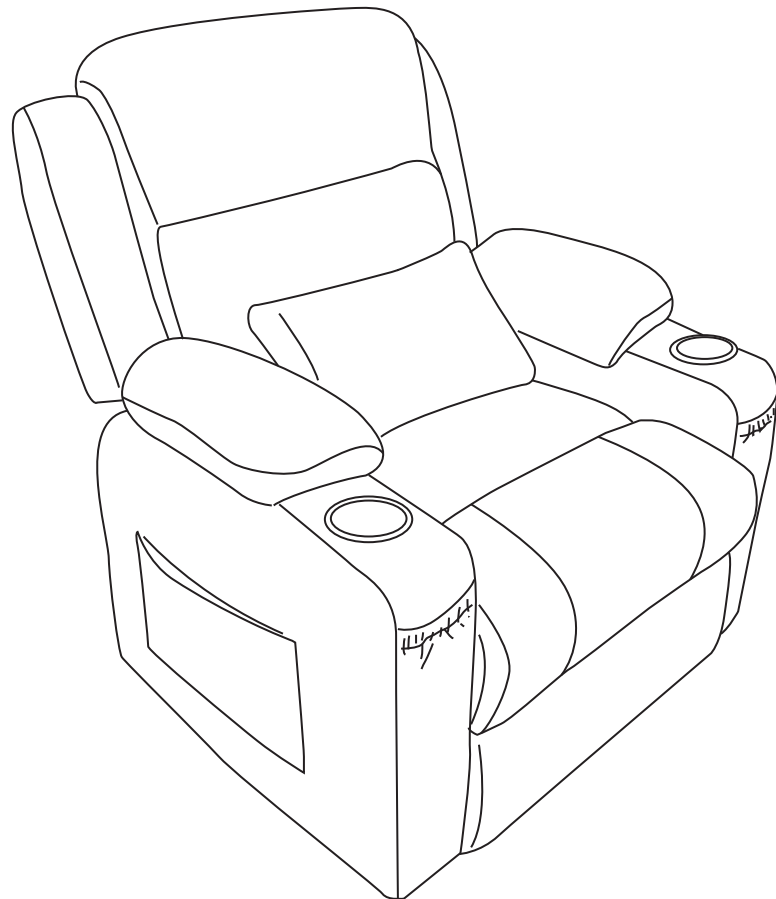 


Brand Introduction

With decades of cooperation with global renowned brands such as, etc, we know the importance of laying stress on products, especially on design, research & development and quality.

Based on the creative vision under the theme of art, nature and elegance, sailed the journey which aims at making each item refined and exquisite, turning each piece of furniture into a true work of art.

We are eager to satisfy every customer from different cultural and custom background with unique elegance and craftsmanship.

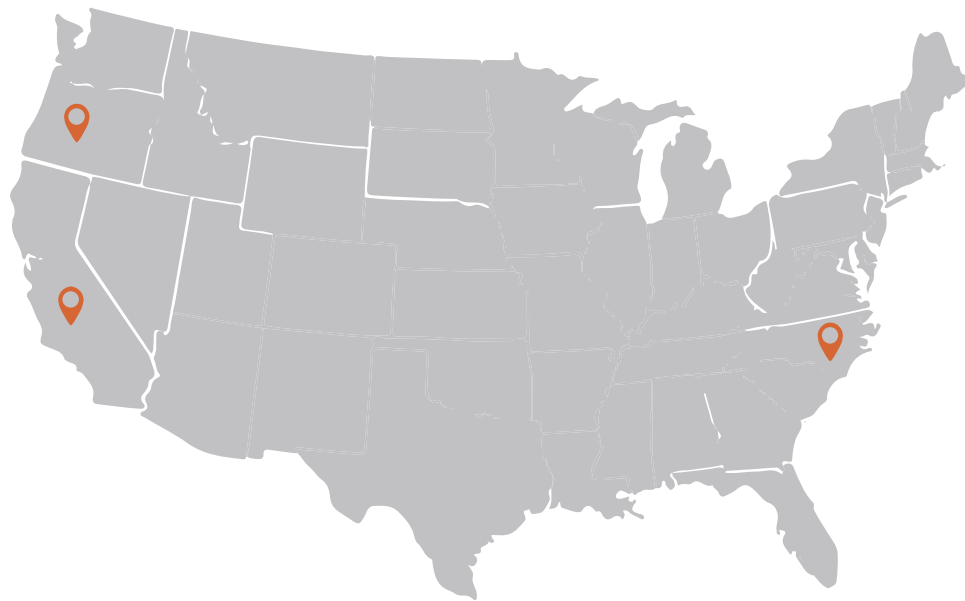

Brand Philosophy

Creativity knows no boundary.

Quality is of ultimate importance.

 
 
 
 
 
 
 
 
 
 
 
 
 
Mission & Value

We are passionate to create new styles and bring you an unforgettable furniture experience.


Company Introduction

We have been running our own overseas factories for more than 10 years, the cooperation with world-class furniture companies enables us to establish our team in the USA, Europe and Asia, they are not only persistent to tap the potential market, but also attach great importance to the latest trend and vogue in the industry.


Assembly Instruction

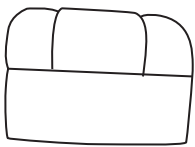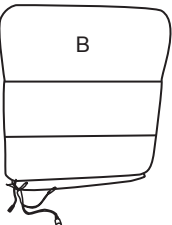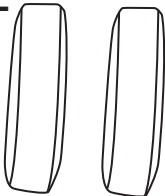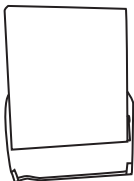Ax1  Chair base	Bx1  Backrest	C-Lx1  Left armrest	C-Rx1  Right armrest
Dx1  Rear crossbeam	Ex1  Front crossbeam	Fx2  Left and right ears	Gx2  Latch insert piece
Hx4  Wheel	Ix1  Backrest	Jx1  Motor	Kx1  Cushion
Lx1  Power cord	Mx1  Remote control	Nx2  Cup holder	Wx2  Latch insert piece
Ox10  M8*20mm	Px16  M6*16mm	Qx4  M6*10mm	Rx1  M5
Sx1  Wrench	Tx2  Ø10 x 40mm	Ux2  R-pin	Yx1  Remote control
Zx1  Power cord	Vx2  Latch insert piece		

 
1

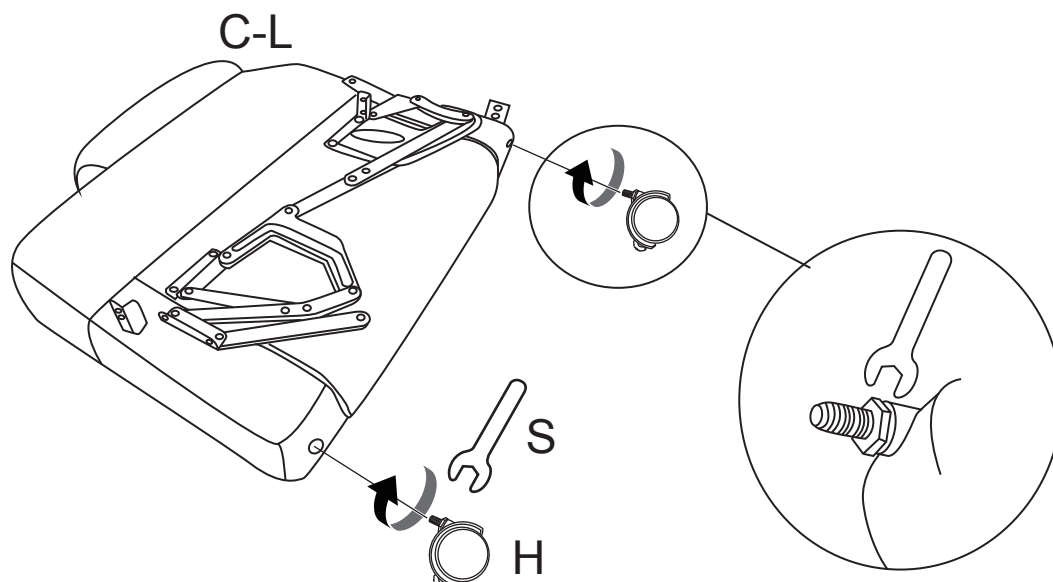

2

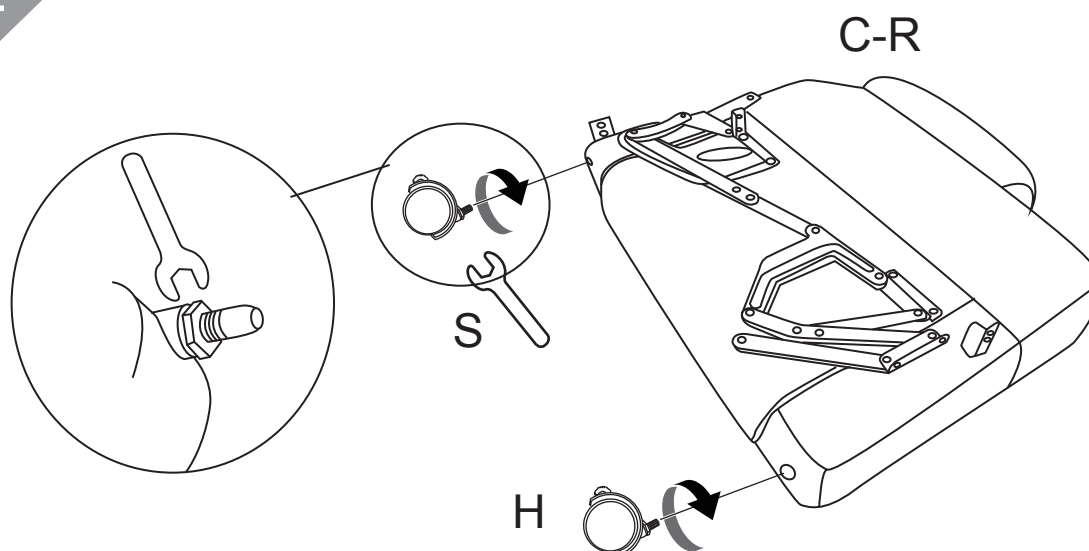 


3

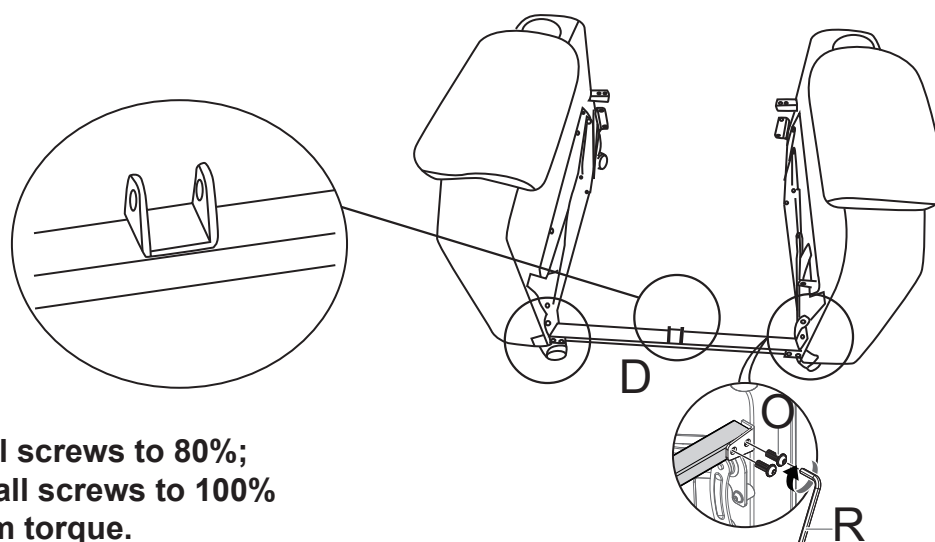 


First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 4

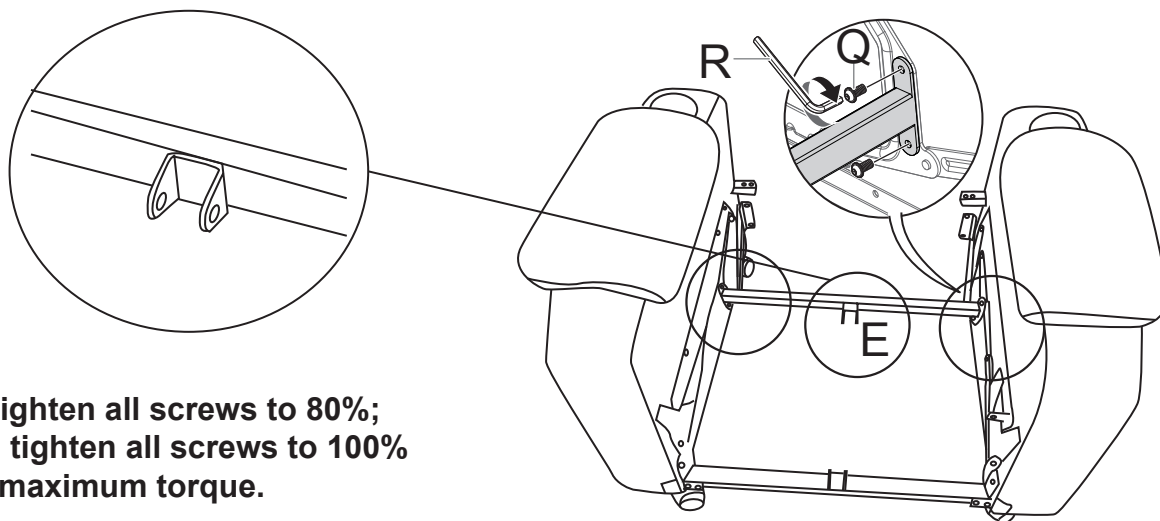


First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 5

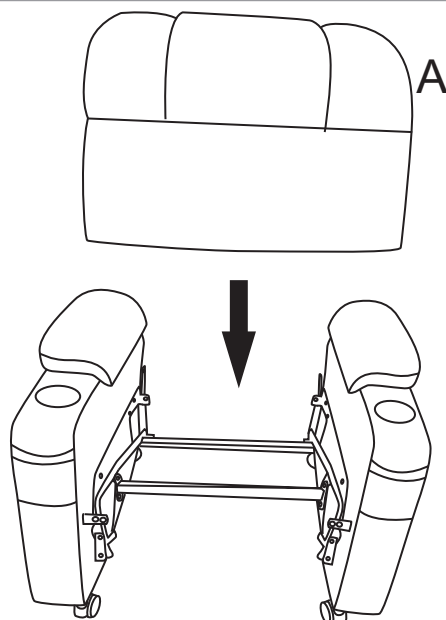


6

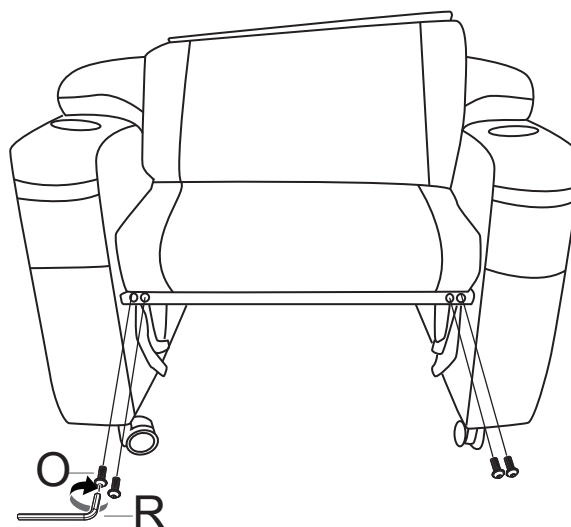 


First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 7

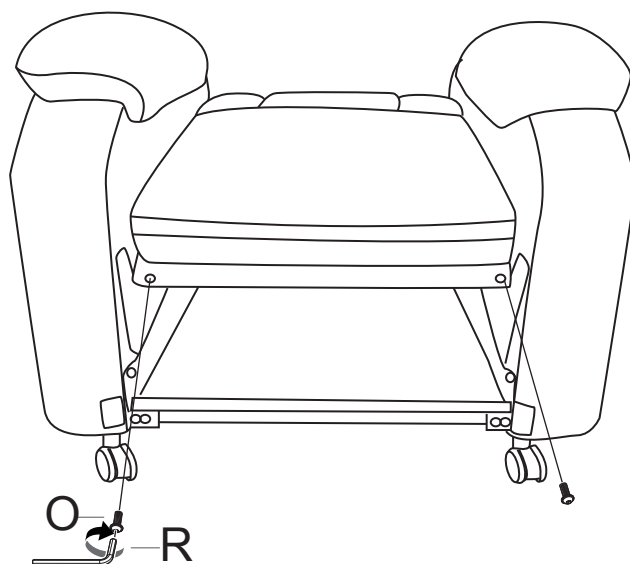


First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 8

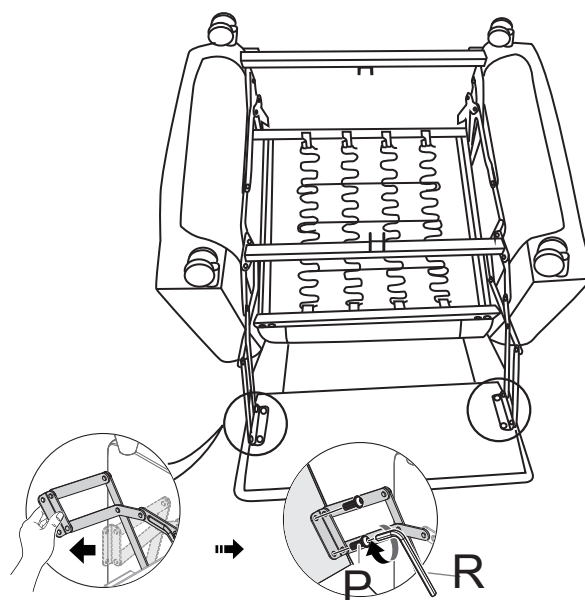




First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 9

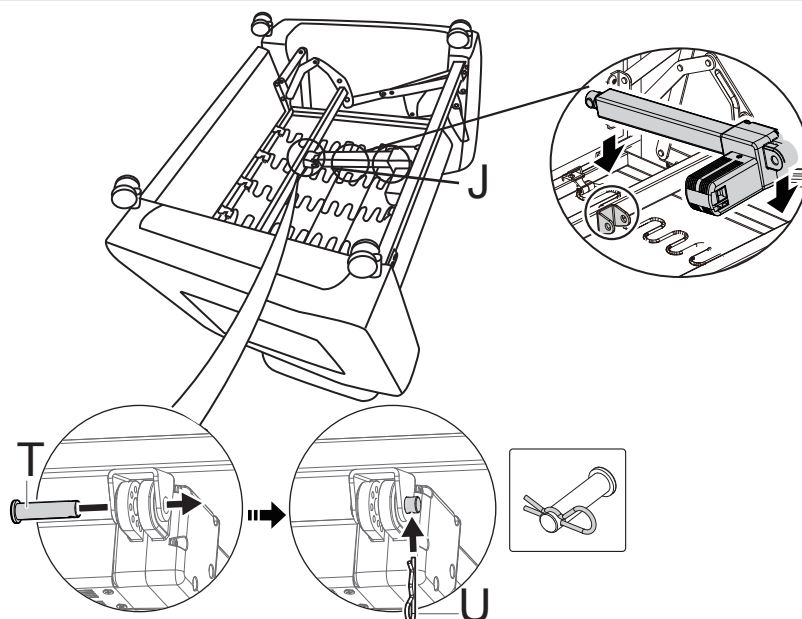


10

   Remove from compression bag.

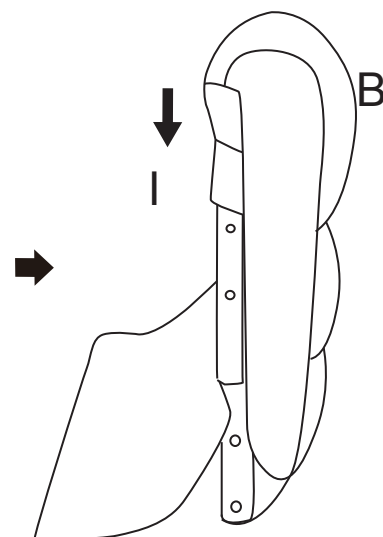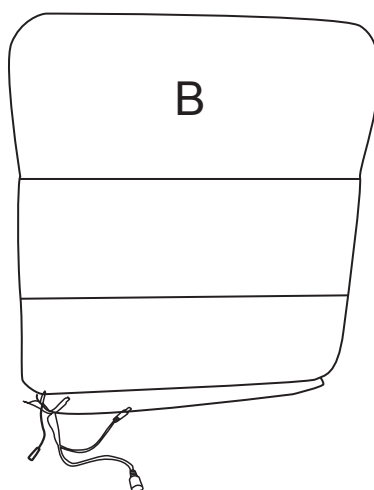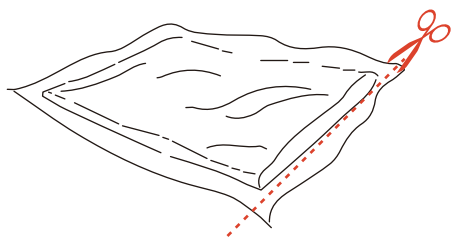



11

 First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

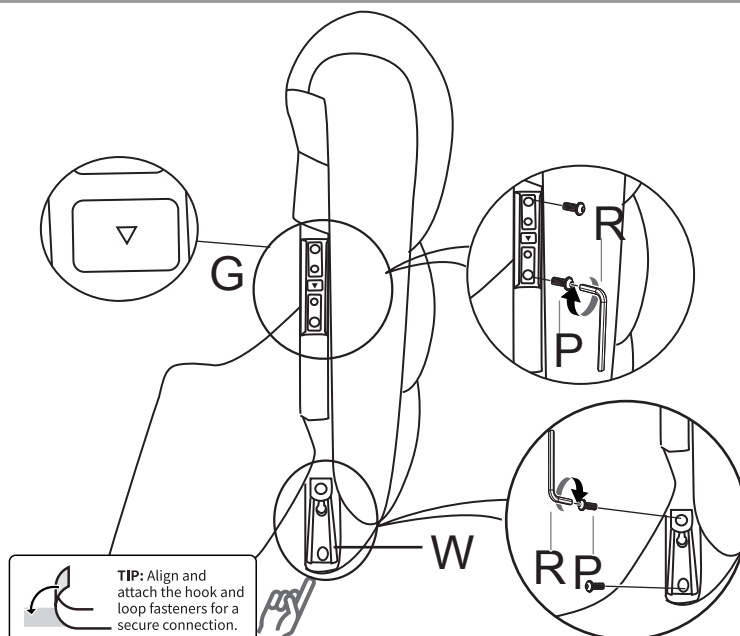


12

  Remove from compression bag.

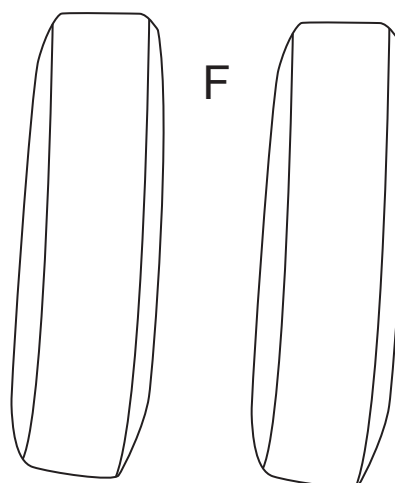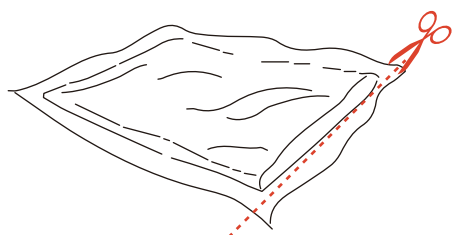


13

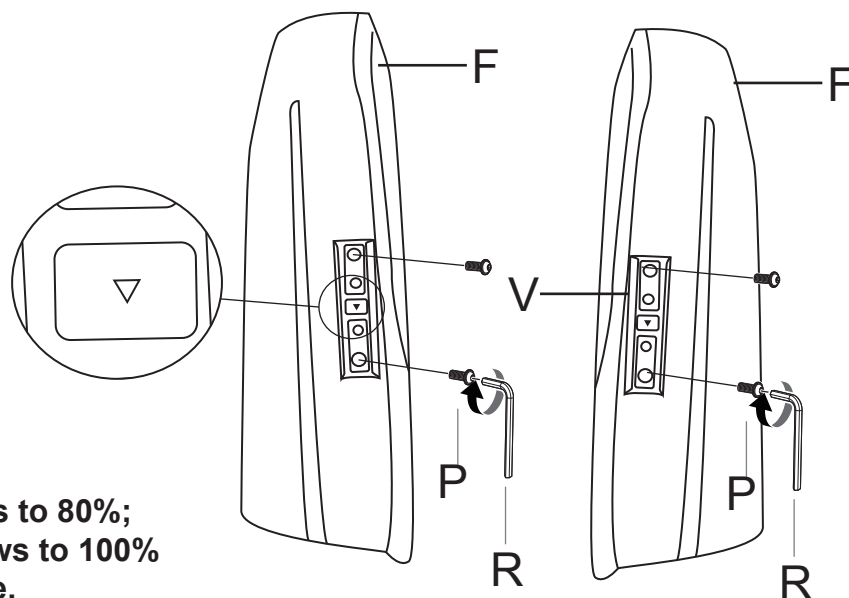 


First, tighten all screws to 80%;
finally, tighten all screws to 100%
of the maximum torque.

 
14

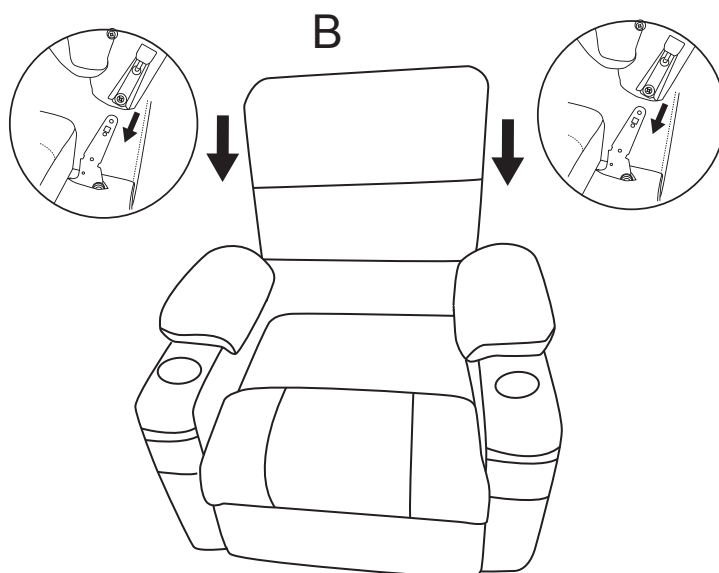

15

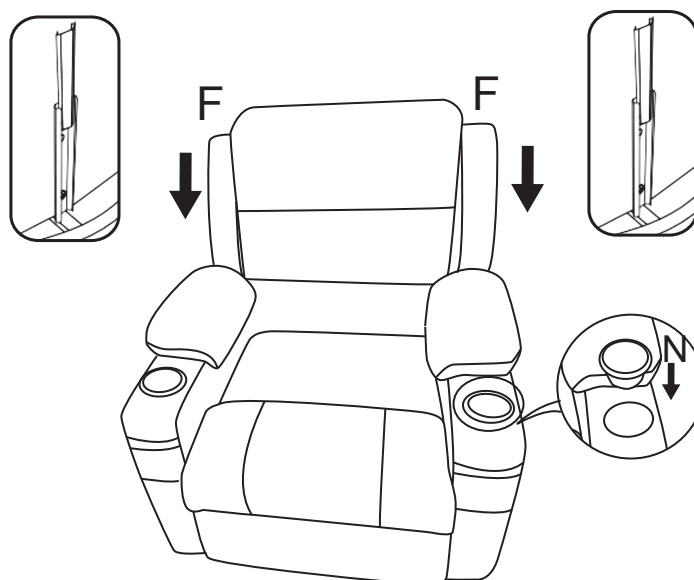 


16

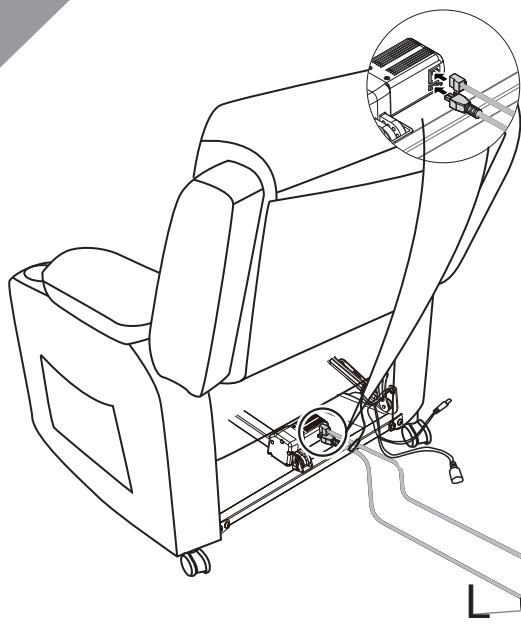 


No.1 and No.2 wire connect with the backrest and chair base.
No.3 wire connects with backrest and power cord(D).
No.4 wire connects with backrest and remote control(E).

 
NOTE: Two same color wires connect.

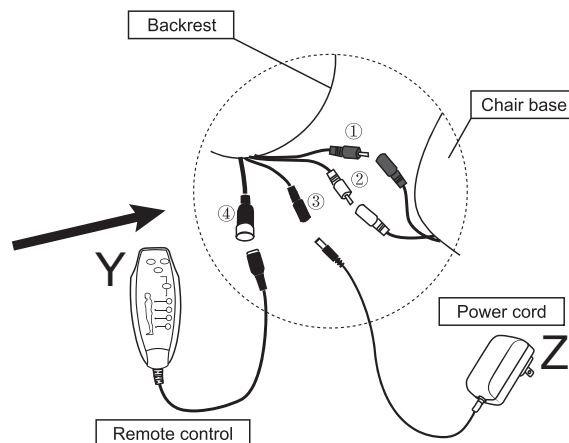

17

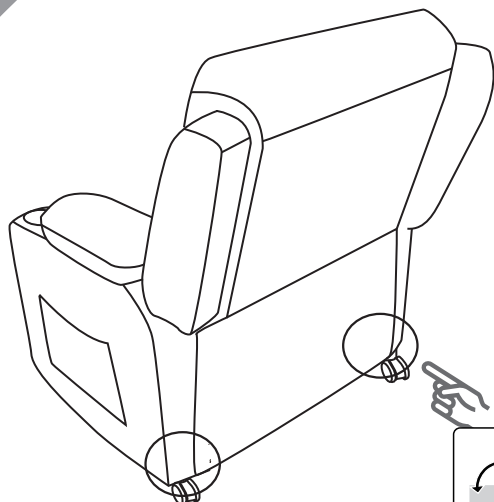 


 TIP: Align and attach the hook and loop fasteners for a secure connection

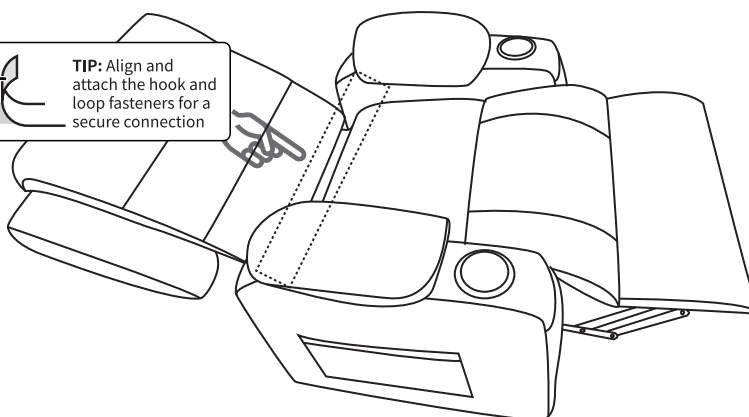


TIP: Align and attach the hook and loop fasteners for a secure connection

 
18

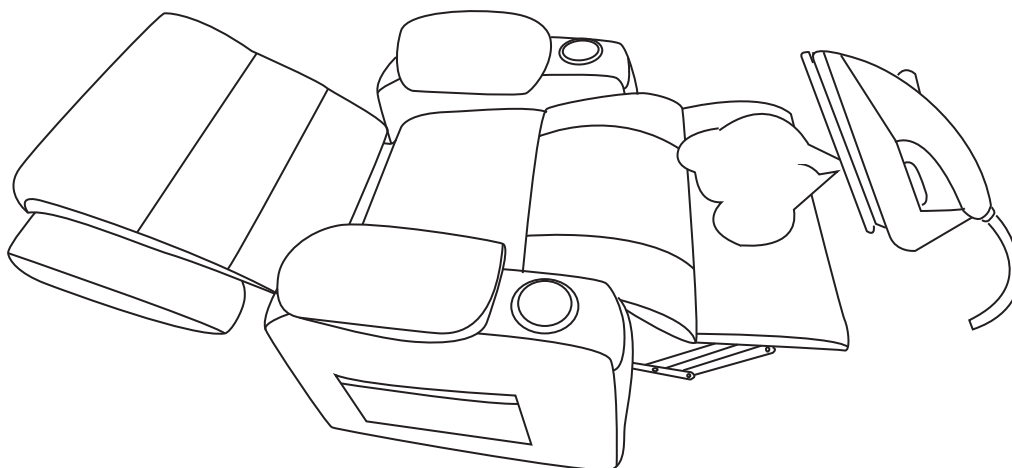

 
After installation, the fabric wrinkles can be ironed.

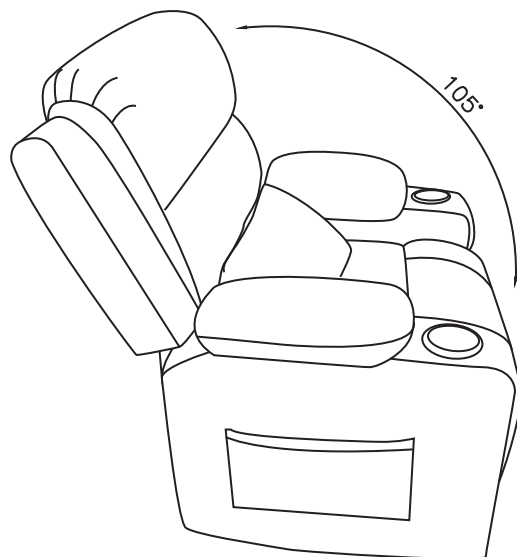

Sitting posture

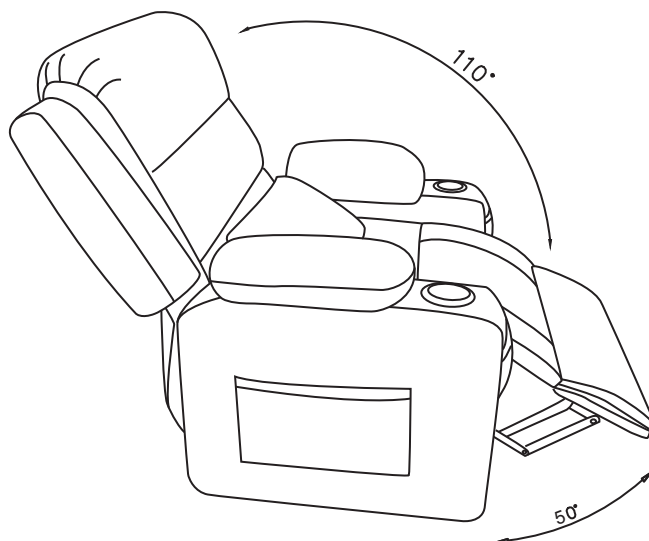 


TV posture

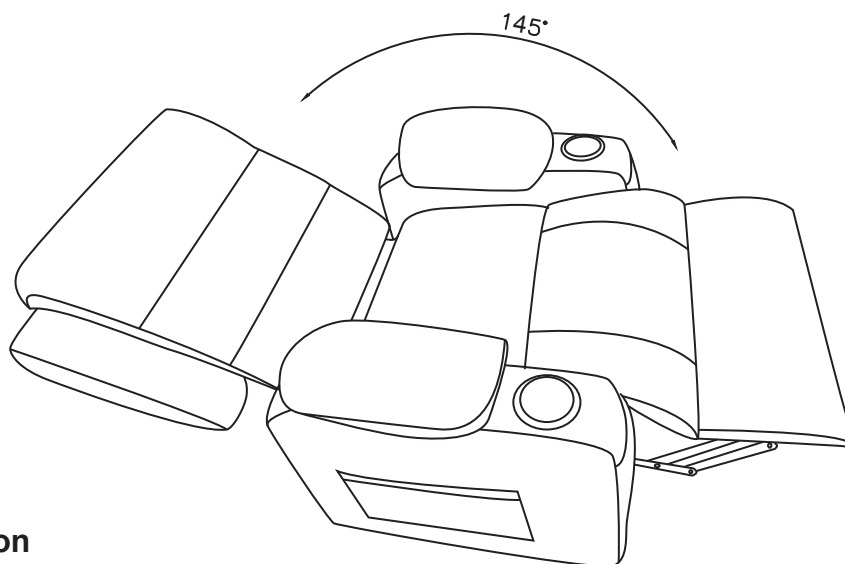 

Lying position

 How to use remote control?

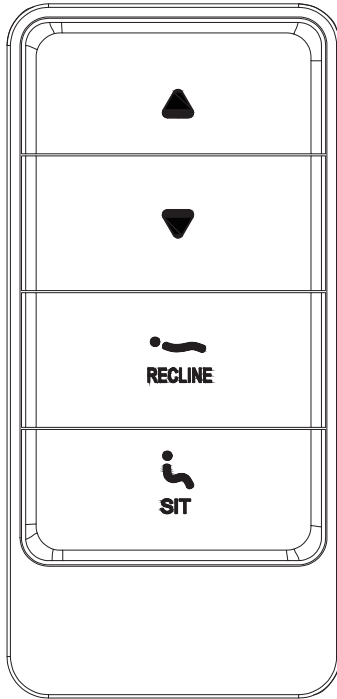

1. Sofa Position Control:

 : Short press for incremental movement; press and hold for continuous movement to extend the sofa.

 : Short press for incremental movement; press and hold for continuous movement to retract the sofa.

 **RECLINE** : Short press to extend the sofa to the fully reclined position with one touch.

 **SIT** : Short press to retract the sofa to the sitting position with one touch.

2. Reset Function:

Press and hold  **RECLINE** +  **SIT** button simultaneously for 10 seconds to start automatic reset.

The reset process can be interrupted. If interrupted, press and hold  **RECLINE** +  **SIT** button again for 10 seconds to re-enter the reset mode. Normal operation resumes after the sofa retracts fully to the lowest position and rebounds.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY !!!

WARRANTY

The promises to repair or replace any product or component that is found to be defective in material or workmanship within one (1) year from the date of original purchase w so long as you, the original purchaser, still owns it. This is your sole and exclusive remedy. This arranty is subject to the provisions below.

Limitations:

Upholstery on chairs is warranted for one year from date of purchase.

Damage caused by the carrier in-transit is handled under separate terms.

Exclusions:

This warranty does not apply and no other warranty applies to:

Normal wear and tear, which are to be expected over the course of ownership.

Modifications or attachments to the product that are not approved.

Products that were not installed, used, or maintained in accordance with product instructions and warnings.

Products used for rental purposes.

Seating Usage: To the extent that a seating product is used in a manner exceeding this, the applicable warranty period will be reduced in a pro-rata manner.

A word about color variations, fabrics and finishes:

Does not warrant the color-fastness or matching of colors, grains, or textures of covering materials.

Safety and Care Advice

- A. Keep children and animals away from the assembly area. This furniture contains small parts that could cause choking if swallowed.
- B. Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- C. Ensure that all packaging is disposed of carefully and responsibly.
- D. From time to time check that there are no loose fittings on the unit, re-tighten when necessary.
- E. Two people may be required for the assembly of this product.
- F. Damaged components may influence the safety and function of a product. Never use the product if any component is missing or defective.
- G. Once items are part of fully assembled there are not returnable unless faulty.
- H. This item is only intended for indoor use and designed for use by one person at a time, the suggestion maximum static load capacity less than 250lbs.
- I. Some items will be supplied with a wall fixing strap, which we recommend is used to secure the item to the wall , to prevent a child from accidentally pulling furniture over.
- J. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by in correctly installed or assembly furniture.
- K. Do not stand on the furniture or use it as a step stool or ladder as it may result in physical injury or damage to the product.
- L. Do not be expose this item to direct sunlight and never touch with sharp objects, which may cause damage to the product.
- M. Leather and Vinyl Coverings: Occasionally dust the leather or vinyl surface with a soft, clean cloth. For mild stains, combine water and a soft cloth. Wet the cloth and rub gently over the stain before wiping dry. For deeper stains, apply a mild soap to the cloth. Work into a lather and rub gently over the stain. Rinse with a damp cloth and wipe dry. Cleaning products may cause discoloration and should be tested in an inconspicuous location prior to use on the chair. Warranty does not cover adverse cleaning results or scratching or scuffing that occurs during normal use.
- N. Fabric Upholstery: Pay immediate attention to spills and vacuum regularly to maintain appearance. Cleaning products may cause discoloration and should be tested in an inconspicuous location prior to use on the furniure. This furniture should not be used for other than its intended purpose. Please regularly inspect this furniture for loose or missing screws, metal fatigue, cracks, broken welds, missing attachments and general instability. If this furniture is damaged or appears to be unstable or unsafe, immediately remove from service and replace or repair the item. Failure to follow these warning could result in serious injury.