

Assembly Instructions for DINING TABLE


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST			
No.	PART DESC.	CODE.	Q'TY
A	Dining Table Top		1
B	Dining Table Legs		2
C	Dining Table Left/Right Side Stretcher		2

HARDWARE LIST				
No.		HARDWARE DESC	CODE.	Q'TY
1		Flat Washer (5/16")		16
2		Spring Washer (5/16")		16
3		Bolt (5/16" x 50mm)		8
4		Long bolt (5/16"x120mm)		8
5		Allen key M4		1

STEP:1

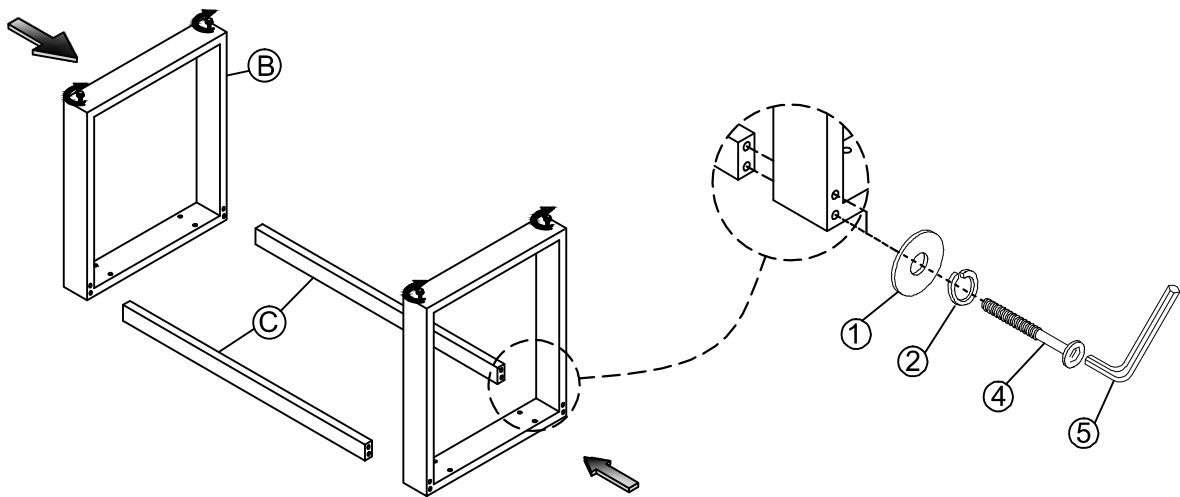

STEP:2

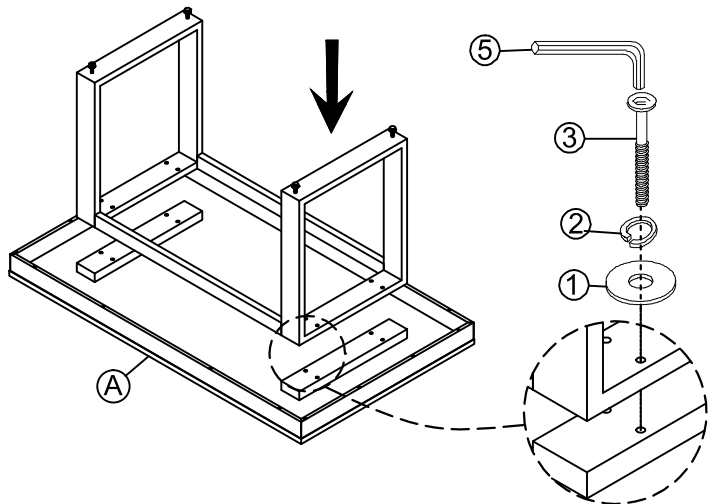

COMPLETE

