 


Assembly Instructions

WI-OT1823WH-AC-2PK

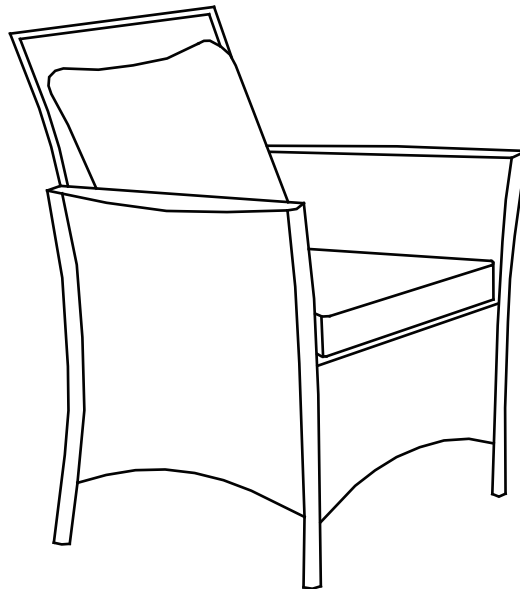

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench




2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

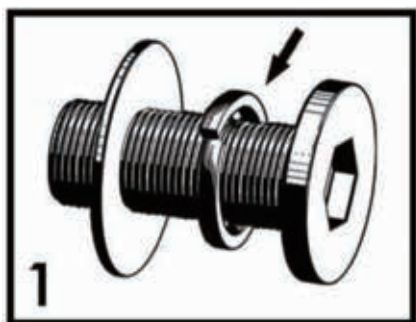


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

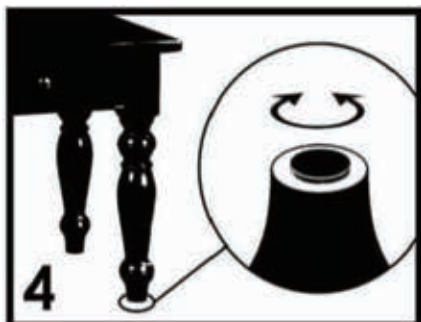

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

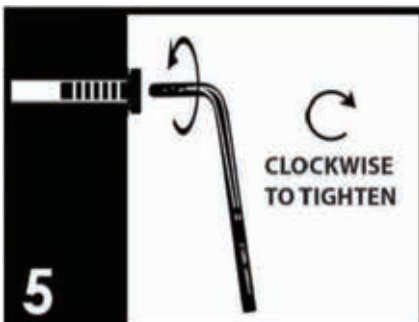


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

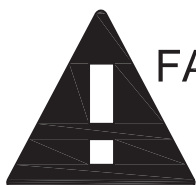


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.






Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List


	#1 x 1pc Backrest
	#2 x 1pc Seat
	#3 x 1pc Right Armrest
	#4 x 1pc Left Armrest
	#5 x 1pc Seat Cushion
	#6 x 1pc Back Cushion

   Hardware List

	#A x 8 pcs Bolt 1/4" X 1-3/4"
	#B x 2 pcs Bolt 1/4" X 2"
	#C x 10pcs Flat Washer
	#D x 2 pcs Bolt Cover
	#E x 1pcs Allen Wrench M4



#C #B #D

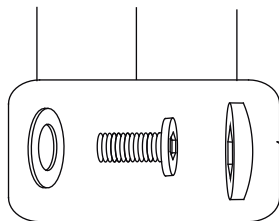 

#1

 
Note: Right and Left are determined by facing the front of the chair in its upright position.

#4

#3

#C

#A

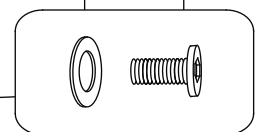


#2

- I. Align the seat (#2) to the pre-drilled holes along the backrest (#1). Prepare 2 bolt assemblies by inserting a flat washer (#C) onto a bolt (#A). Insert into the holes and secure using the Allen wrench (#E).
- II. Align the right armrest (#3) and the left armrest (#4) to the pre-drilled holes along the sides of the backrest (#1) and seat (#2). Prepare 6 bolt assemblies by inserting a flat washer (#C) onto a bolt (#A). Prepare 2 bolt assemblies by inserting a flat washer (#C) onto a bolt (#B). Insert into the holes and secure using the Allen wrench (#E). Apply the bolt covers (#D) onto each bolt (#B).



 Place the back cushion (#6) onto the the back of the chair and the seat cushion (#5) onto the seat (#2).

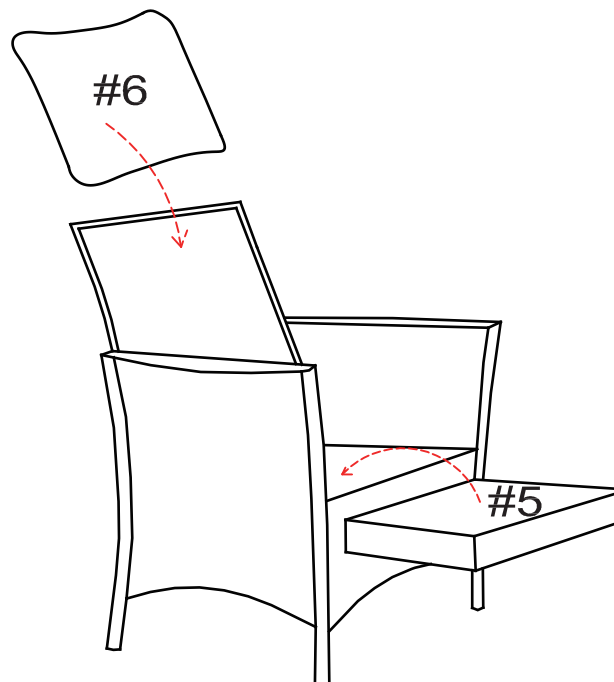



Carefully turn the completed chair upright. Make sure the chair is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

