

# Parts

Check and make sure you get the components on the list, contact us for any missing

**A** Backrest



**B** Seat




**C<sub>1</sub>** Left armrest



**C<sub>2</sub>** Right armrest



**D** Control unit x1

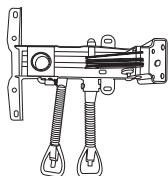

**E** Allen Key x1



**F** Central base tube



**G** Foot



X 5

**H** Casters



X 5

**J** M8\*40



 
x4

**K** M6\*20



x10

**L** Footrest pillow




**M** Gas lift



**N** Headrest



 **O** Lumbar support



**P** Steel plate



**R** M8\*25



x3

**S** M5\*10



x1

**T** M6\*20



x4

**U** Plastic Caps



x4

**V** Sliding Block



x 2

**W** M6\*30



x8

**X** Gasket




x4

**P** Remote control




## Assembly steps


### 1. Assemble five-star foot

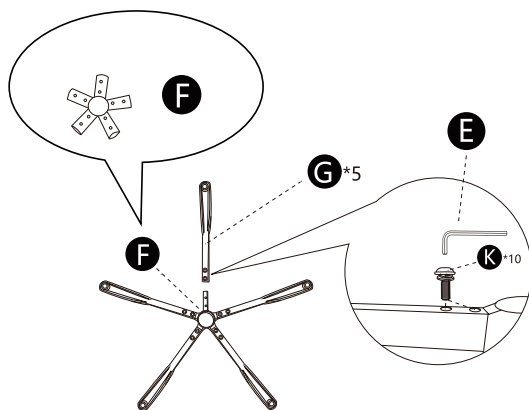


### 2. Attach wheels

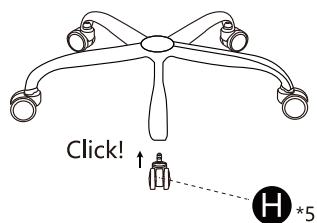


### 3. Insert the gas lift

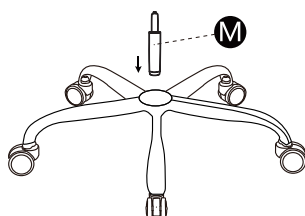


### 4. Fix the control unit to the base of the seat

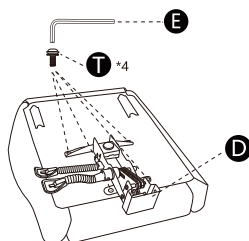


### 5. Insert the footrest into the anchor hole

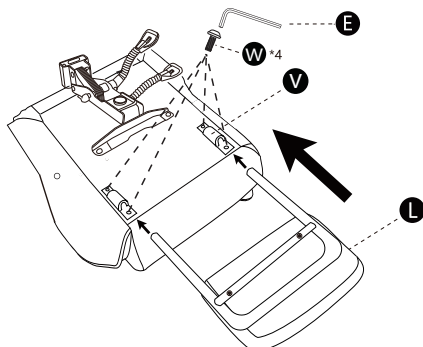





6. Fix the footrest

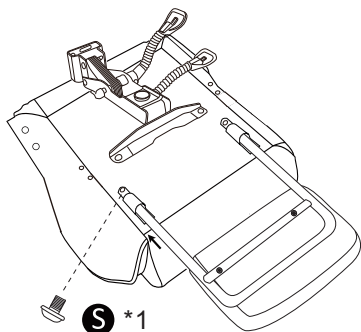



7. Insert the gas lift into the control unit

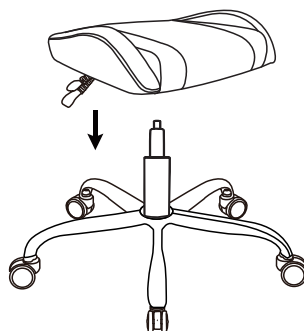


8. Mount the steel plate into the control unit, mount the back on the steel plate

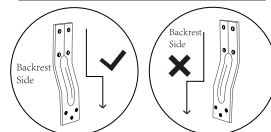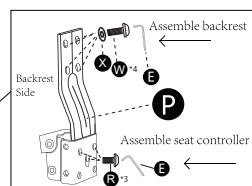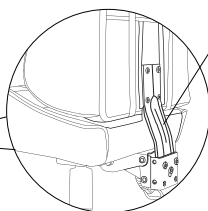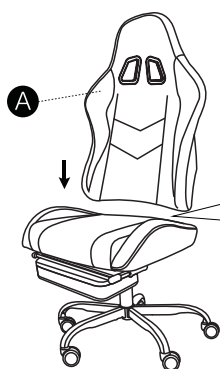

Notice: the correct way to install the steel plate

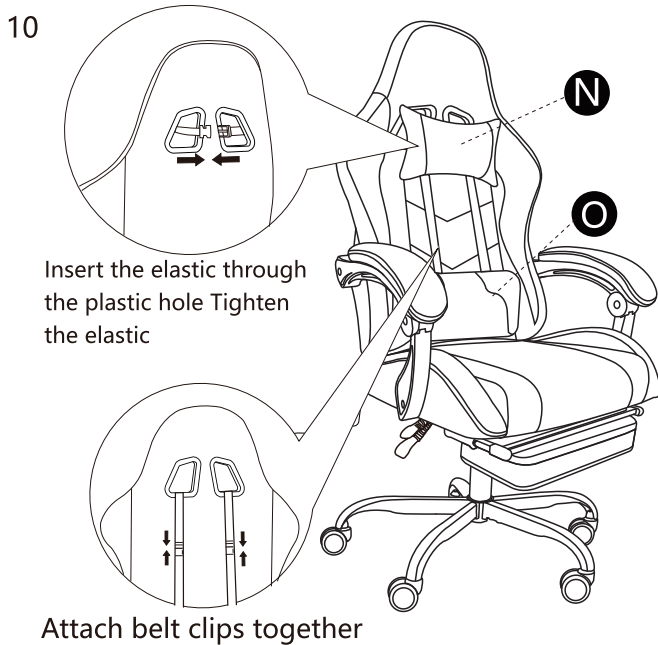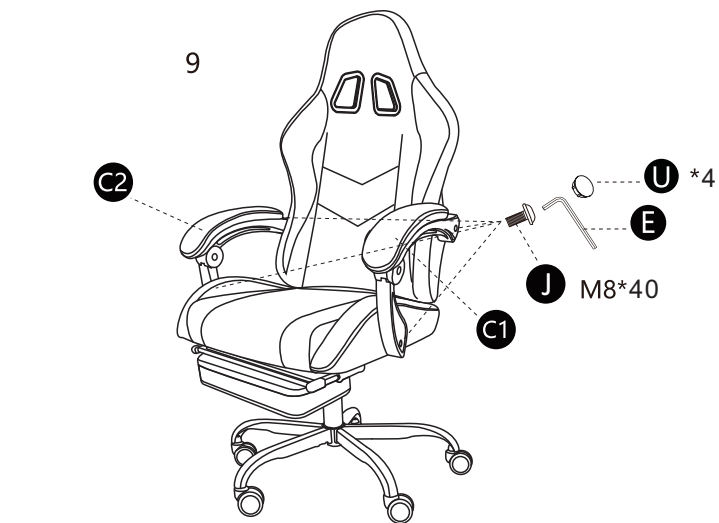


11. Data line connecting the backrest and the seat cushion  
(Two connectors are white. )

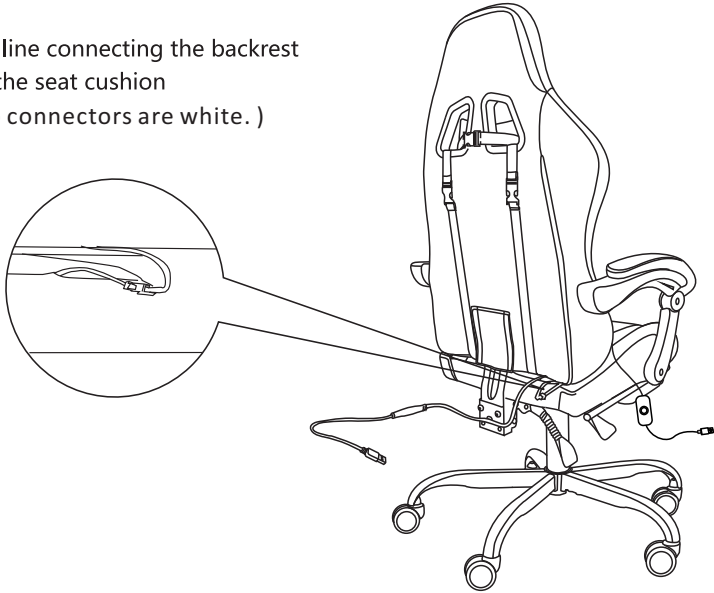


## Installation step

12. USB interface can be connected to a computer or power Bank

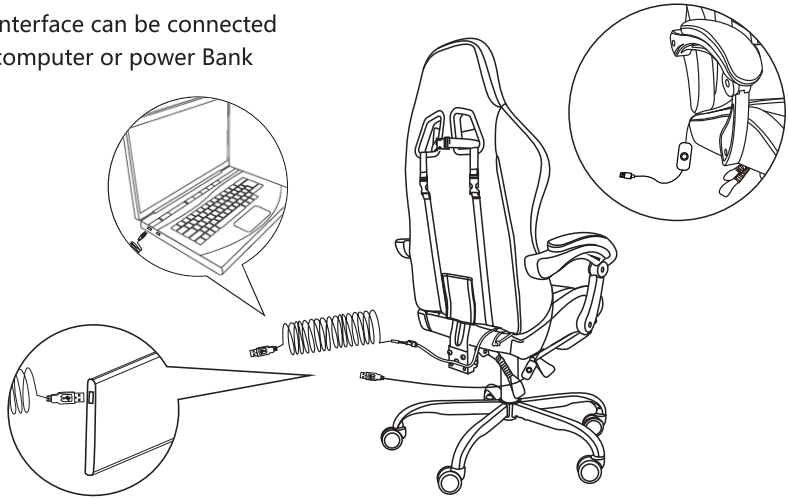


### Remote control

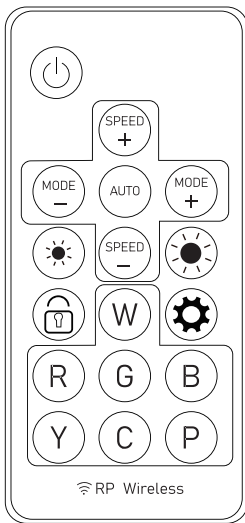

### Power switch



 
### Light mode



### Light brightness


 
### Setting



### Light color



The customers need to prepare battery by themselves.

# Function



1 Load capacity up to 330lb




2 Seat Height adjustment  
(pull up on the control handle to  
adjust)




3 360 degree swivel





## Reclining function

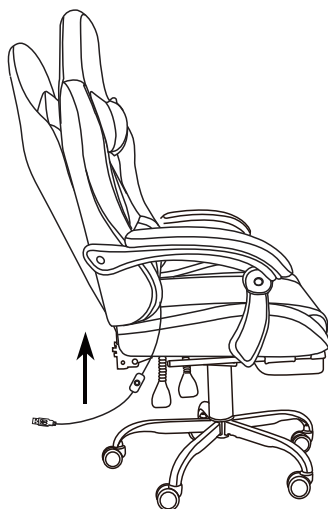

pull up on the rear control handle  
to adjust the reclining angle

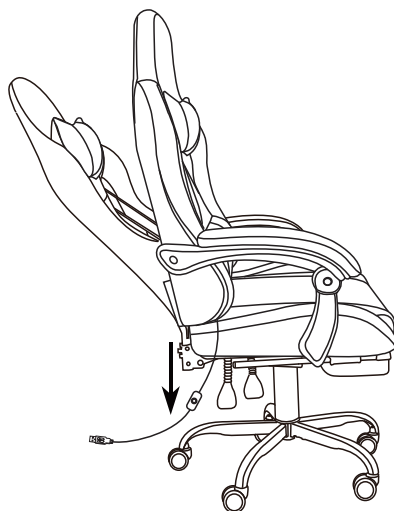

pull down it to fix the backrest of the  
chair at the angle

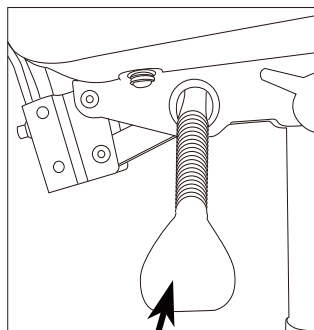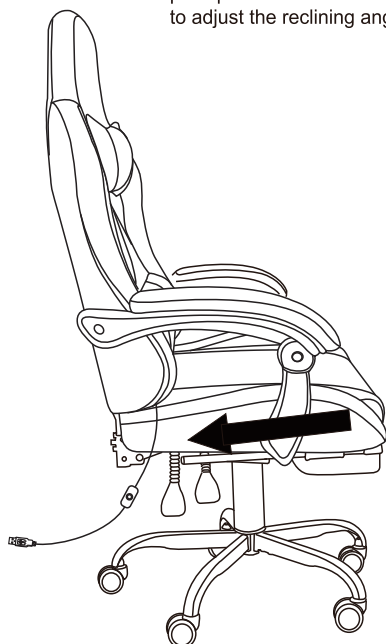

Adjustable degree: 0°-135°

## Instructions during use



1. Move the item gently to avoid collision.
2. Keep it away from direct sunlight.
3. Check to ensure that the center of gravity is on the hydraulic when in use.
4. Watch out your fingers when adjusting the backrest angle.
5. Use the handle adjuster under the seat to adjust the seat height. Do not press or pull the seat by force.
7. Do not place any heavy objects on the seat or armrests.
8. Keep the plastic parts away from direct sunlight.
9. Avoid abrasive cleaner for cleaning.