

Portable Propane Firebowl 5995
Distributed by: HEININGER
1-888-722-5240

Model Number: FMPPC2-2
Serial Number:

Manufactured by: FMI Brands Inc.
107-19052 26 Avenue, Surrey BC
Canada V3Z 3V7 • 1.888.514.1663

Input: 58,000 Btu/h (17 kW)
and manifold pressure:
11 in wc (2.74 kPa)

Min. gas supply for input adj.
11 in wc (2.74 kPa)

Max. gas supply:
11 in wc (2.74 kPa)

Injector Size* 2.32mm
* Injector size marked clearly
on the gas valve orifice.

Type of Gas: Propane (LP)


"The instruction manual contains
important information necessary for
the proper assembly and the safe use
of the appliance."

"Read and follow all warnings and
instructions before assembling and
using the appliance."

"Follow all warnings and instructions
when using the appliance."

"If instructions or parts are missing,
contact 1-888-514-1663."

! DANGER

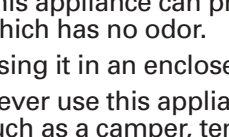

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide
which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space
such as a camper, tent, car or home.

Read instructions before lighting.
If ignition does not occur in 5 seconds, turn the burner
control(s) off, wait 5 minutes and repeat the lighting
procedure.

! WARNING

Do not store or use gasoline, or other flammable vapors
and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored
in the vicinity of this or any other appliance.

LIGHTING INSTRUCTIONS
1. Ensure appliance gas valve is set to "OFF" position.
2. Securely attach supplied regulator hose to propane tank.
3. Slowly turn valve on propane tank to the "Open" position.
4. Using a lighter or match, ignite lighter and hold flame
slightly above the burner, then open the valve on the
appliance slowly by turning (counter-clockwise) until the
unit ignites.
5. Adjust appliance knob to desired flame height.
* After extinguishing appliance, wait at least five (5) minutes
before relighting.

SHUTDOWN INSTRUCTIONS
1. Turn valve on propane cylinder to "CLOSE"
position.
2. Wait for flame to visibly extinguish.
3. Turn valve on unit to "OFF" position.
Do not use this appliance under overhead
combustible surfaces.
Do not connect to a remote gas supply.
Cover must be removed when burner is in operation.
**ANSI Z21.97-2017/CSA 2.41-2017 Outdoor Decorative
Gas Appliances**

**! WARNING: Improper installation, adjustment, alteration,
service or maintenance can cause injury or property damage.
Refer to the owner's information manual provided with this
appliance. For assistance, or additional information, consult a
qualified installer, service agency, or the gas supplier."**

MINIMUM CLEARANCES:

Bottom: Non-Combustible Surface
Top: 80 inches
Sides: 36 inches

For installation on (or over) non-combustible floors only.

! CAUTION: The gas pressure regulator
provided with this appliance must be used. The
regulator is set for an outlet pressure of 11 inches
water column.
The gas supply must be turned off at the LP-gas
supply cylinder when this appliance is not in use.

LP SAFETY:

(a) Do not store a spare LP-gas
cylinder under or near this appliance.

(b) Never fill the cylinder beyond 80 percent full.

(c) If the information in "(a)" and "(b)" is not
followed exactly, a fire causing death or serious
injury may occur.
Ensure that the appliance is kept at a minimum
distance of 3 feet (36") (0.91m) from the LP
cylinder.

This unit is equipped for Propane only. For
outdoor use only. If stored indoors, detach and
leave cylinder outdoors.

