

# Operating instructions / swing seat

Attention: This is the general user manual of swing, the actual color refers to the item you purchased.









## SAFETY INSTRUCTIONS:



1. Please preserve this manual and the packing carefully for later reference. If you give this product to a third party remember to hand over this manual as well.
2. This product is NOT meant for commercial use, but is ONLY intended for domestic use. To be used only under the supervision of adults. Never leave your child unsupervised on the swing, in order to avoid the risk of falling down.
3. Follow the assembly and maintenance instructions, in order to prevent your child from falling, tumbling down and to prevent the tearing of ropes.
4. We recommend that you set up the swing on an even surface and maintain a distance of at least 2m from other structures or obstacles, e.g. fence, garage, house, projecting branches, clotheslines or electric cables.
5. Not suitable for children under 3 years of age. Risk of Strangulation and Choking with Long Rope and Small Parts!
6. Children below 3 years of age are still unable to maintain their balance. Never leave your child unsupervised on the swing, in order to avoid the risk of falling down.
7. **The recommend height from the ground to swing seat is 20in ( 50cm).**

## MAINTENANCE:

1. Always pay attention to the following points if the swing is not in use for a longer period (Especially at the beginning of a new season!).
2. Lubricate all metal parts. Check all the caps on screws and sharp edges and replace them, if required. Check the swing seats, chains, ropes and other accessories for any signs of wear, and replace them if required.
3. Check the ropes and rings constantly for decay, wear and tear resistance. The best way to check this is to turn the ropes till their inside becomes visible! Check the knots regularly for tightness. Examine the wood regularly for decay and cracks.
4. Also check if wood shavings are sticking out from the swing board. These should be abraded in order to avoid injuries. **Do not expose the swing to the weather during longer periods of rain and in autumn / winter.**
5. Always replace defective parts with original spares.

## PART LIST

Swing seat		1pcs	Spanner		1pcs
suspension ropes and bolts		2pcs	Nut		4pcs
tree strap		2pcs	Spacer		4pcs

Carabiner		2pcs	Nut cap		4pcs
-----------	---	------	---------	---	------

## SWING ASSEMBLY INSTRUCTION



**Tips:** This is the general user manual of swing, the actual color refers to the item you purchased.

**Figure 1:** Insert 4 tubes into the swing seat. (Attention: A bigger tube end is matched with a smaller one. If they are in the same size, it is unable to connect them.)

**Figure 2:** Joint random two adjacent tubes.

Joint other two adjacent tubes then you will get two semi-circle tubes.



**Figure 3:** Connect left two joint and you will get a round swing seat.

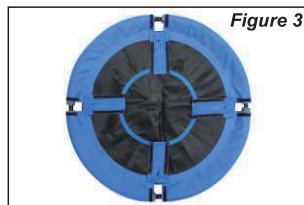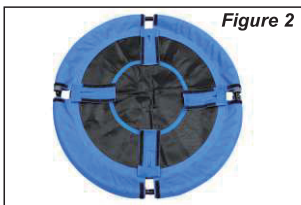

**Figure 4:** Cover it up with Hook&Loop then insert the bolt into the hole at the joint.


**Figure 5:** Put the washer and nut onto the bolt, and tighten with a wrench until 3-4 threads of bolts are exposed, then put the nut cap onto the bolt and tighten it. Please make sure all the screws are tightened for your safety. (You need an open-end wrench to fasten nut and nut cap.)

**Figure 6:** Assembly complete.

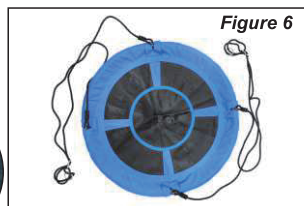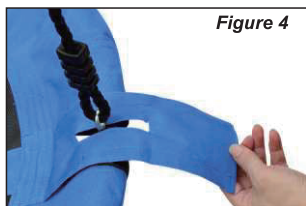


## INSTALLATION INSTRUCTION

**Figure 1:** Wind the tree straps around the tree to a desired length, run the d-ring through the hole at the other end, then tighten the straps.

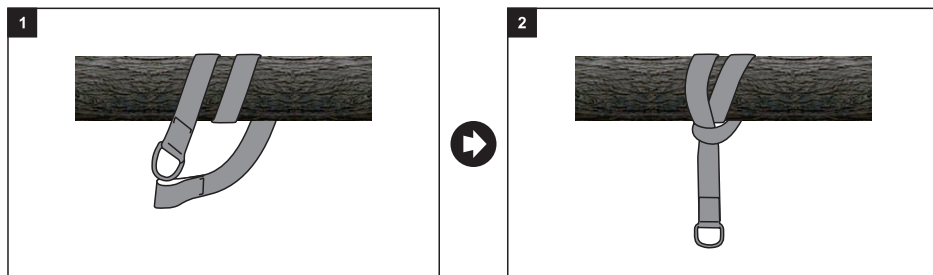

**Figure 2:** Connect the tree straps and ropes with carabiners. (Attention: make sure the screw lock of carabiner is 100% tightened.)

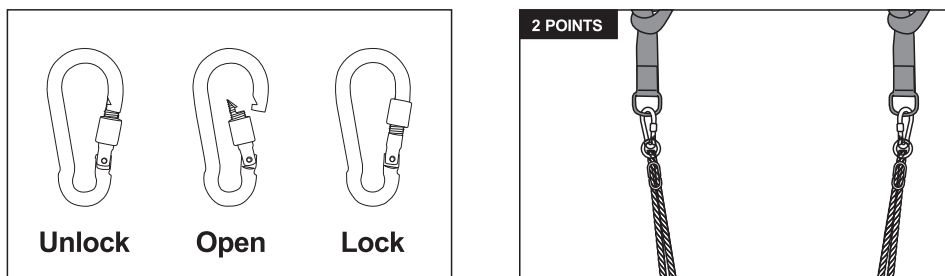

**Figure 3:** Adjust the rope to a desired length and keep balance.

