

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

701076
TV CONSOLE

ITEM:701076



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

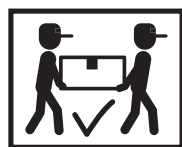


ASSEMBLY TIME

50 MINUTES


MAX TV SIZE : 75"

PARTS IDENTIFICATION

 
A LEFT SIDE PANEL 1 PC

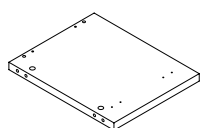


B RIGHT SIDE PANEL 1 PC

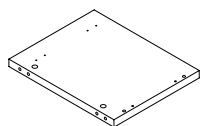 


C LEFT DIVIDER PANEL 1 PC

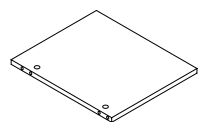 


D RIGHT DIVIDER PANEL 1 PC

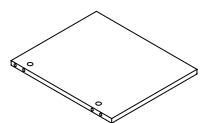 


E BOTTOM PANEL 1 PC

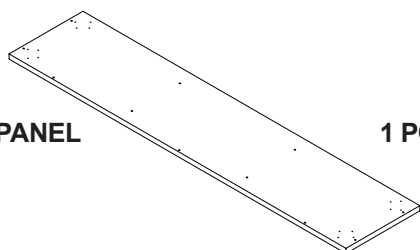 


F ADJUSTABLE PANEL 1 PC

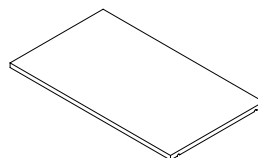 


G TOP PANEL 1 PC

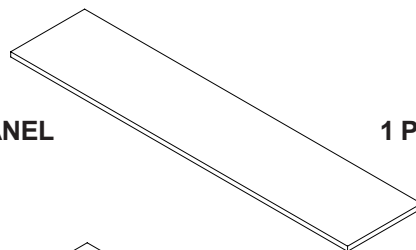 


H BACK PANEL 1 PC

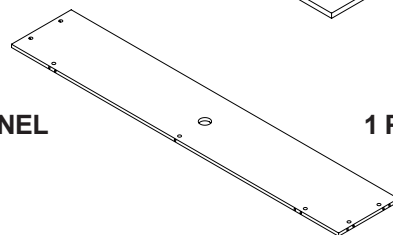 

I DOOR 2 PCS

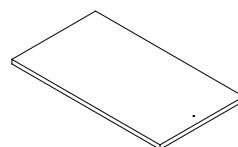 

J LEG 4 PCS







 


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701076

       HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	SCREW Ø4x15mm SR		16 PCS
2	WOODEN DOWEL Ø8x30mm		24 PCS	9	HANDLE		2 PCS
3	CAM BOLT Ø7x35.5mm SR		15 PCS	10	HANDLE BOLT Ø4x25mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		15 PCS	11	HINGE Ø35mm SR		4 PCS
5	SCREW Ø4.5x42mm SR		11 PCS	12	HINGE SCREW Ø4x15mm SR		16 PCS
6	STICKER Ø20mm		3 PCS	13	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS
7	SPACER SR		4 PCS	14	DOOR CATCH		2 PCS

Z11 not included in blister packaging.

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 
 
 
 
 
 
 
 
ITEM: 701076

STEP 1


COASTER
FINE FURNITURE

2
x 24

3
x 4

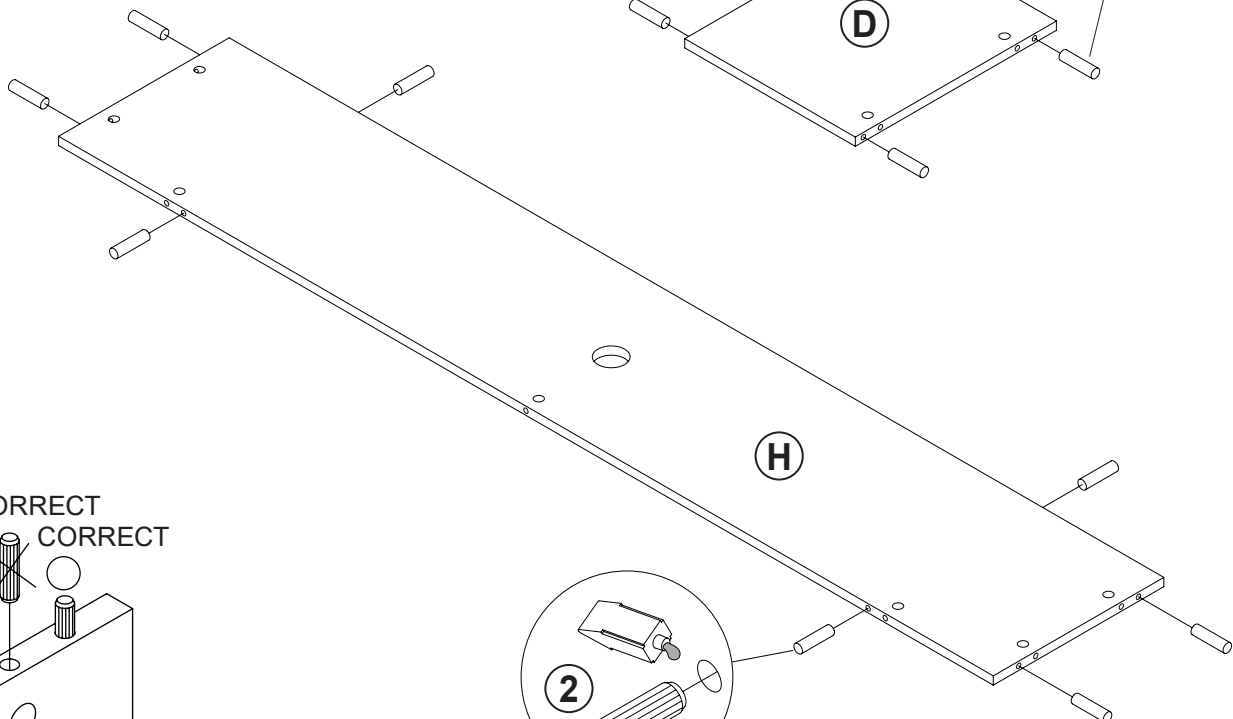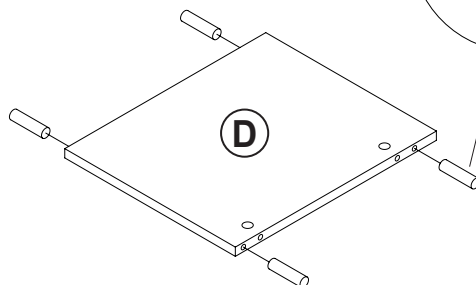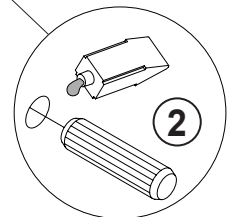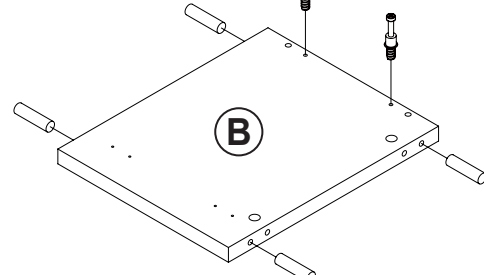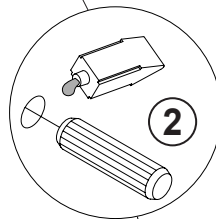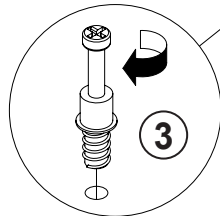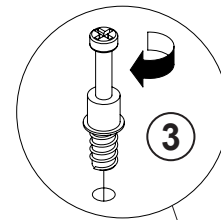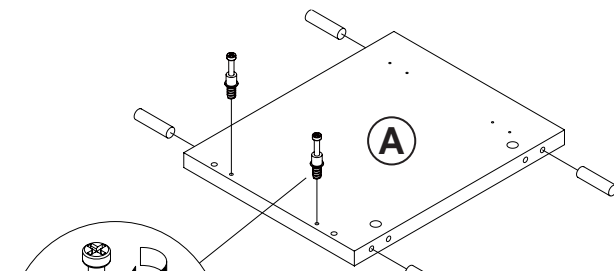

INCORRECT
CORRECT

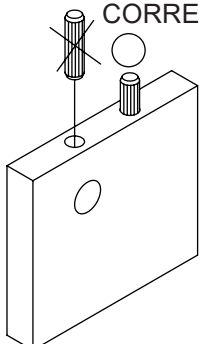 


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: 701076

COASTER
FINE FURNITURE

 STEP 2

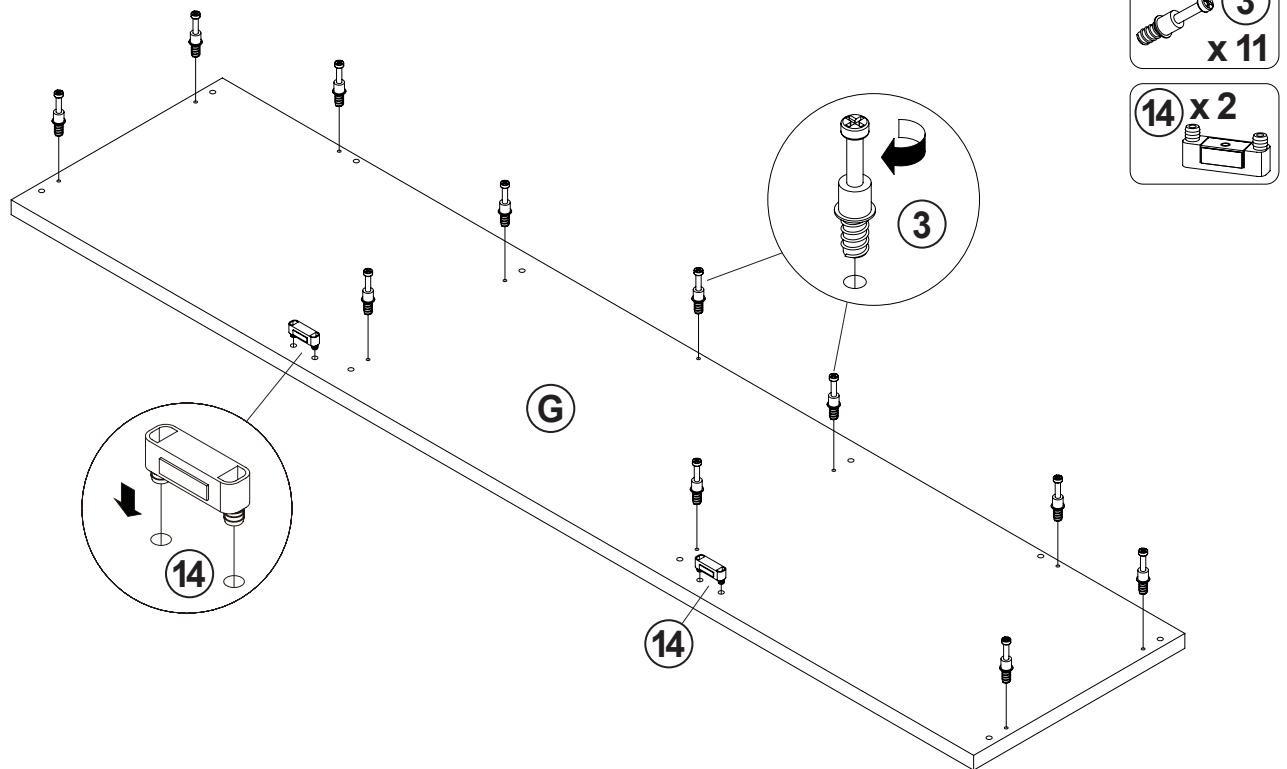


 
STEP 3

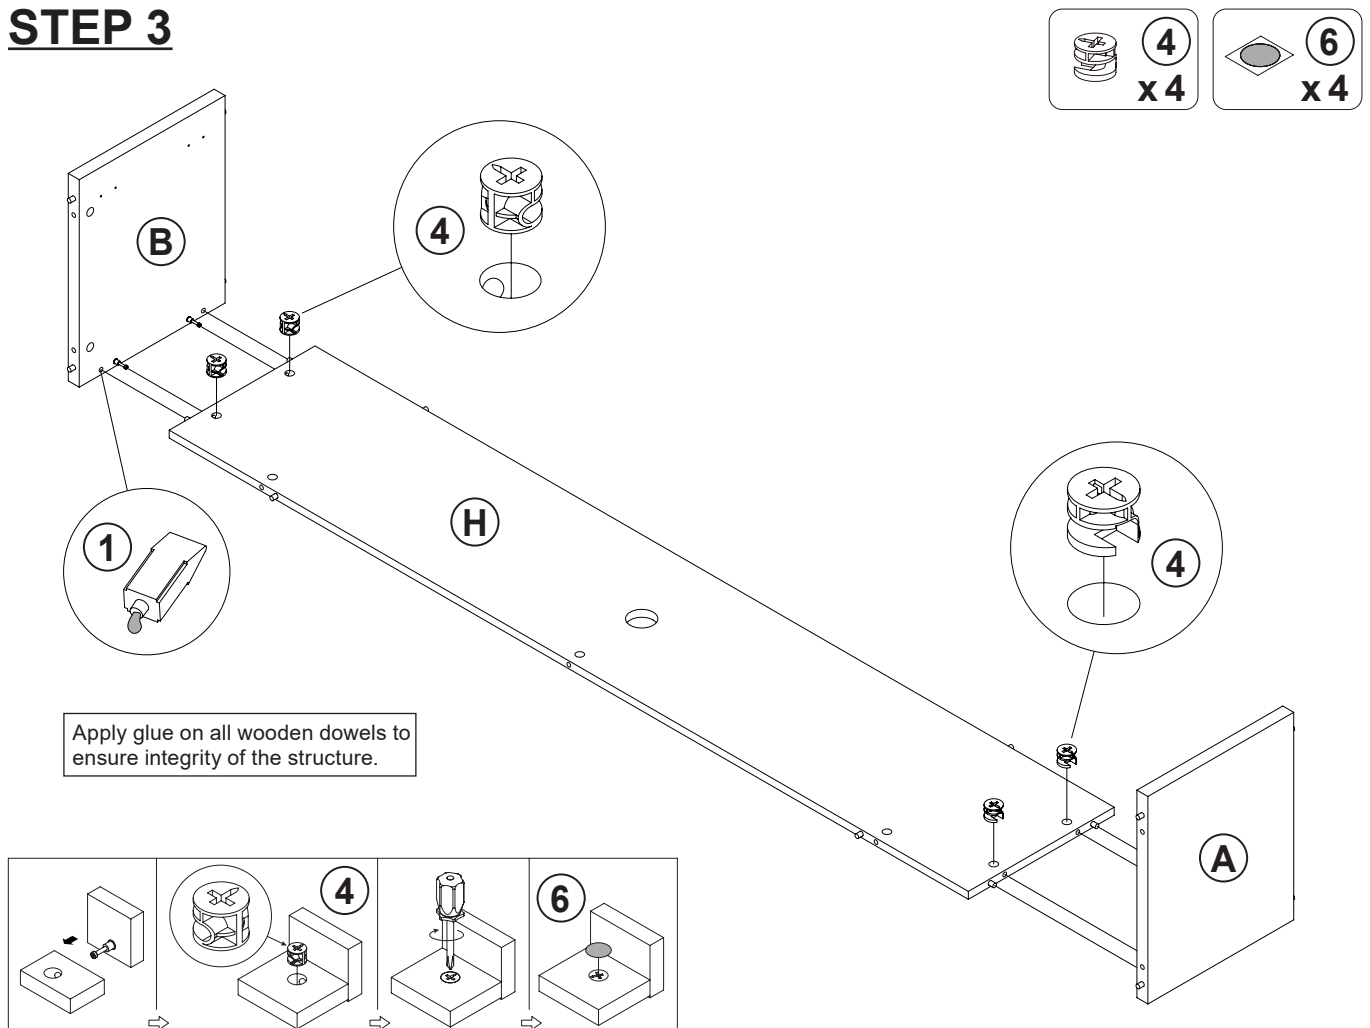


ITEM: 701076

STEP 4

  COASTER
FINE FURNITURE

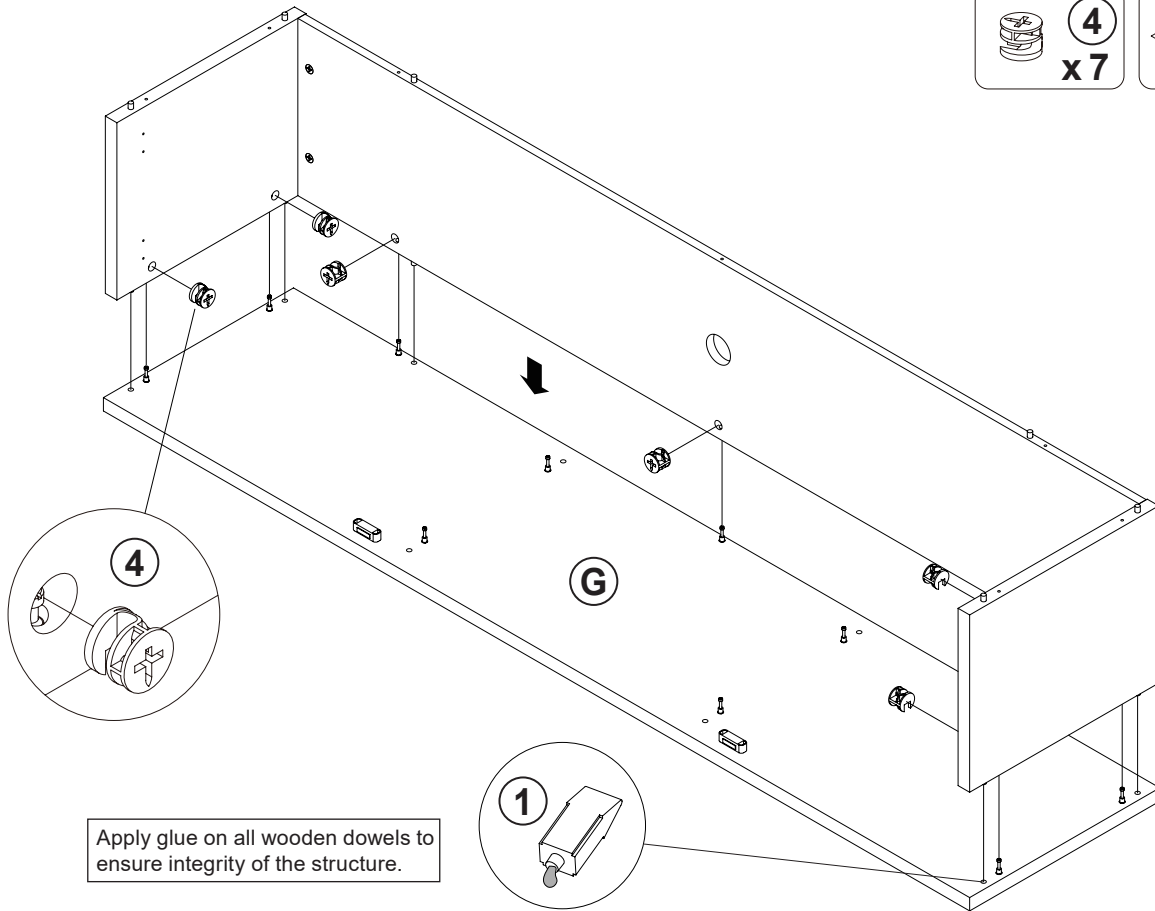

 
STEP 5

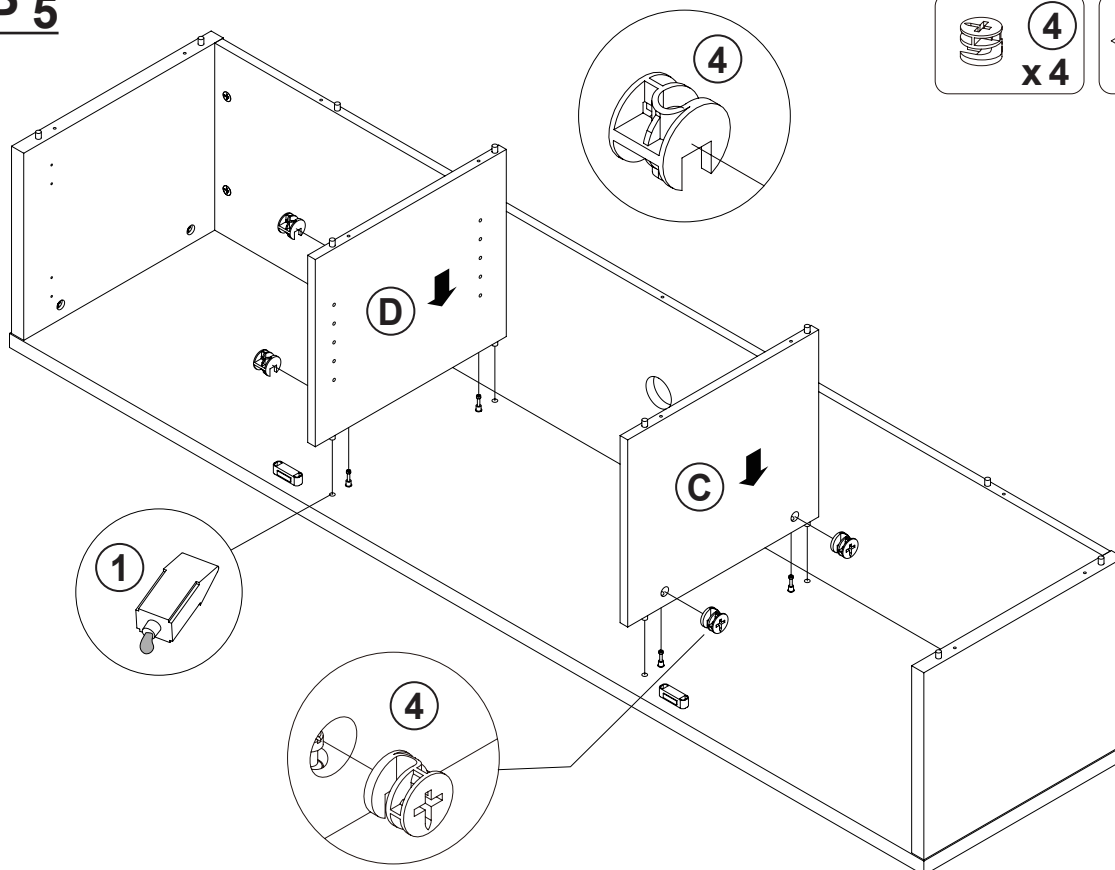


ITEM: 701076

COASTER
FINE FURNITURE

 STEP 6

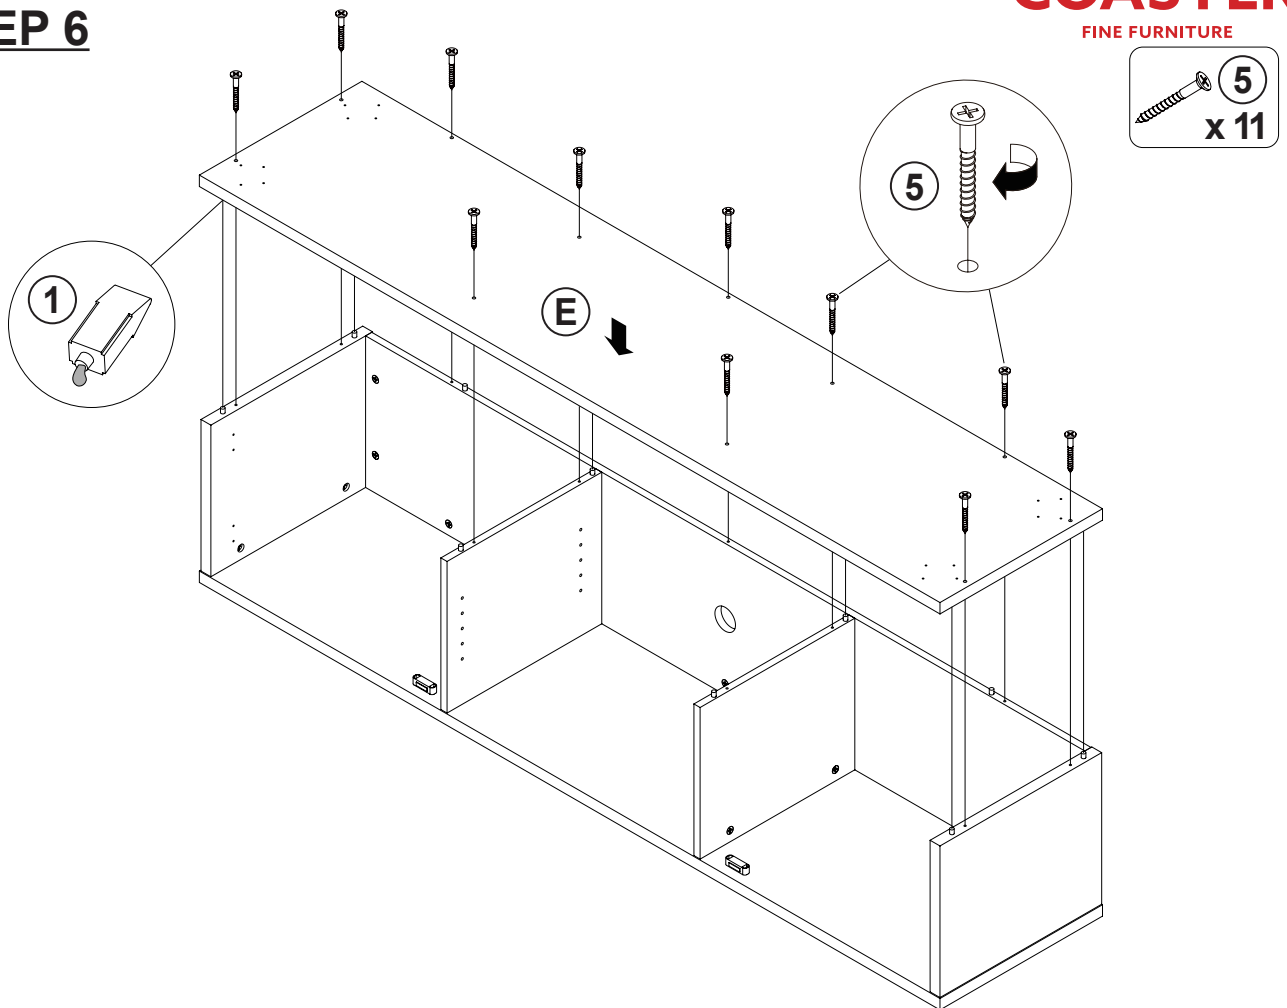


 
STEP 7

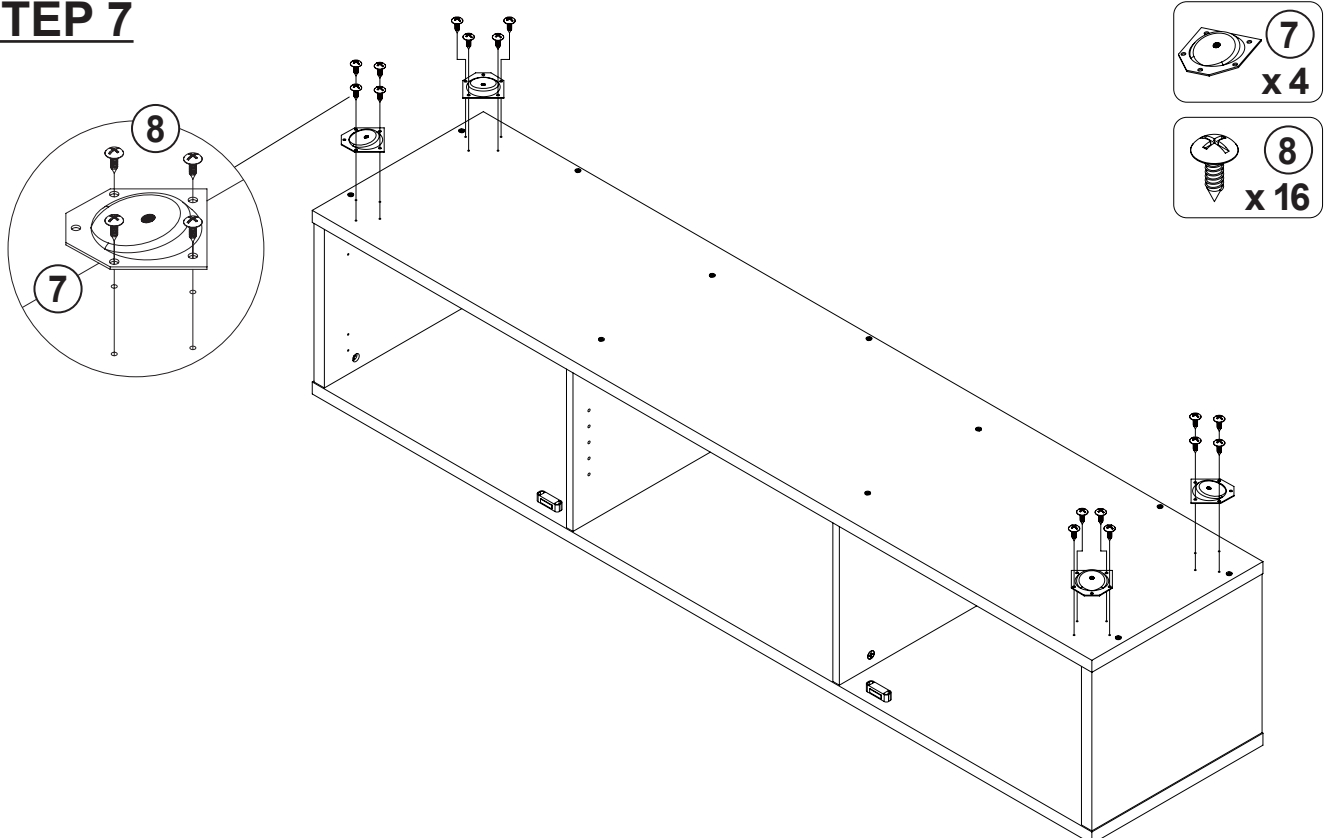



ITEM: 701076

STEP 8

  COASTER
FINE FURNITURE

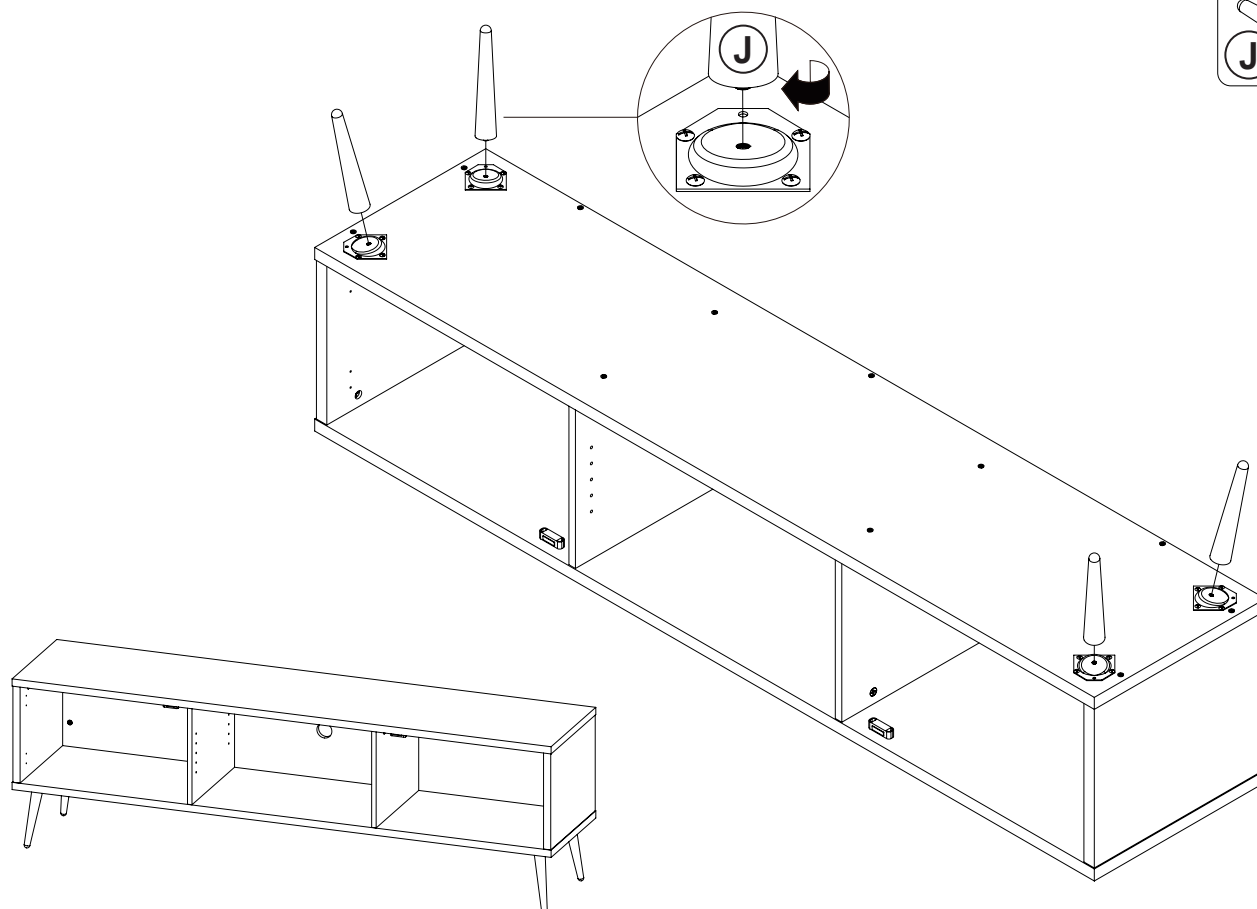


 
 
STEP 9

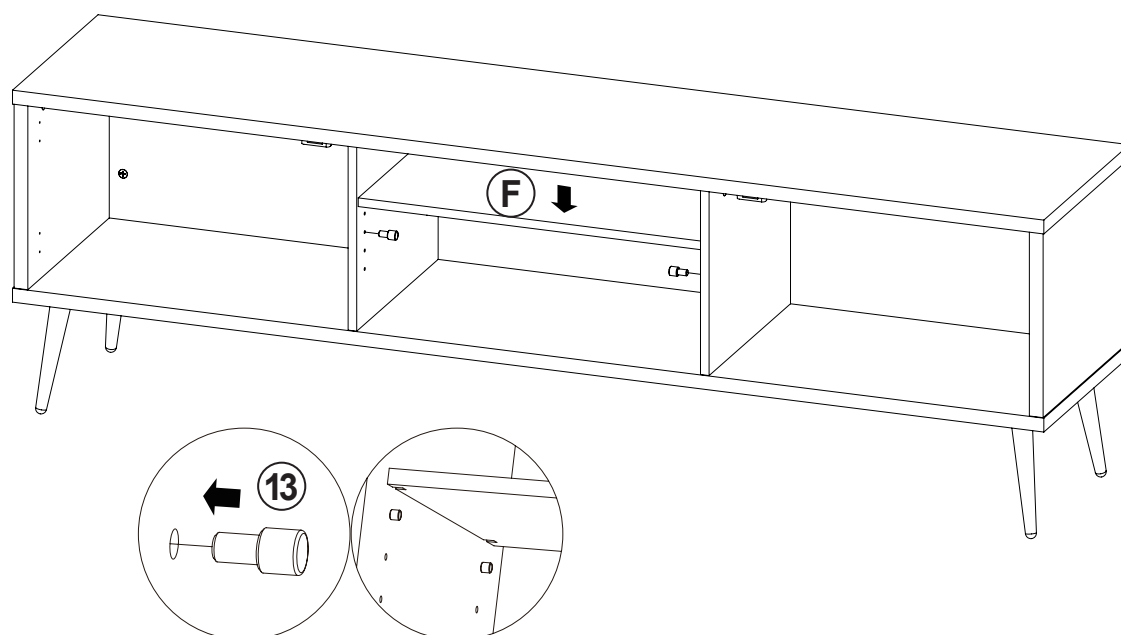







ITEM: 701076

STEP 10

   COASTER
FINE FURNITURE

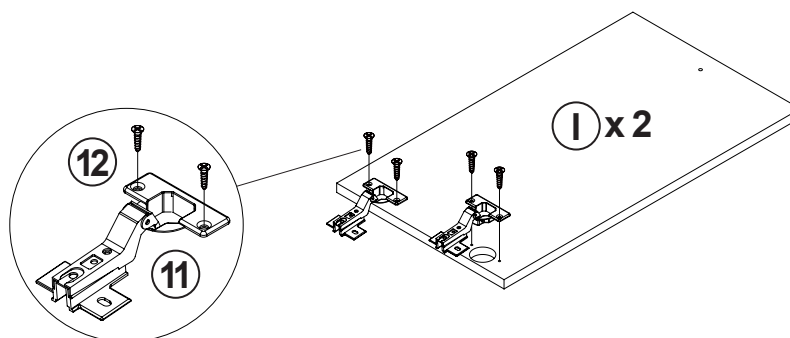

  
 
 
 
 
STEP 11

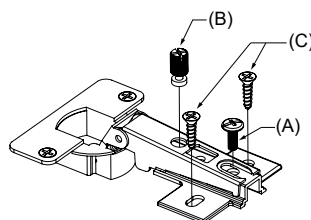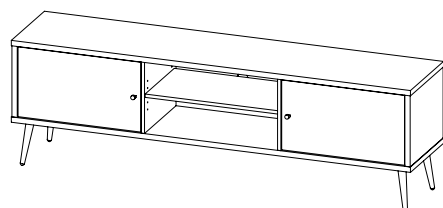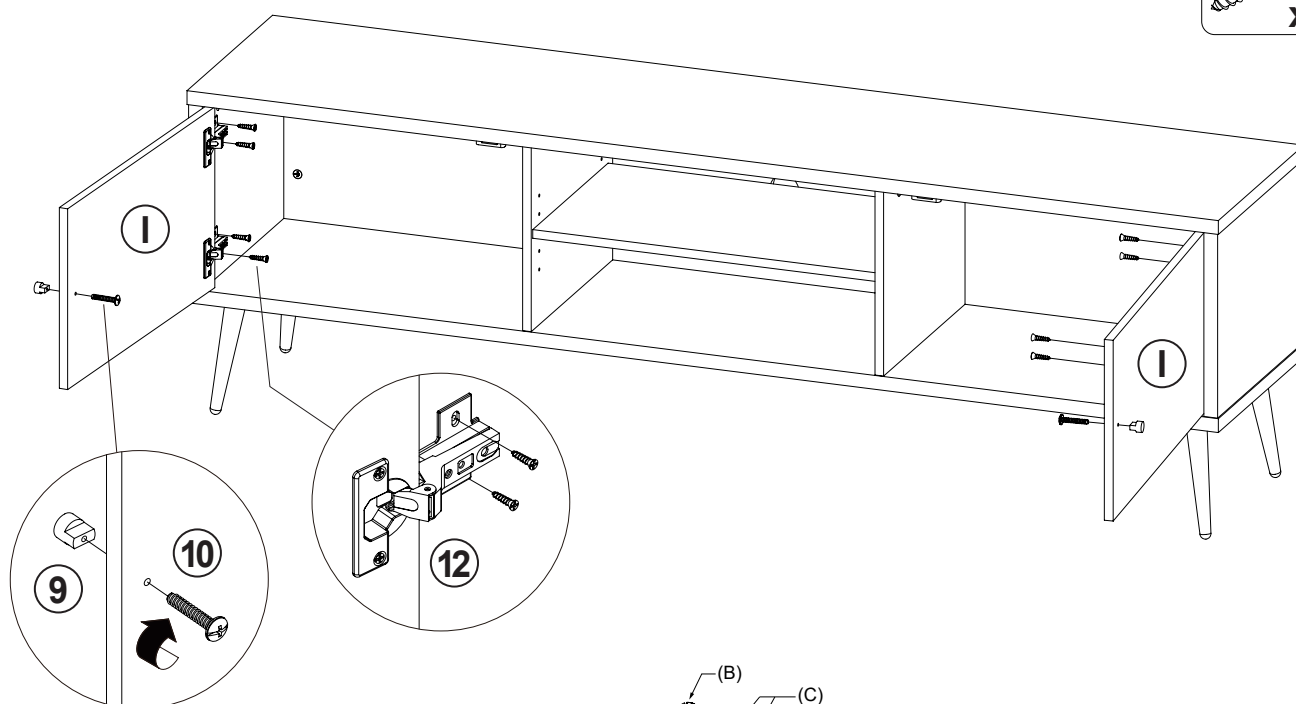


HORIZONTAL BY
SCREW A ADJUSTMENT

LATERAL BY
SCREW B ADJUSTMENT

     VERTICAL BY
SCREW C ADJUSTMENT

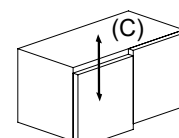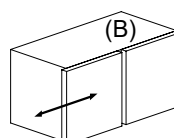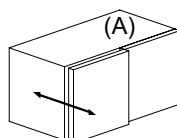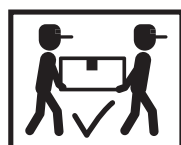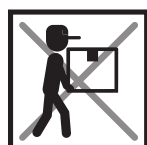

ITEM: 701076

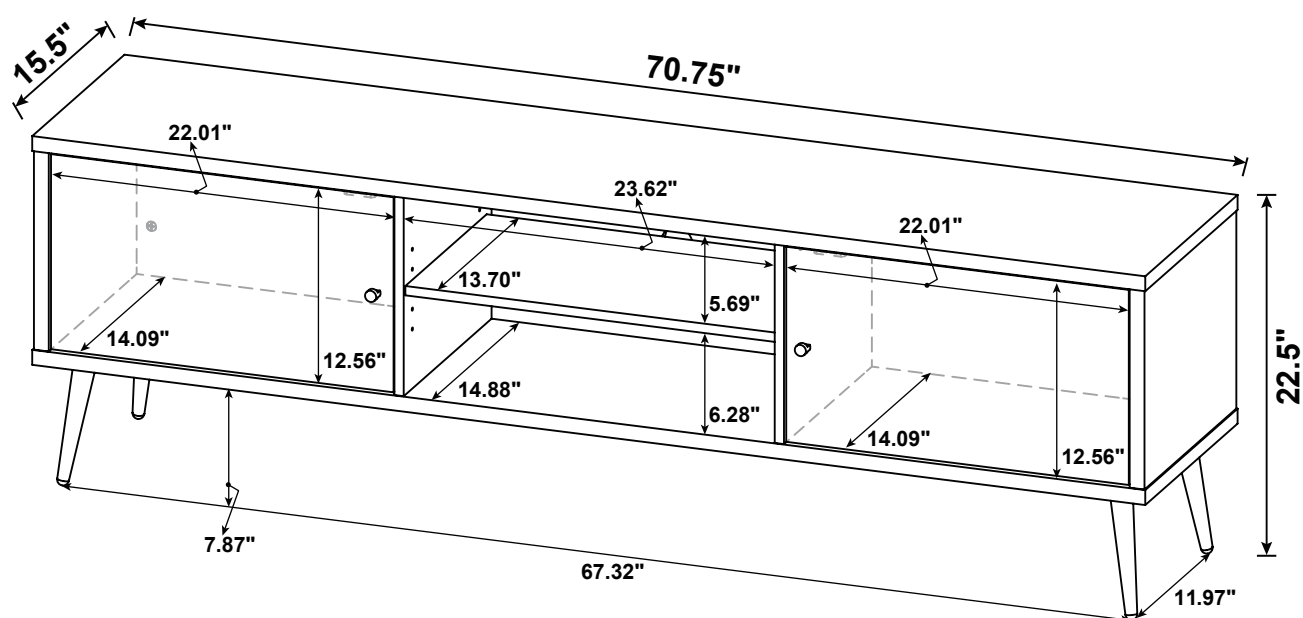 

Note : Dimension tolerance $\pm 5\%$