



ITEM #: RV-CSF615-414

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com


Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust Canopy Screws (E) on Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow them to protrude through Canopy (D) during installation. Lock Canopy Screws (E) in place with the hex nuts.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Canopy Screws (E) pointing away from the junction box.
3. Place Canopy (D) against the ceiling by inserting Canopy Screws (E) through the appropriate holes located on Canopy (D). Adjust Canopy Screws (E) and hex nuts until 1/4' of the threaded portion is visible. Remove Canopy (D) from THE ceiling and set it aside.
Note: If 1/4" of Canopy Screws (E) are not visible, remove Canopy (D) and re-adjust Canopy Screws (E) to proper length and lock them in place with the hex nuts.
4. Attach Downrod (G) to Canopy (D). Thread wire from the top of Shade (P) up through Downrod (G) and Canopy (D). Screw Downrod (G) onto Nipple (H) by turning in clockwise direction.
5. Install light bulbs (not included).
6. Remove Finial (O), Cap (N), Hex Nut (M) and Metal Washer (L) from Screw Stem (J). Thread Screw Stem (J) into the bottom of Socket (I) and secure in place with second Hex Nut (M).
7. Attach Diffuser (K) onto Screw Stem (J), ensuring it sits parallel to the bottom of Shade (P). Secure Diffuser (K) in place with Metal Washer (L) and Hex Nut (M), Cap (N) and Finial (O).
Note: If there is not enough space to safely secure Finial (O), adjust Screw Stem (J) as necessary.

8. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

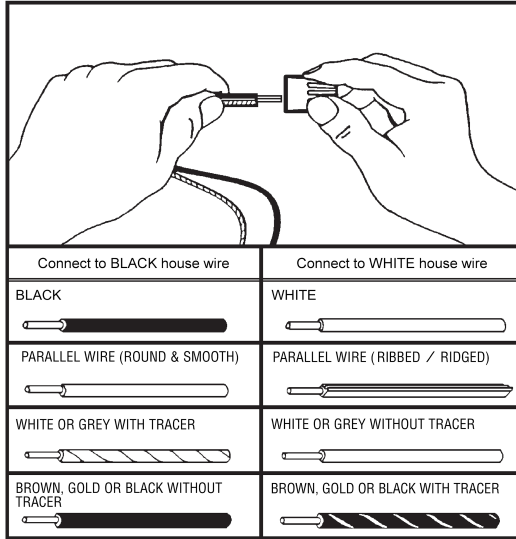

- A. Connect the ground wire (bare copper or green) from your fixture to the:
- 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

9. Place all wires and Wire Connectors (C) back into the junction box.

10. Place Canopy (D) against the ceiling, ensuring Canopy Screws (E) are protruding through the holes in Canopy (D). Secure the fixture in place to the Mounting Plate (A) with Decorative Caps (F).

Note: If fixture does not sit flush against the ceiling, remove fixture and readjust Canopy Screws (E) and hex nuts.

Enjoy your new fixture!

Kira Home

ITEM #: RV-CSF615-414 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

