


ASSEMBLY AND INSTALLATION INSTRUCTIONS



WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included):

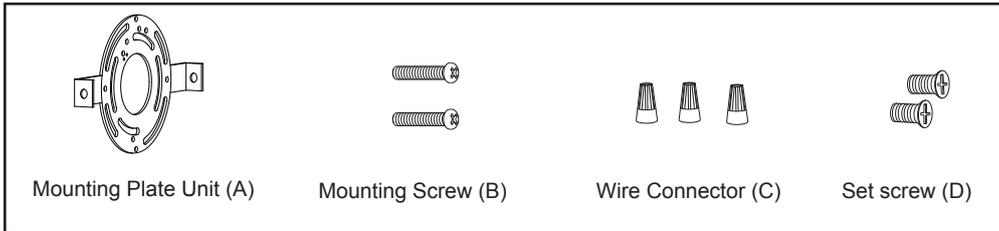


NOTES:

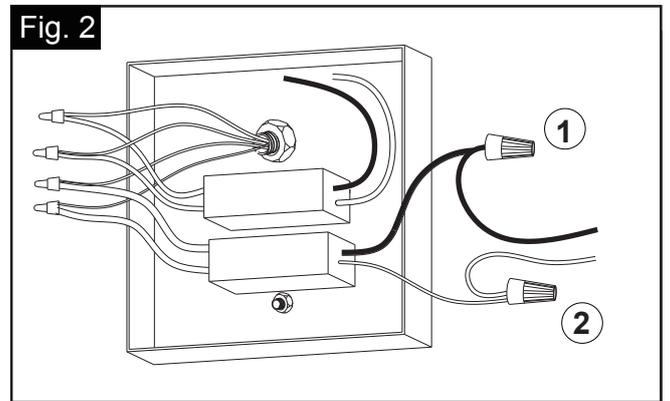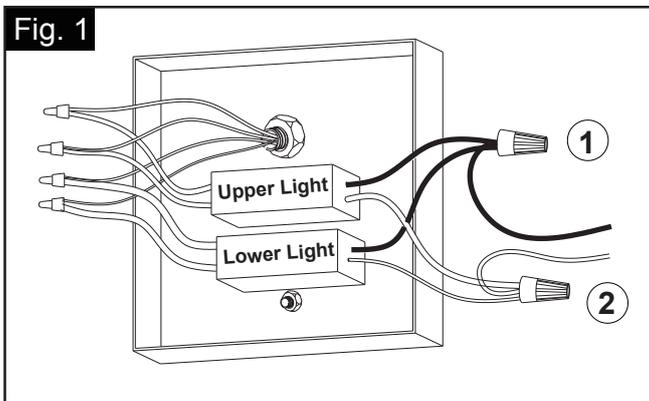

Upper light and lower light options :

- Option 1: Upper & Lower light accent, the original setting of wall light is the upper and lower light accent.
- Option 2: Lower light accent only, loosen the wire connectors (1) and (2). (See Fig. 1) Do not discard the wire connectors, screw the wire connectors onto the wire from lower light of driver. (See Fig. 2) Wrap all wire connectors with electrical tape, then tuck all wire connectors into the back plate.

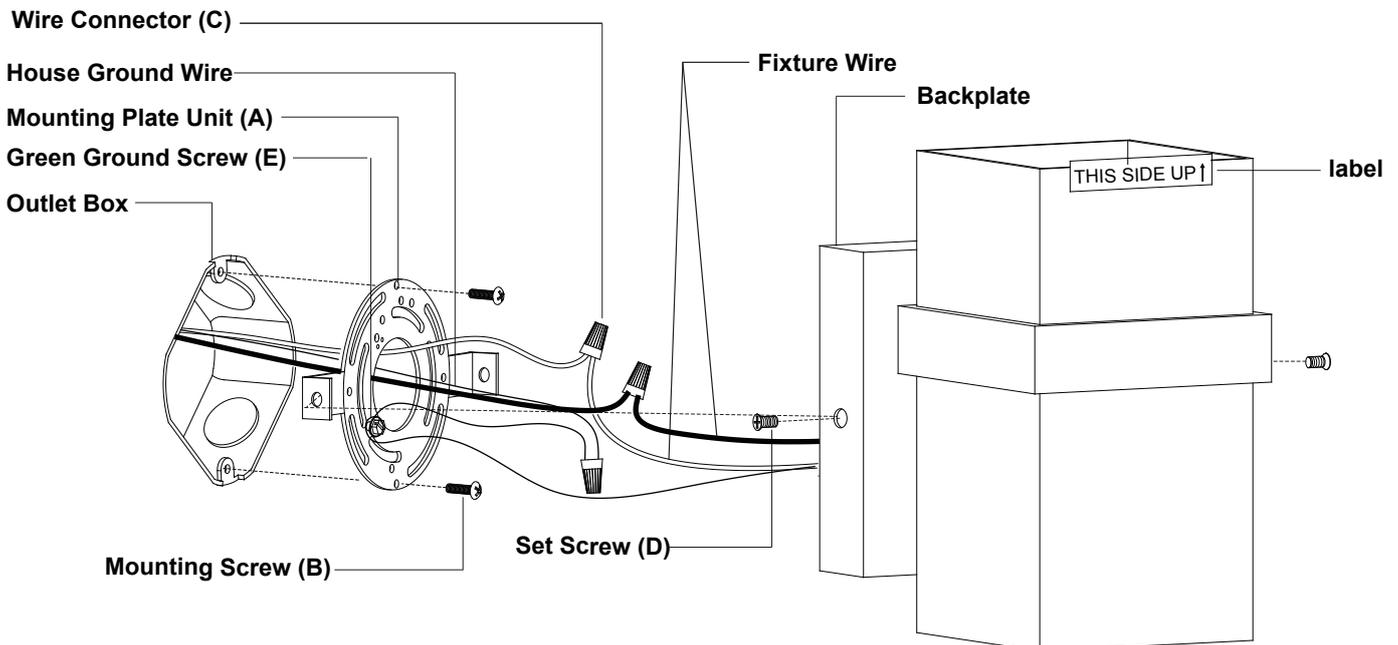

Installation Steps


Turn off the power at fuse or circuit box

1. When mounting to a wall, the "THIS SIDE UP" arrow must point upward and remove the label.
2. Unscrew the two set screws (D), remove the mounting plate unit (A) from the backplate.
3. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).
Note: Make sure that the two set holes are line up horizontal to make the fixture level.
4. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire connectors (C):
 - Connect the black wire from the fixture to the black wire from the power source.
 - Connect the white wire from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting plate unit (A) with the green ground screw. Then connect it to the house ground wire with a wire connector (C).Carefully put the wires back into the outlet box.
5. Attach the backplate to the mounting plate unit (A) by aligning holes, secure the set screws (D) from the side hole of the backplate into the hole in the side of the mounting plate unit (A).
6. With silicone caulking compound, caulk completely around where the back plate meets the wall surface.
CAUTION: Be sure to caulk completely where the back plate meets the wall surface to prevent water from seeping into the outlet box.


Turn on the power at fuse or circuit box

The following parts are available for reorder if damaged or missing.

Spare Parts List:

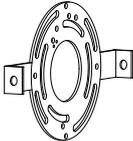			
Mounting Plate Unit (A)	Mounting Screw (B)	Wire Connector (C)	Set screw (D)

↓
Mounting Hardware 5818MM (1 SET) For T0397 / T0398
Mounting Hardware 5819MM (1 SET) For T0400 / T0401

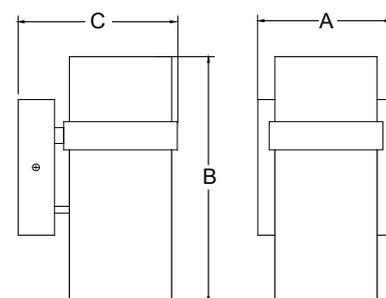

A: 4-3/4" B: 7" C: 5-1/2"

A: 4-3/4" B: 14" C: 5-1/2"

1 Year Warranty

warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.