

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS :

1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	FRONT RAIL	1 PC
B	BACK RAIL	1 PC
C	CHAIR LEG (L/R)	2 PCS
D	CHAIR	1 PC

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBB Bolt M8 x 50mm 	6 PCS
2	M8 SPRING WASHER 	6 PCS
3	WOOD SCREW M4 x 38mm 	4 PCS
4	WOOD DOWEL M8 x 30mm 	8 PCS
5	M5 ALLEN KEY (BALL SHAPE) 	1 PC

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed : Screwdriver & Rubber Mallet (not provided).

STEP 1

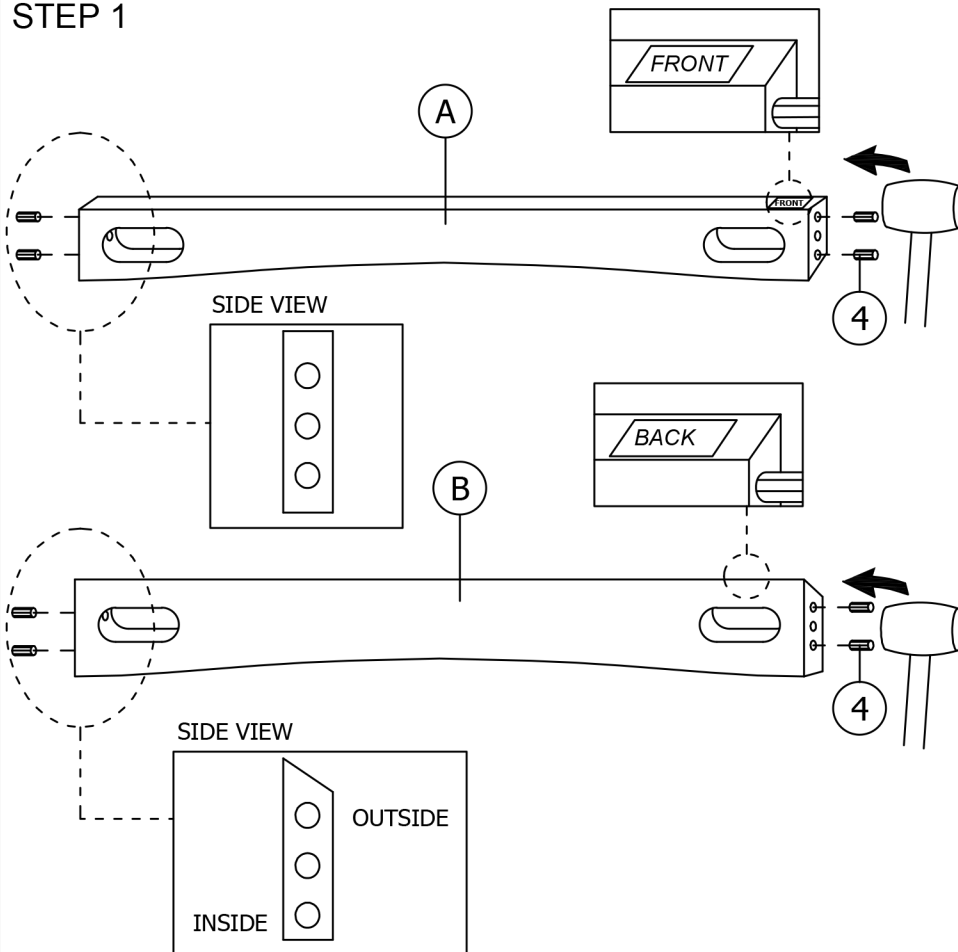

STEP 2

