

THANK YOU!

USER MANUAL



**Lighted Outdoor
Nativity Scene**

CONTENTS

Before You Start	1
Use and Care Guide	1
Parts List	3
Assembly Steps	4
Warranty	9

SECTION A

Before You Start



- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hard wares.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area where they will be used, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady, and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

SECTION B

Use and Care Guide



Planning Assembly

Carefully remove all the parts from the box and place them on the ground.

Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut, or damage the lighting string.

Read the entire manual prior to assembly and identify all the parts included in the package against the parts list.

It's recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts.


* Assembly of this product may require more than one person.

Care and Cleaning

- a. Carefully remove the product from whatever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground, it should be well secured and flat.
- b. Carefully disassemble the unit, taking caution not to cut any electrical wires.
- c. Wipe the unit with a damp cloth and allow the unit to dry before storing.
- d. Store the product neatly in a cool and dry location protected from sunlight.

Troubleshooting

- a. Ensure that the floor, ground, or surface that the item sits on is flat and level.
- b. Be sure to plug the item correctly to a wall outlet.
- c. Ensure all parts are assembled properly in accordance with the instruction manual.
- d. If the item does not light, check for loose or broken bulbs and connections.
- e. Do not plug into other electrical items.
- f. If the item has multiple light string cords, be sure to plug in all cords.
- g. Check for broken or burned out fuses in the plug.

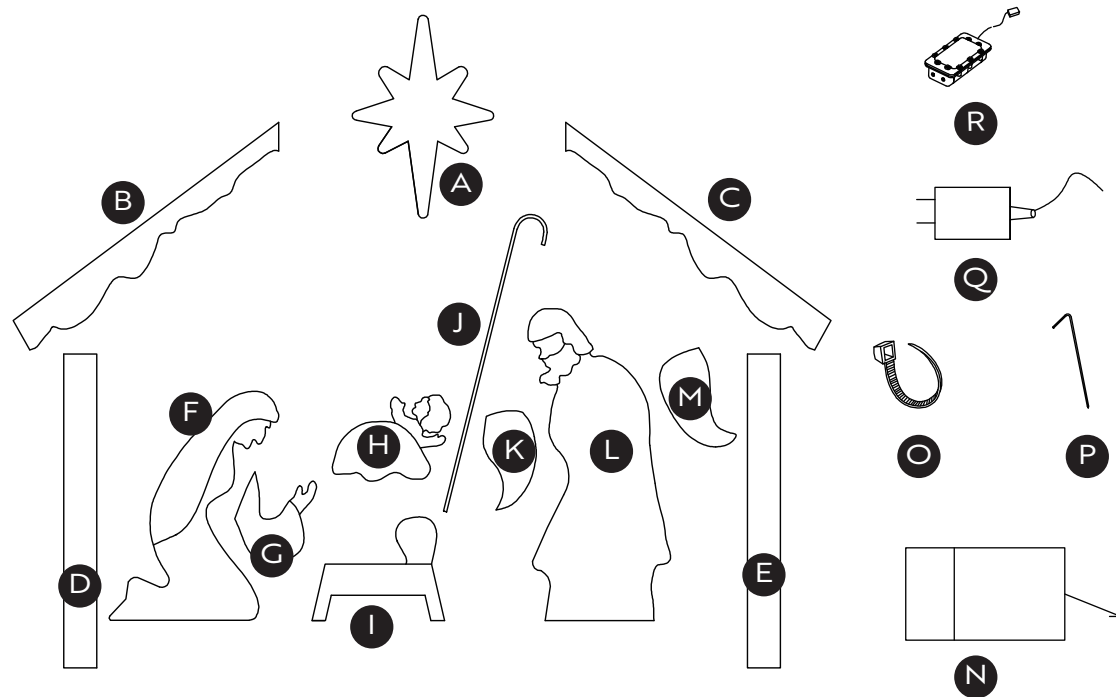


Part	Description	QTY
A	Big Star	1
B	Left Arch Cover	1
C	Right Arch Cover	1
D	Left Arch Post	1
E	Right Arch Post	1
F	Mother of Jesus	1
G	Hand of Jesus' Mother	1
H	Baby Jesus	1
I	Cradle	1

Part	Description	QTY
J	Metal Cane	1
K	Left Sleeve	1
L	Father of Jesus	1
M	Right Sleeve	1
N	Rectangular Support Frame	2
O	Zip Tie	9
P	Ground Stake	15
Q	Power Adapter	1
R	Wire Controller	1




1. Assembling the Left & Right Arch Posts to the Support Frames

Insert the long connecting rods of the two Rectangular Support Frames (N) into the connecting holes at the bottom of the Left & Right Arch Posts (D,E) and fasten at each two pairs of connecting loops with the Zip Ties (O).

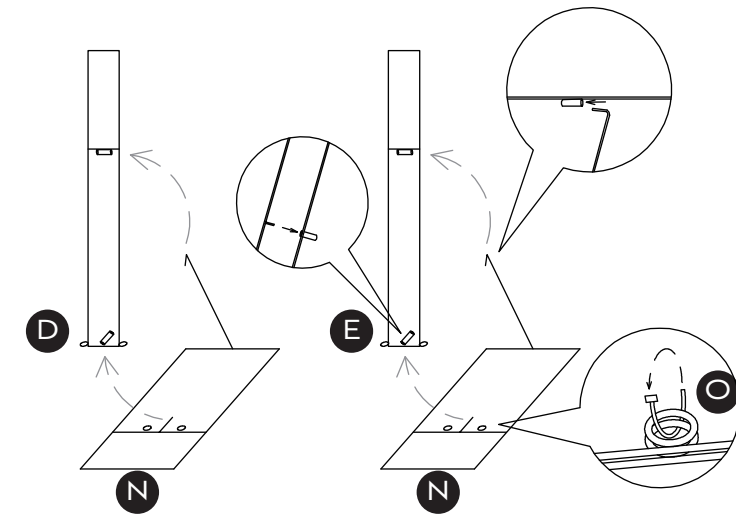


2. Assembling the Left & Right Arch Covers

Insert the connecting rod of the Left Arch Cover (B) into the connecting hole of the Right Arch Cover (C) and fasten at two pairs of connecting loops with the Zip Ties (O).

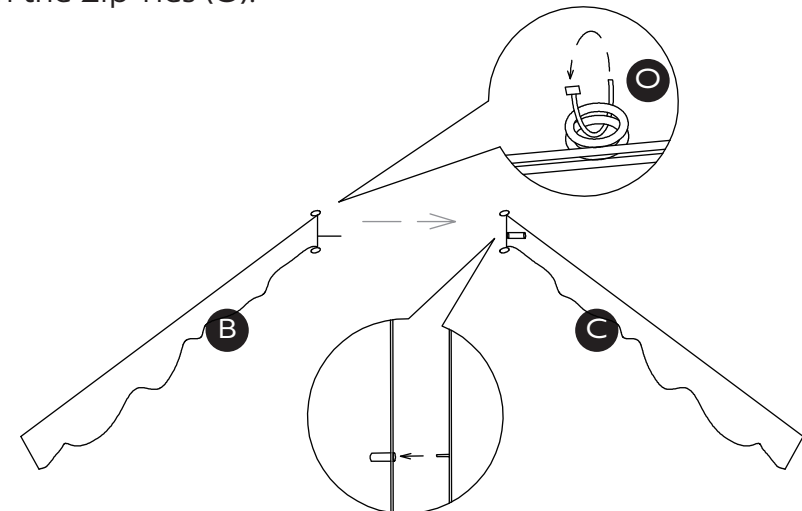


3. Assembling the Arch Posts to the Arch Covers

Insert each one connecting rod at the bottom of the Left & Right Arch Covers (B,C) into the connecting holes at the top of the Left & Right Arch Posts (D,E) and fasten at each pair of connecting loops with the Zip Ties (O).

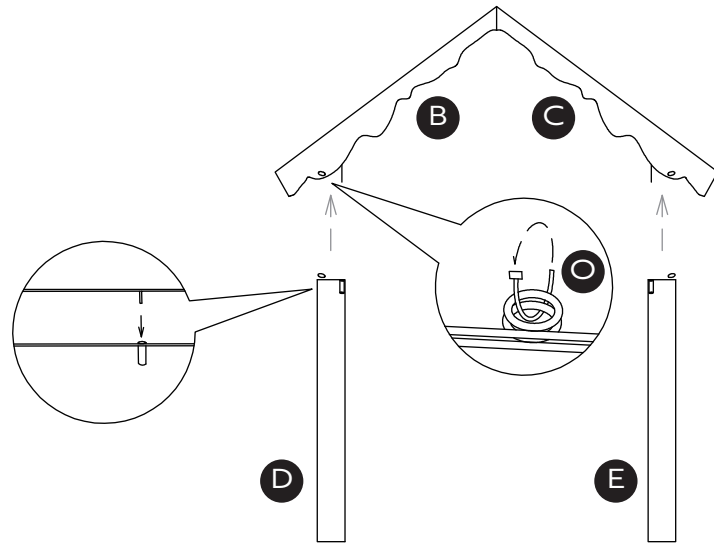


4. Assembling the Big Star to the Arch Cover

Insert the two connecting rods of the Big Star (A) into the connecting holes at the top of the Left & Right Arch Covers (B,C).

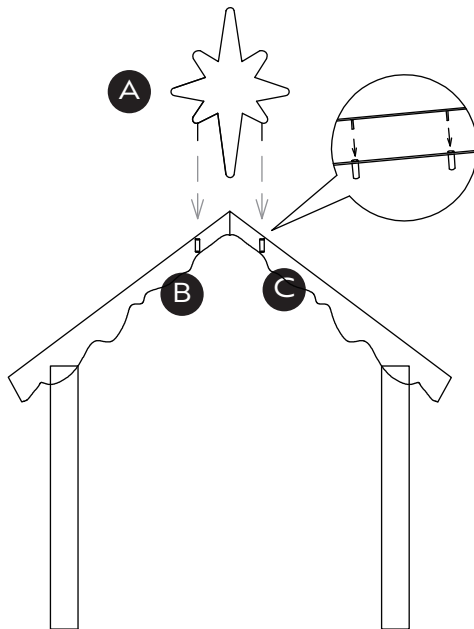


5. Assembling the Hand to the Mother of Jesus

Insert the connecting rod of the Hand of Jesus' Mother (G) into the connecting hole at the front side of the Mother of Jesus (F).

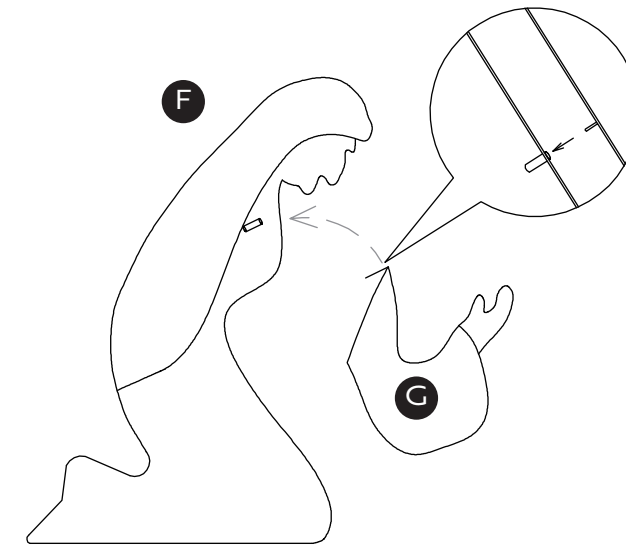


6. Assembling the Baby Jesus to the Cradle

Insert the connecting rod of the Baby Jesus (H) into the connecting hole of the Cradle (I) and fasten at one pair of connecting loops with a Zip Tie (O).

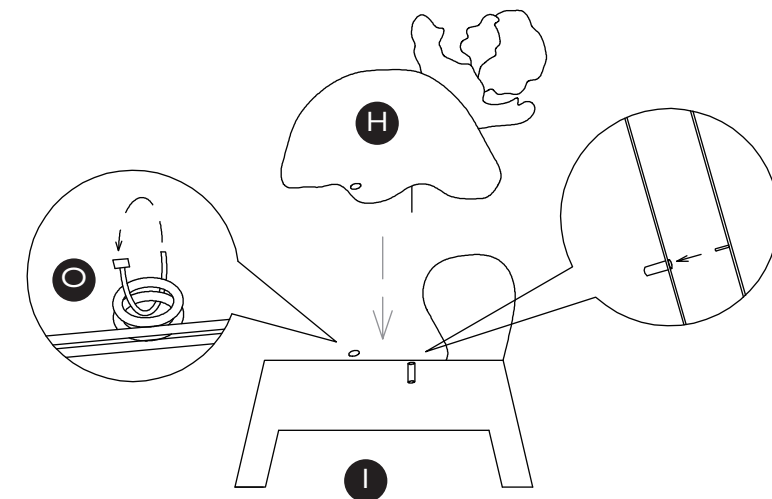


7. Assembling the Built-In Triangle Support Frames of All Three Figures

Insert the movable connecting rods of the built-in triangular support frames of all three figures (F,I,L) into the corresponding connecting holes of themselves.

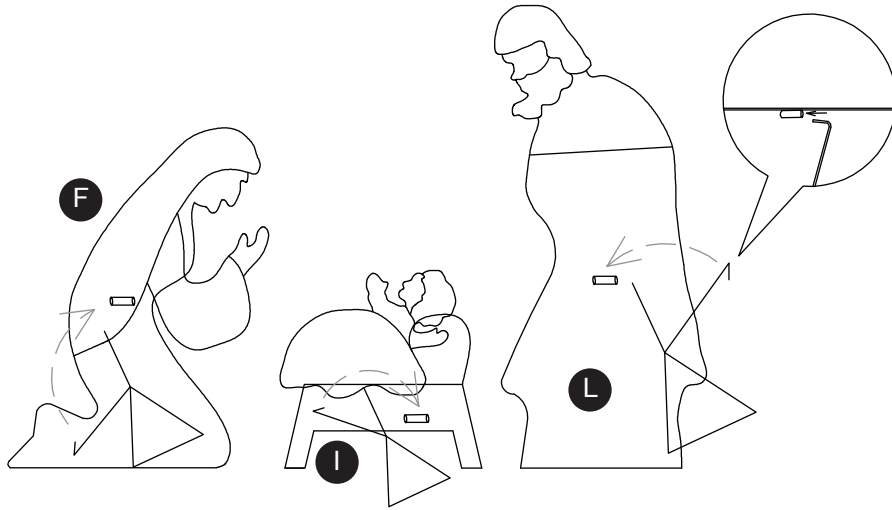

8. Assembling the Metal Cane and the Sleeves to the Father of Jesus

Insert the connecting rods of the Metal Cane (J) and the Left & Right Sleeves (K,M) into the three corresponding connecting holes of the Father of Jesus (L).

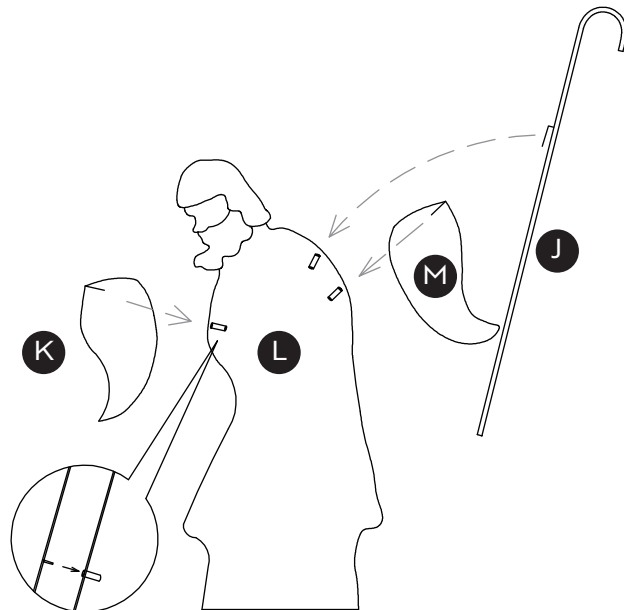

9. Assembling the Ground Stakes

Insert four Ground Stakes (P) over each Rectangular Support Frame (N) then into the ground firmly.


Insert one Ground Stake (P) over each built-in triangle support frame of the three figures (F,I,L) then into the ground firmly.

Insert one Ground Stake (P) over each bottom metal loop of the Father & Mother of Jesus (F,L) and insert two Ground Stake (P) over the bottom metal loops of the Cradle (I) then into the ground firmly.



10. Connecting the Wires

Insert all the plugs connected to the Wire Controller (R) into all the sockets then tighten the plastic nuts.

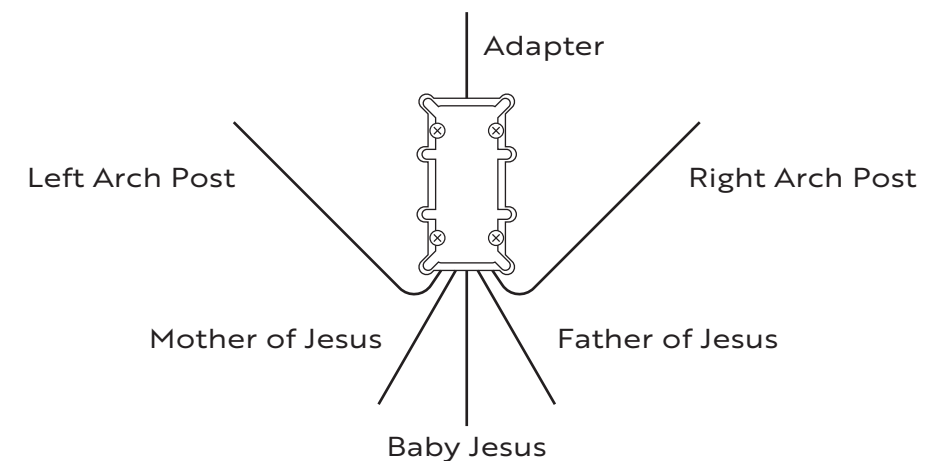



The warranty program is our commitment to you.

We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

Warranty Coverage

This warranty program applies to any orders, purchases, receipts, or use of any products sold and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

Warranty Exclusions

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

How to Make a Warranty Claim

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app's direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem