 


Operating Instructions for the Heating Function on the Electronic Fireplace (Remote Control)

Step 1: Press the power button on the remote control to turn on the fireplace




After turning on the fireplace, observe **the ambient temperature**

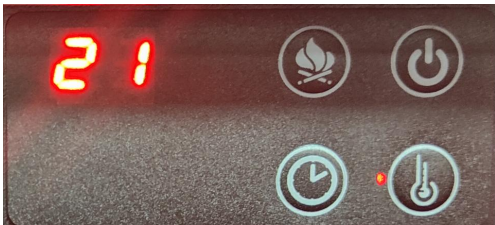

For example: the current ambient temperature display is 21°C or another temperature


Step 2: Press the heating button ON the remote control to activate the heating function and display "ON".

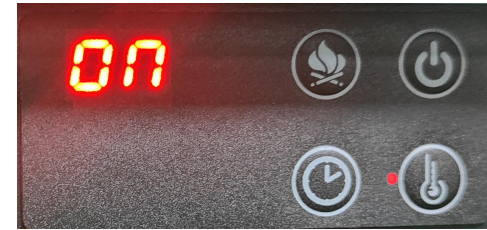

Note: Press and hold the heating button on the remote control only after **the red icon** on the left side of the control panel **lights up** to activate the heating function. (The small red dot on the left of the heating button indicates that the heating is activated.)

Operating Instructions for the Heating Function on the Electronic Fireplace (Remote Control)

Step 3: Press the heating button on the remote control to turn off the heating function, and display "OF".

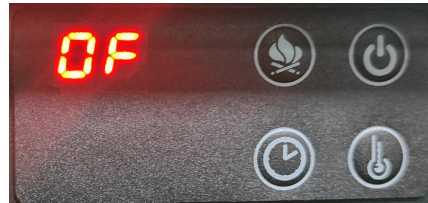

Operating Instructions for the Heating Function on the Electronic Fireplace (**Control Panel**)

Step 1: Press the power button on the keypad to turn on the fireplace

After turning on the fireplace, observe **the ambient temperature**



For example: the current ambient temperature display is 21°C or other.

Step 2: **Press and hold the heating button** on the panel for **3-5 seconds** to activate the heating function




Note: Press and hold the heating button only after **the red icon** on the left side of the control panel **lights up** to activate the heating function. (The small red dot on the left of the heating button indicates that the heating is activated.)

Operating Instructions for the Heating Function on the Electronic Fireplace (Control Panel)

Step 3:

After activating the heating, **click the heating button on the control panel** to adjust the temperature (16°C-32°C/F0).

1. Long press the heating button for 3 seconds to turn on the heating, and the digital tube displays "ON".

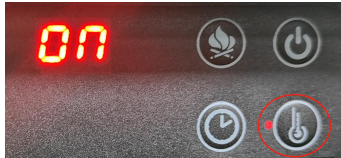

2. Press the heating button to set the temperature, and the digital tube displays "16/18/21/24/27/29/32°C/F0".



A) When adjusting the temperature **higher** than the ambient temperature, heating is **turned on**.

B) When adjusting the temperature **lower** than the ambient temperature, heating is **turned off**.

C) During the continuous heating process, if the ambient temperature exceeds the set temperature, heating will automatically turn off.

D) When the temperature is set to 'F0,' the heater is not affected by ambient temperature and can operate continuously without automatic shutdown.

Note:

1. During the heating process, the fireplace will automatically stop heating when the ambient temperature reaches 32°C.

2. When the ambient temperature is $\geq 32^{\circ}\text{C}$, you can force the heating to run for 30 seconds.

Step 4: **Press and hold the heating button** on the control panel for **3-5 seconds** to deactivate the heating function, and the digital tube displays "OF".

