

30" Christmas Mailbox Swag



SETUP

1. Straighten pine tips on swag. Shift branches to fill any gaps.
2. Locate and open lid of battery box by releasing the locks and insert 4 AA batteries (not included) into the compartment. Make sure batteries are in the correct orientation. Close lid and lock. **Do not mix old and new batteries, or alkaline with rechargeable.**
3. Press button on battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18.
4. Put swag on your mailbox and use the strap and buckle to secure it.
5. Replace batteries when the lights become dim. Remove batteries from unit when not in use.

TROUBLESHOOTING

If Lights Do Not Work:

1. In extreme cold temperatures, lithium AA batteries are recommended. Otherwise, the lifespan of the batteries may be reduced.
2. Ensure the batteries are new and are inserted correctly into the battery box.

WARNING – Risk of Fire and Electric Shock

- Read all instructions and warning tags carefully.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other heat sources.

BATTERY WARNING

- Do not mix old and new batteries. Do not mix alkaline, standard (zinc-carbon), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries.
- Make sure to insert batteries with the correct polarity.
- Remove exhausted batteries from product.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.
- Improper handling/disposal of batteries may cause batteries to explode or leak.
- Please recycle or dispose of batteries according to the local laws and regulations of your region.

**SAVE THESE INSTRUCTIONS
FOR FUTURE USE**