








# ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION DINING CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment. DO NOT use power tools to assembly.

Parts key			Hardware Kit			
No	Qty	Description	No	Code	Qty	Description
1	1 pc	Chair Back	A		4 pcs	Long Bolt Ø7.8 x 80mm
2	1 pc	Complete Seat	B		4 pcs	Medium Bolt Ø7.8 x 50mm
3	2 pcs	Front Leg	C		3 pcs	Short Bolt Ø7.8 x 35mm
4	4 pcs	Floor glide	D		11 pcs	Lock Washer Ø8.5
			E		11 pcs	Flat Washer Ø8.5
			F		1 pc	Allen Key

## STEP:01

- Carefully lay Chair Back flat on a smooth flat surface to prevent scratches.
- Affix Complete Seat to Chair Back by inserting a Flat Washer, Lock Washer and Short Screw (C) into each of the hole on the back of the seat. Don't fully tighten at this point. (See Detail A).
- Insert a Flat Washer, Lock Washer and Long K.D. Screw into each of 2 holes in the Complete Seat corners. Tighten screws with provided Key Wrench. (See Detail B). Tighten the three bolts in the center of the seat back.

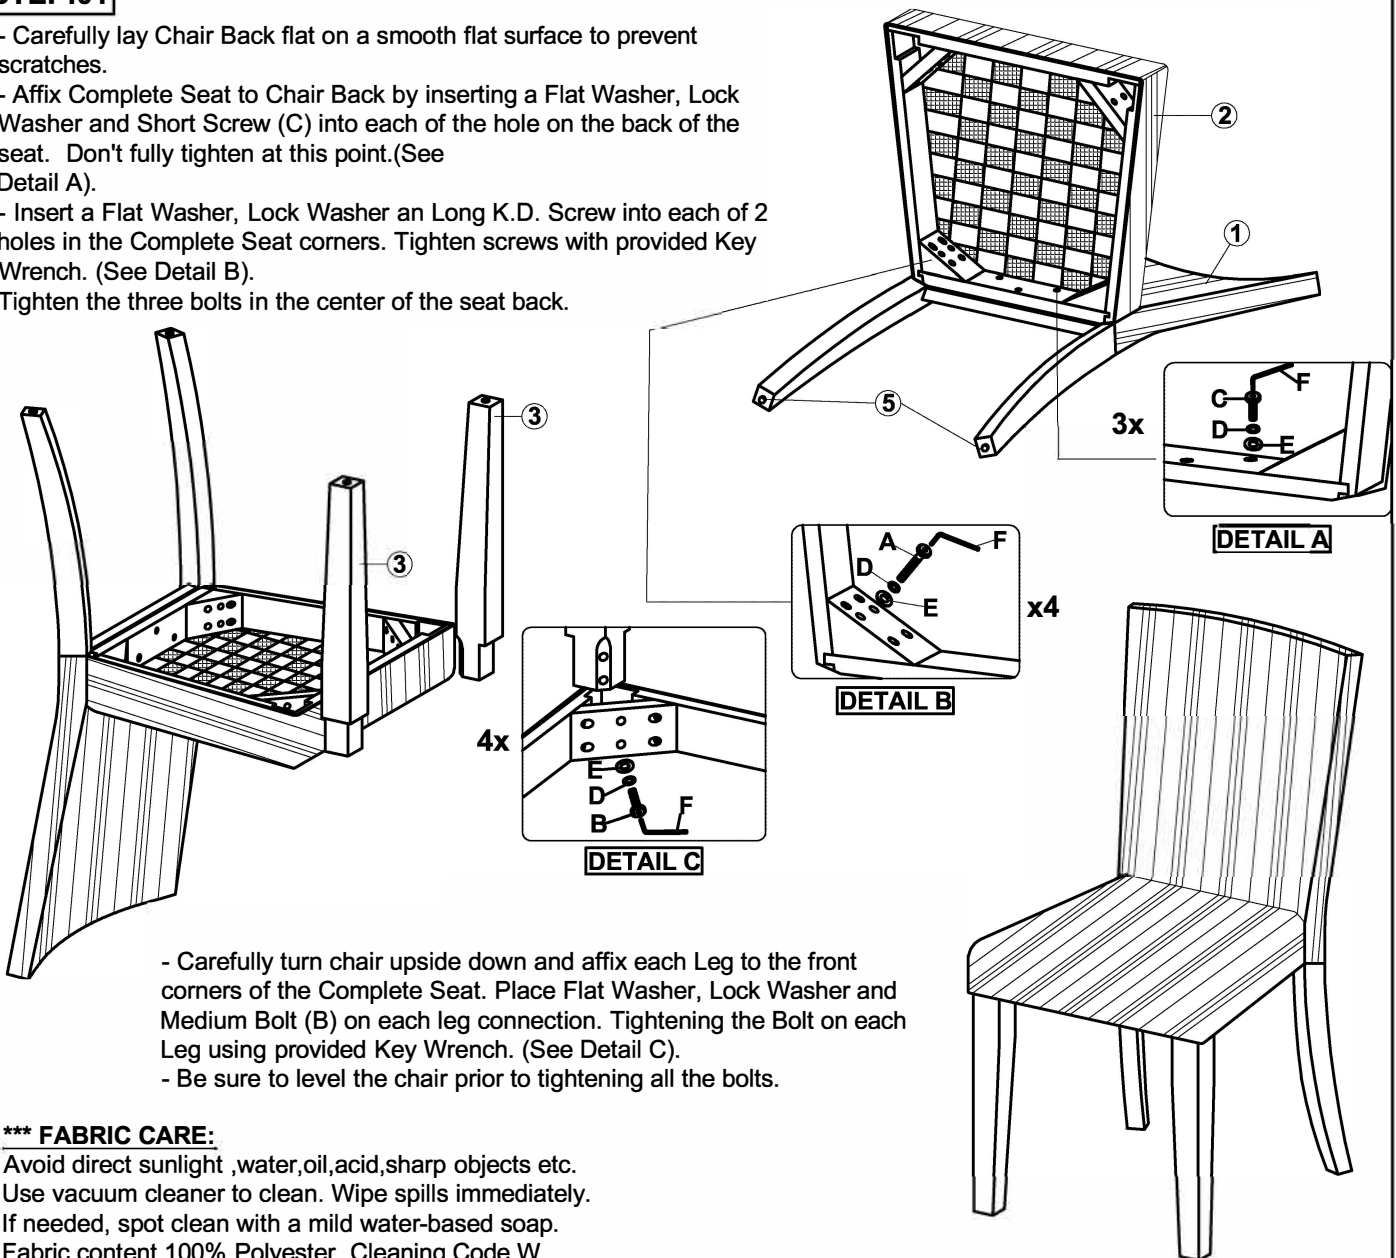

- Carefully turn chair upside down and affix each Leg to the front corners of the Complete Seat. Place Flat Washer, Lock Washer and Medium Bolt (B) on each leg connection. Tightening the Bolt on each Leg using provided Key Wrench. (See Detail C).
- Be sure to level the chair prior to tightening all the bolts.

### \*\*\* FABRIC CARE:

Avoid direct sunlight, water, oil, acid, sharp objects etc.  
Use vacuum cleaner to clean. Wipe spills immediately.  
If needed, spot clean with a mild water-based soap.  
Fabric content 100% Polyester, Cleaning Code W