

AK-SW-FLHT

Humidity Switch User Guide-V2

125.00 mm

AKICON[®]

Humidity Switch User Guide



Model No. AK-SW-FLHT

Questions, problems, missing parts? Before returning to the store,
call AKICON Customer Service
8 a.m.-6 p.m., EST, Monday-Friday
TOLL FREE: +1 (888) 828 2025
service@akiconshop.com
AKICONSHOP.COM

85.00 mm

Specifications

Type	Humidity Switch
Model	AK-SW-FLHT
Rated Voltage	100-240VAC 50/60Hz
Fan	2(2)A
LED	Max 50W each way
Product Size	125*80*37.8MM

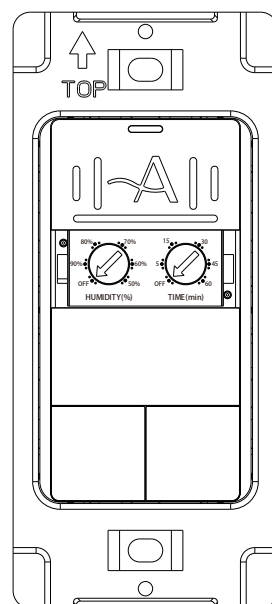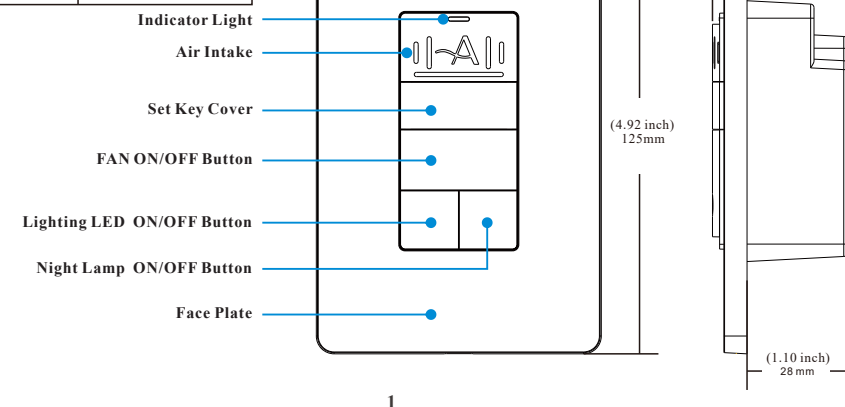

Setup Guidelines

Auto Mode:

When the switch is working in automatic mode, the fan starts to work when the humidity exceeds the set value. When the humidity value is lower than the set value, the fan will stop working after 5 minutes,

Manual mode:


When the button is pressed, the fan operation state can be switched, and the device will switch to manual mode at this time. When the fan is turned on by pressing the button, the fan will switch to automatic mode after running for a specified time. When the fan is turned off by pressing the button, it will switch to automatic mode after 10 minutes.

Time and Humidity Condition Settings:

1. When the time is set to 0, it will not switch to automatic mode after turning on the light manually.
2. When the humidity condition is set to 0, the device will not go into automatic mode.

Wiring diagram

Use wire-nuts to connect switch wires to your home wires according to remark of switch wires. Confirm whether the wire are connected tightly

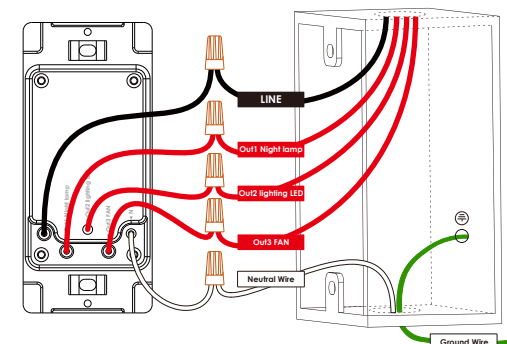

CAUTION

Safety Notice

- Cut off the power before installation
- A neutral wire is needed to power the switch.

3