OUTDOOR WICKER ARM CHAIR

Overall Dimensions: 35"W x 33.875"D x 28.75"H

