 
 
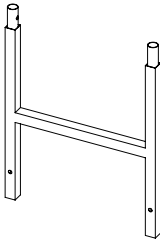 
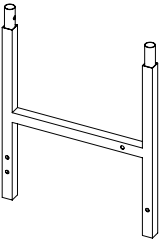 
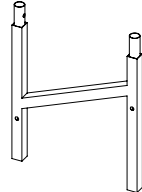 
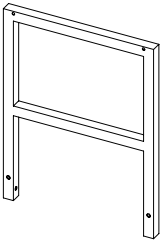 
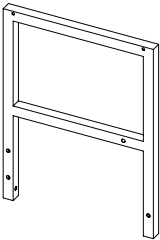 
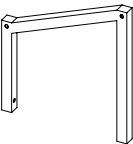 
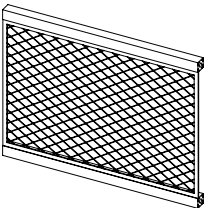 
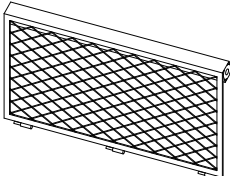 
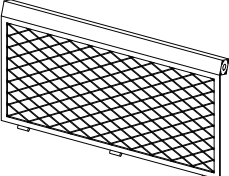 
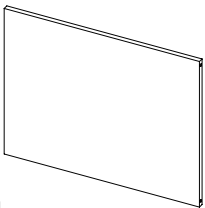 
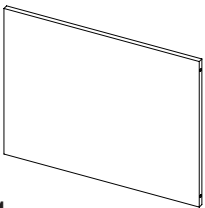 
 
 
 


Parts List (Installation method 1)	 Ax1	 Bx1	 Cx1	 Dx1	 Ex1
 Fx1	 Gx1	 Hx2	 Ix2	 Jx1	 Kx1
 Lx6	 Mx12+2	 Nx6+1	 Ox8+2	 Px1	 Qx1

 
Step 1

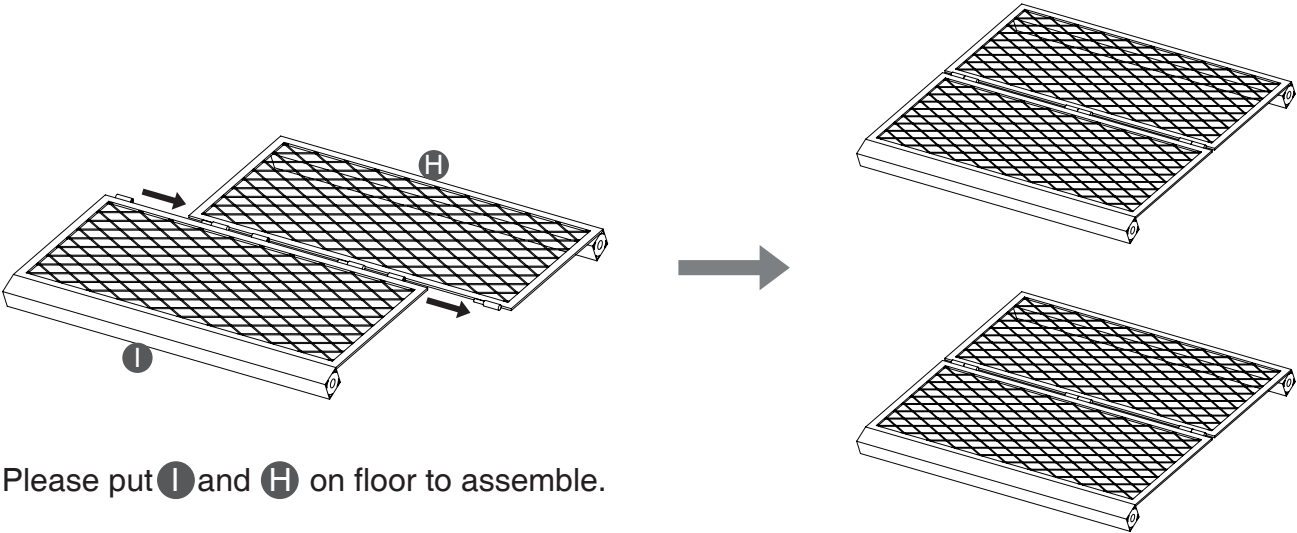


Step 2

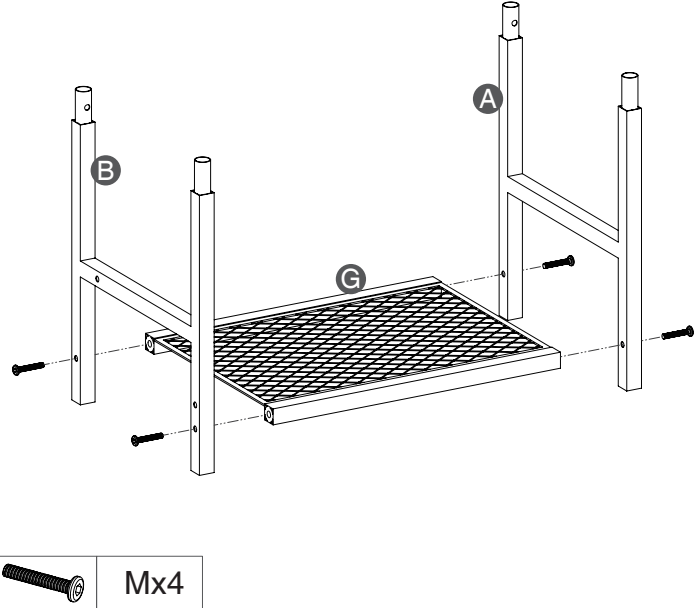


Step 3

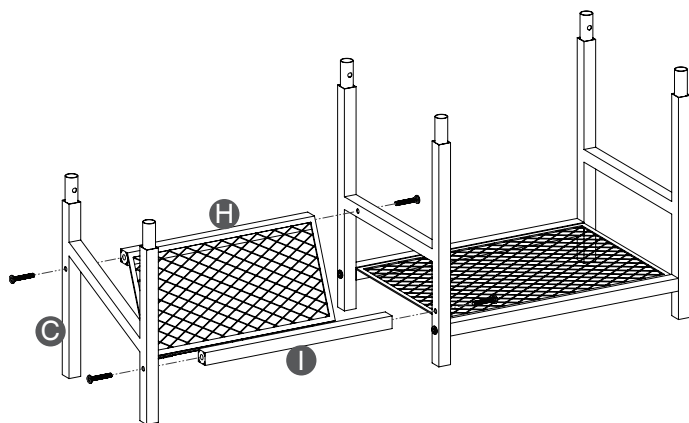

 
Step 4

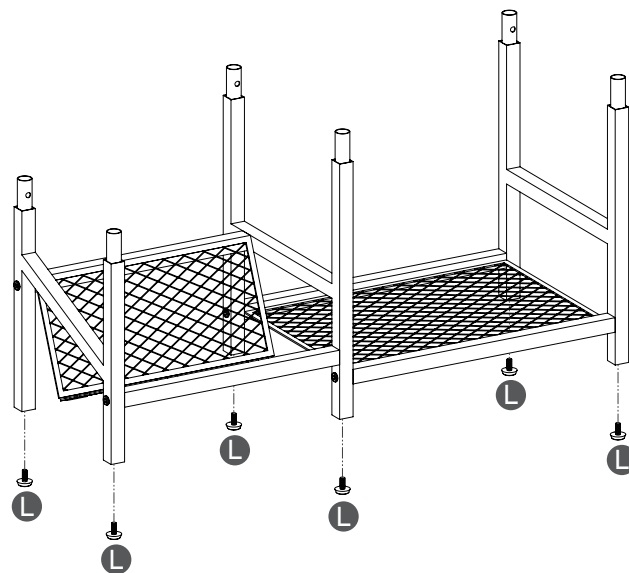


 
Step 5

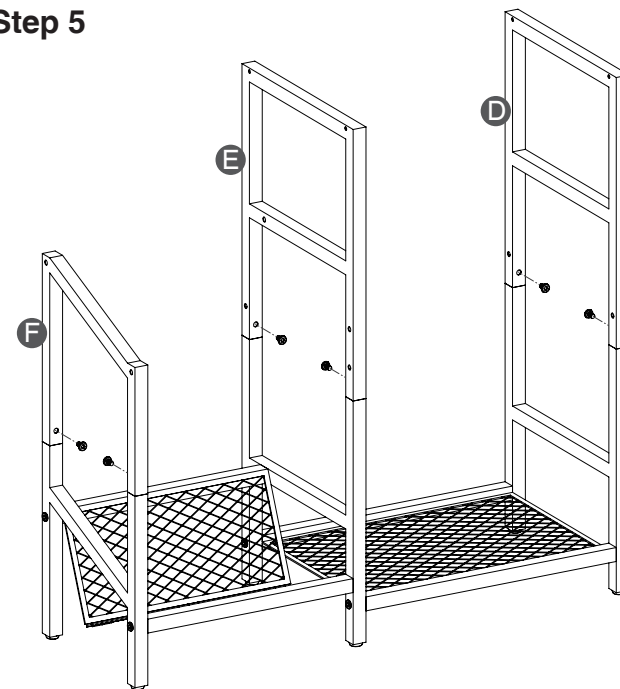

 Step 6

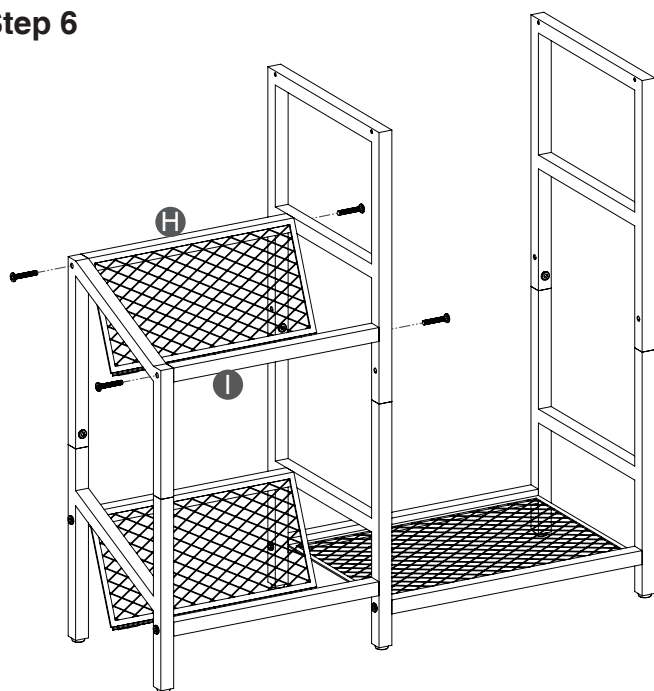

  Step 7

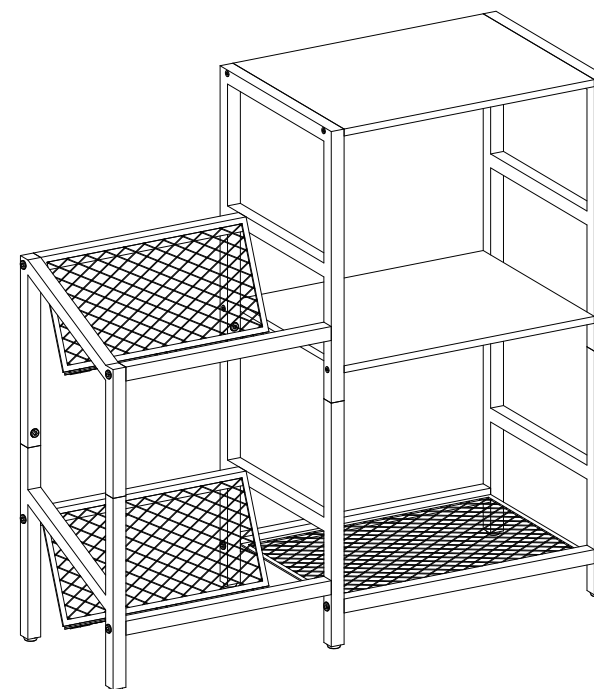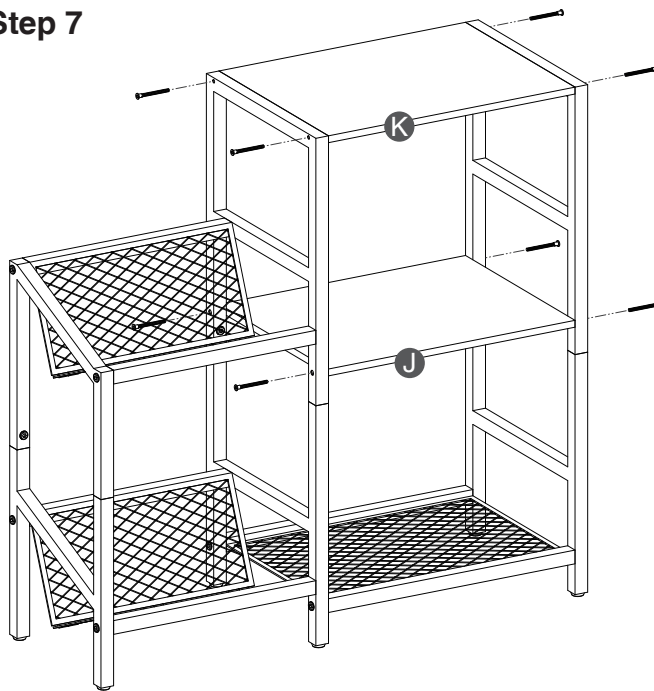

COMPLETION