

OVENTE®

ELECTRIC SKILLET

WITH TEMPERED GLASS LID

SK11112 SERIES



Before using please read the instruction manual and keep it for future use.

ovente.com

OVENTE®

ELECTRIC SKILLET

WITH TEMPERED GLASS LID

SK11112 SERIES



ELECTRIC SKILLET WITH TEMPERED GLASS LID

SK11112 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS		4
PARTS & FEATURES		6
USING YOUR ELECTRIC SKILLET		7
CARE & MAINTENANCE		9



IMPORTANT SAFEGUARDS

When using your Electric Skillet, basic safety precautions should always be followed, including:

- ⚠ Before connecting the skillet, check whether the voltage corresponds to your local mains voltage.
- ⚠ Do not touch hot surfaces.
- ⚠ Extreme caution must be used when moving an appliance containing hot food or liquid.
- ⚠ Always remove the plug from the socket when the skillet is not in use. Allow it to cool down before putting on or taking off parts. Do not touch or insert the plug with wet hands to avoid electric shock.
- ⚠ Prevent the product from being exposed to excessive dirt and humidity.
- ⚠ Keep children away from the skillet. Pay particular attention when children are in the vicinity.
- ⚠ Never immerse the plug-in water or any other liquid.
- ⚠ Do not connect incompatible products or items not included in the package.
- ⚠ This skillet should not be used by people (including children) with reduced physical, sensory, or mental capabilities. It is not intended for people with a lack of experience and knowledge unless they are supervised by a person who is responsible for their safety.
- ⚠ Do not operate any appliances with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any way. Call our toll-free customer service number on **1-855-926-2626** for immediate assistance.
- ⚠ When disconnecting the power cord, grasp and pull the plug carefully.
- ⚠ Prevent squeezing the cord during installation or cleaning as it may damage the cord.
- ⚠ Clean the product itself with a slightly damp cloth.
- ⚠ Keep the cables away from appliances that generate excessive heat.
- ⚠ To avoid the danger of tripping, do not let the cord hang over the edge of a table or countertop.



IMPORTANT SAFEGUARDS

When using your Electric Skillet, basic safety precautions should always be followed, including:

- ⚠ Keep the skillet away from hot appliances, or gas or electric stoves.
- ⚠ Use only nylon, plastic or wooden utensils with care to avoid scratching the non-stick plate.
- ⚠ High temperature is present during operation. Make sure that you only touch the handles of the skillet to avoid burns.
- ⚠ The thermostat must not come into contact with the unit. Always pull out the plug before removing the thermostat.
- ⚠ The glass lid can become extremely hot during operation. Therefore, use oven gloves when removing the lid to avoid burns.
- ⚠ Do not use the skillet for anything other than its intended use. Do not use outdoors.

PARTS & FEATURES



12-INCH DIAMETER

Wide opening and large 2.5-liter capacity are ideal for big meals

NON-STICK COATING

Makes cooking and clean-up easier

ALUMINUM BODY

Conducts heat efficiently for faster cooking



TEMPERED GLASS LID

Provides a clear view of your food

COOL-TOUCH HANDLES

For safe and easy handling

TEMPERATURE CONTROL


5 temperature settings provide a wide range of cooking possibilities





USING YOUR ELECTRIC SKILLET

- 1 Before using for the first time, clean the lid and body of the skillet carefully.
- 2 Connect the thermostat to the base of the skillet. Make sure it is connected properly.
- 3 Turn the thermostat switch to "OFF" (fully clockwise position) and plug into socket (A).
- ! NOTE: If the thermostat is not properly inserted, the skillet will be heated abnormally and can thus easily damage the skillet or cause accidents. So inserting the thermostat correctly is very important.
- 4 Brush the skillet with a little cooking oil.
- 5 Adjust the temperature-graduated disc according to your cooking needs.

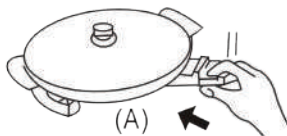

Number on dial	Temperature settings(°F)
1	219-367
2	257-403
3	304-439
4	325-462
5	329-480

- 6 After pressing ON, wait for 5-10 minutes before starting to use the skillet.
- 7 After cooking, turn the disc to "MIN" to maintain the temperature.
- ! This skillet has thermostat control. When it is first powered on, the indicator light is red. Once your selected temperature is reached, the light will shut off. If the temperature drops below a certain level, the light will turn back on to let you know the skillet is reheating; the skillet will continue to cycle on and off until powered down or unplugged. You might hear a beep as well.
- ! To avoid burns, do not touch any part of the skillet while in use.
- 8 The lid is needed when cooking meatballs, pizza, steak, hamburgers or frying food.
- ! CAUTION: When removing the lid, be careful of escaping steam.
- 9 When finished, adjust the rotary switch to the OFF position.
- 10 Unplug the skillet.





USING YOUR ELECTRIC SKILLET

- 11 Remove the thermostat from the heating plate.

! CAUTION: The thermostat will still be hot so the heating plate should be cool before taking off the thermostat.

- 12 After the heating plate has cooled, wipe it with a clean sponge. When doing this, cover the socket hole to avoid water from penetrating it.

- 13 Wipe the washed skillet with a cloth.

! NOTE: The heating plate is non-stick. Do not use knives or other sharp utensils. The thermostat must not be placed on the heating plate. Wipe the heating plate clean after use. If some residue remains, it will cause burns or lead to irregular heating.



SAFETY TIPS

- Operate the skillet according to the following safeguards to avoid burns or electric shock.

- Wire is too hot

♦ Stop using immediately and call our toll-free customer service number on **1-855-926-2626** for immediate assistance.

- 120 Voltage

♦ Confirm the right voltage (120V) and power (1400W). After use, unplug the skillet.

♦ It must not share a socket with other electric appliances.

- ! Be careful with the wire:

♦ It must not be twisted hard or pulled sharply.

♦ Skillet cannot be immersed in water.

♦ Do not clean with water.

- ! Do not use the skillet if:

♦ It is unsteady or on easy burning surfaces such as newspapers, PVC tables, floors, etc.

♦ The skillet should be at least 6 in. away from the wall, and furniture.



CARE & MAINTENANCE

- Aluminum cookware is not dishwasher-safe. Some dishwashing detergents contain chemical products and salts that may damage aluminum and cause discoloration. Use mild soap or a mixture of cream of tartar to remove grease.
- Allow the skillet to cool before cleaning, since sudden changes in temperature may result in deformation of the base which will cause the skillet to stop working properly.
- After cleaning, dry the skillet thoroughly to avoid limescale build-up.
- Do not use metal utensils that can damage or scratch the inner surface.
- For any food residue, simply boil water with vinegar for 5 minutes then wash and rinse as usual.
- Store your skillet carefully by avoiding direct contact with metal or sharp objects.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Wattage: 1400W

OVENTE®

ELECTRIC SKILLET

WITH TEMPERED GLASS LID

SK11112 SERIES





OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our electric skillet with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

ovente.com

OVENTE®

Defining Housewares