






Parts List 1 4 10 8 **5** 10 3 9 2 W Α В 24pcs 24pcs 2 pcs C Ε D F G 4pcs 12pcs 80pcs 12pcs 4pcs J Н K 4pcs 2pcs 8pcs 1pc 12pcs P. 2

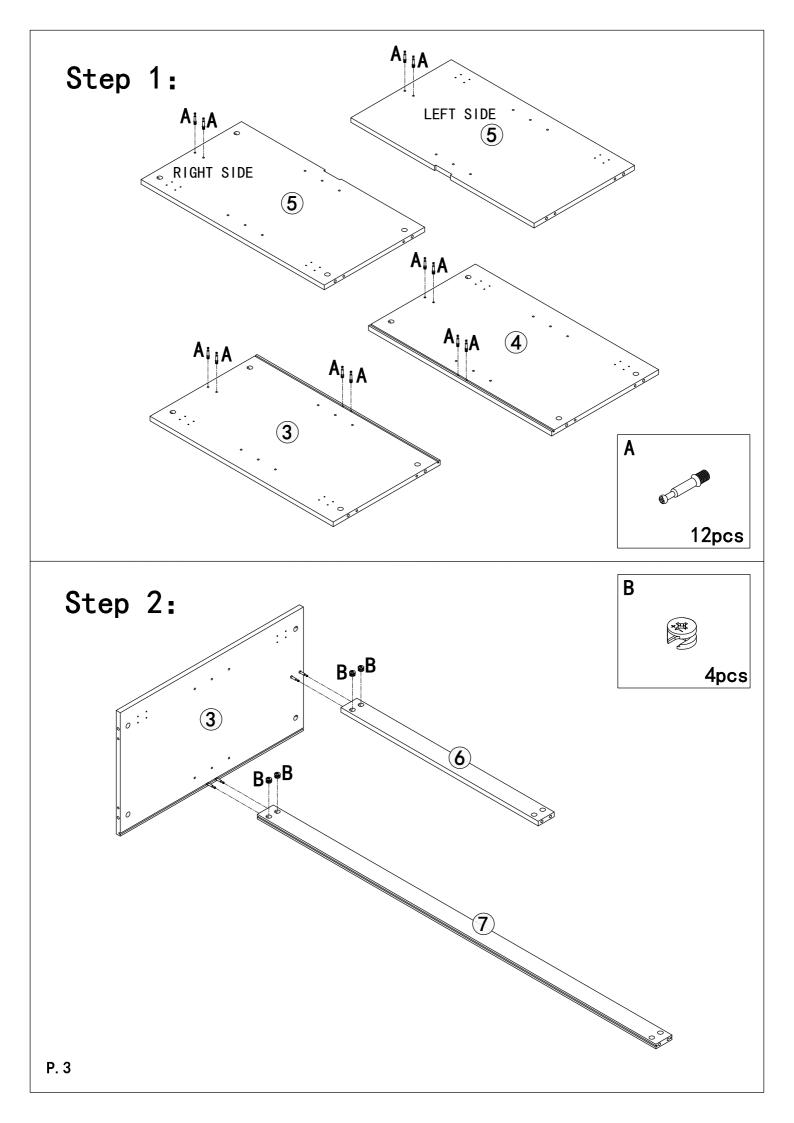


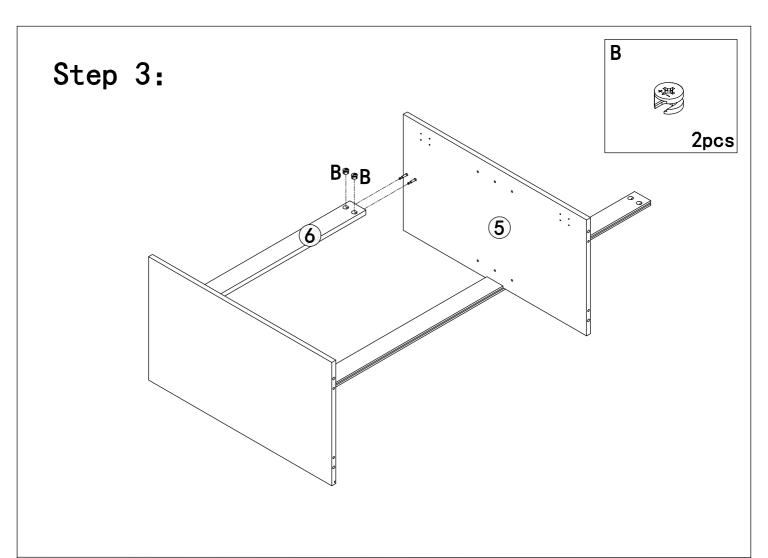


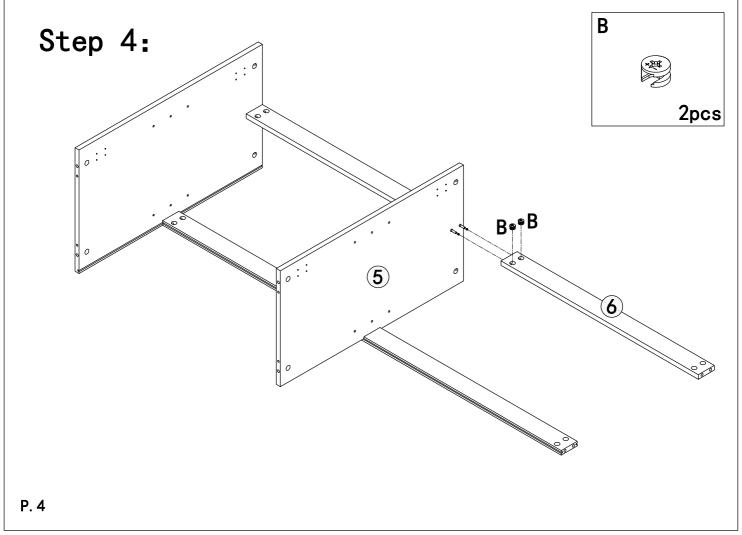


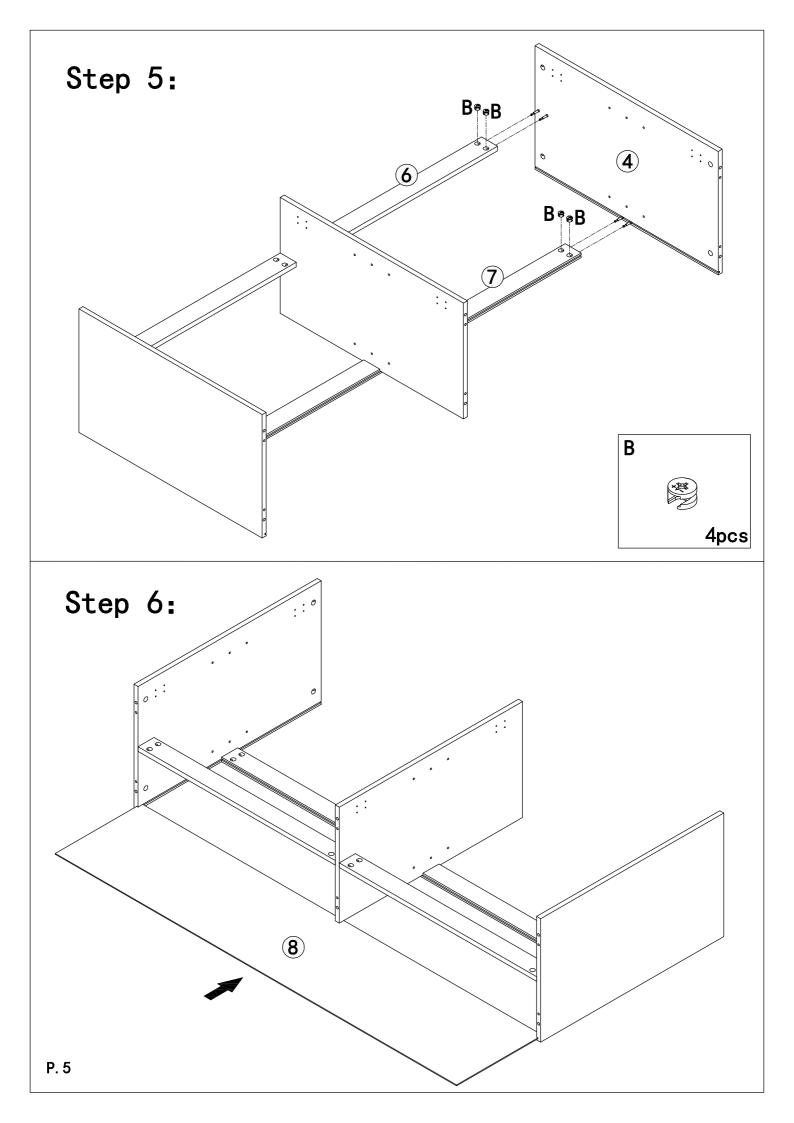


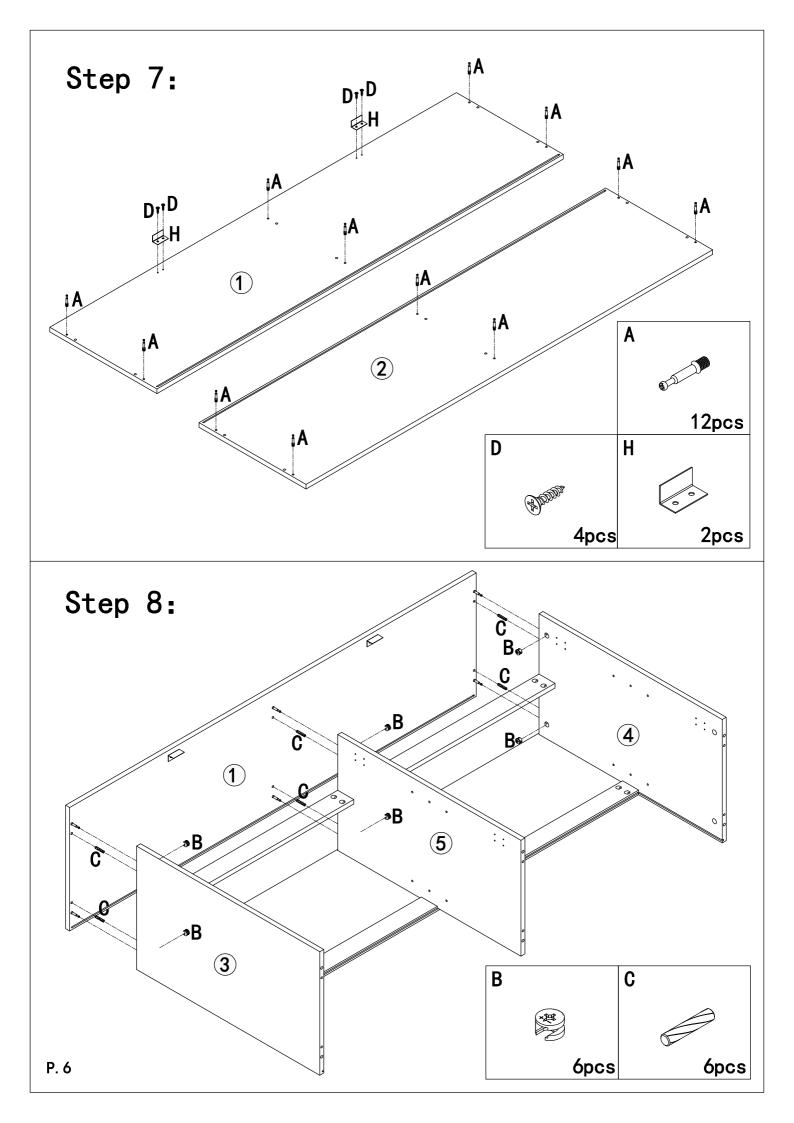


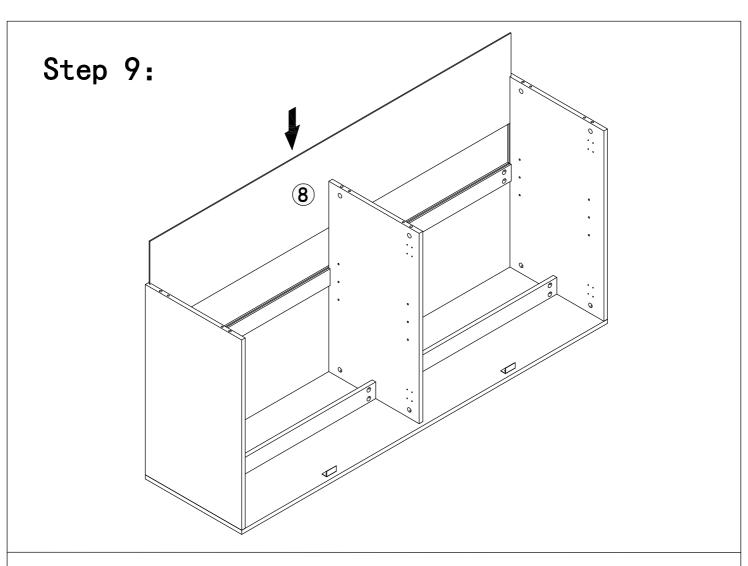


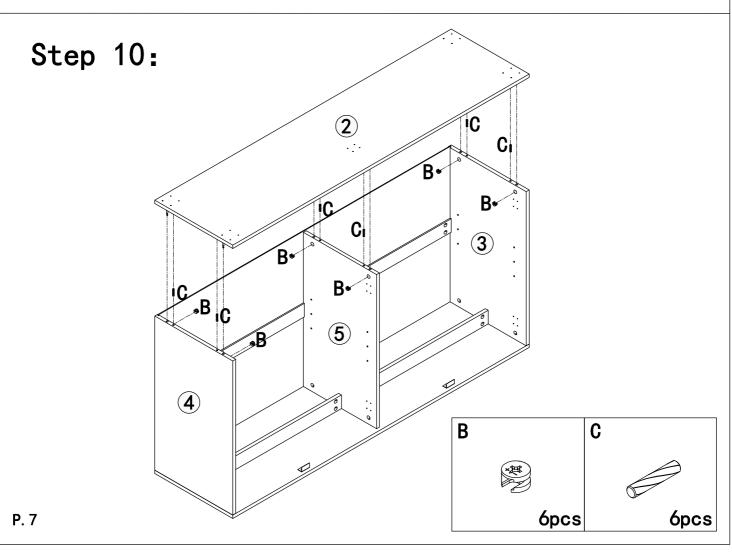


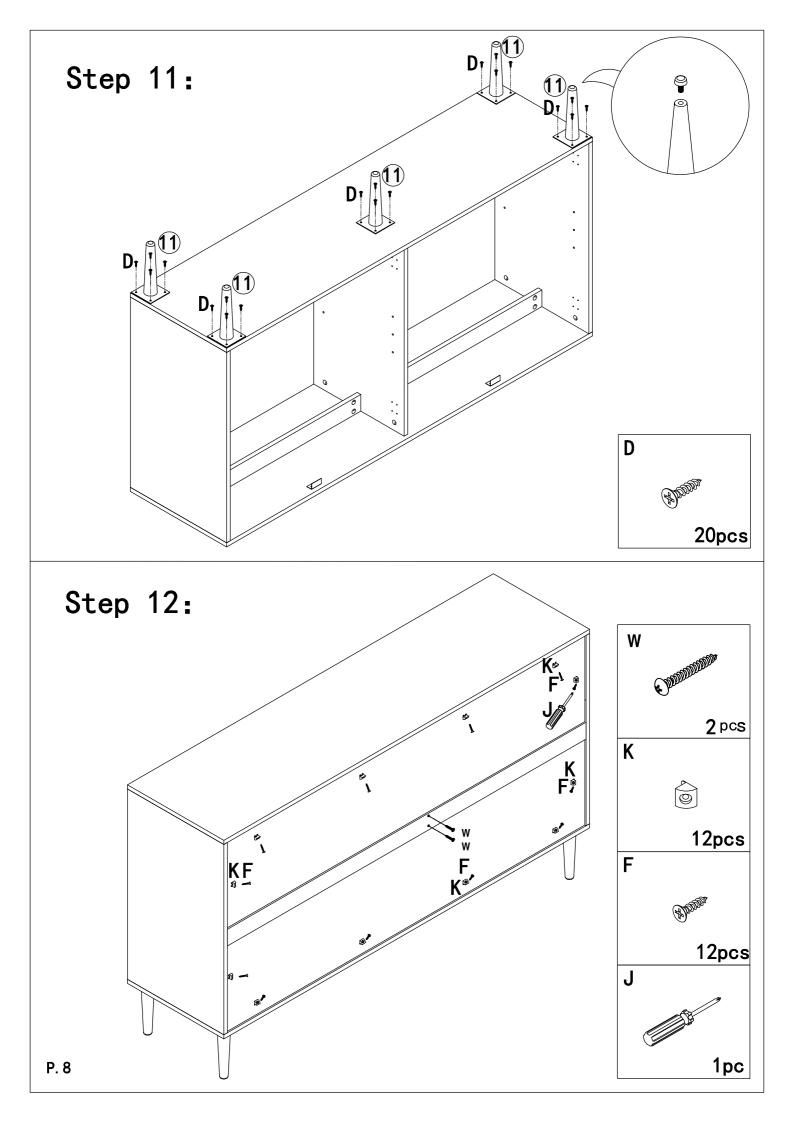


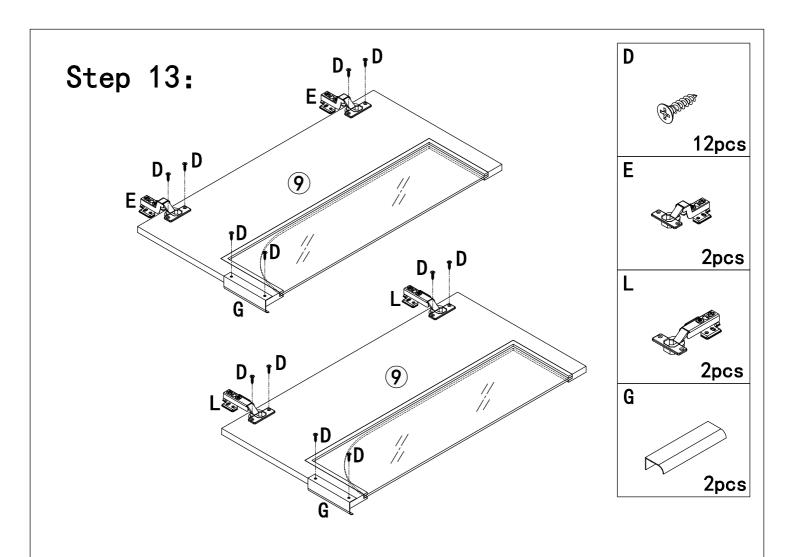

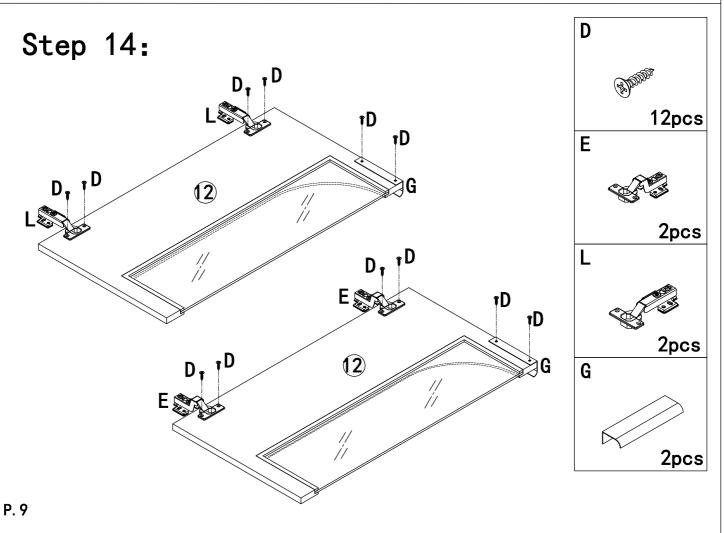

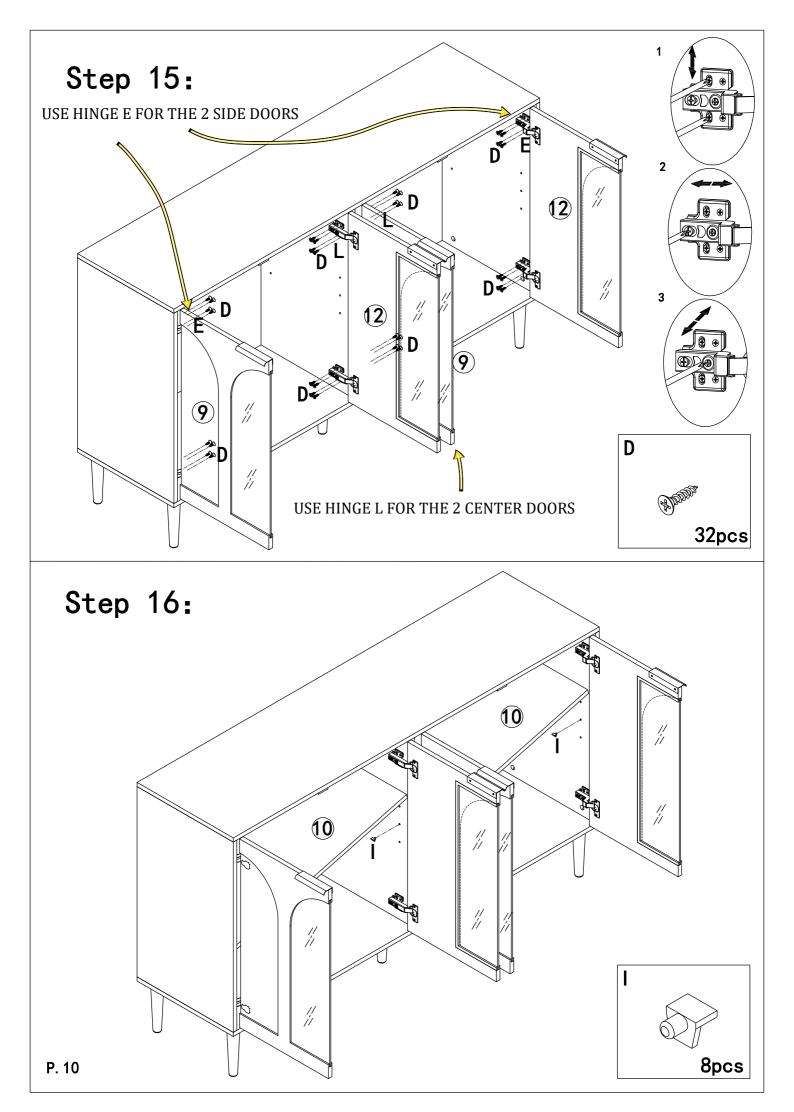


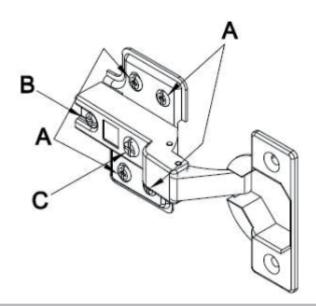

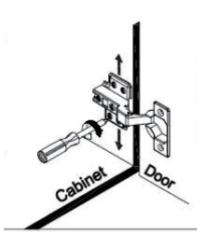


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

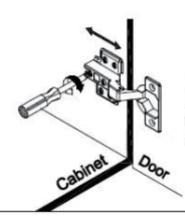

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

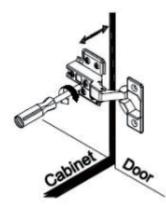

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.