 


MANUAL INSTRUCTION

TV STAND

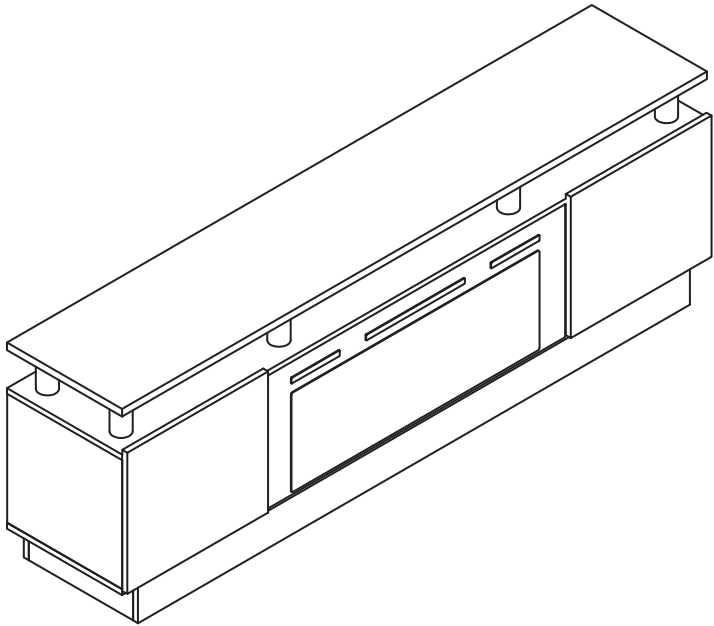


 TV STAND

We offer a diverse range of products
to meet the needs of customers.

Reach us at

 service@kmcglobe-us.com

 (+1) 559-354-1889

 
Some Notes From KMC Group

1. The product must be assembled and used in accordance with the provisions of the manual. The seller does not assume any responsibility or liability with respect to any damage caused by incorrect assembly or improper use.
2. Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
3. Please read assembly instructions before start.
4. Please remember : This summary may not include every detail of all variations or considered steps.
5. Please contact us when further information are needed.
- * 6. Contact Us(24/7):**service@kmcglobe-us.com**

Warnings

1. It is strictly prohibited to sit or stand on the product.
2. Please put this item on a flat ground.
3. During the assembly process, keep any small parts out of the reach of children. It may be fatal if swallowed or inhaled
4. To avoid the potential dangers of suffocation, please keep all parts and packaging (films, plastic bags and foam, etc.) away from babies and children.
5. If there is/are defective and/or missing part(s) after unpacking, please cease assembly immediately and get in contact with us as soon as possible.
- * 6. You may reach us at: **service@kmcglobe-us.com**

Tools Required

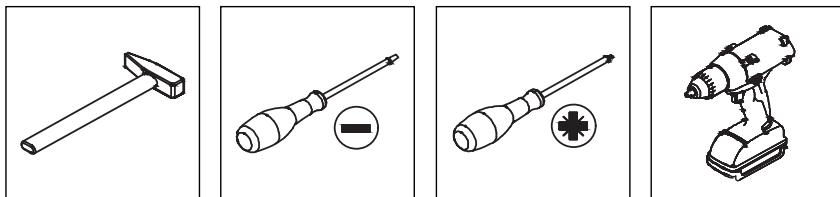

If electric tools are required, please reduce the torque to prevent product damage during installation.

PARTS



 
2 Persons Assembly




Up to 30 Minutes For Assembly




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size.

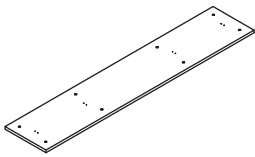


1 X 1

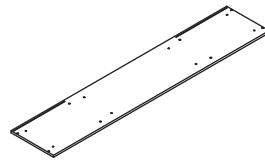 


2 X 1

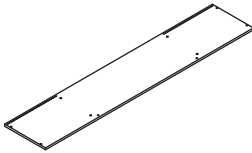 


3 X 1

 


4 X 1

 


5 X 1

 


6 X 2

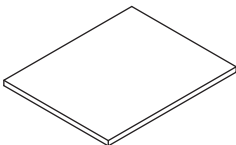 


7 X 2

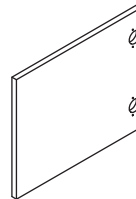 

8 X 2

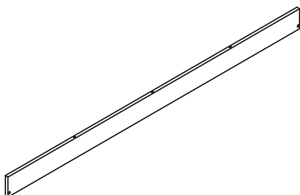 

9 X 2

 


10 X 2


PARTS



 11 x 2

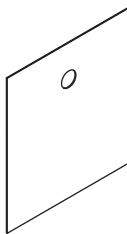


12 x 2

 

13 x 2

 
HARDWARE




$\phi 8 \times 30 \text{mm}$
(A) × 14



 
$\phi 15 \times 12 \text{mm}$
(B) × 28 (+1)

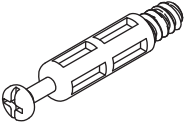

 
$\phi 6 \times 40 \text{mm}$
(C) × 28 (+1)

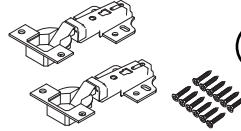

 (D) × 2



 
(E) × 8



$M6 \times 25 \text{mm}$
(F) × 8 (+1)




 (G) × 8 (+1)







(H) × 1



 
EXPLOSION DIAGRAM

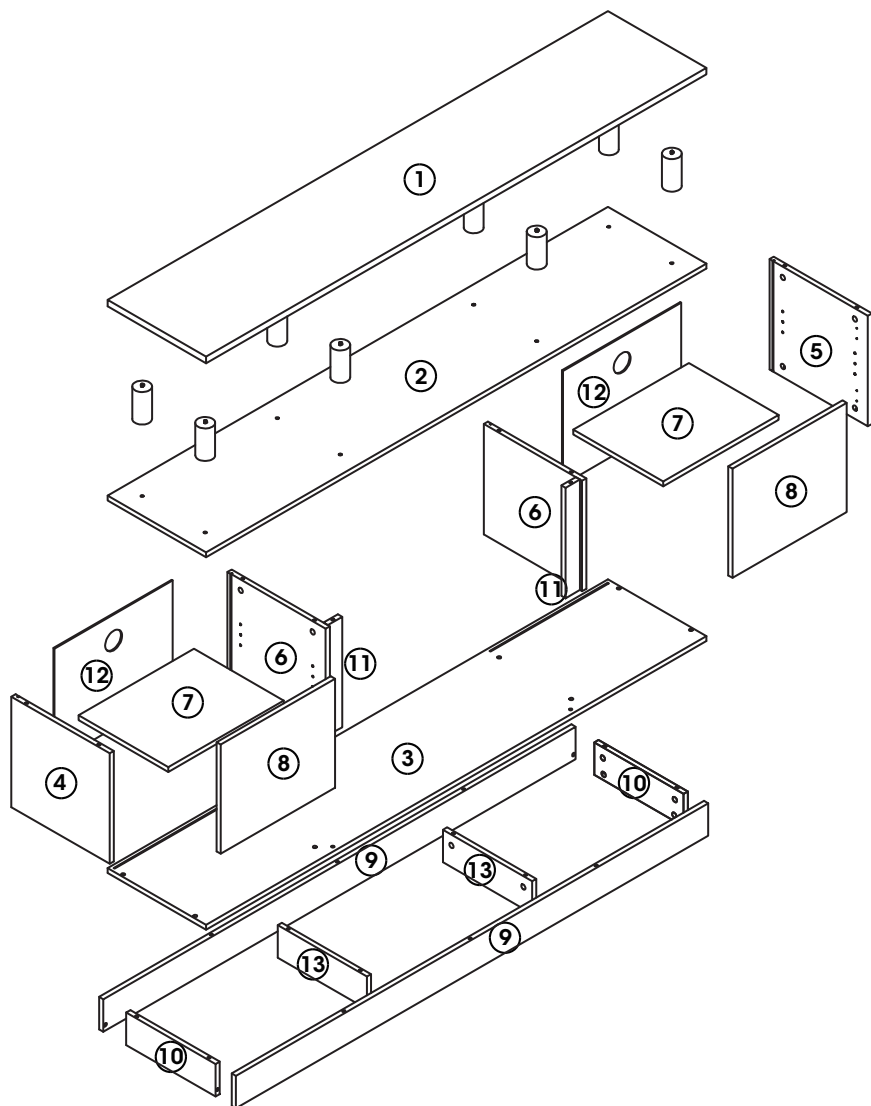





1

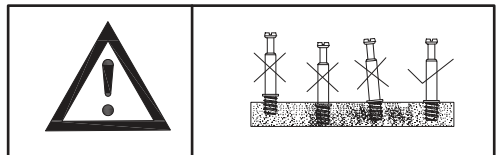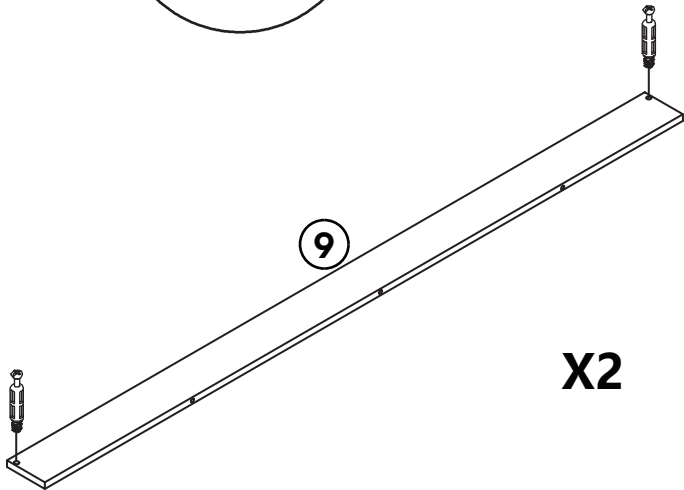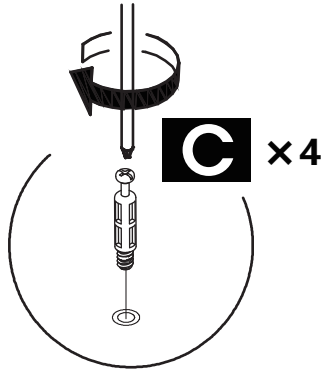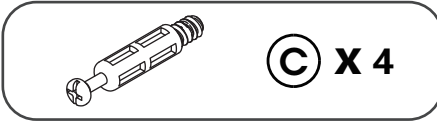    


2

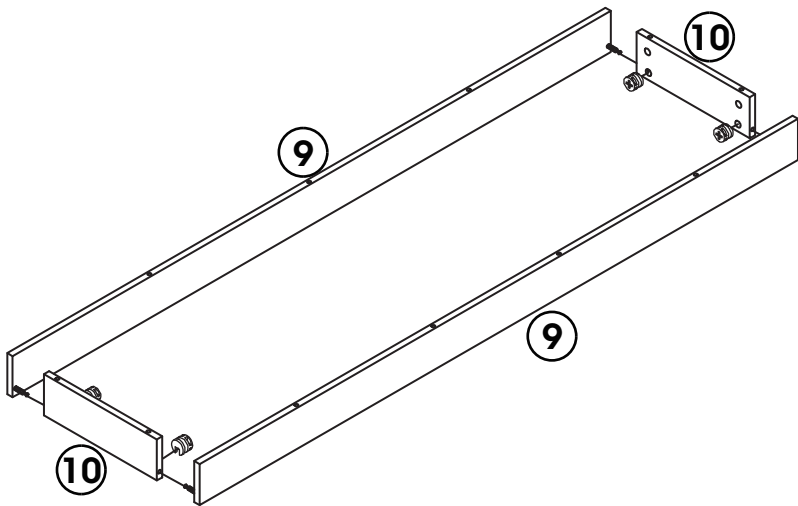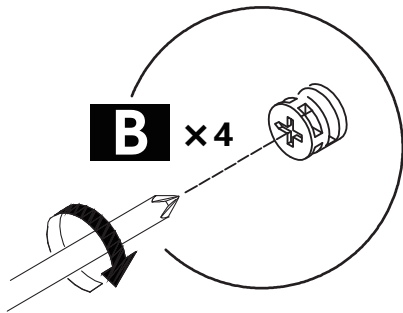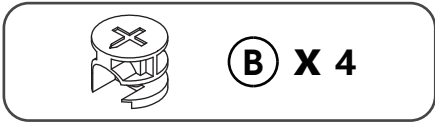   

3

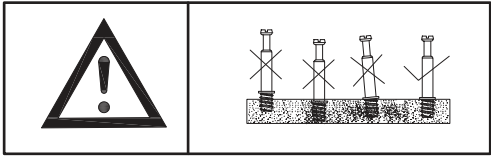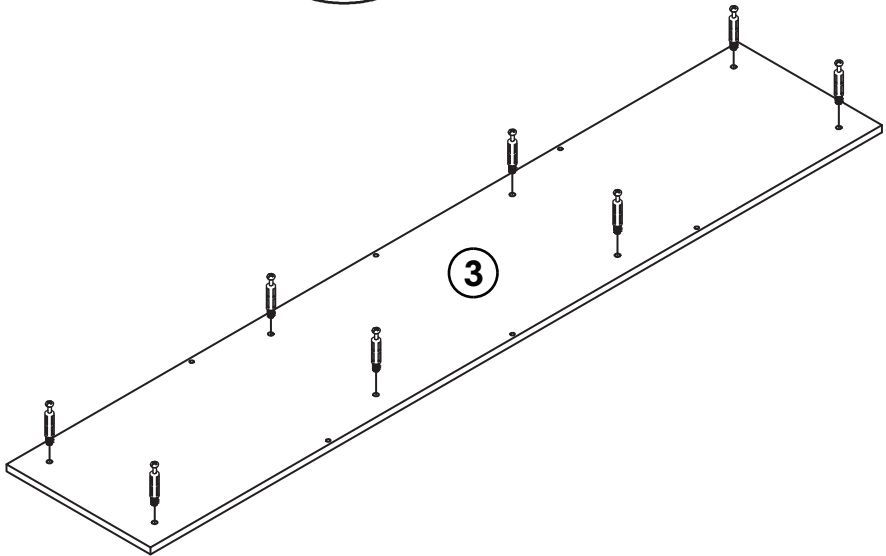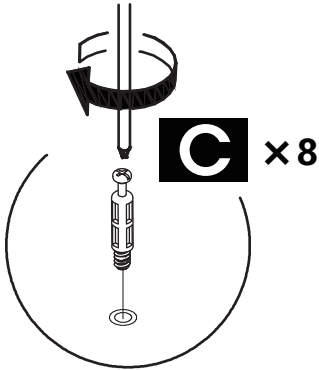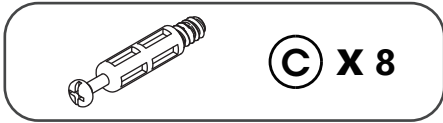    




4

 





A X 6



  
 
B X 8

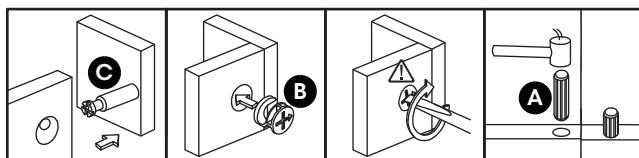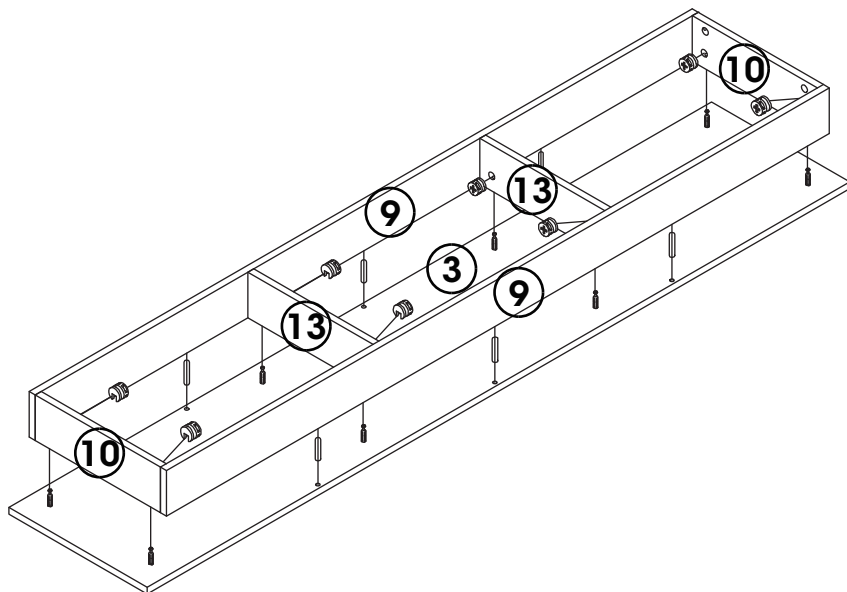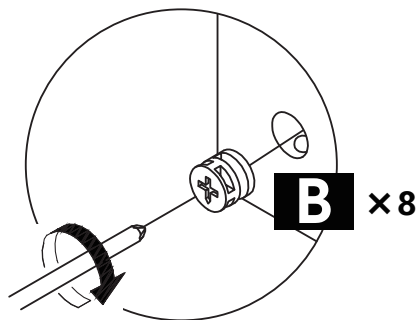

5

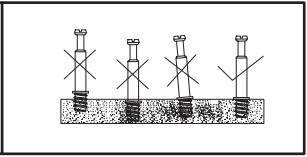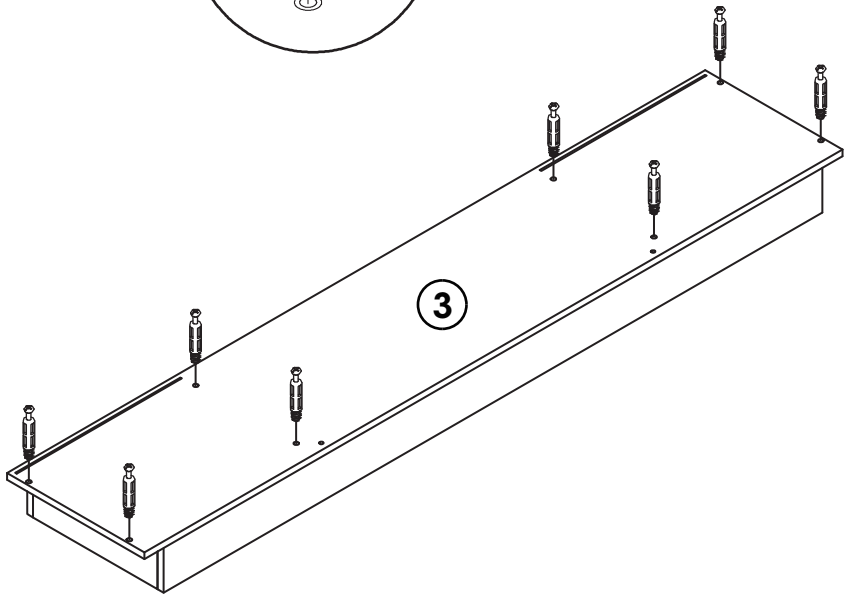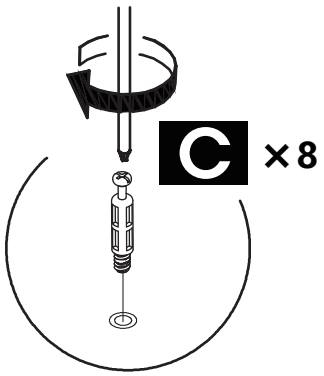   
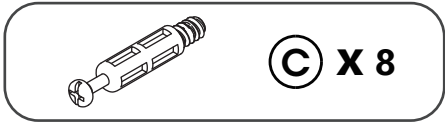 


6

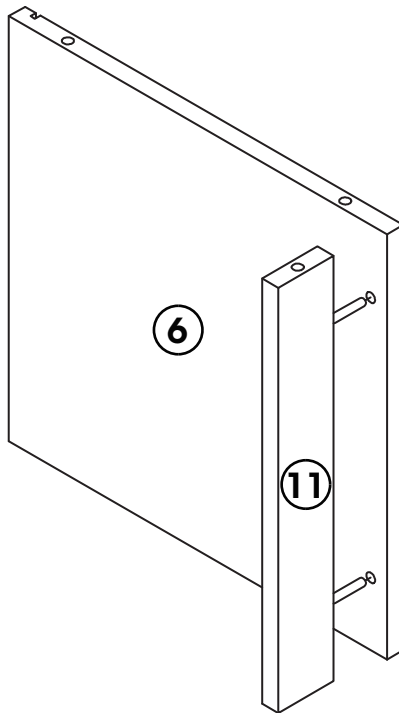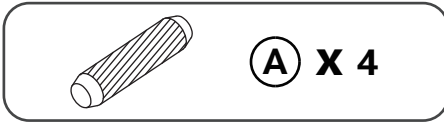  


X2



 
 
7

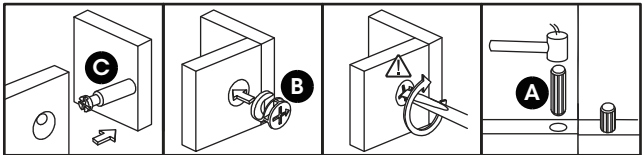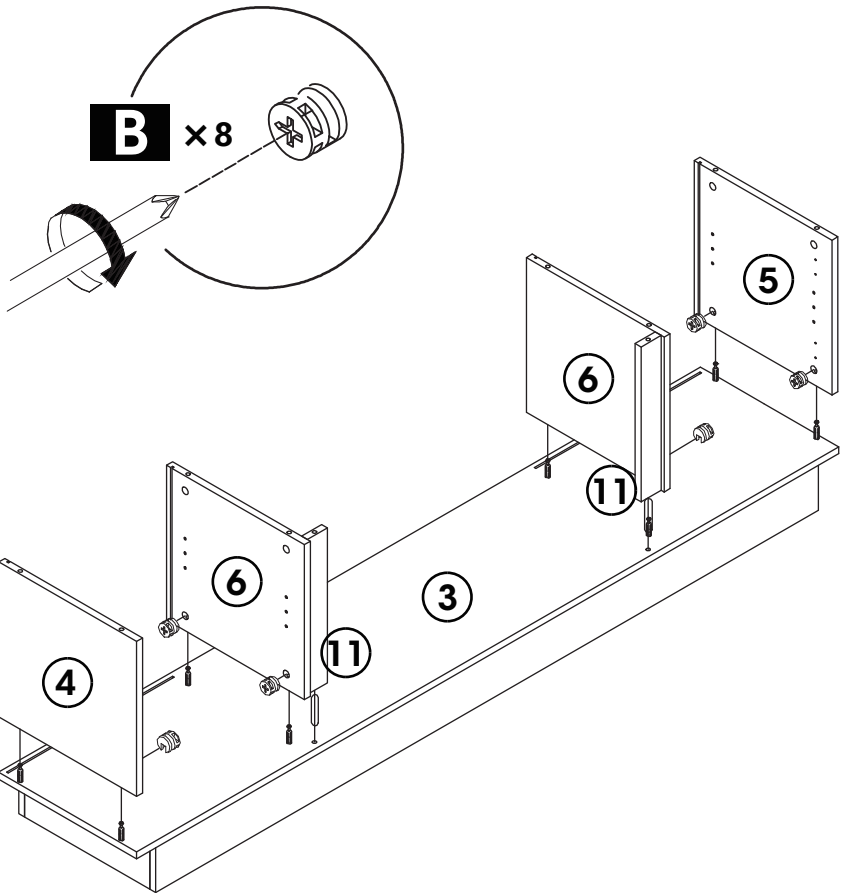



 
Warning: Component ⑫ with round hole end faces up.

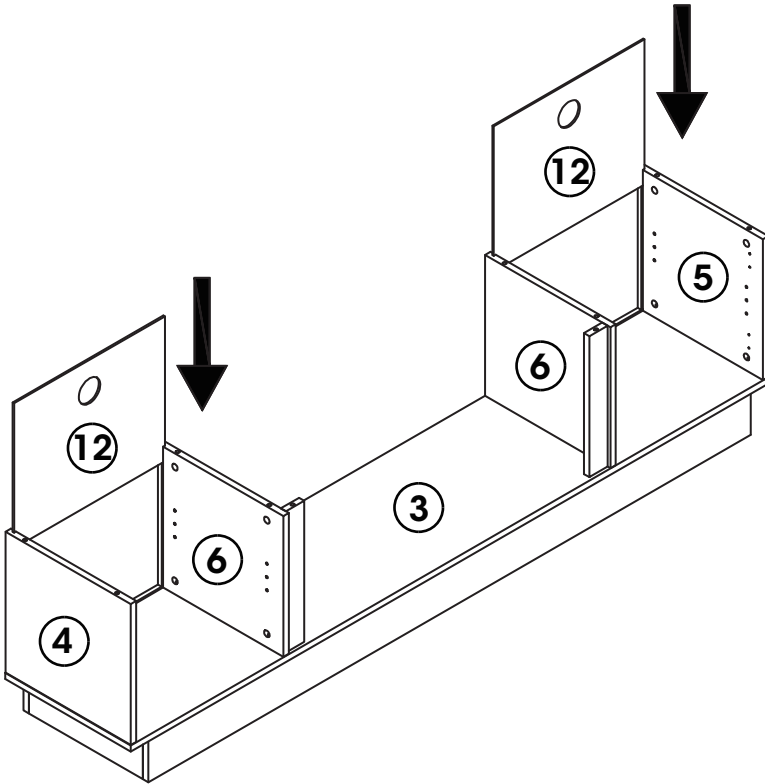



9

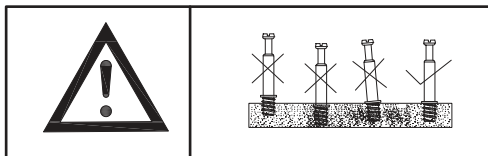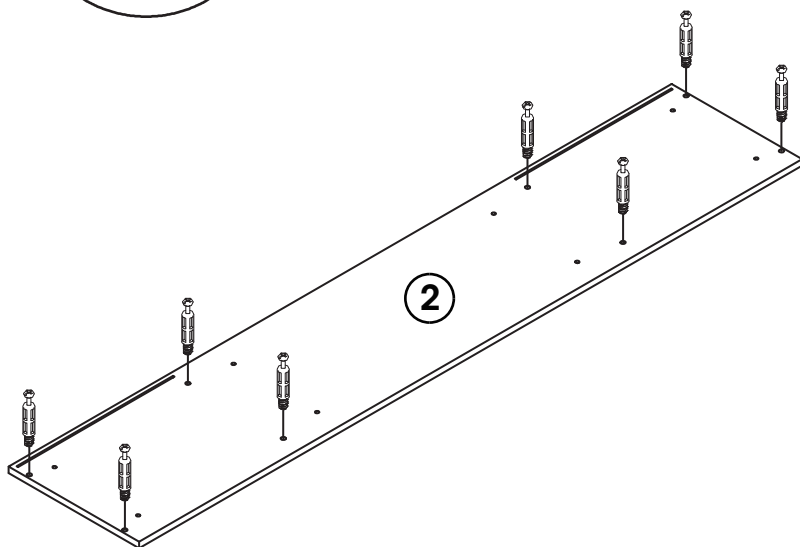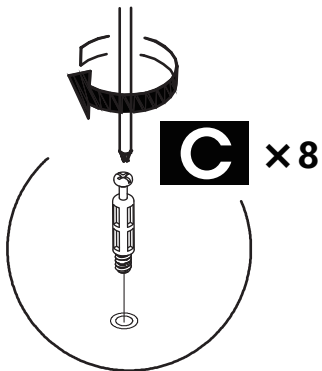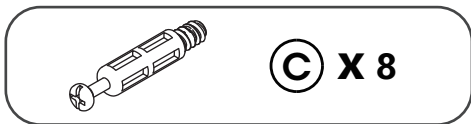    





10

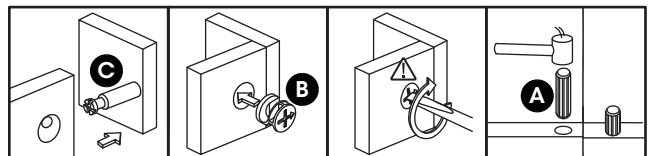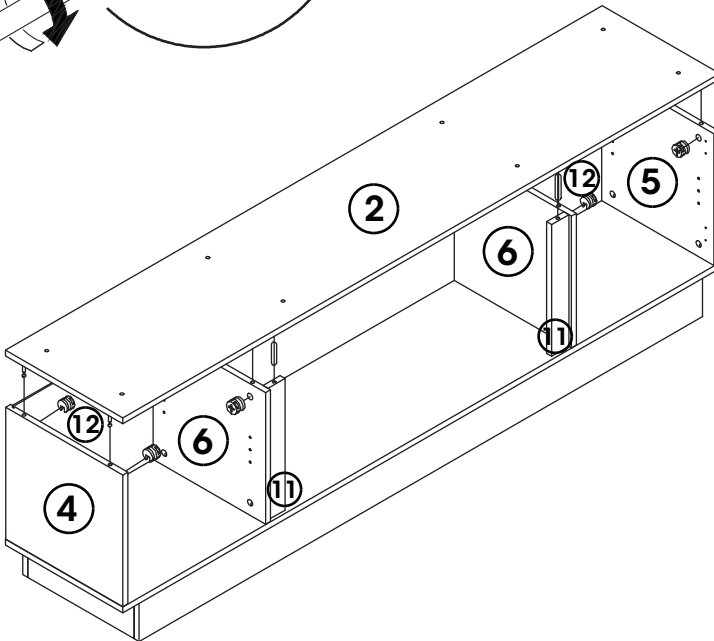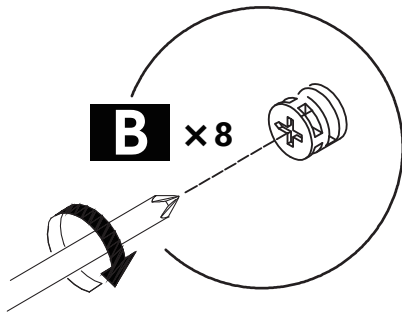   

11

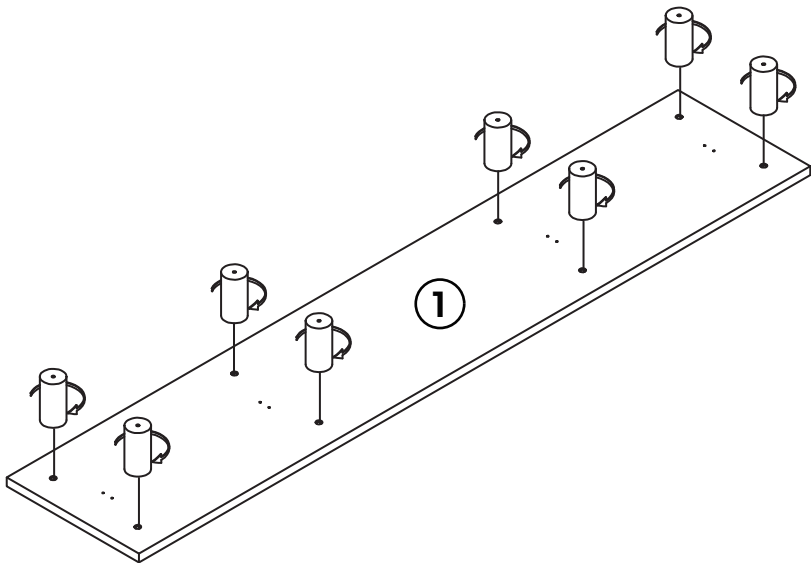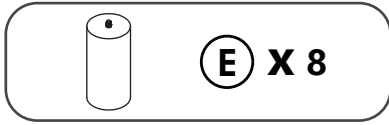  

12

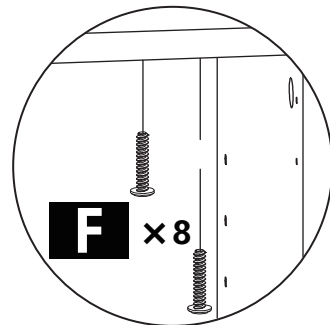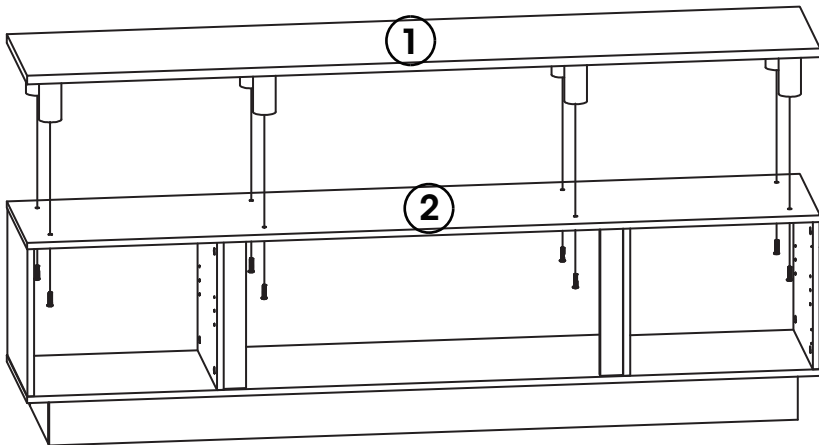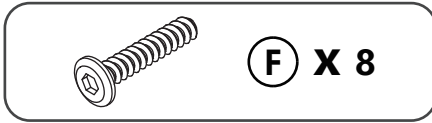    

13



 
 
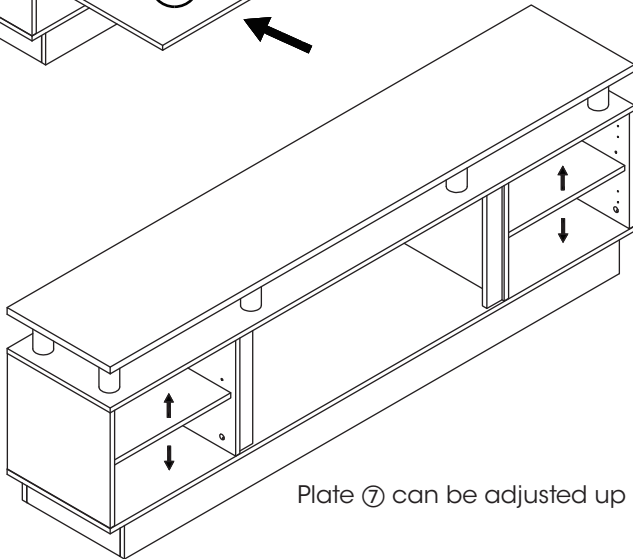 


Plate ⑦ can be adjusted up and down.

  14

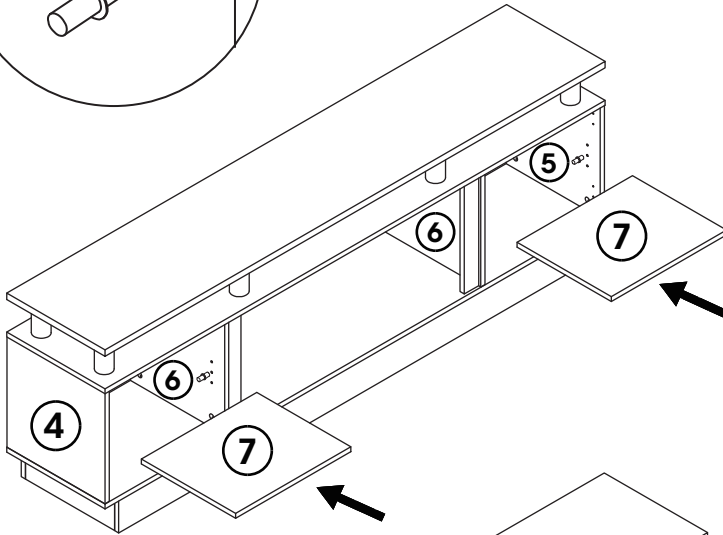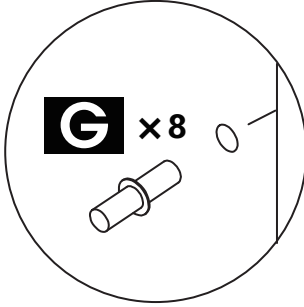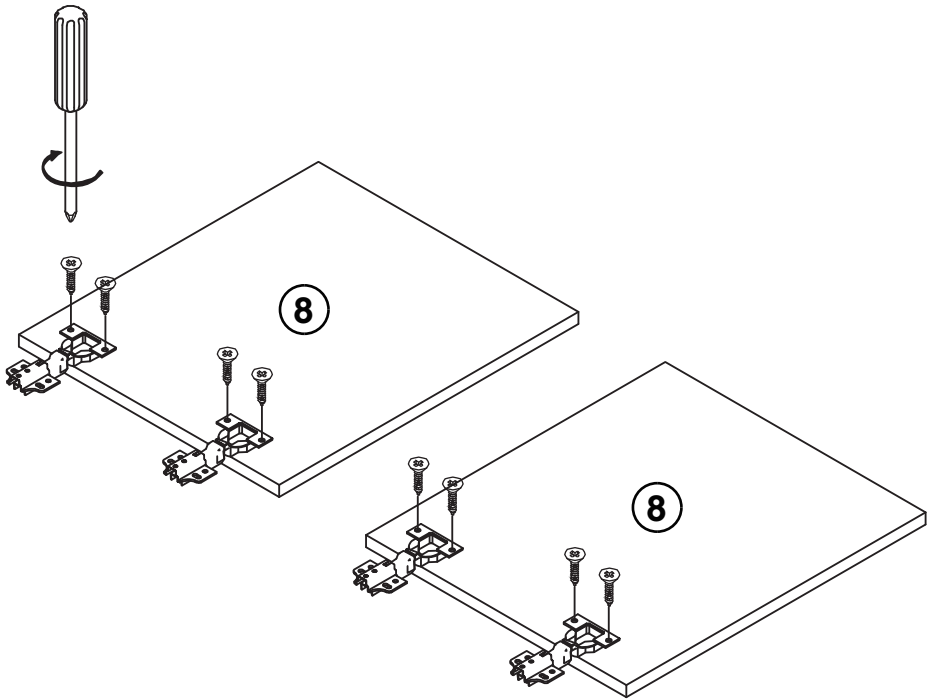


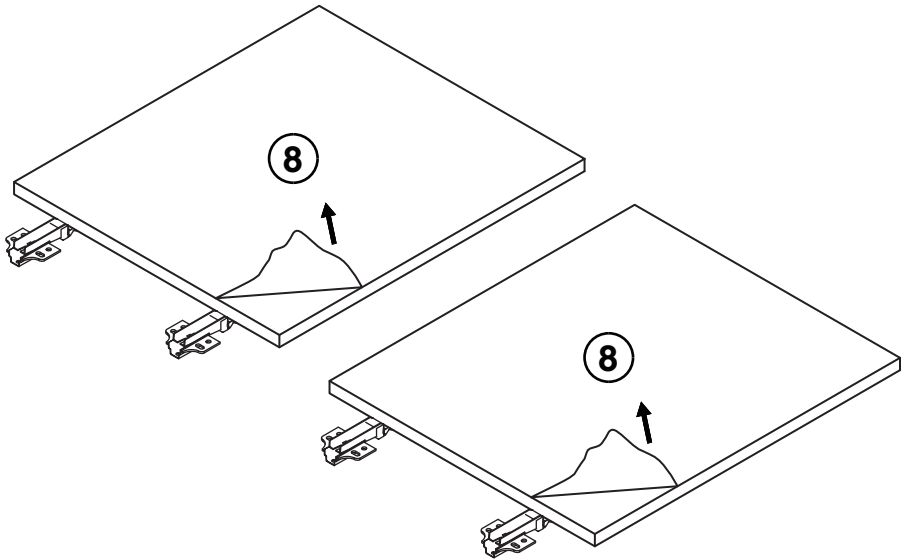



After installing component D, tear off the film on the front of the door panel. If there are any traces left, just wipe them with a wet towel after the cabinet is installed.

The door panel has a red label "Please peel off the film for highlighted surface"

 16



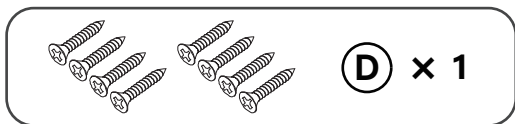


  
When installing ⑧ to ⑤, first install the 4 screws of the oval hole of D (corresponding to the four small holes of ④), close ⑧, and see if the position of ⑧ is appropriate. If not, adjust ⑧ up, down, left, and right through the screws of the oval hole of D. After adjustment, tighten the screws of the 4 round holes of D. In the same way, install ⑧ on ⑤.

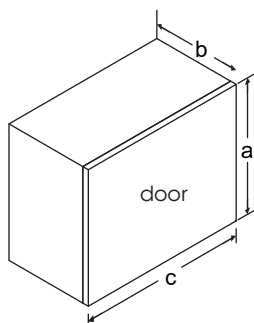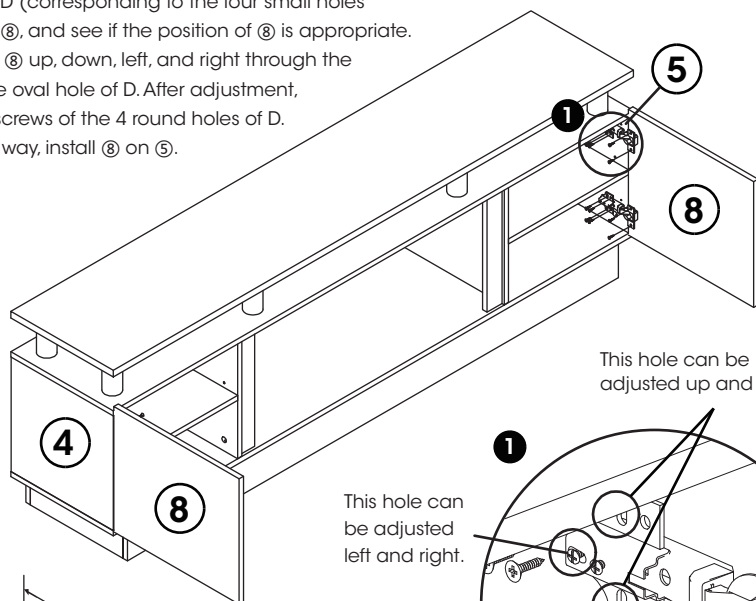

Note: If you find the position of ⑧ is not suitable after installation (such as the gap on one side is too large, or ⑧ is scratched with other parts, etc.), you can adjust the cabinet door up, down, left, and right by tightening the screws.

    Door adjustment diagram:

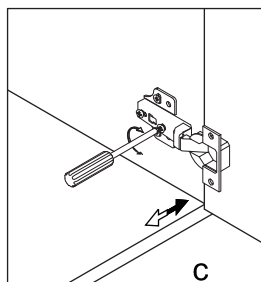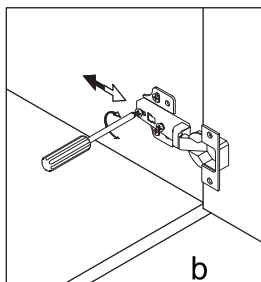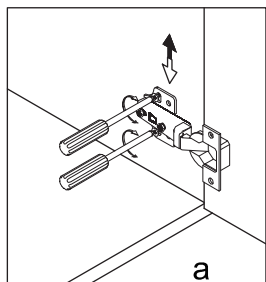


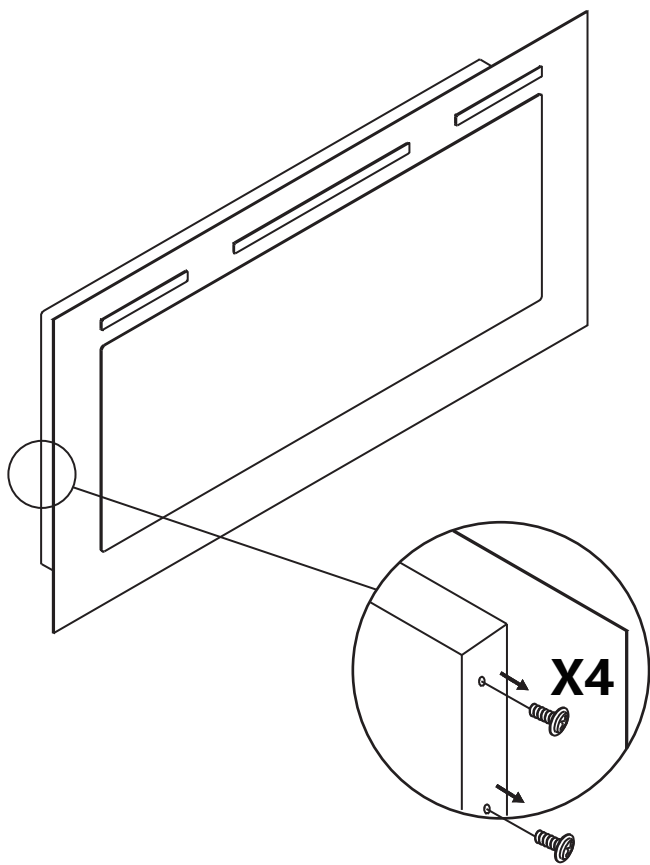

Remove four silver screws from the sides of the heater, two screws on each side.
Remove two screws from the front of the heater. Remove the tempered glass by lifting it from the lugs on the side.


18

 Take the glass from the appliance first, the gently put the appliance to the TV Stand by two persons.


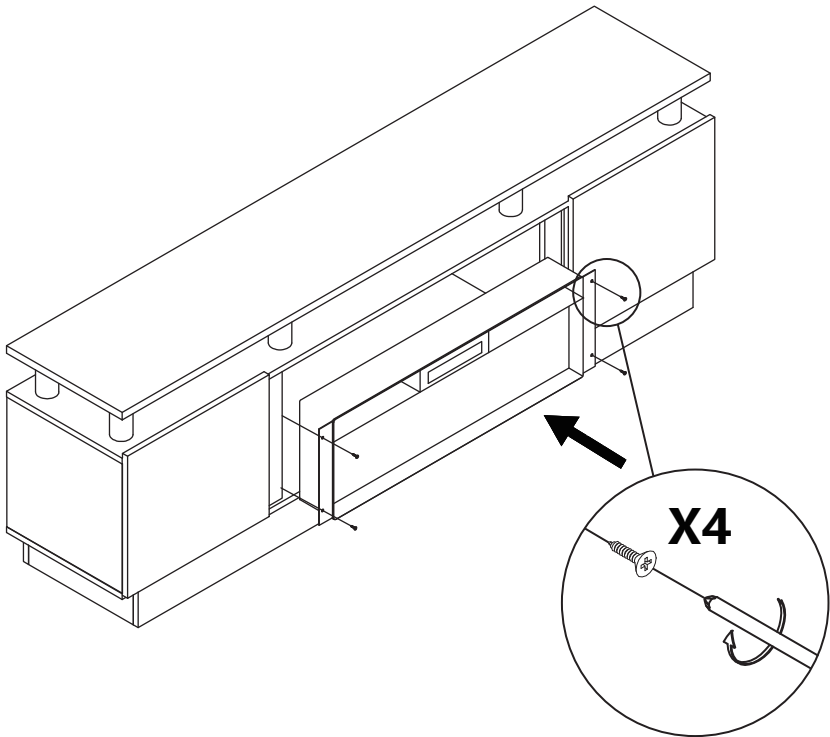


Fix the appliance to the TV stand with 4 black , screws according to the hole position.

 
Place the front glass surround over the front of the fire aligning the slot in the bracket at each side of the glass panel with the lugs on the sides of the fire .

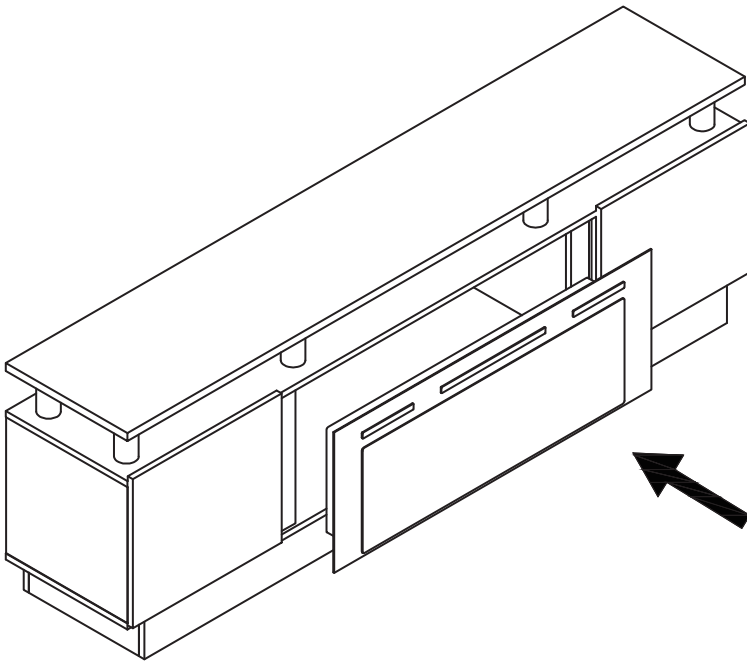

  1. Put the light strip wire through the hole(one long wire and one short wire).
2. Put the long one the side farther from the fireplace wire,the short one on the side closer it the fireplace wire.

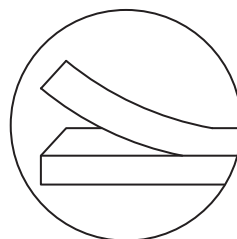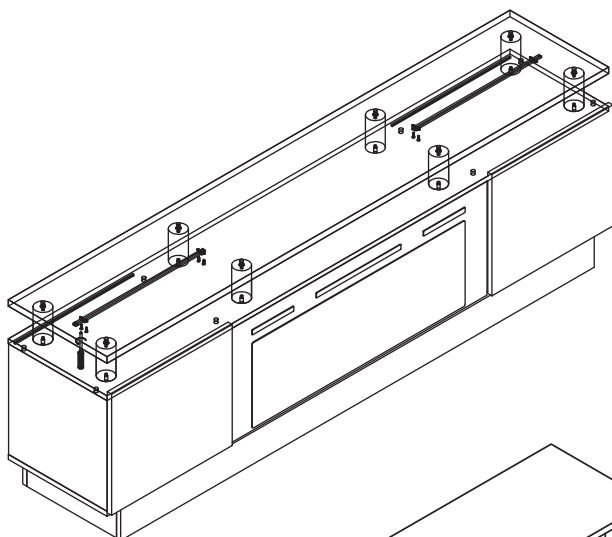

 
Tear off the double-sided tape of the light strip and stick it on the board.

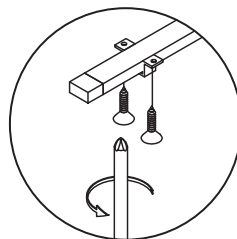

Hold the light strip with the clip and lock the screw.

HELP CENTER

 
Question about your product? We're here to help. Visit us at:

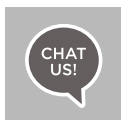

Chat Support



 Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with.

Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

* However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.

Reach us at

 service@kmcglobe-us.com

 (+1) 559-354-1889