

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.



 

 

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame	 2X
B	Leg Frame	 1X
C	Back frame	 1X
D	Screw -1	 M6X80 2X
E	Screw -1	 M6X60 8X
H	Allen key	 1X

Product Dimensions:46.85" W x 26.38" D x 32.48" H




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

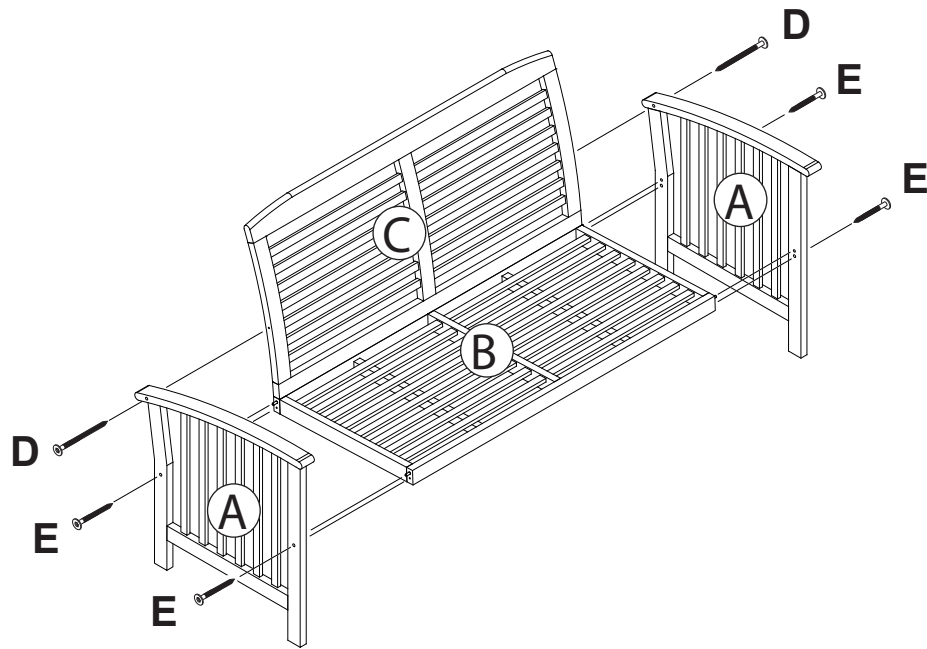

Step 1

Attach leg frame (A) to back frame (C), use screws-1 (D), tighten with allen key(H1). Use screw -1 (E) to connect leg frame (A) with seat frame (B), tighten with allen key (H1).

2

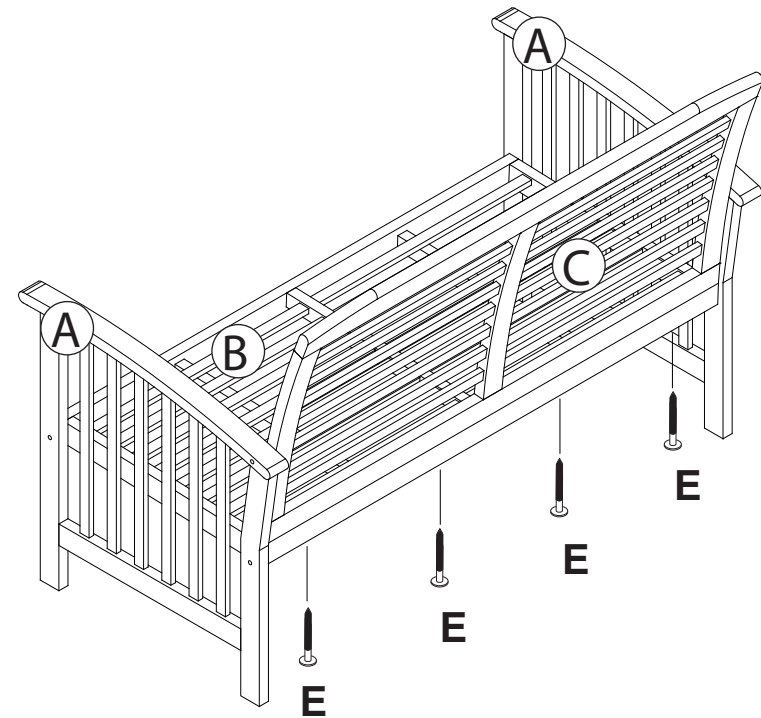

Step 2

Tighten screw- 1 (E) with allen key (H1) to attach seat frame (B) and back frame (C)