



Personal Safety Alarm

Help call for attention with this personal safety alarm.

OVERVIEW

1. The Alarm is activated when the contact pin is pulled out.
2. The Alarm can be attached to a backpack, purse or keys for convenient access. Can also be worn using the lanyard.
3. Press Button switch for LED light to help locate door locks.



BASIC OPERATION

Change the batteries

1. Unscrew the battery cover located on the back of the unit.
2. Insert 3 * LR44 Button Cell Battery
3. Replace the battery cover.

Using the alarm

1. The alarm is activated when the contact pin is pulled out.
2. To silence the alarm, push back in the contact pin.

Warning:

Exposing your hearing to the alarm for an extended period of time can result in severe hearing loss.

This products is not a toy and should not be handled by infants and small children.