












Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Prolonged exposure to rain may cause rusting which can stain floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ✓  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- ⊘  ● Children should not climb or jump on the furniture.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ✓  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ✓  ● Keep away from sources of ignition.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look into the Carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


 
 
 
 
Side Chair



Parts List

Label	Picture	Description	QTY
A	A line drawing of the backrest part of the chair, showing the diamond-shaped lattice pattern and the curved top edge.	Backrest	1
B	A line drawing of a single front leg of the chair, showing the attachment points for the seat and backrest.	Front Leg	2
C	A line drawing of the seat panel of the chair, showing a square shape with a slightly raised edge.	Seat Panel	1

Hardware

Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt (M6*8MM)	3
③		Bolt (M6*16MM)	5
④		Bolt (M6*30MM)	4
⑤		Washer	10

Assembly Preparation

Before Beginning Assembly:



A



B X2



 
C




①




② X3



③ X5

 

④ X4

 

⑤ X10



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

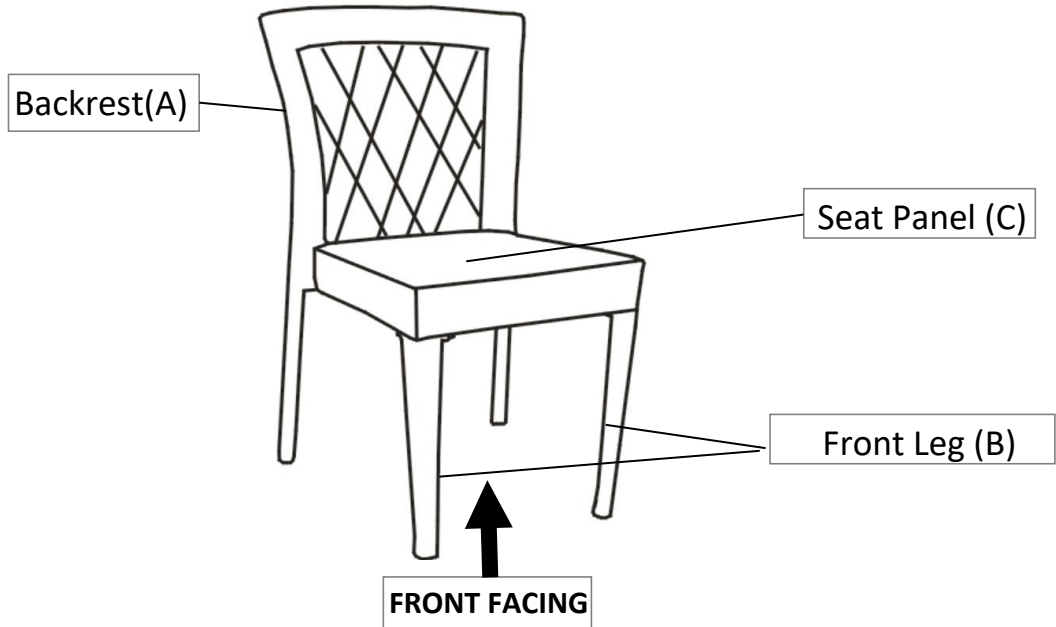


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.

Step 1

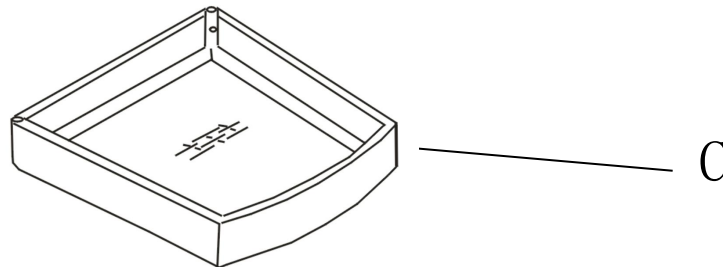

Open the carton and place all the parts onto a clean, non-marring surface. Place Backrest(A) on the ground, as shown in picture above.


Step 2

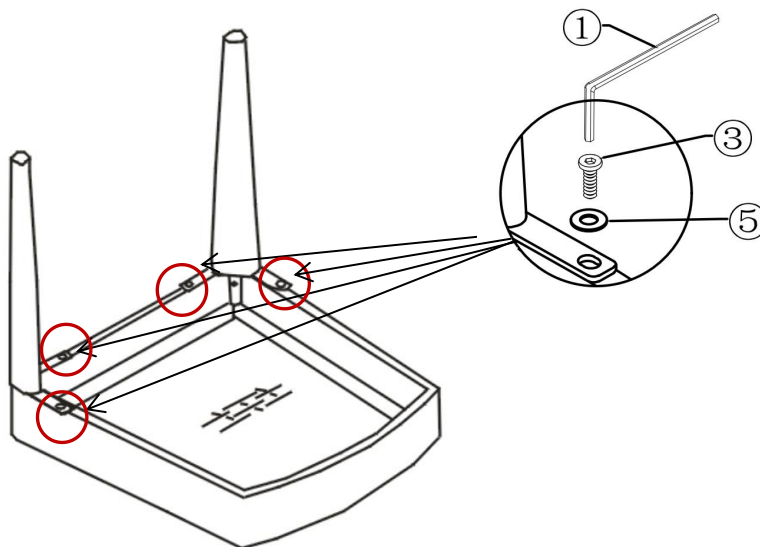

Attach the Front Leg (B) to the Seat Panel (C) using Bolts(③) and Washer (⑤) with Allen Wrench (①).

DO NOT FULLY TIGHTEN THE BOLTS.

Step 3

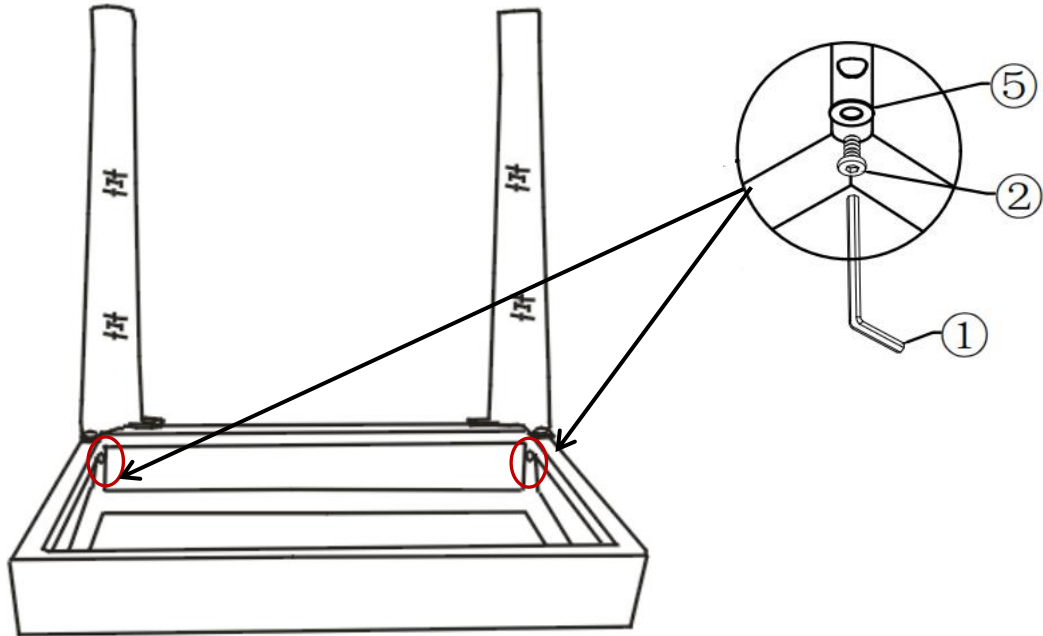


Attach the Front Legs (B) to the Seat Panel (C) to using Bolts(2) and Washer(5) with Allen Wrench(1).

The bolt mounting positions are on the corner of the Seat Panel as the picture shown.

DO NOT FULLY TIGHTEN THE BOLTS.

Step 4

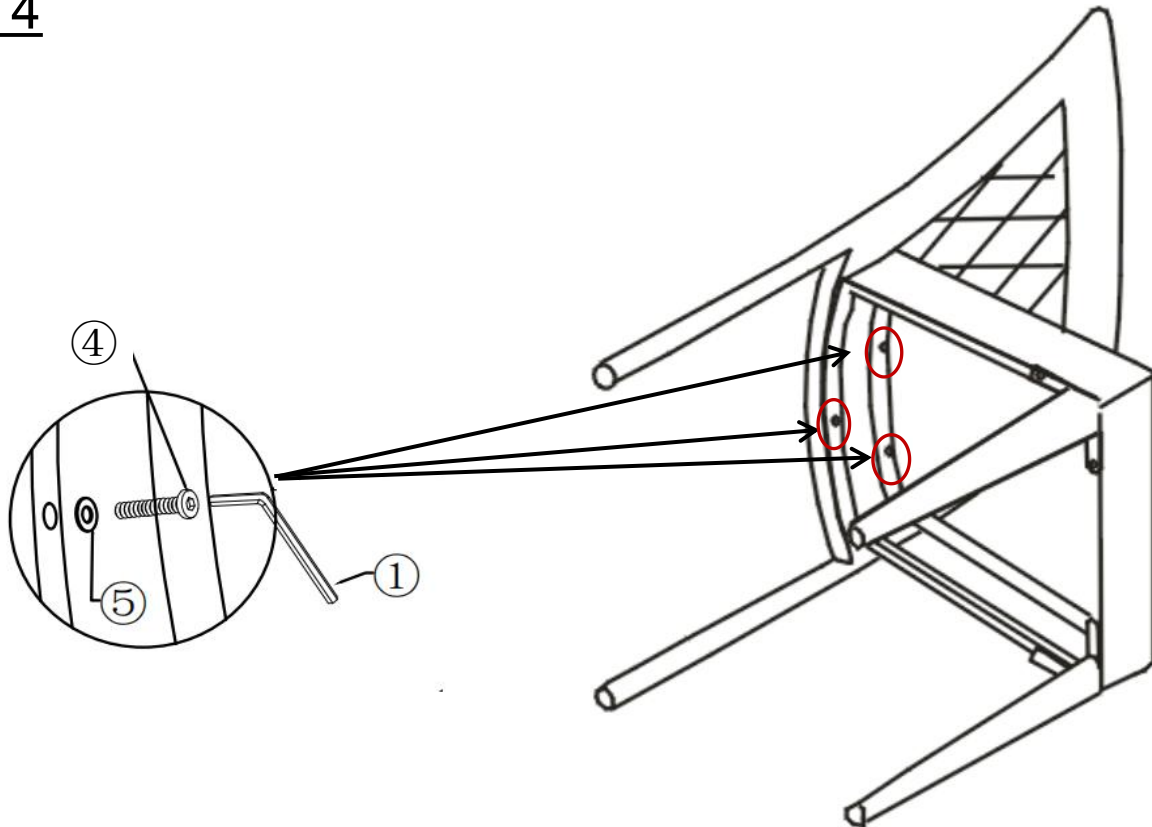


Turn over the part of step 3 with the assitant of your adult partner.

Attach the Backrest (A) to the partialy assembled Dining Chair as shown above.Using Bolts (4) and Washer (5) with Allen Wrench(1) to connect theBackrest (A) to Seat Panel (C) as shown above.

The bolts mounting positions are on the inner side of Seat Panel.

DO NOT FULLY TIGHTEN THE BOLTS.

Step 5

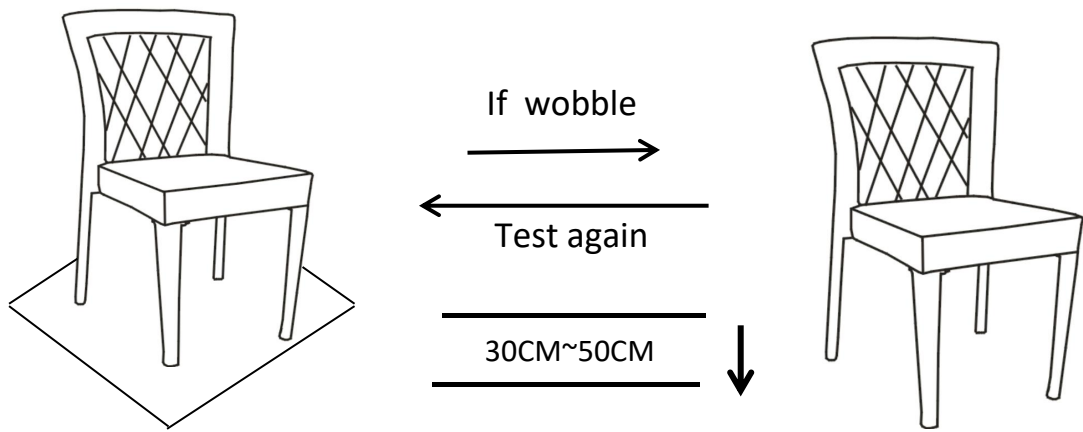

Place the Dining Chair on a LEVEL SURFACE to check for wobbles.

If it wobbles, lift the Dining Chair to some 30cm to 50cm in height from the ground.

Keep your feet and toes well away from the drop zone.

Drop the Dining Chair freely and vertically with the four legs, hitting the ground, all at the same time.

This Drop Test will help to ensure that all the bolts and gaps all reach full alignment status.

Test again for evenness on a LEVEL SURFACE.

If no wobbles are found, slowly and steadily turn the Dining Chair upside down.

Then, proceed to tighten all bolts in a sequential manner.

CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute these same drop tests.

WARNING!! IF Dining CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 6



Your Dining Chair is ready for use.

The chair can only be used on a flat, level surface.