


INSTALLATION INSTRUCTIONS

DeerValley®


Bathroom Mirror Cabinet

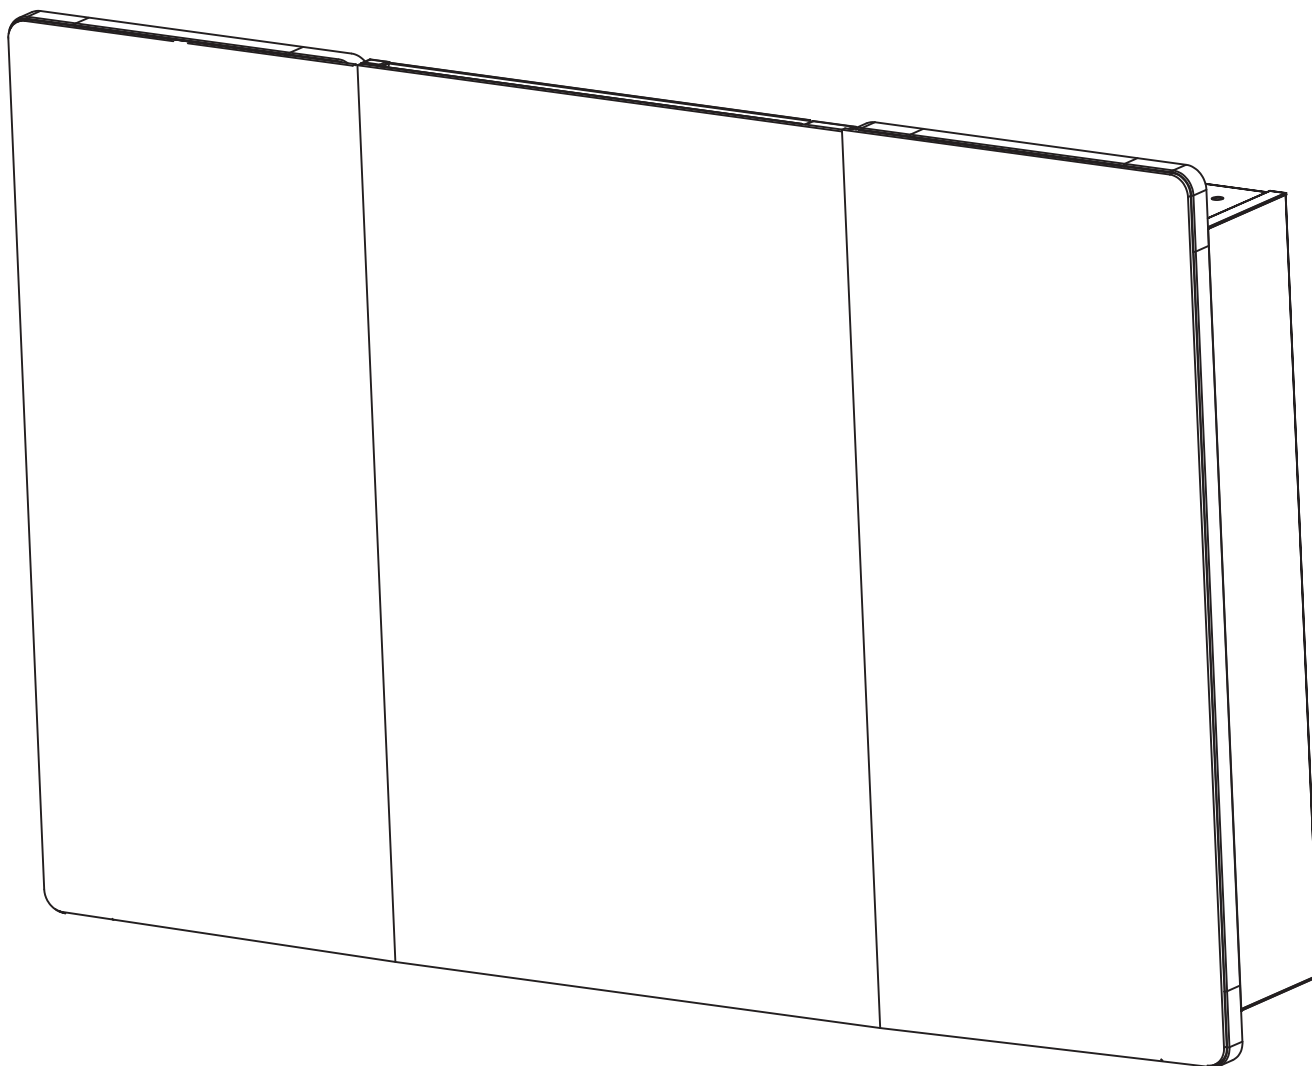









Important Safety Information

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the sections that apply to your specific installation. This will help you avoid costly mistakes. In addition to proper installation, be sure to read all operating and safety instructions.
- These instructions also contain important care, cleaning, and warranty information.
- Before installation, carefully inspect the product for any signs of damage.

 **WARNING: Risk of Injury or Product Damage** Be cautious when opening the door to avoid pinching your fingers.

 **WARNING:** Do not use acidic or alkaline cleaners or alcohol to clean the surface. Use a damp cloth for cleaning.

- If repair or replacement is required, it must be performed by qualified maintenance personnel.

Required Tools (Not Included)				
 Electric Drill	 Drilling Bit (ϕ 5/16 inch)	 Tape	 Pencil	 Spirit Level
Supplied Spare Parts (Package)				
 Wall Plugs × 4	 Screws × 4	 Hangers × 2		

Electrical Safety Instructions

- All connections must be installed by a licensed electrician in accordance with current building codes.
- Consult a qualified electrician for proper installation.


Installation Care & Safety

- Wear appropriate eye protection when drilling.
- Use power tools with caution.
- Be mindful of hidden cables or pipes behind walls.
- When drilling on tiled surfaces, take extra care to prevent slipping. Applying masking tape to the wall before marking fixing holes can help keep the drill steady.


Important

- DO NOT strike glass components with hard or pointed objects.
- DO NOT place very hot or very cold items directly on or near glass surfaces without adequate insulation to prevent thermal stress.
- If the glass becomes chipped or broken, replace it immediately.


1. Remove the product from the packaging and take out the hangers.

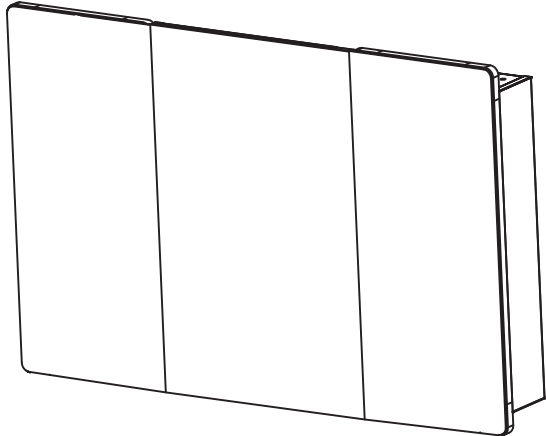


2. Align the hangers against the wall and mark the positions of the holes.

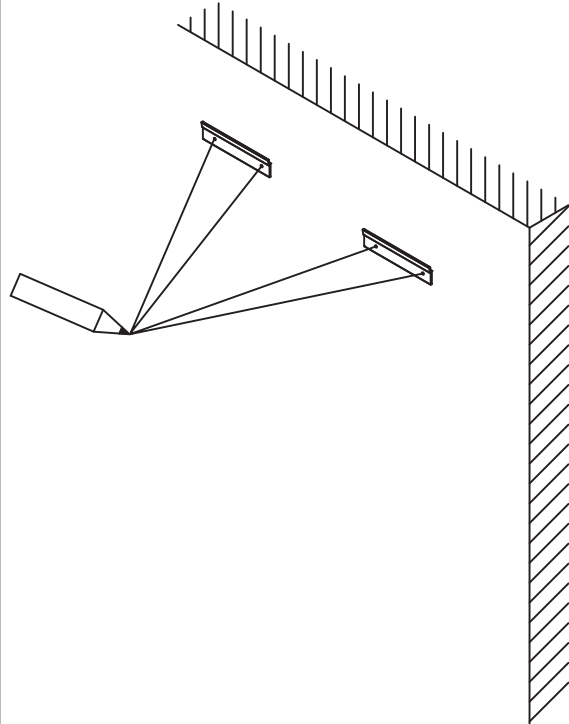


3. Drill the necessary holes and insert the wall plugs.

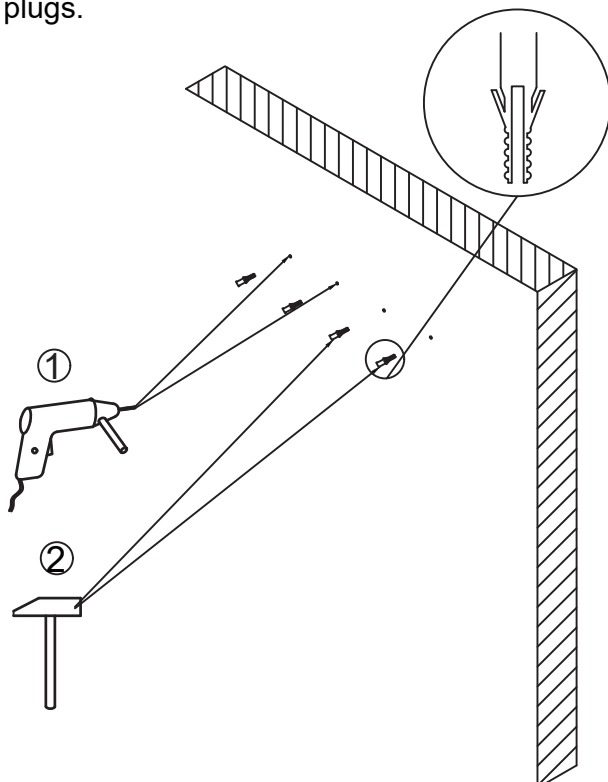


4. Use the screws to secure the hangers to the wall, and adjust them with a spirit level to ensure they are level.

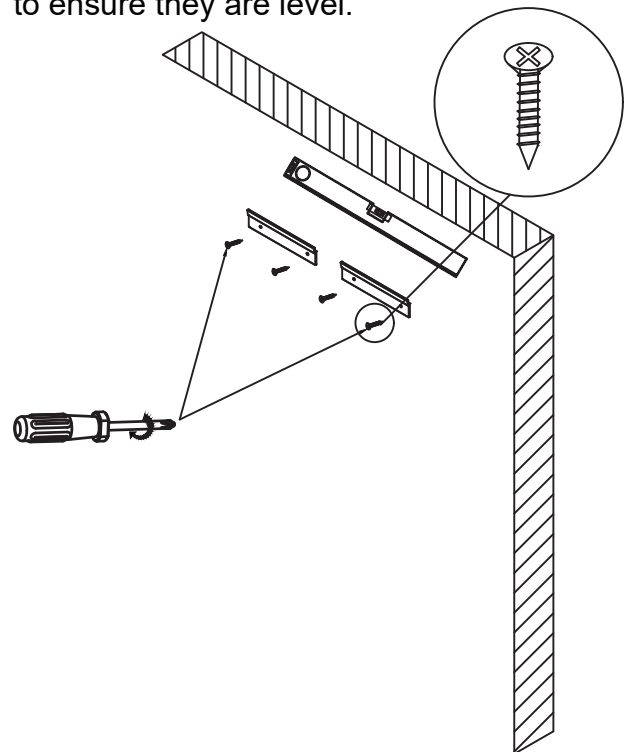


5. Hang the cabinet on the wall using the hangers. Make sure the claws on the cabinet hangers are securely hooked onto the wall hangers. The cabinet position can be adjusted approximately 0.39 inches to the left or right. Due to the cabinet's large size, two people are required for installation.

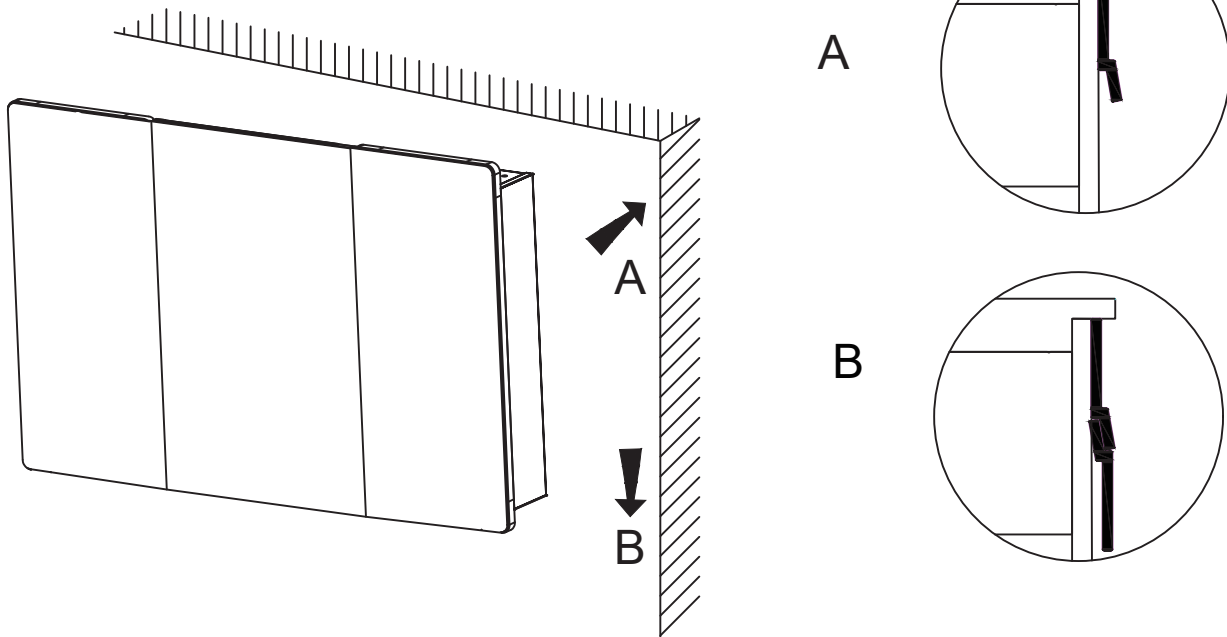


6. After hanging the cabinet securely, it is ready for use.

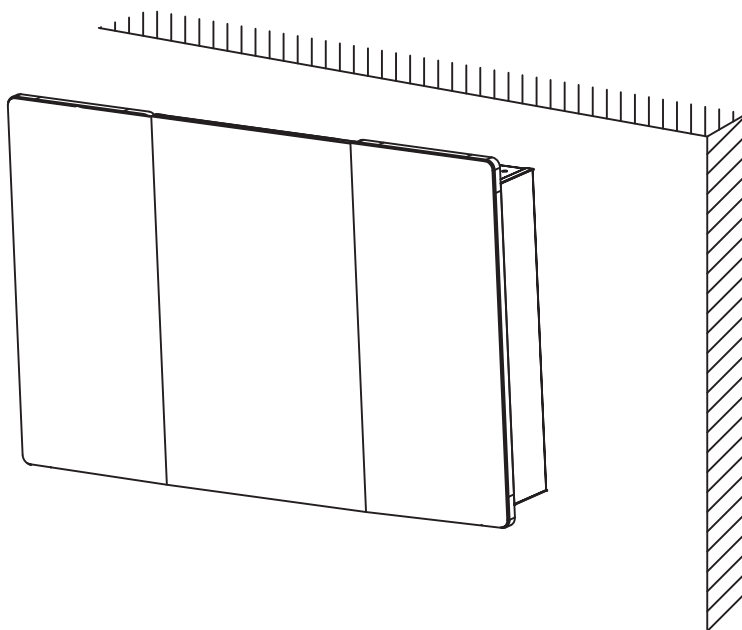





7. Take out the glass clips and laminated tempered glass from the package, and install the clips on both sides of the cabinet.

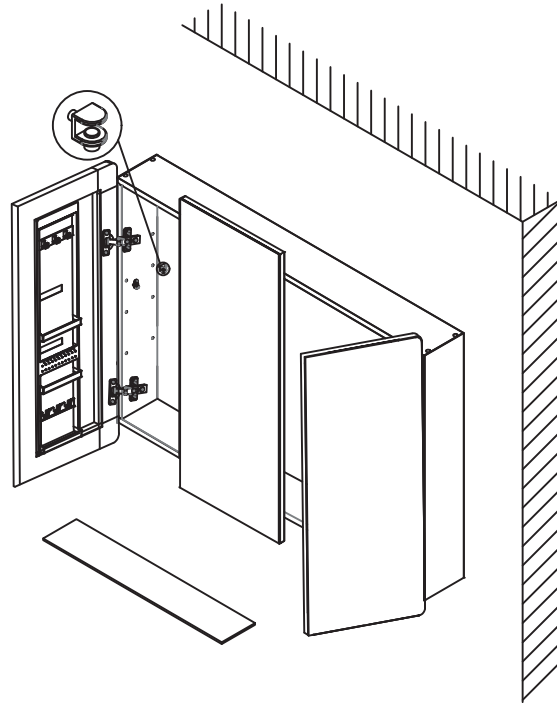


8. After placing the laminated glass, adjust it to the center position, then tighten the glass clips with a screwdriver to secure the glass in place.

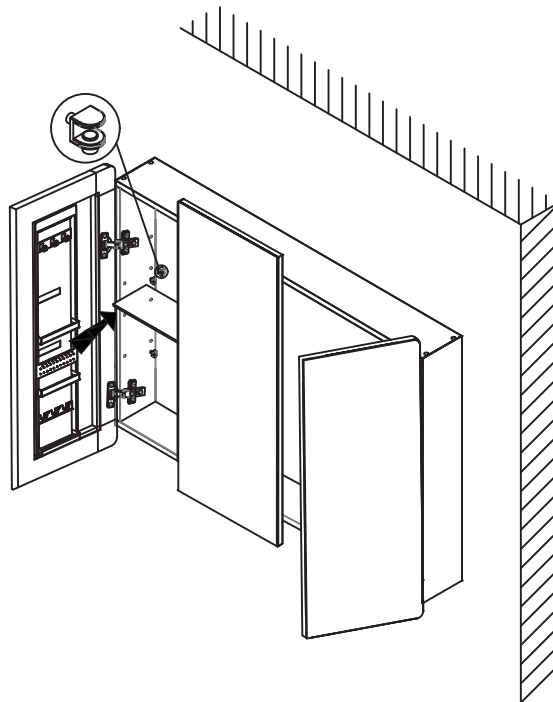


9. Adjust the cabinet door.

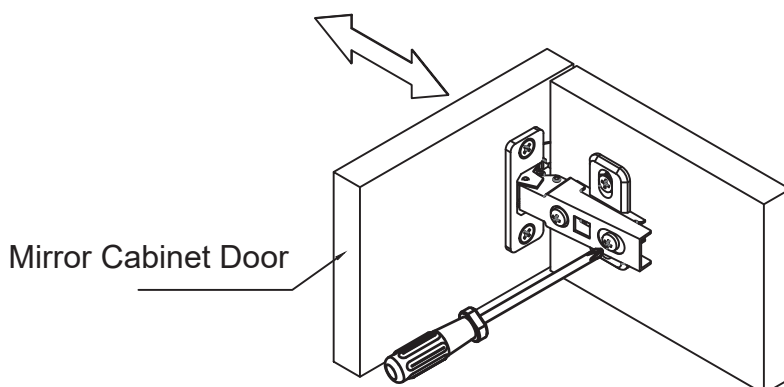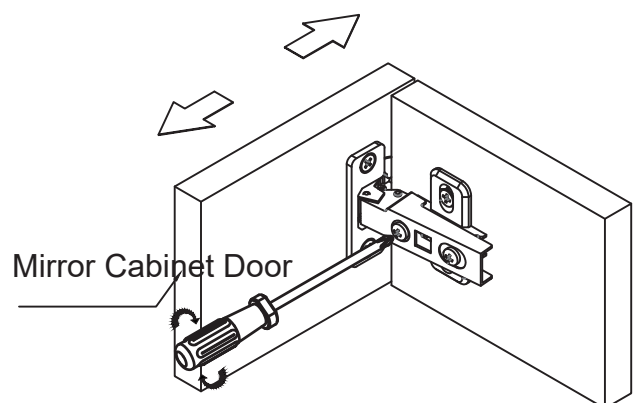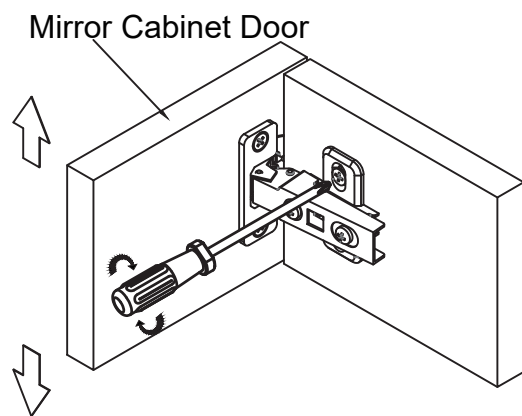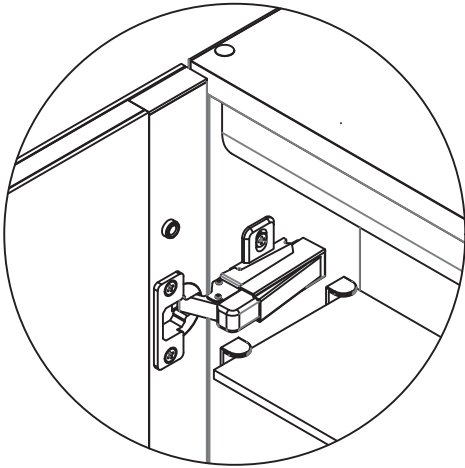

10. Hang the cup and smart toothbrush sterilizer onto the aluminum buckles (Figure A), ensuring that both the product and the buckles are securely positioned inside the slots (Figure B).

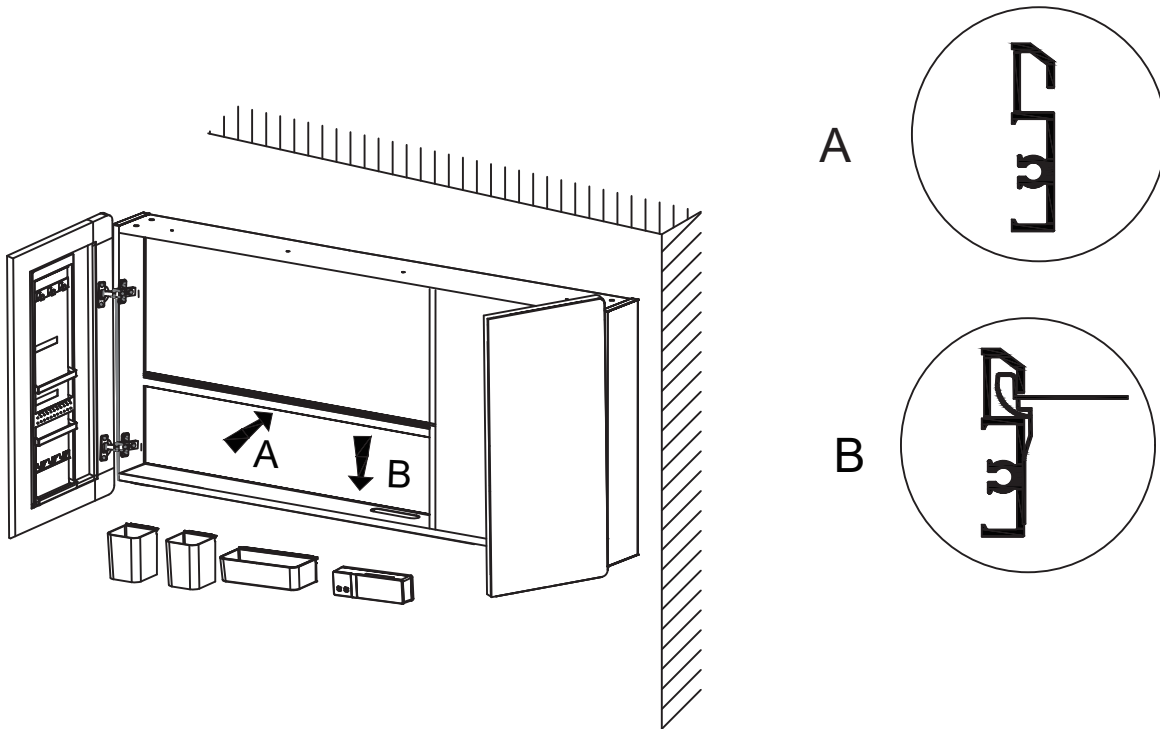


11. Once installed, the product is ready for use.

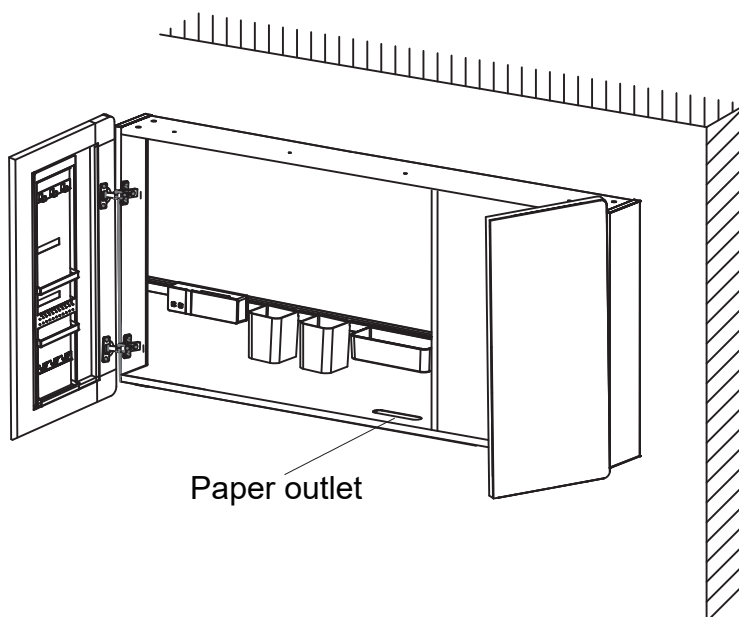


Introduction to the Functions of the Storage Stand



The functional storage rack has been pre-installed on the back of the mirror door.


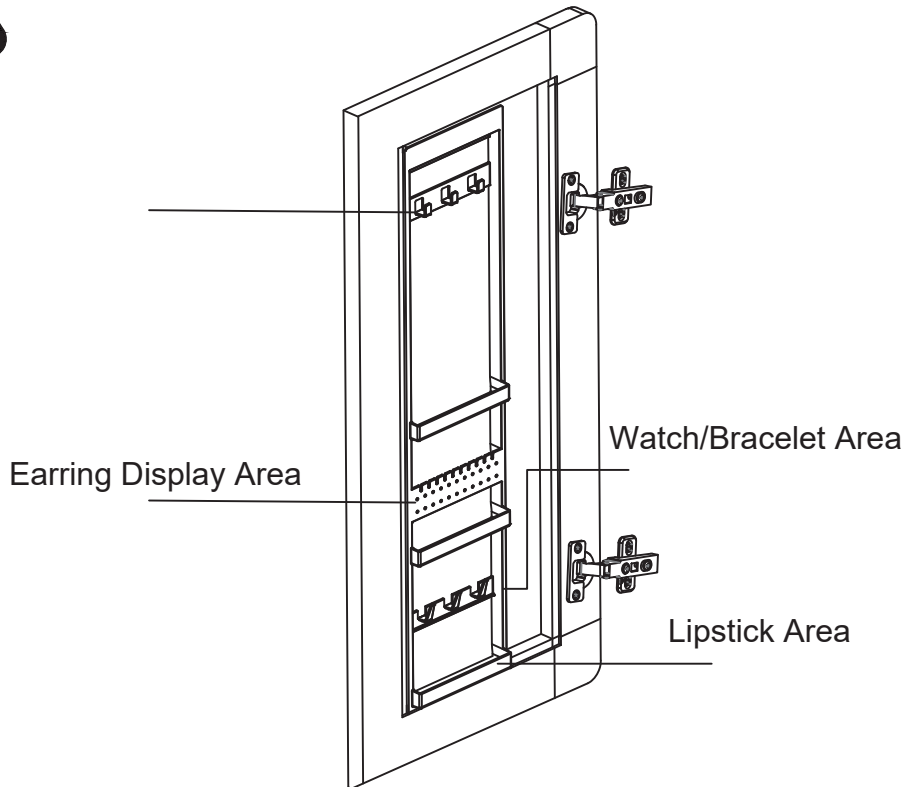


The functional storage rack has been pre-installed on the back of the mirror door.

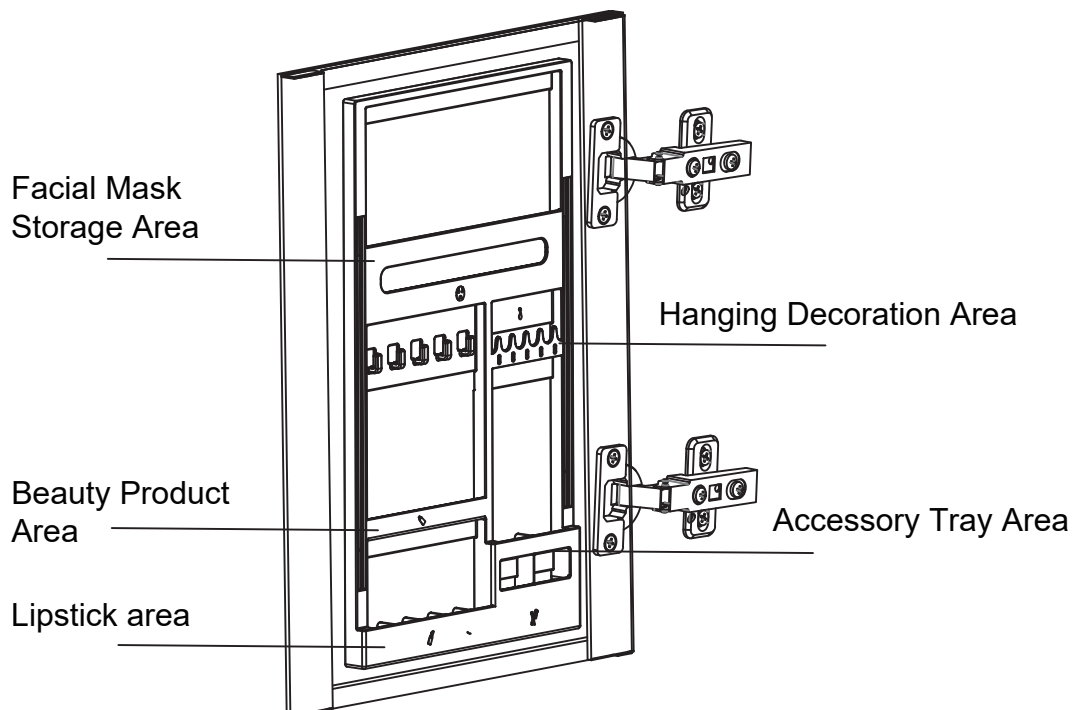


Instructions for Using the Smart Toothbrush Disinfector

Product Overview

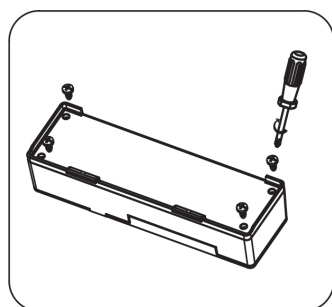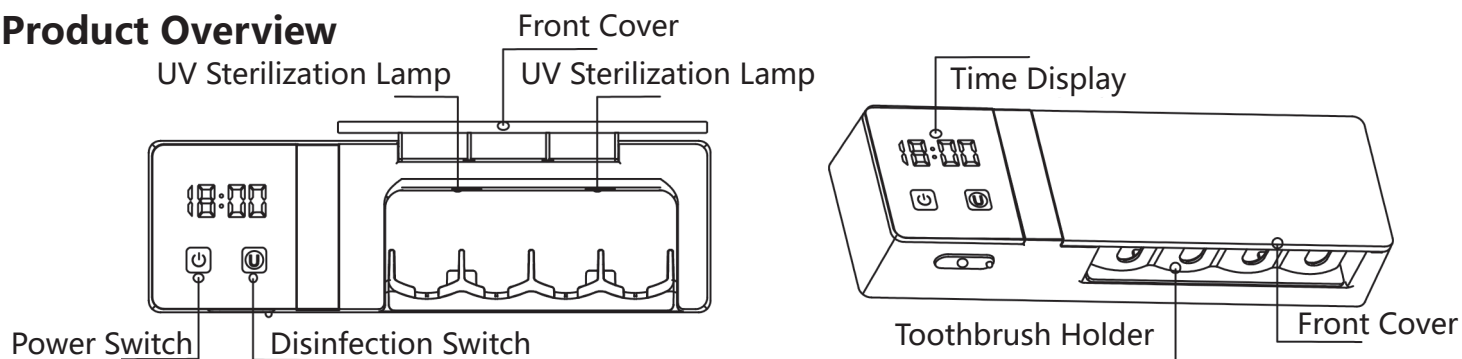

1. Remove the product from the packaging. Use a screwdriver to unscrew the back panel.

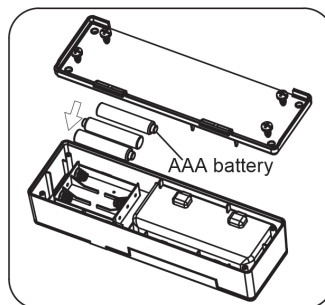

2. Install the batteries into the product, make sure it powers on, then tighten the screws again. (Note: This product uses AA batteries. When installing, ensure the correct polarity is observed.)

Operating Instructions

- Power Switch: Press and hold for 3 seconds to turn the device on or off.
- Time Display: Activate by pressing any button or opening the lid. The display turns off automatically after 30 seconds of inactivity.
- Time Adjustment: While the device is on, press and hold the power switch twice to enter time-setting mode.
- Press the disinfection switch to adjust the hour. Press the power switch to confirm and proceed to minute adjustment. Press the disinfection switch to adjust the minutes. Press the power switch again to confirm and exit the setting mode.

Function Description

- Disinfection Protection Function: During the disinfection process, opening the lid will pause disinfection. The display will show "OPEN". After the lid is closed, disinfection will resume and the display will show "LOAD".
- Lid Not Closed Reminder: After the lid is opened, a 3-minute countdown begins. If the lid remains open after the countdown, the device will emit two beeps every 20 seconds, for a total of three reminders. A final long beep marks the end. The automatic disinfection function is disabled while the lid is open.
- Automatic Disinfection: When the device is powered on and the lid is closed, it will automatically disinfect for 2 minutes at 5:00, 12:00, and 19:00 each day.
- Manual Disinfection: When the device is powered on and the lid is closed, press the disinfection switch to manually start a 3-minute disinfection cycle. The display will count down from 180 seconds.



- Battery Level Alert (Note: This product is not rechargeable.)
Low Battery: When the low battery indicator lights up, it means the batteries need to be replaced.



- For products with replaceable batteries, ensure correct installation. Do not mix old and new batteries or use different brands together.



- Do not attempt to force discharge, recharge, disassemble, or misuse batteries, as this may lead to personal injury or chemical burns. Users must strictly follow all relevant safety regulations and operating guidelines when handling batteries.

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first year of delivery, DeerValley will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund for the original purchase price of the product(s) (valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product. Shipping/delivery charges may apply and are at DeerValley's sole discretion.

DeerValley recommends that installations be performed by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This limited warranty does not cover goods that have been subjected to accidents, negligence, improper installation, product abuse, product misuse, or the use of cleaners containing abrasives, alcohol, or other organic solvents. Such exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley will not be responsible for labor charges or any damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs of any kind related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including but not limited to those regarding merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or building contractor, acting on behalf of the user, to inspect the unit prior to installation. They are responsible for ensuring that the unit is free from defects or damage.

Notices are placed on and within the unit, as well as on the shipping carton, to inform the installer of their responsibility.

If a problem is identified, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been identified, repaired, or prevented through proper inspection and testing prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must open the crate and inspect the unit for damage upon delivery. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection must be requested. If the carrier fails to respond, the issue should be reported to both the seller and the carrier. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover negligence, misuse, abuse, improper installation, carelessness, accidents, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages resulting from improper maintenance, alteration of the product, or failure to follow the care or installation instructions provided with your product. The warranty becomes void if the DeerValley product is altered or if repairs are attempted using unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use of its products, inconvenience, or any other incidental or consequential costs, expenses, or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or other individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley shall not be held responsible for any such unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please ensure you have the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.