


INSTALLATION INSTRUCTIONS

DeerValley®

Sliding Shower Door

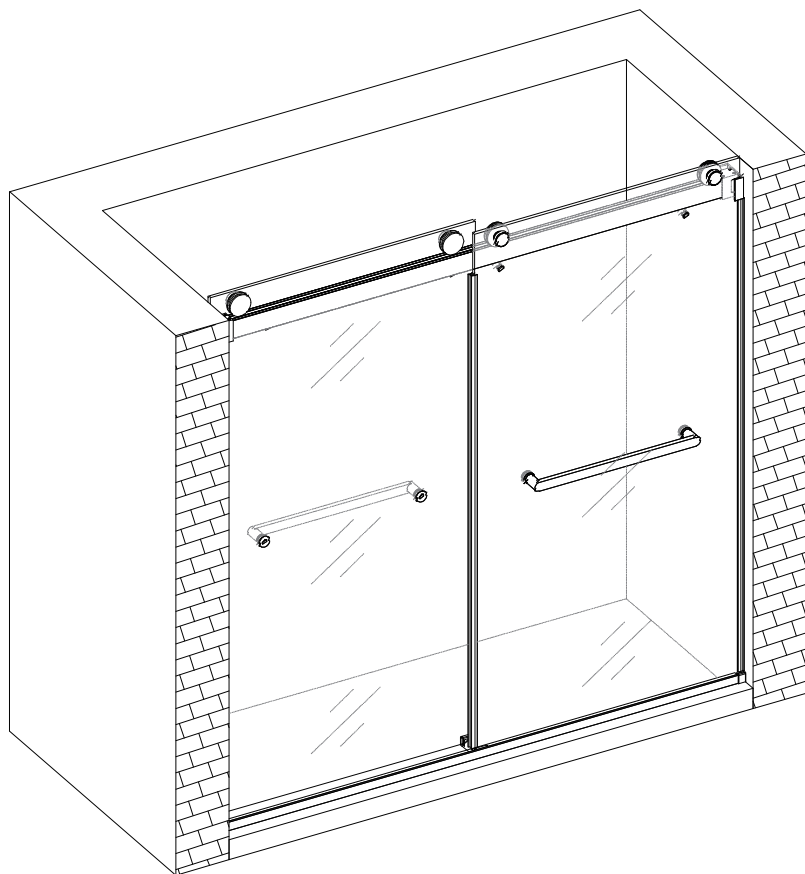

Safety — Read Before Unpacking



A minimum of two people are required to lift and install this product. Professional installation is recommended.



Read all instructions carefully before unpacking and installing the product.

- We reserve the right to change, update, modify, or redesign this manual, product, or related specifications without prior notice.
- It is your responsibility to visit our website or contact customer service to obtain the latest version of the installation instructions.



Never lift or carry the glass panels by the handle or towel bar. Always hold the glass by the edges. The handle is not designed as a lifting point and may cause the glass to break.



Never place glass panels directly on tile, concrete, or any hard surface. Always lay glass flat on a soft protective blanket at least 1/4" thick. Never place glass panels upright on their corners or edges.



Inspect all glass panels and components before installation. Do not install any glass with chips, cracks, or scratches. Stop installation and contact customer service if any damage is found.



The wall and supporting structure must be capable of supporting the full weight of the shower door assembly.



Use professional-grade glass suction cups when handling glass panels. Do not modify the product in any way. For residential use only.

Tempered Glass Spontaneous Breakage Safety Notice



Risk of Tempered Glass Spontaneous Breakage

Tempered glass may rarely experience spontaneous breakage due to factors such as internal stress, sudden temperature changes, edge damage, or uneven installation stress. This is an inherent characteristic of tempered glass and does not necessarily indicate a product defect.

Installation Safety

To reduce the risk of glass breakage during installation:

- Carefully inspect the glass panels before installation. Do not install any glass panel with visible cracks, chips, or edge damage.
- Do not force the glass panel into position during installation. Do not apply excessive pressure from the wall brackets, fixed glass clips, glass connectors, center guide, or other hardware. Maintain proper clearance between the glass and hardware components to prevent stress concentration that may cause glass breakage.
- Tighten screws, clips, and fasteners with moderate force. Do not overtighten or apply excessive pressure to the glass edges.
- Avoid direct rigid contact between the glass and hard materials such as metal, tile, or stone. Ensure protective pads, seals, or gaskets are properly installed where required.

Use and Maintenance Safety

To reduce the risk of glass damage during use:

 
 
 
 
 
 
 
 
 
 
 
- Avoid exposing the glass to extreme temperature changes, such as spraying cold water directly onto glass that has been heated by prolonged sunlight.
- Do not hit, strike, or lean heavily against the glass door or panels.
- Regularly inspect seals, protective pads, or buffers, if applicable. Replace any damaged or worn components to prevent direct contact between the glass and metal parts.
- Stop using the shower door immediately if you notice cracks, unusual sounds, or visible fracture patterns on the glass. Do not attempt to repair or handle damaged glass yourself. Contact a qualified professional for inspection or replacement.

If Glass Breakage Occurs

- Stay calm and keep away from the broken glass area.
- Do not walk on broken glass or pick up glass fragments with bare hands. Although tempered glass breaks into small pieces, the fragments may still cause injury.
- Wear protective gloves and use appropriate tools when cleaning up broken glass, or contact a professional for assistance.
- Take photos of the affected area and contact DeerValley Customer Service for assistance. Please provide details of the situation and retain your original proof of purchase for warranty evaluation.

Customer Service: (312) 626-9466 service@deervalleybath.com


Recommended Tools (Not Included)

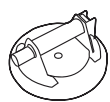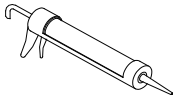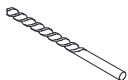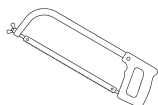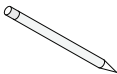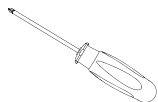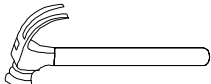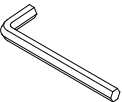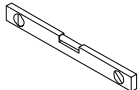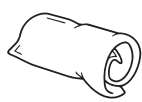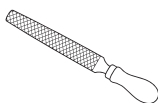Material Name	Illustration	Material Name	Illustration
Power Drill		Glass Suction Cups	
1/4" Drill Bit		Silicone Sealant	
5/16" Drill Bit		Hacksaw	
Pencil		Phillips Screwdriver	
Hammer		Painter's Tape	
Hex Key		Safety Glasses	
Level		Work Gloves	
Plumb Bob		Soft Protective Cloth or Blanket	
Tape Measure		Metal File	


Note:

The tools listed above are not included. Additional tools may be required depending on the installation conditions.


Exploded View & Parts List

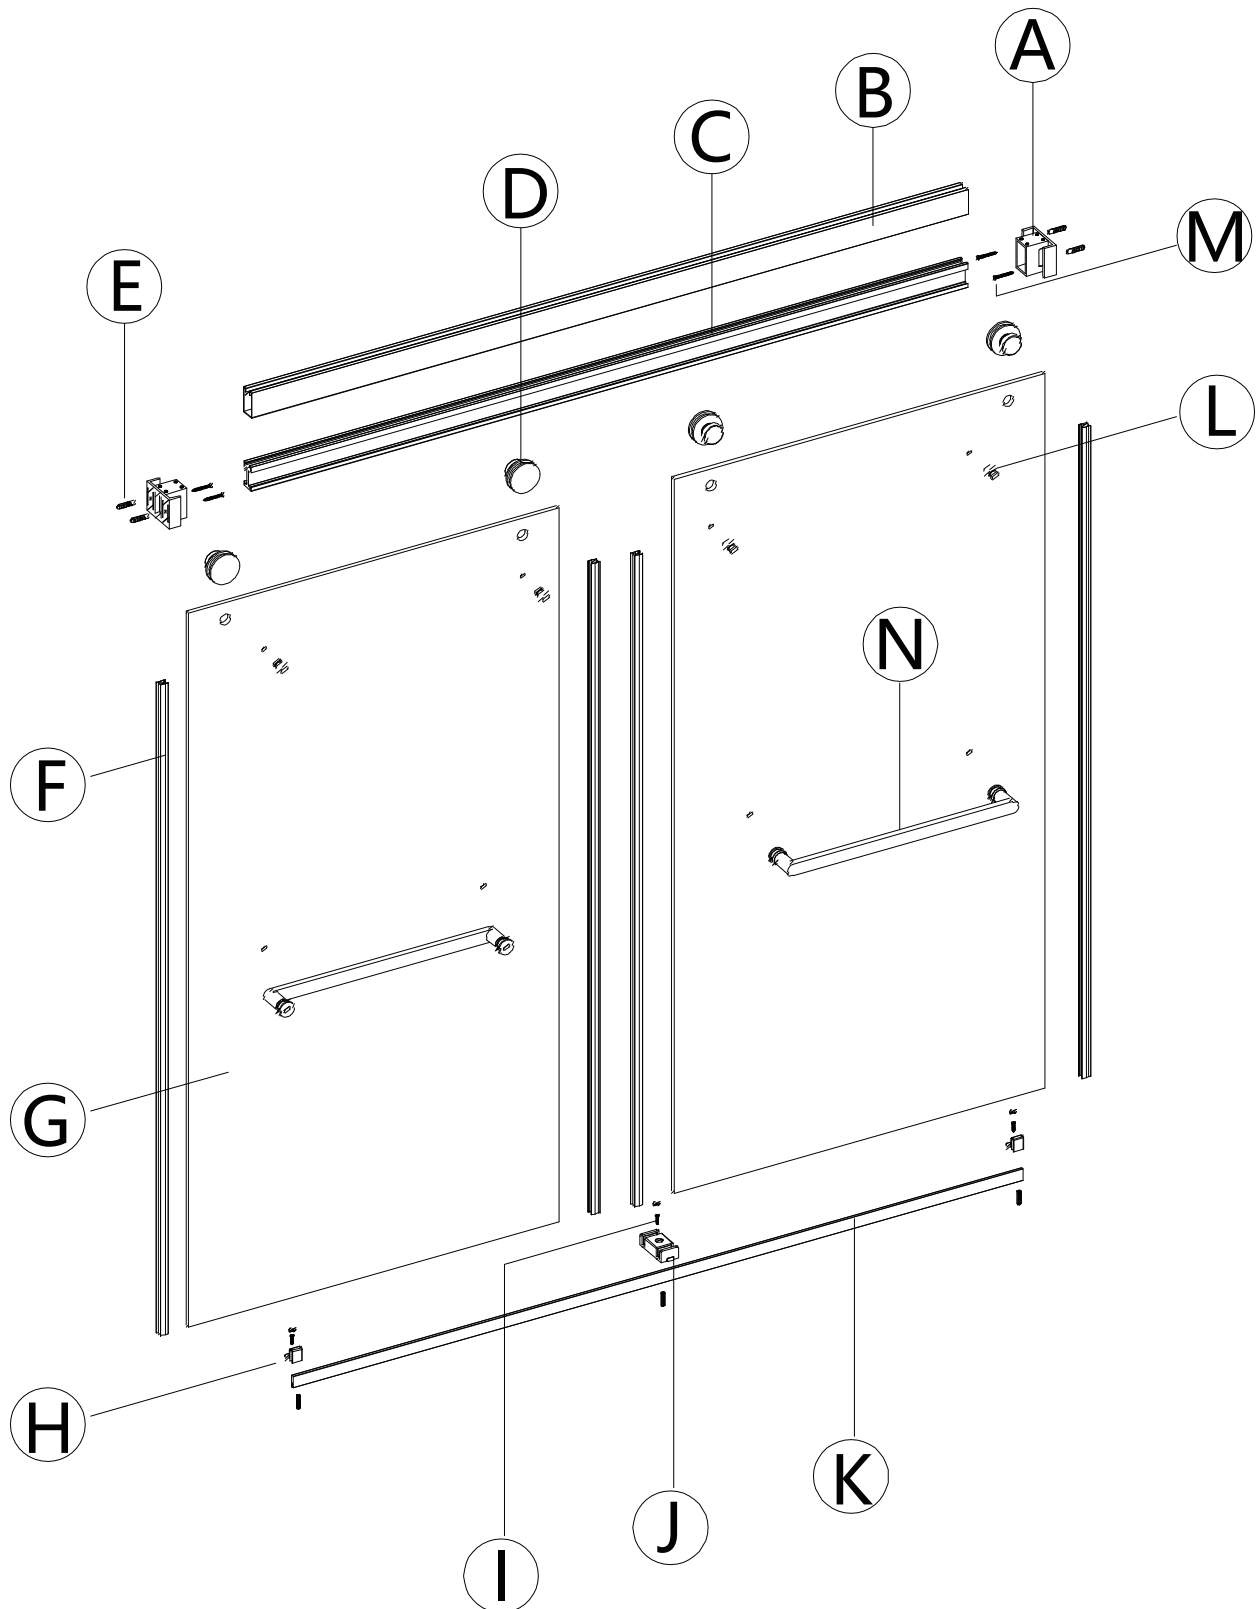


Parts List

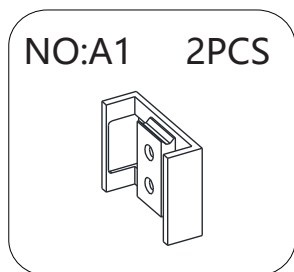


Wall Sleeve
(Outer Rail Side)

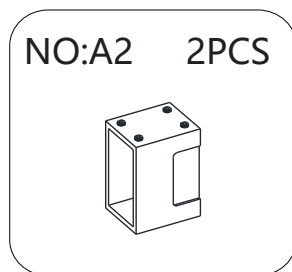


Wall Sleeve
(Inner Rail Side)

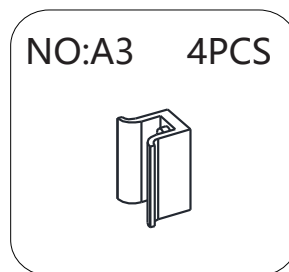


Wall Sleeve Cushion

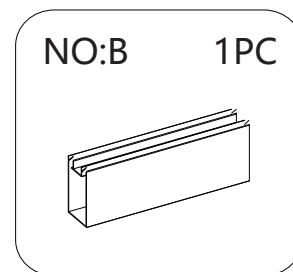


Guide Rail Sleeve

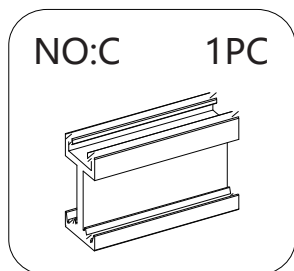


Inner Guide Rail

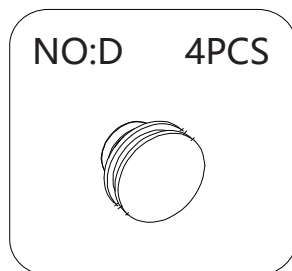


Roller

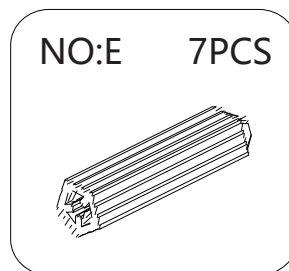


Wall Anchor

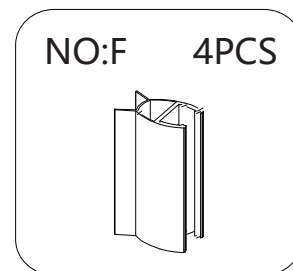


Anti-Collision Seal Strip

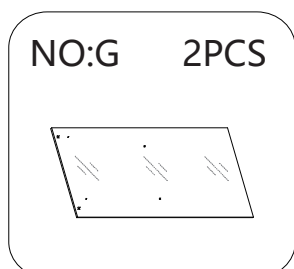


Door Glass Panel

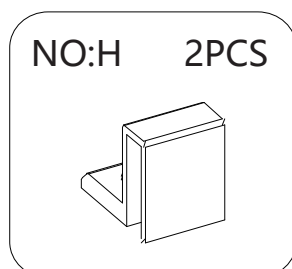


Threshold Fixing
Bracket

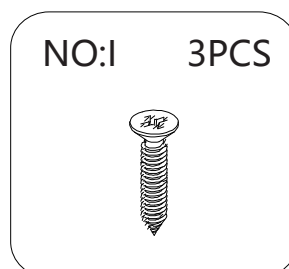


Screw A

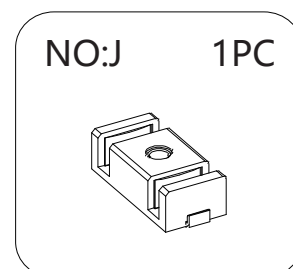


Center Guide

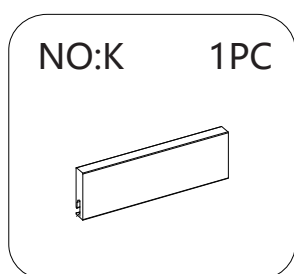


Threshold

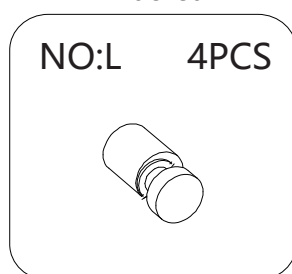


Roller Anti-Jump
Bracket

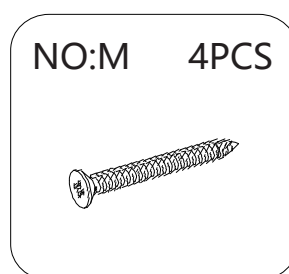

Screw B

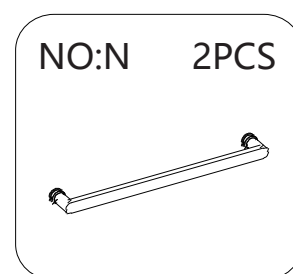

Handle

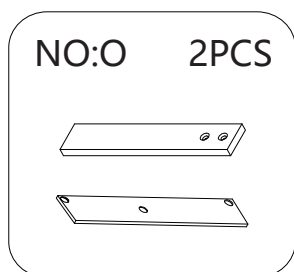

Installation Template

Drawings may not exactly define contour of the product.

Pre-Installation Dimensions & Checklist


Product Dimensions

Overall Width A: 56-60 in.

Overall Height B: 76 in.

Door Width C: 30 3/8 in.

Access Width D: 24 15/16"-28 15/16 in.

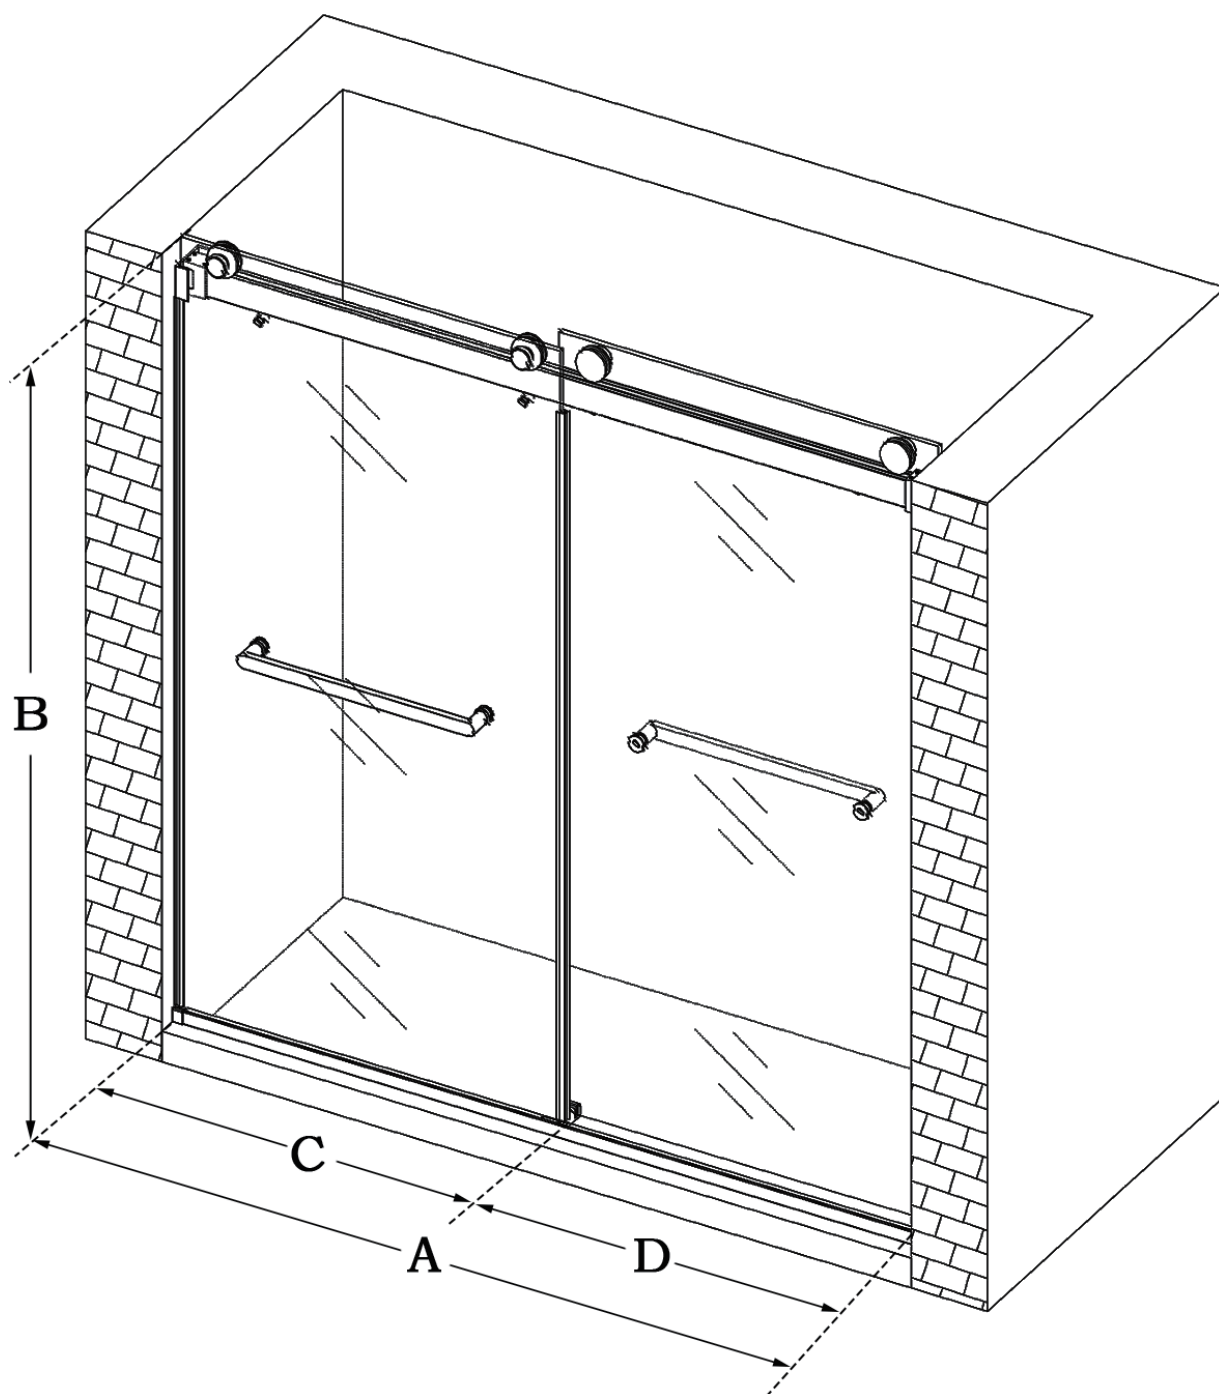


Drawings may not exactly define contour of the product.

Before You Drill — Verify Your Opening




Opening Width

Use a 20"–40" (500–1000 mm) level to check that both walls are plumb and the shower base/curb is level. Correct any excessive deviation before installation.

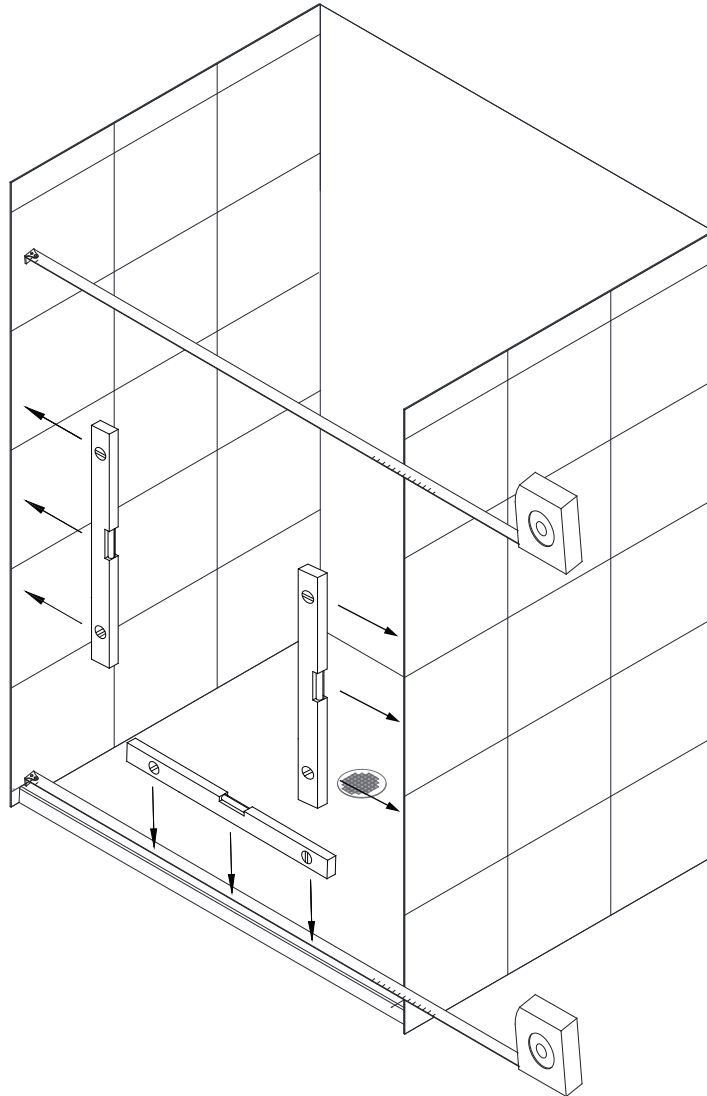

Cut the Guide Rail Components and Threshold (If Required)

 
If necessary, cut the inner guide rail, guide rail sleeve, and threshold to fit the finished opening dimensions.

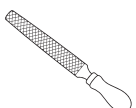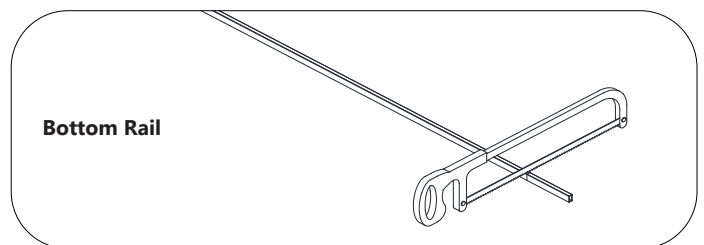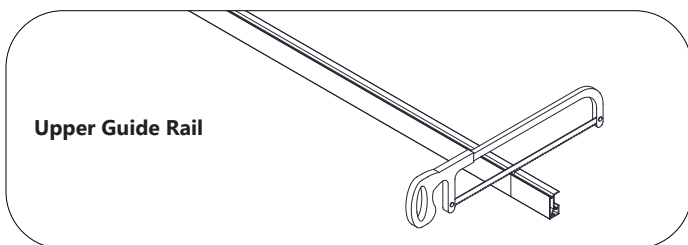

Tip: Use a metal file to remove any sharp edges or burrs from the cut ends of the inner guide rail, guide rail sleeve, and threshold.

Confirm Required Installation Space

Before installation, confirm that the installation surface provides sufficient flat and level space for the threshold and center guide.

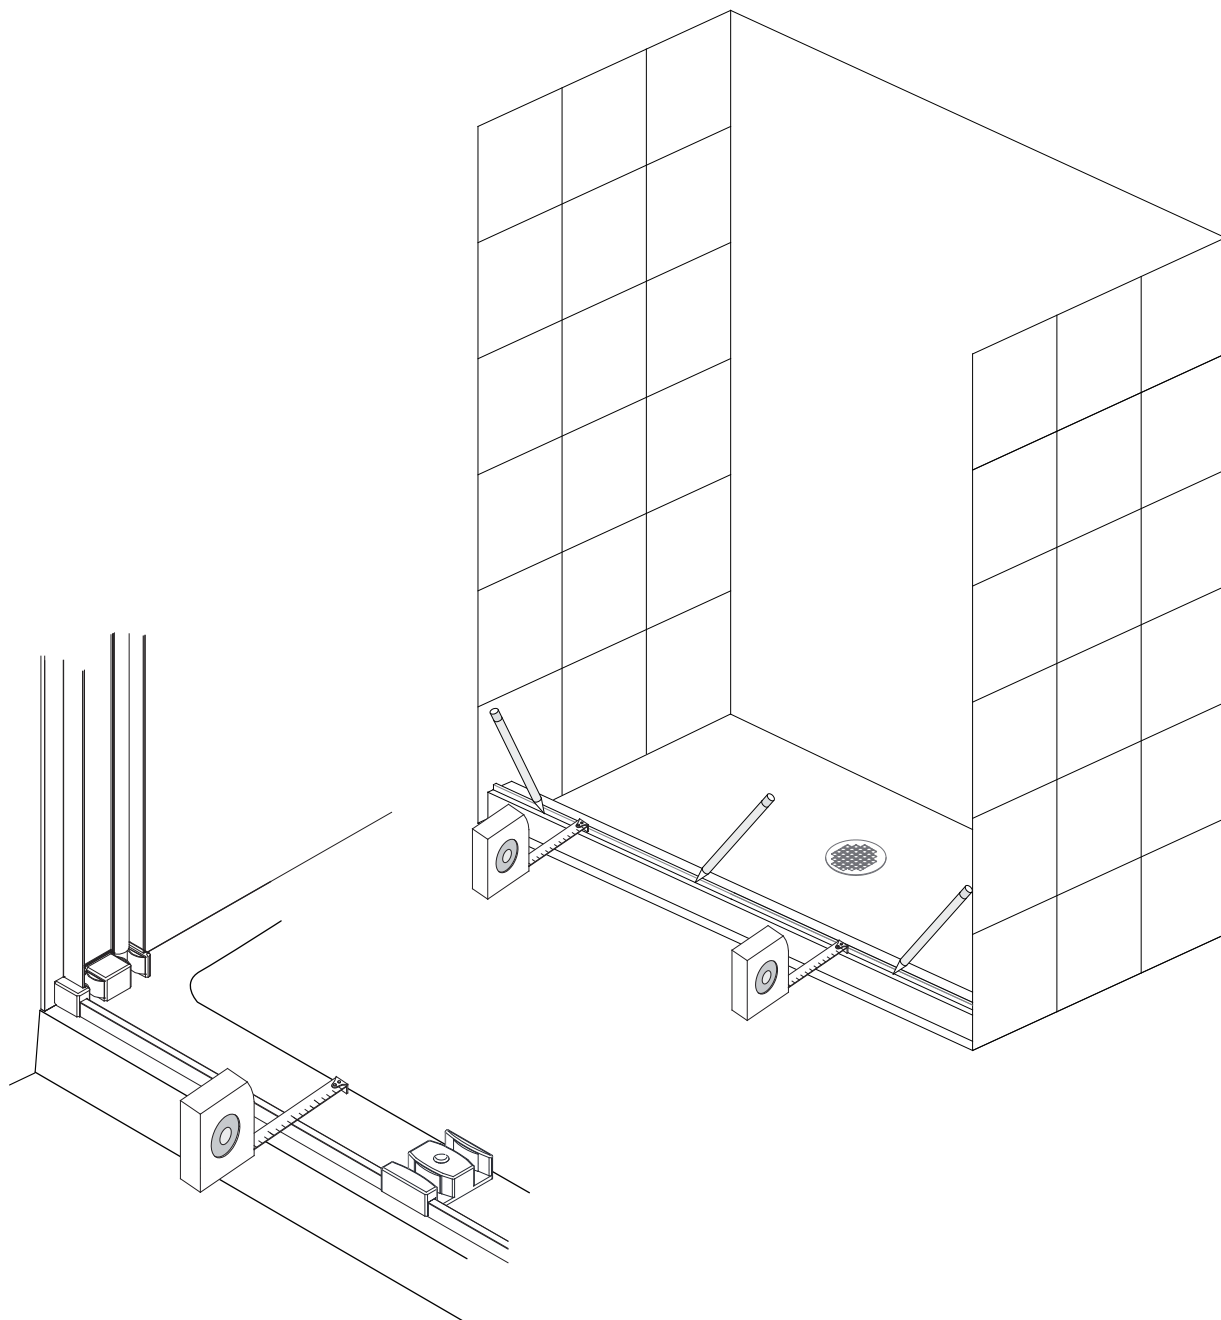

Note: The combined installation width of the threshold and center guide is 3 3/16" (80.8 mm). For installation on a shower curb, a minimum flat installation width of 3 3/8" (85 mm) is recommended to allow space for sealant and adjustment. The installation surface must be flat and level. Installation is not recommended if the available width is less than 3 1/8" (80 mm).

Drawings may not exactly define contour of the product.

Checklist — Do Not Proceed Until All Items Are Confirmed


- ☐ Opening width W is within the specified range for your model.
- ☐ Both walls are plumb, with a maximum deviation of 1/16" (1.75 mm) over the full door height.
- ☐ Both anchor locations have solid masonry support behind the wall.
- ☐ All glass panels have been inspected and are free of chips, cracks, or scratches.

If any item fails, stop installation and contact us before drilling holes:

(312) 626-9466

service@deervalleybath.com

Reversible Installation

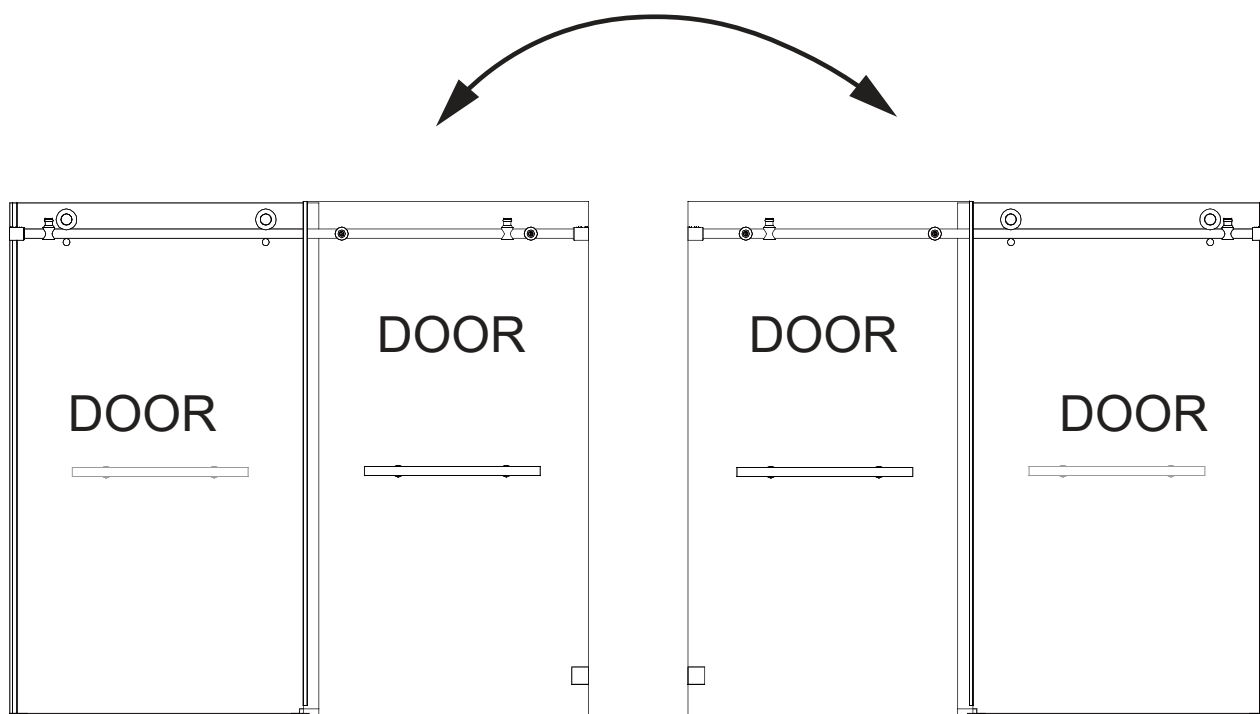

Note: This shower door is reversible and can be installed to suit different bathroom layouts. Follow the installation steps according to your installation requirements.

Drawings may not exactly define contour of the product.

Installation Steps


Step 1: Mark Holes Using the Templates (O)

· Installation Height (All Models):


Install wall sleeves (A1/A2) with centers 72-3/16" / 73-1/16" (1833 mm / 1856 mm) above the bathroom floor or shower base/bathtub rim. The wall marking template (O) is pre-drilled for this height.

· Mark Holes:

1. Use the long template for wall holes and the short template for floor/shower base holes.
2. Drill sizes: 5/16" (Ø8 mm) for wall sleeve (A1) holes; 1/4" (Ø6 mm) for center guide (J) and threshold fixing bracket (H) holes.
3. Place the wall template vertically against each wall, align with the corner, check with a level, and mark holes. Repeat for the opposite wall.
4. Place the floor template centered between the walls along the front edge of the shower base/floor, check with a level, and mark holes.

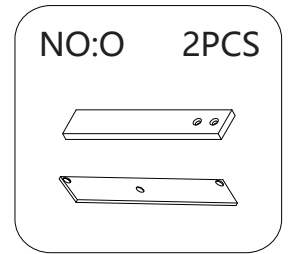

Installation Template

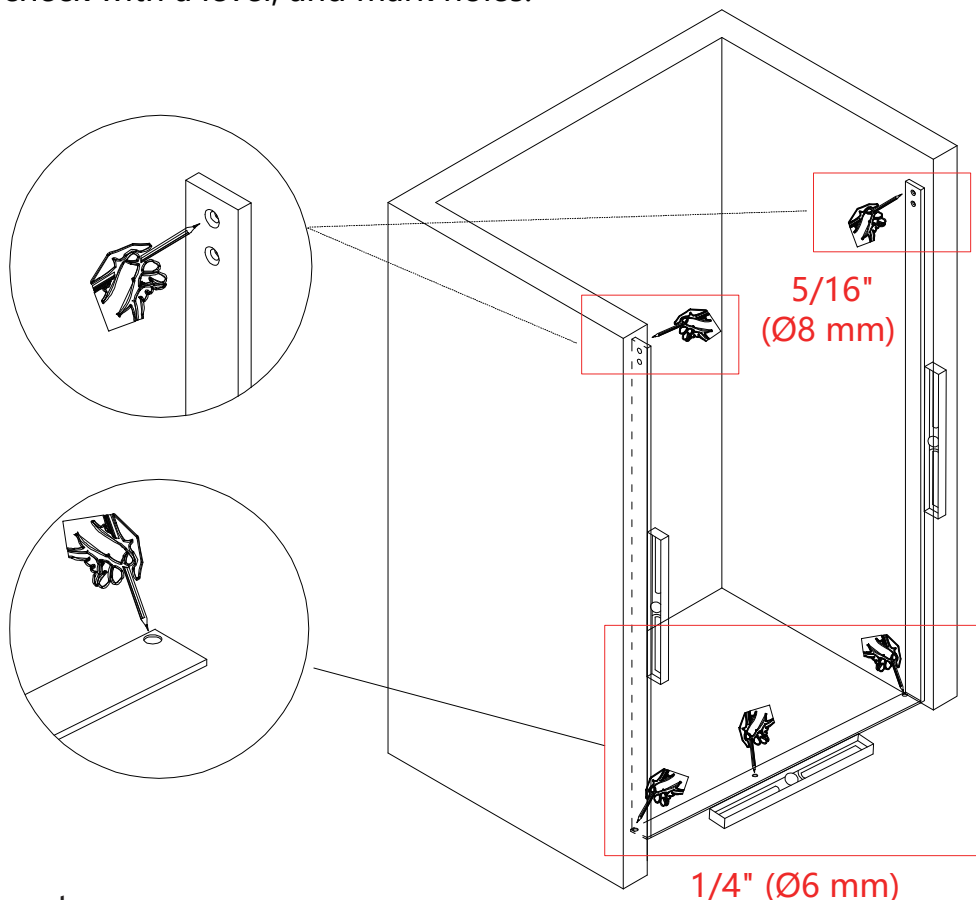


· Check Alignment:

Ensure wall holes are level and vertically aligned with floor holes before drilling.

Drawings may not exactly define contour of the product.

Installation Steps

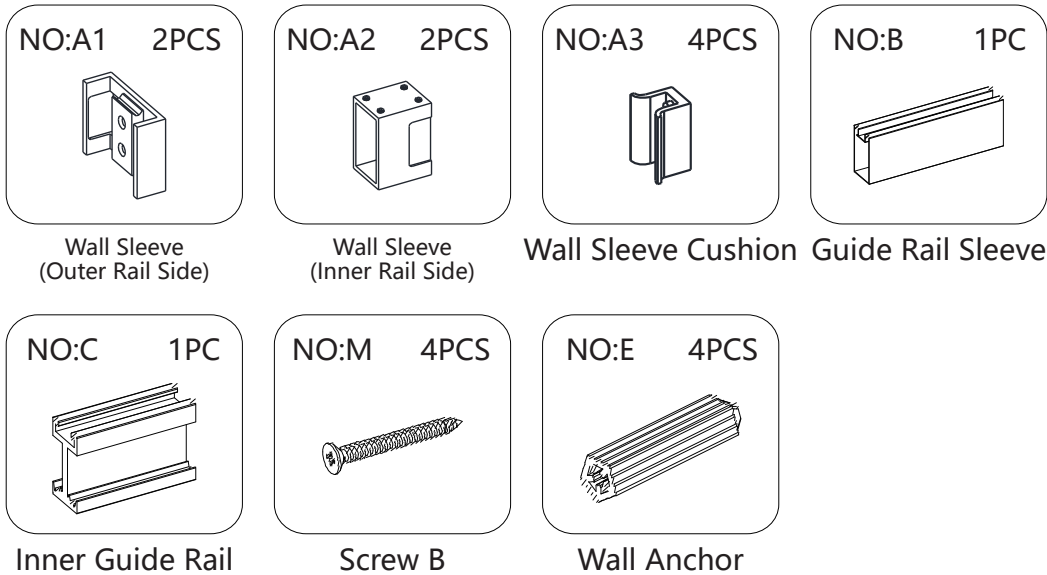

Step 2: Mount the Upper Guide Rail

Note:


- A1 = Wall Sleeve, Outer Rail Side (2 pcs)
- A2 = Wall Sleeve, Inner Rail Side (2 pcs)
- A3 = Wall Sleeve Cushion (4 pcs)

· Install Wall Sleeves (A1):

1. Drill wall holes from Step 1 using a 5/16" drill bit.
2. Insert wall anchors (E) flush with the wall surface.
3. Secure one wall sleeve (A1) to the wall with screw-B (M), then repeat on the opposite wall.
4. Check both wall sleeves are level and at the same height, then tighten screws.


· Install Upper Guide Rail Assembly:

1. Slide the inner guide rail (C) into the guide rail sleeve (B), then install wall sleeves (A2) on both ends. Do not tighten yet.
2. With assistance, lift the rail assembly and insert both ends into wall sleeves (A1).
3. Check that the guide rail is level, slide wall sleeves (A2) against the walls, align mounting positions, and secure with screws.
4. Install wall sleeve cushions (A3) at both ends (two per side), then tighten set screws with the hex key.
5. Re-check the guide rail level and fully tighten all screws.

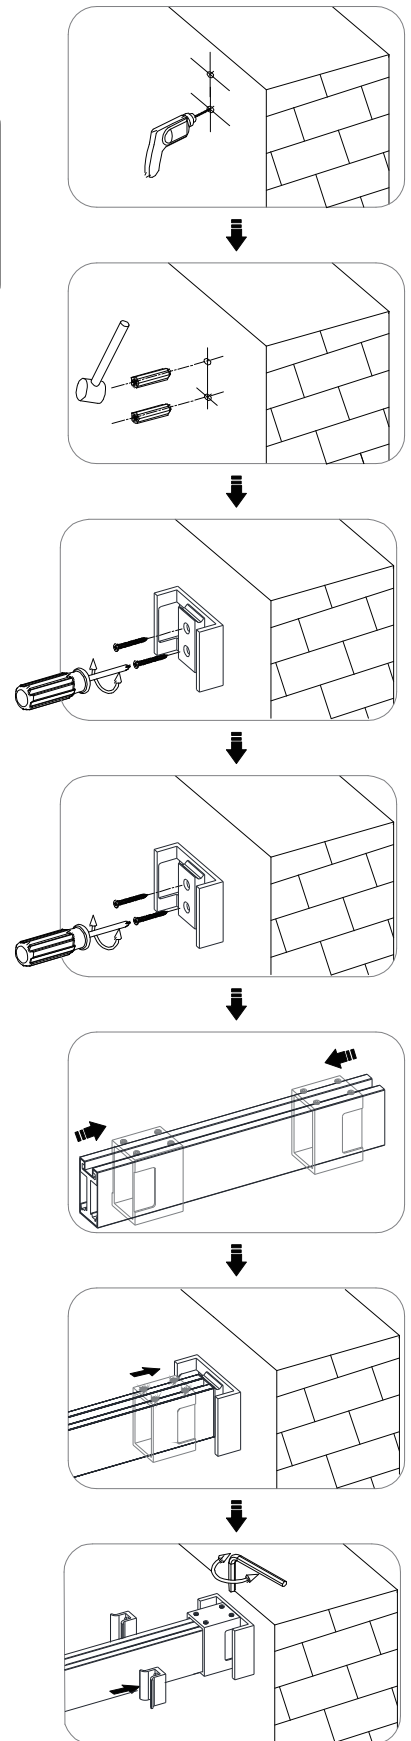

Drawings may not exactly define contour of the product.

Installation Steps

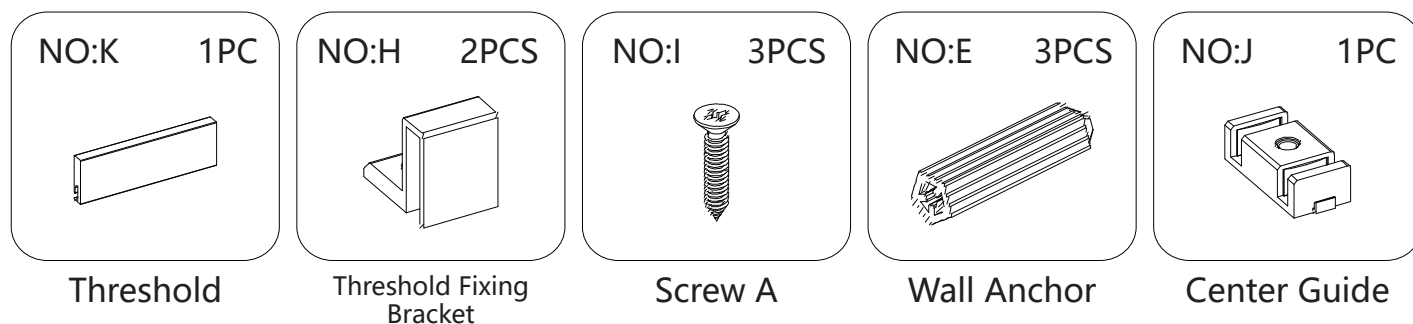

Step 3: Install the Threshold and Center Guide






Note: Install the threshold along the full shower opening length.

· Drill Floor Holes:

1. Align the threshold mounting position with the guide rail assembly on the same vertical plane.
2. Drill holes with a 1/4" drill bit and insert wall anchors (E) flush with the surface.

· Secure the Threshold:


1. Place the threshold (K).
2. Install threshold fixing brackets (H) and center guide (J), secure with three screw A (I), and install decorative caps.

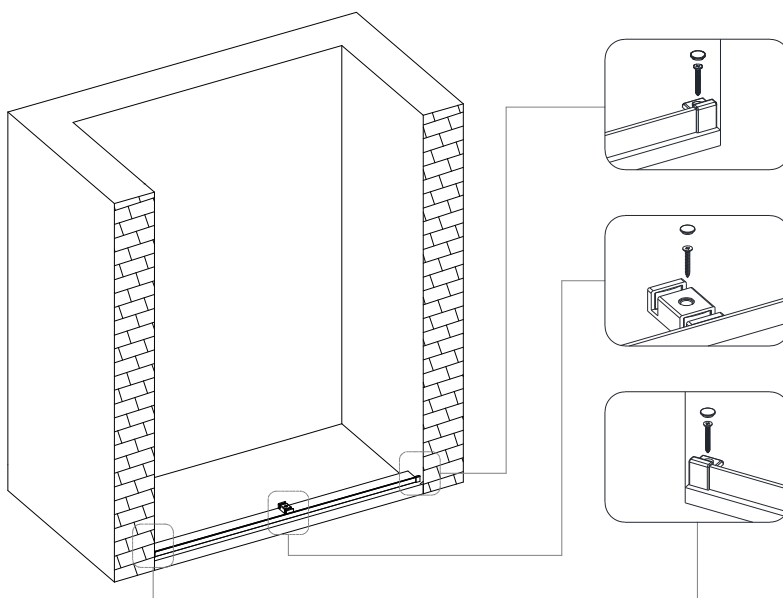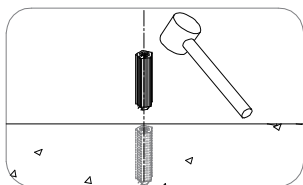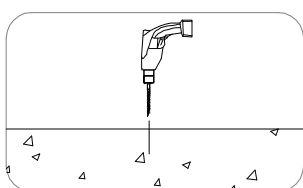


Note: Avoid damaging the waterproof membrane when drilling.

Drawings may not exactly define contour of the product.


Installation Steps

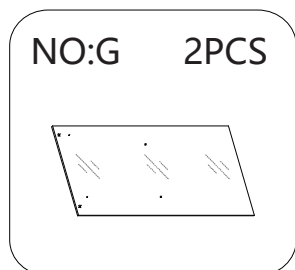


Door Glass Panel

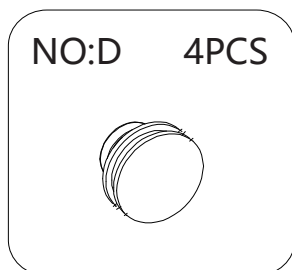

Roller

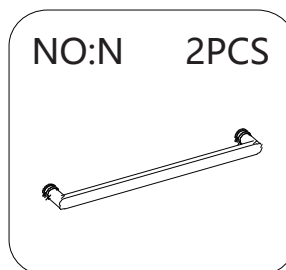

Handle

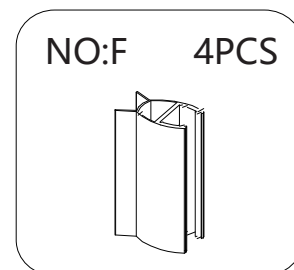

Anti-Collision Seal Strip


Step 4: Pre-Assemble Door Glass Components

· Confirm Door Glass Orientation:

1. Lay both door panels flat. Ensure roller holes face up, handle holes face opposite directions, and the printed glass side faces outward.
2. Install one panel on the inner rail (shower side) and the other on the outer rail. Confirm orientation before installing accessories.

· Install Door Glass Components:

1. Install two rollers (D) on the top holes of each panel. Insert bolts with gaskets on both sides of the glass, then tighten caps with the hex key.
2. Install anti-collision seal strips (F) on both sides of both door panels.
3. Install one handle (N) on each panel with gaskets on both sides. Ensure handles face opposite directions.

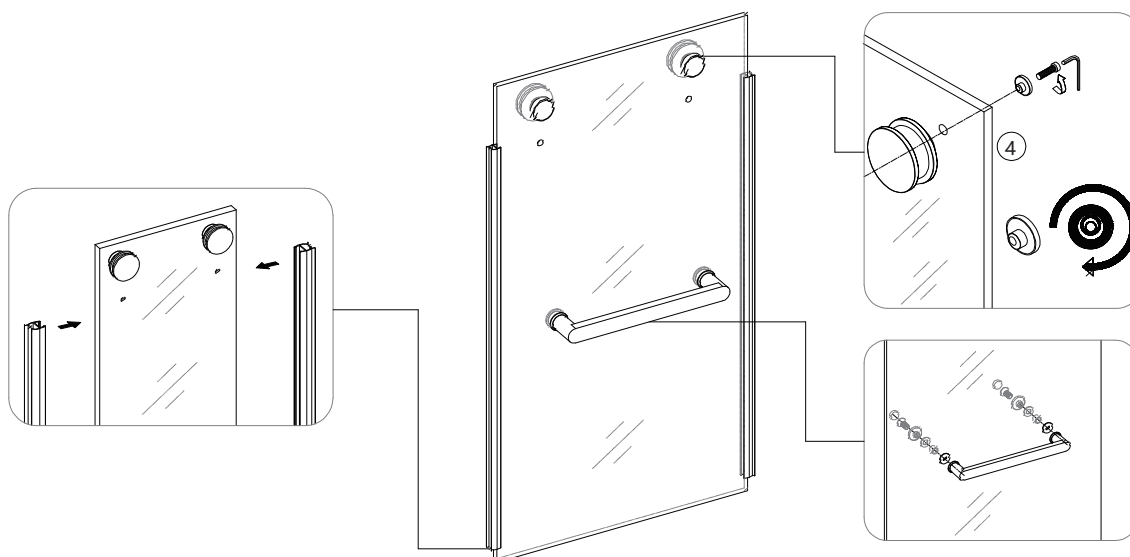

· Orientation Check:

Place both panels in hanging positions. Rollers should be on top, the outer door handle should face you, and the inner door handle should face away. If handles face the same direction, reassemble one panel.

Drawings may not exactly define contour of the product.

Installation Steps

Step 5: Install Door Panels

· Confirm Roller Orientation:




1. Each roller has different diameter wheels. The larger wheel must engage with the inner guide rail, and the smaller wheel must face the exposed side of the door panel.
2. Confirm roller direction before installation to prevent tilting, derailment, or rubbing.

· Hang Door Panels:

1. With two people, lift door panels by the glass edges only. Install the inner door panel on the inner rail first, then the outer door panel on the outer rail.
2. Align the bottom of each panel with the center guide and insert into the guide groove. Ensure both top and bottom are engaged before releasing. Do not force the glass; adjust the top position if needed.
3. Slide both panels to confirm smooth movement without contact.

· Adjust Door Panel Level:

1. Use the hex key to adjust the eccentric discs on the rollers to raise or lower each corner.
2. Adjust until the door panels are vertical, parallel with the wall, and stable without rocking.

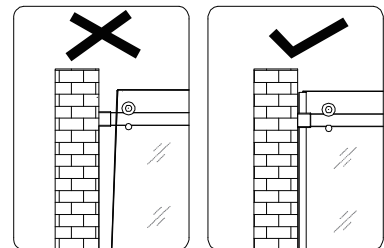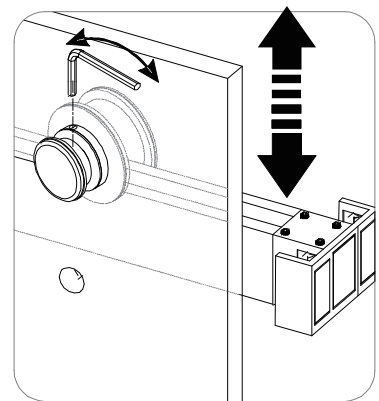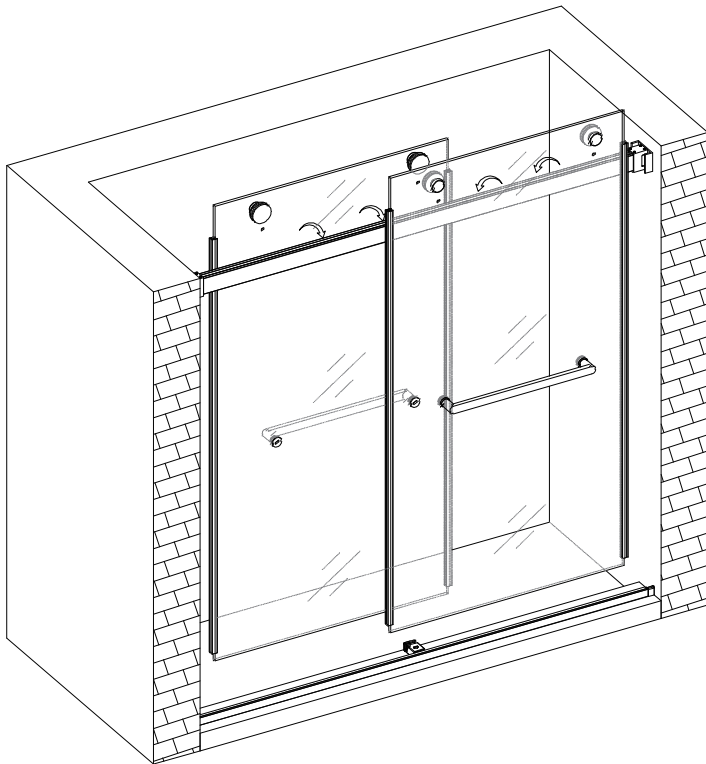

Drawings may not exactly define contour of the product.

Installation Steps

Step 6: Install Roller Anti-Jump Brackets

 
· Install Brackets:

Slide each door panel to access the lower holes. Install two roller anti-jump brackets (L) on each panel with gaskets on both sides of the glass, then tighten the caps.




· Check Clearance:

1. Ensure brackets are $\frac{1}{32}$ "– $\frac{1}{16}$ " (1–2 mm) below the guide rail to prevent lifting while allowing smooth sliding.
2. Slide both panels through the full range to confirm smooth operation without contact or abnormal noise.

NO:L 4PCS

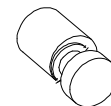




Roller Anti-Jump Bracket

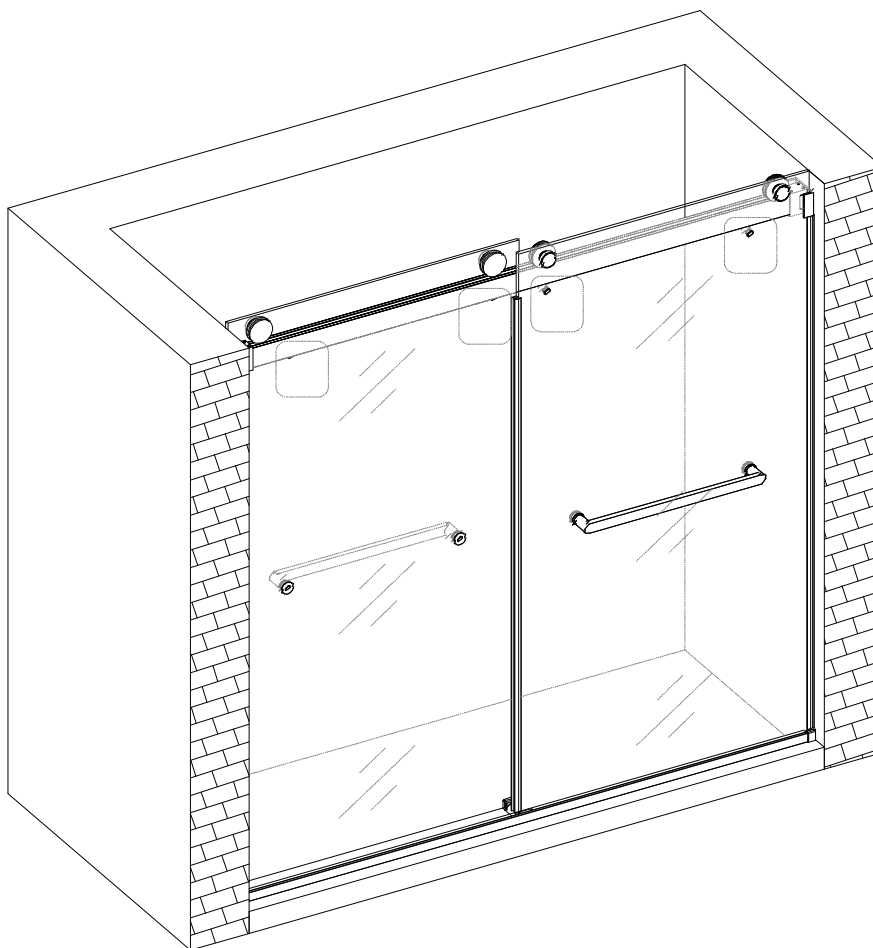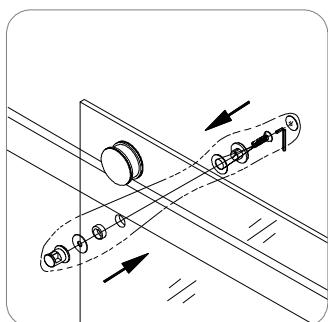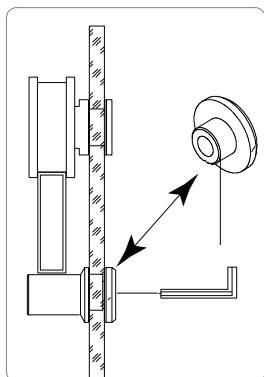

Drawings may not exactly define contour of the product.

Installation Steps

Step 7: Final Inspection

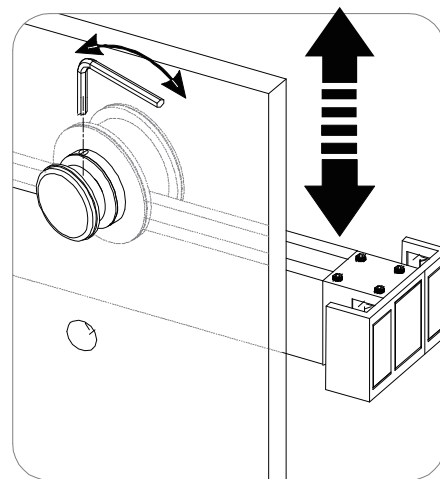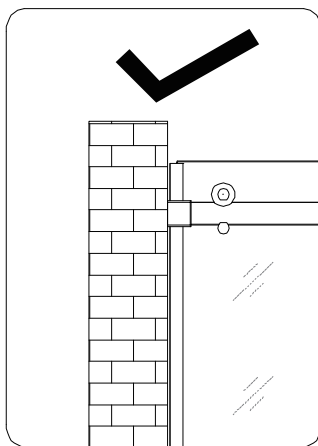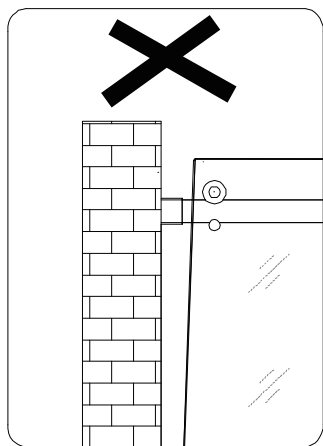

· Check the door operation and alignment:

- ☐ Ensure door panels are level and plumb with an even gap from top to bottom.
- ☐ Slide both panels to confirm smooth operation without derailment, contact, or abnormal noise.
- ☐ Check that seal strips align and fully engage when doors are closed.
- ☐ Confirm all screws are tightened and decorative caps are installed.
- ☐ Ensure door bottoms are properly seated in the center guide without binding or lifting.

Drawings may not exactly define contour of the product.

Installation Steps

Step 8: Apply Silicone Sealant

· Inside of Enclosure:

Apply a continuous bead of silicone sealant to:

1. Both guide rail ends where wall sleeves meet the walls.
2. Both threshold ends where they meet the walls.
3. The joint between the threshold and shower base/floor.






· Outside of Enclosure:

Apply silicone to joints where wall sleeves and threshold meet the wall or shower base/floor.

· Do Not Apply Silicone:

Do not apply silicone inside guide rail or center guide grooves, or on moving parts.

· Wait 24 hours before use.

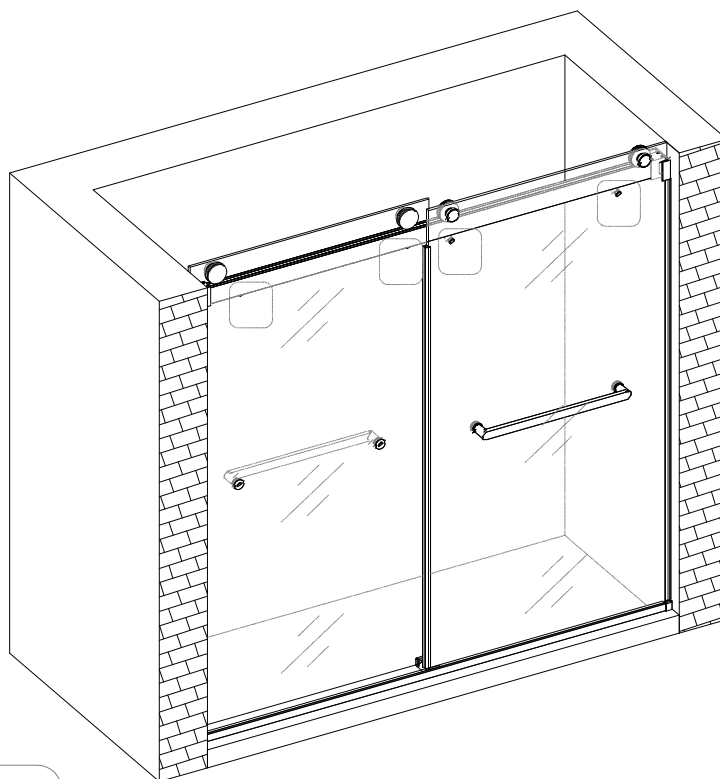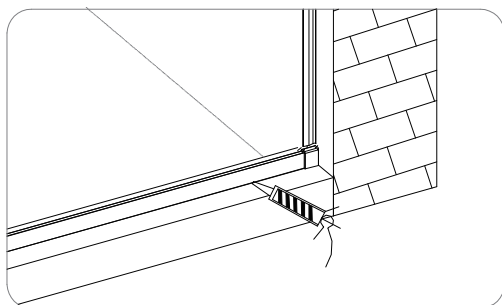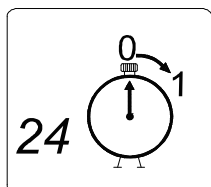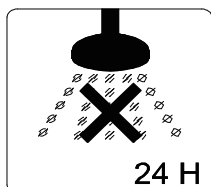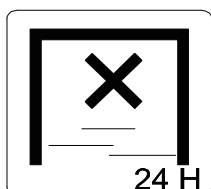

Drawings may not exactly define contour of the product.

Troubleshooting

Alignment Issues	
Problem	Recommended Action
The top or bottom of the sliding door glass panel tilts away from the wall.	Adjust the rollers to align the door panel until the sliding door glass panel is plumb from top to bottom.

Water Leak Issues	
Problem	Recommended Action
Water leaks between the sliding door glass panels.	Ensure the water seal strip is properly installed and the door panels are correctly aligned.
Water leaks between the sliding door glass panel and wall area.	Check that the seal strip is properly installed and contacting the glass panel. Adjust the door position if necessary.
Water leaks under the threshold.	Check the silicone sealant around the threshold. Apply additional silicone sealant if needed.
Water leaks around the wall sleeve area.	Check the silicone sealant application along the wall sleeves and wall joints. Apply additional silicone sealant if needed.

Operation Issues (Opening / Closing)	
Problem	Recommended Action
The sliding door glass panel is difficult to move.	1. Check that the rollers are properly installed and adjusted. 2. Ensure the door is properly seated in the center guide. 3. Clean any debris from the top rail.
The door makes rubbing or unusual noises during movement.	1. Check that the sliding door glass panel is properly aligned. 2. Ensure the rollers are securely tightened. 3. Check that no components are rubbing against the glass or top rail.

Before troubleshooting, check the following:

1. Ensure the guide rail is level.
2. Check that the rollers are properly adjusted.
3. Confirm that each door panel is properly aligned and fully engaged with the guide rail and center guide.
4. Always support the door panel during adjustment. Do not adjust the door panel while it is supported by only one roller.

Still Not Resolved?

If the issue persists, please contact us with your model number, photos or videos of the issue, and proof of purchase:

www.deervalleybath.com | (312) 626-9466 | service@deervalleybath.com

LIMITED WARRANTY COVERAGE

FIVE YEARS LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first five year of delivery, DeerValley will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. SCRATCHES ARE NOT COVERED UNDER WARRANTY.

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund for the original purchase price of the product(s) (valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product. Shipping/delivery charges may apply and are at DeerValley's sole discretion.

DeerValley recommends that installations be performed by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This limited warranty does not cover goods that have been subjected to accidents, negligence, improper installation, product abuse, product misuse, or the use of cleaners containing abrasives, alcohol, or other organic solvents. Such exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley will not be responsible for labor charges or any damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs of any kind related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including but not limited to those regarding merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or building contractor, acting on behalf of the user, to inspect the unit prior to installation. They are responsible for ensuring that the unit is free from defects or damage.

Notices are placed on and within the unit, as well as on the shipping carton, to inform the installer of their responsibility.

If a problem is identified, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been identified, repaired, or prevented through proper inspection and testing prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must open the crate and inspect the unit for damage upon delivery. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection must be requested. If the carrier fails to respond, the issue should be reported to both the seller and the carrier. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover negligence, misuse, abuse, improper installation, carelessness, accidents, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages resulting from improper maintenance, alteration of the product, or failure to follow the care or installation instructions provided with your product. The warranty becomes void if the DeerValley product is altered or if repairs are attempted using unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use of its products, inconvenience, or any other incidental or consequential costs, expenses, or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or other individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley shall not be held responsible for any such unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please ensure you have the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.