

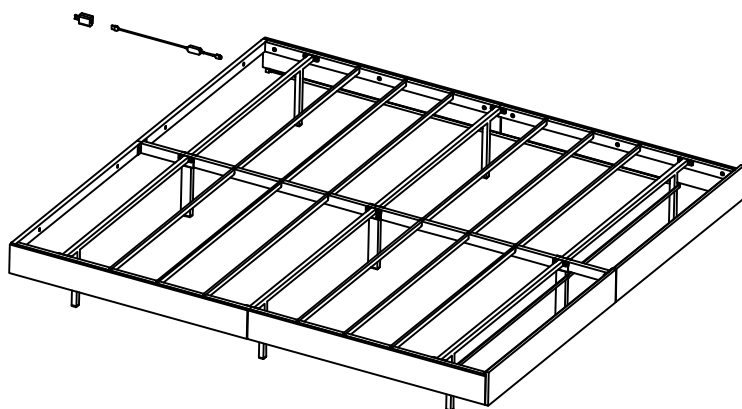


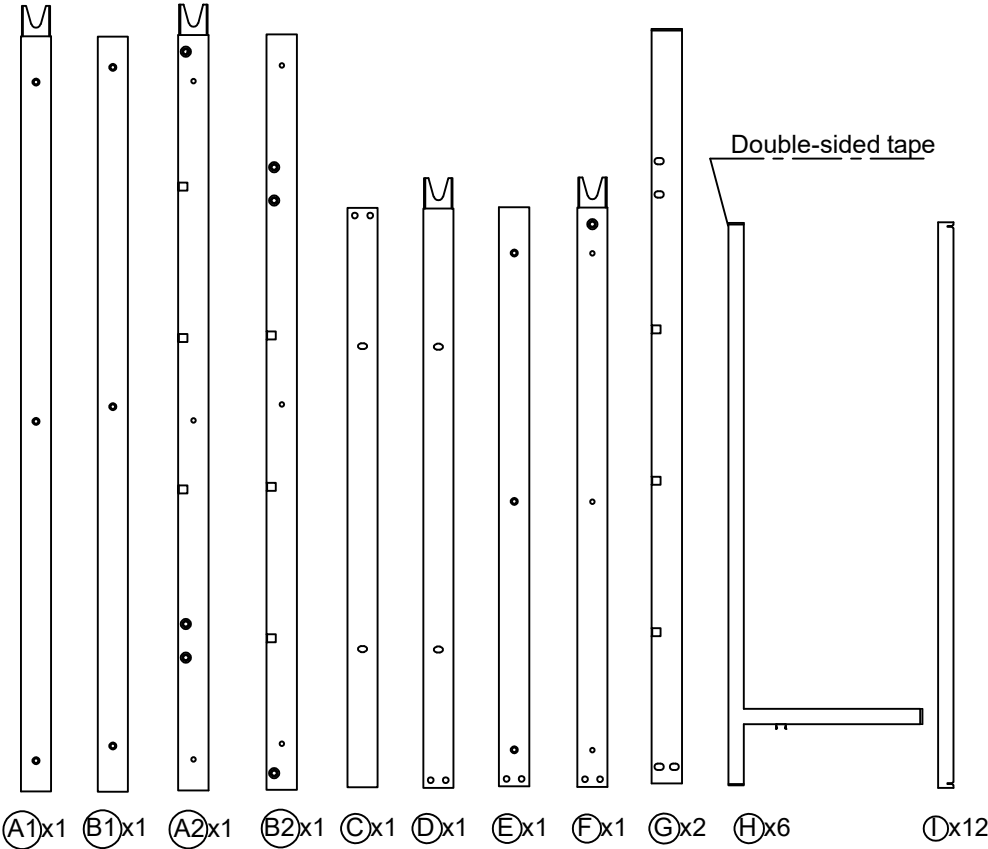


Model: T3963P446976/T3963P446980/T3963P446982

PRODUCT GUIDE AND INSTALLATION MANUAL


Parts List:

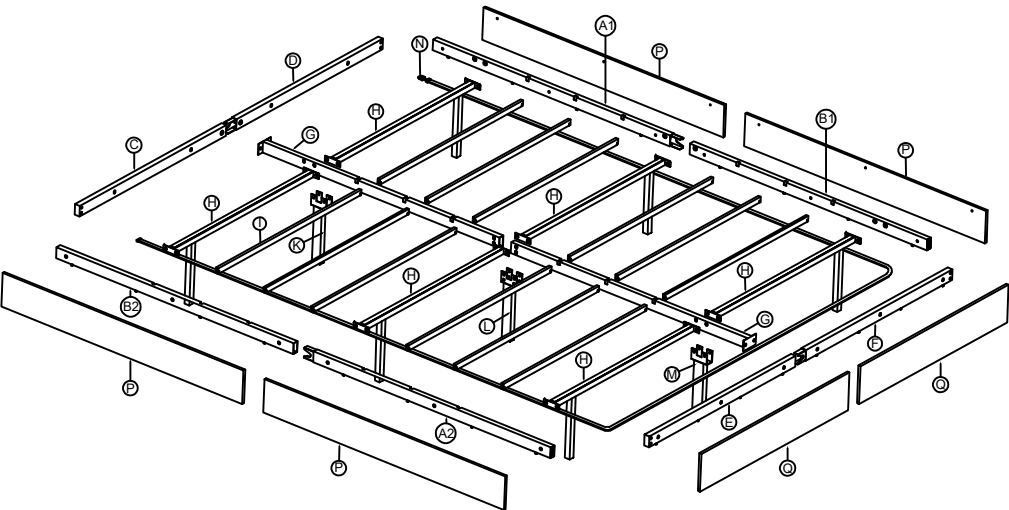


Parts List:

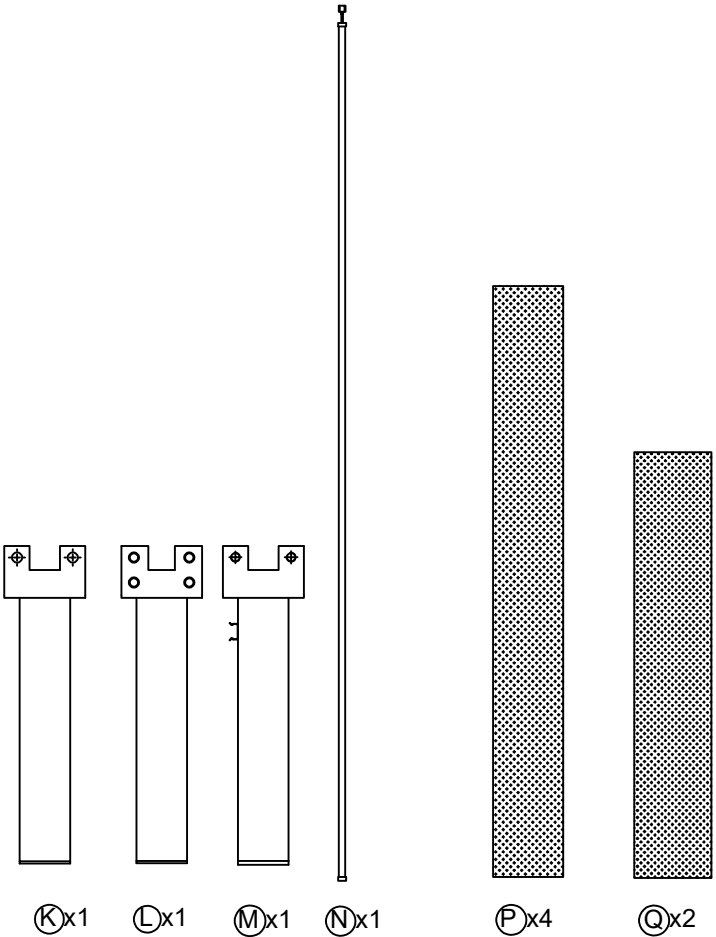


M-N-O (Lamp string)

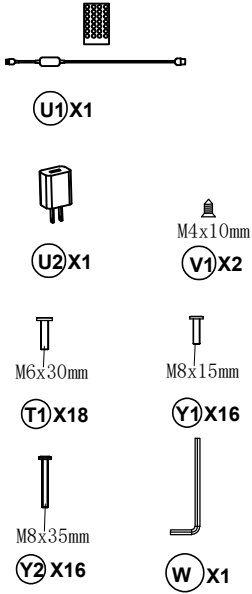


Step 1

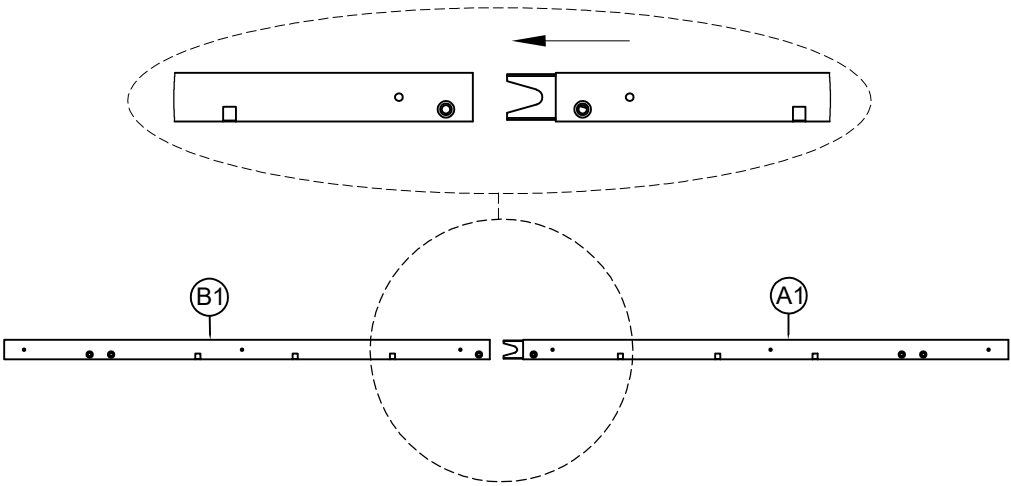


Step 2

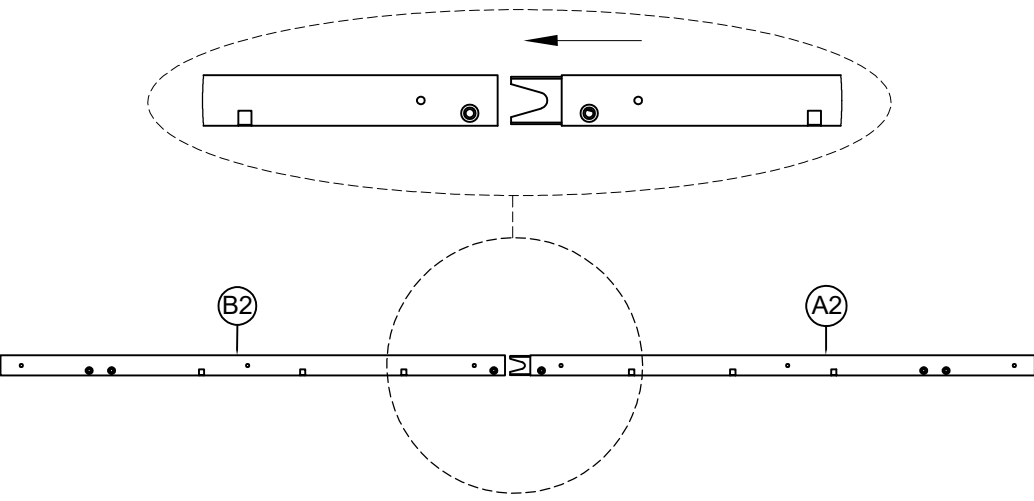


Step 3

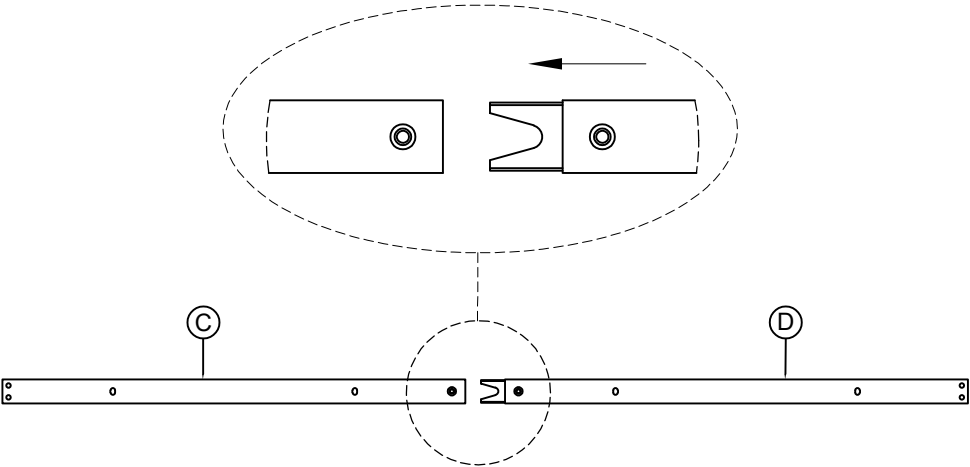


Step 5

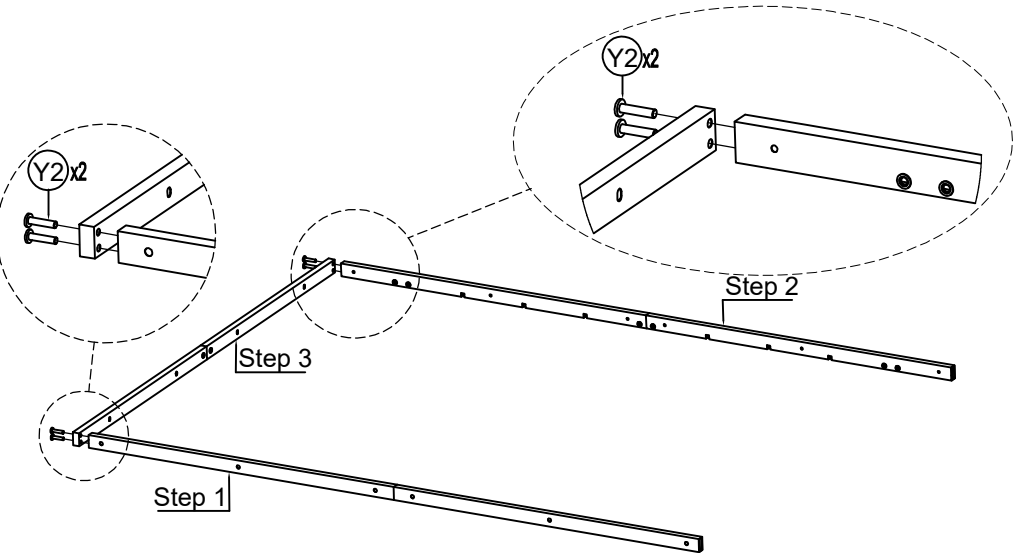


Step 4

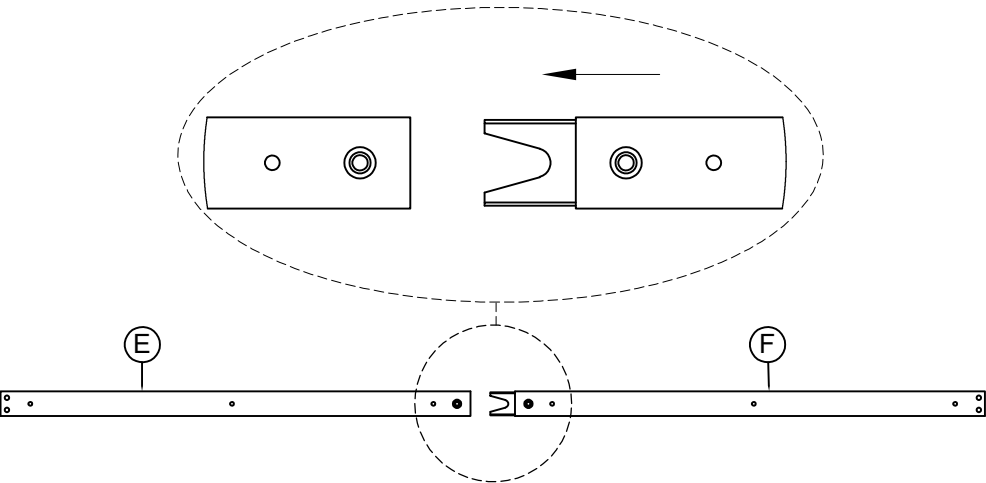


Step 6

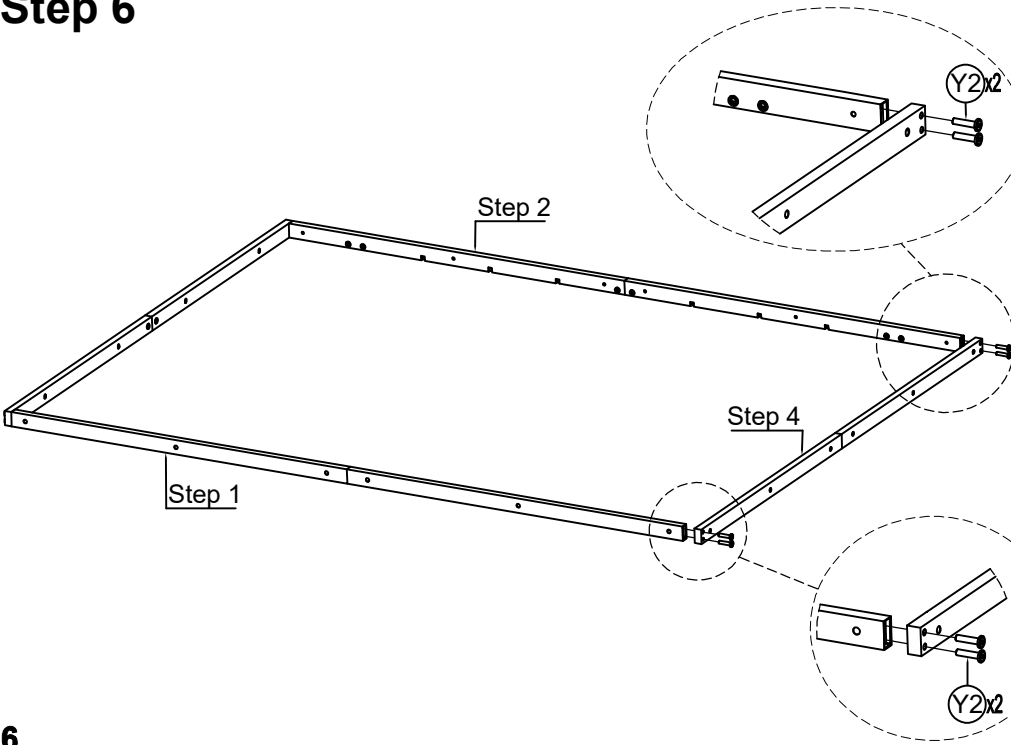


Step 7

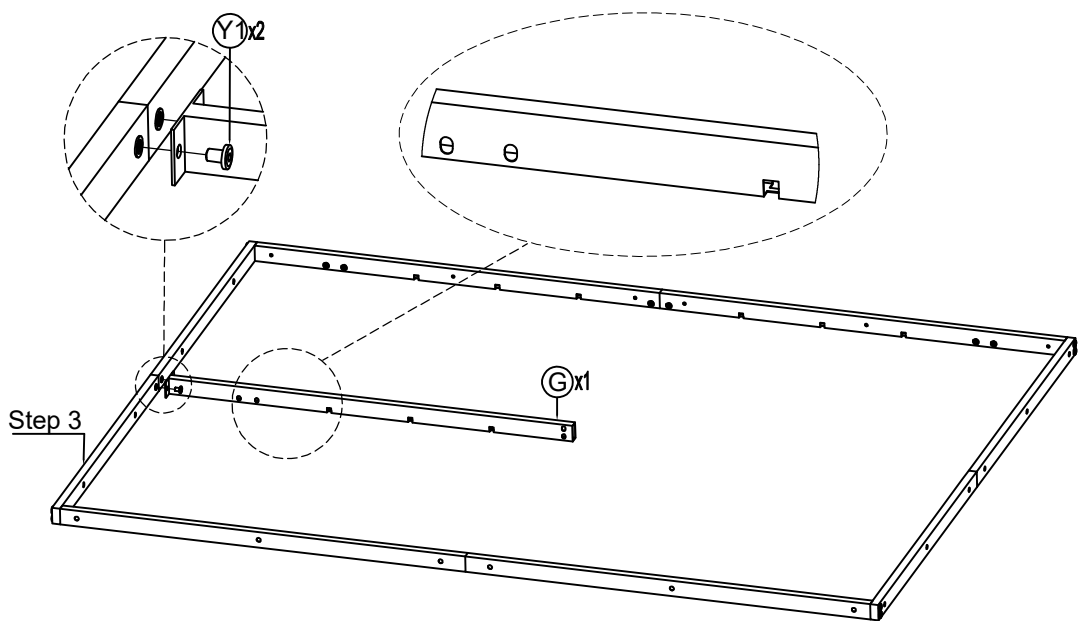


Step 9

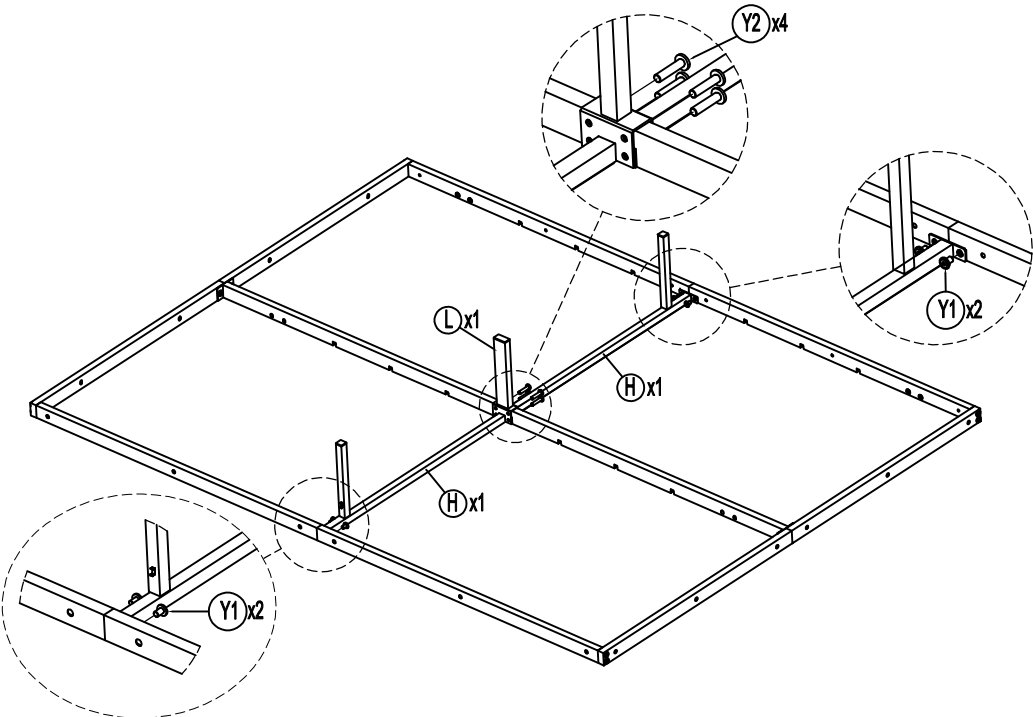


Step 8

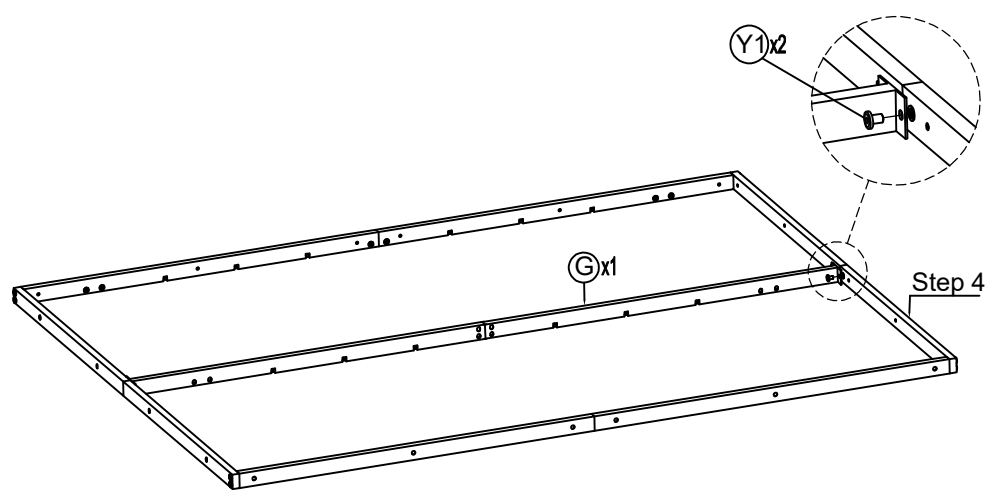


Step 10

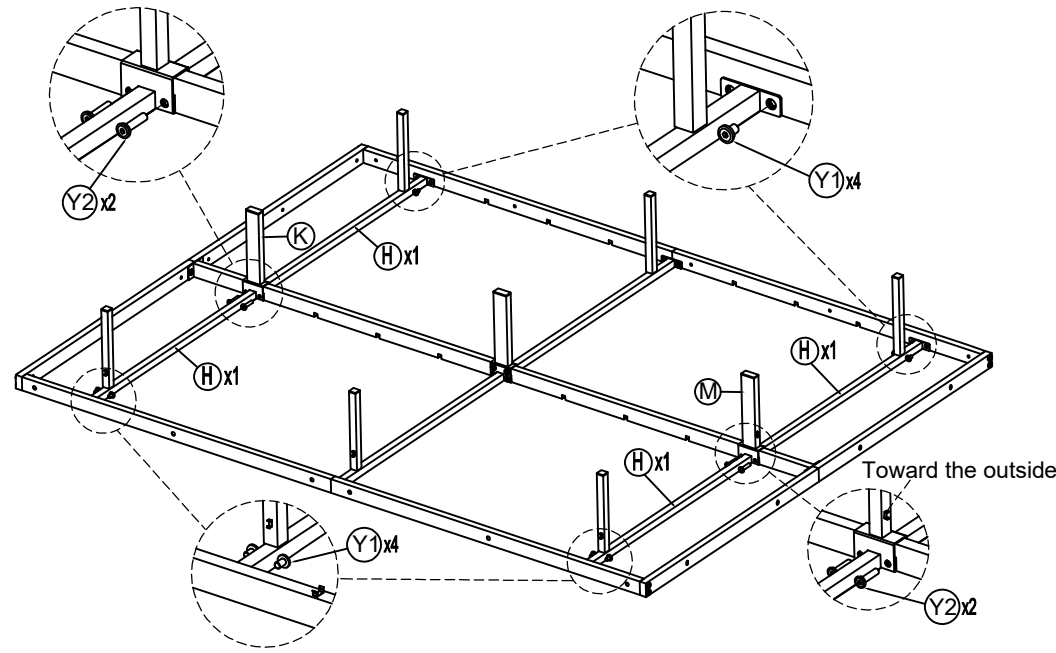


Step 11

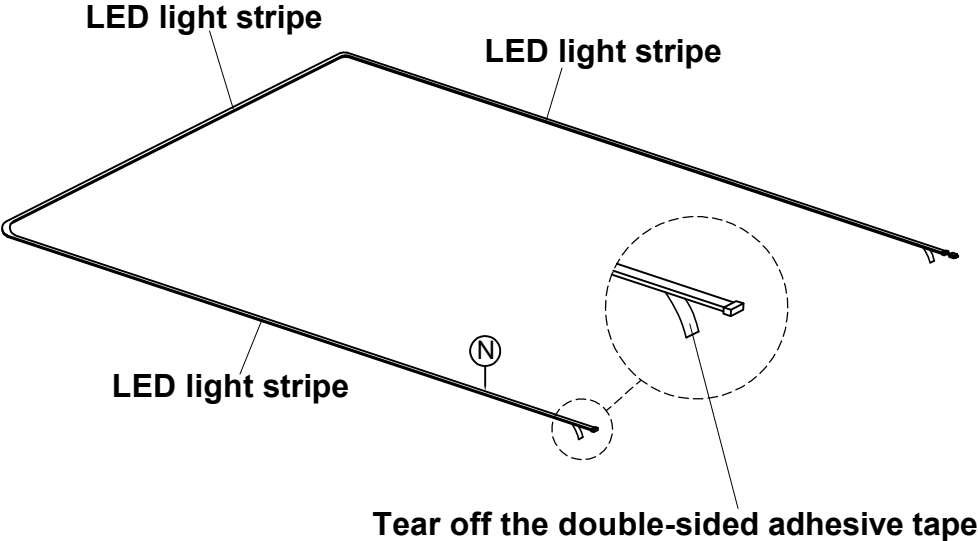


Step 12

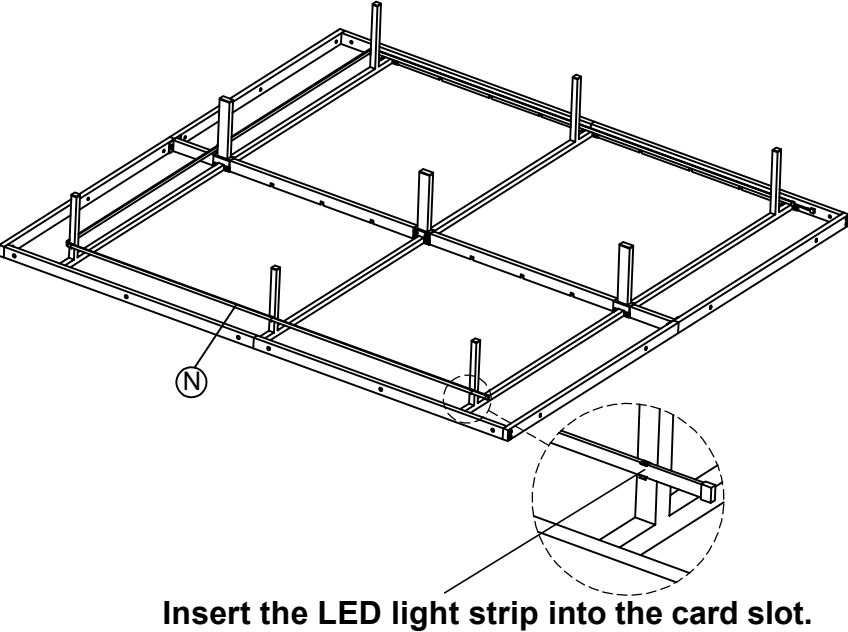


Step 13

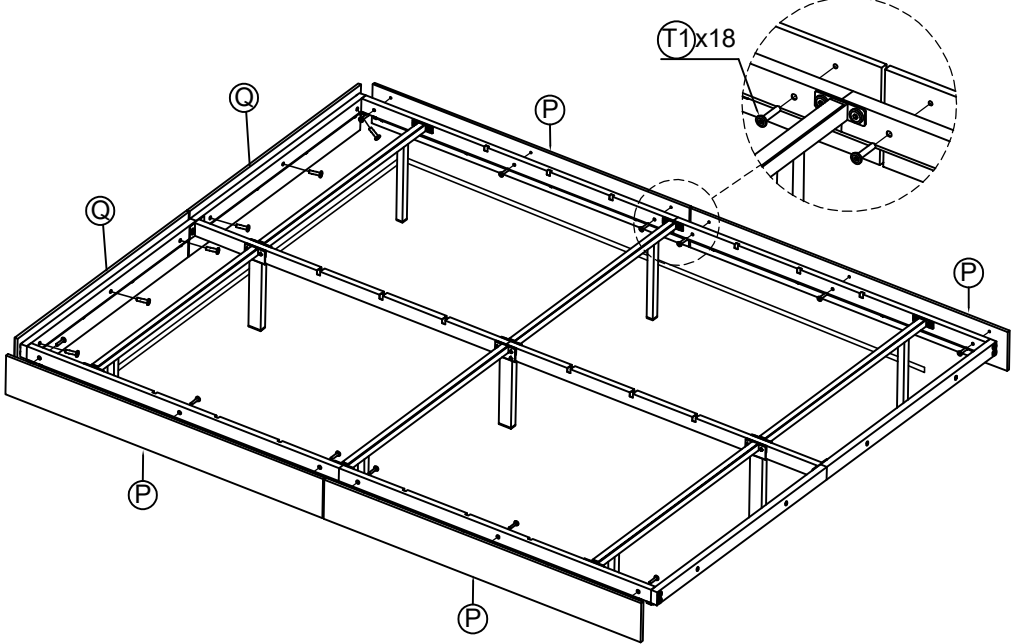

Step 14

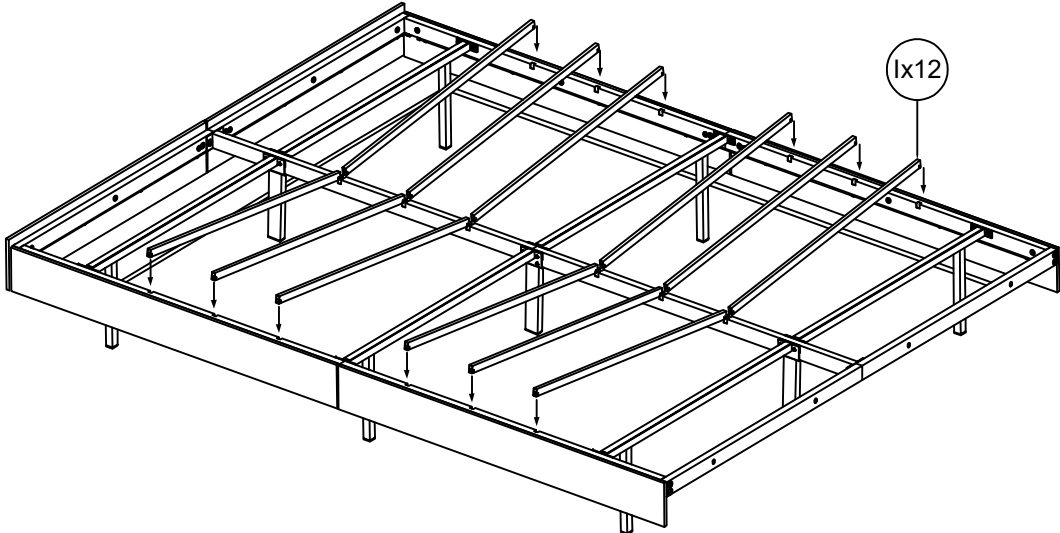

Step 15

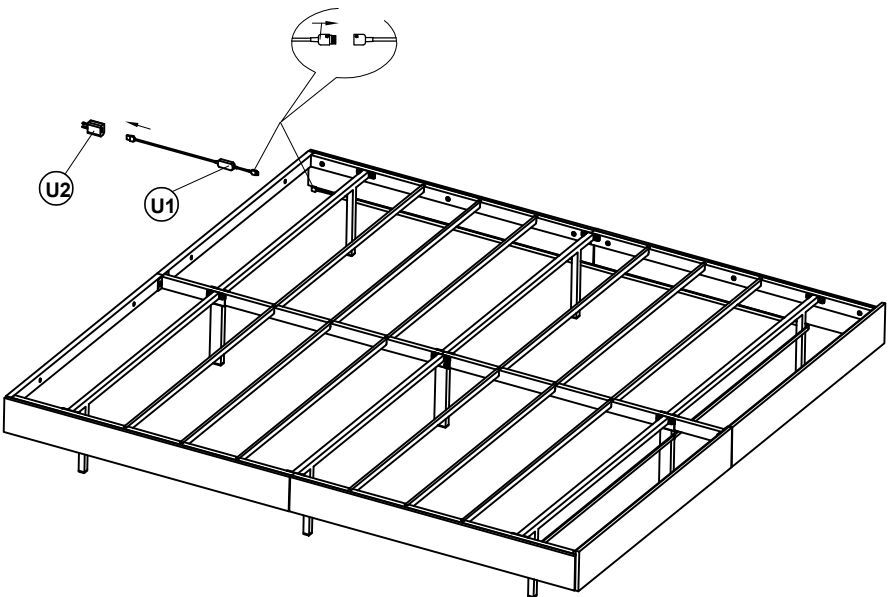

REMOTE CONTROLLER

