
# **Assembly Instructions**

Caution: You must read this before you proceed.

#### **ARCH MESH CHAIR**

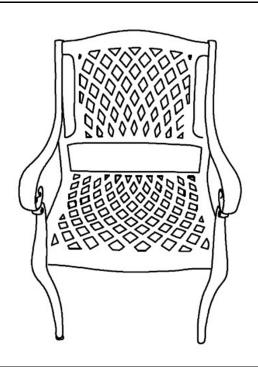

CAUTION: This chair is NOT a TOY.

Keep your child / children at bay during the assembly process.

 
Parts List				
No.	Picture	Description	Qty	
А		Backrest Panel	1	
В		Chair Seat Panel	1	
С		Right Legs with Arm and Pre- attached Bolts for Seat Panel and Leveller	1	
D		Left Legs with Arm and Preattached Bolts for Seat Panel	1	

and Leveller

<u>Hardware</u>					
No.	Picture	Description	Qty		
E		Washer (8mm)	8		
	0	Spring Washer (8mm)	8		
	<b>(</b> )	Nut (8mm)	8		
J		Rubber Cap	4		
G	2==3	Spanner	1		

### **Assembly Preparation**

#### Before Beginning Assembly:





Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

# Assembly Steps


### Step 1

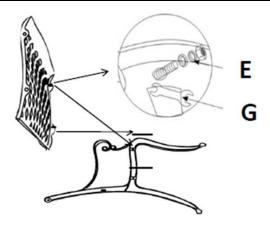

Place the Chair Seat Panel(B) into the pre-attached bolts of the Left Legs(D)Panel using Washers, Spring Washers and Nuts(E, with Spanner(G).

DO NOT overtighten at this stage.


# Step 2

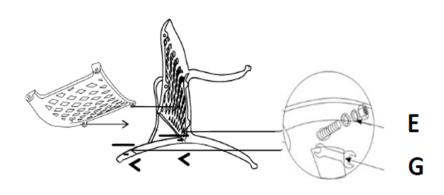

Then attach the Backrest Panel(A) to the to Left Legs(D) Backrest Panel using Washers, Spring Washers and Bolts(E), with Spanner(G).

DO NOT overtighten at this stage.




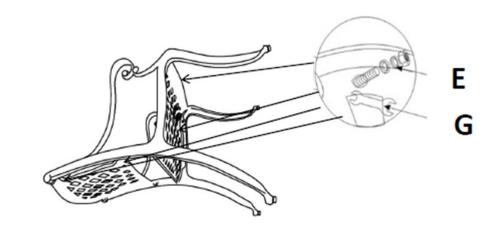

Repeat the same assembly process for the RIGHT leg.

DO NOT overtighten at this stage.

# Step 4

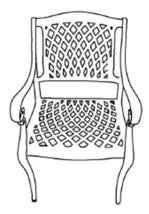

Stand the chair upright.

Adjust the Pre-attached Levellers on the Chair Legs until the chair is level with the ground. Now, in a sequential manner, fully and securely tighten all screws and bolts at all joints. Then Add Rubber Caps(J) on all bolt ends to protect skin or clothing from getting snagged.

Your Chair is ready for use.

#### Care & Maintenance



• Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and
 lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



Not for commercial use. For residential use only .



Stains may be removed with mild soap solution and damp cloth.



Dust and pick-up spills using a clean, non-colored, lint-free cloth.