 


Thank you for choosing . We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion.





 
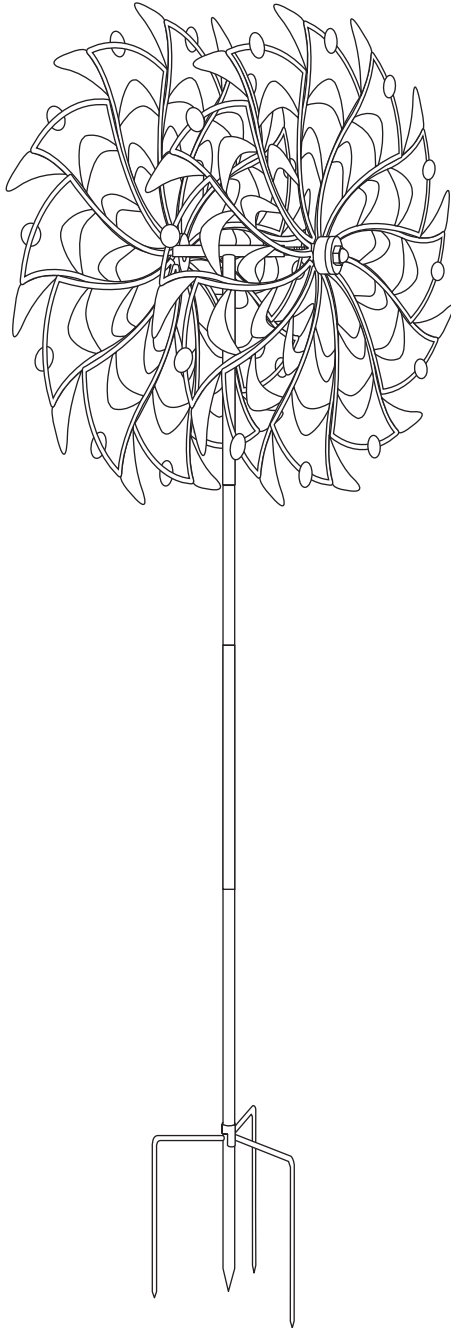 



RAINBOW BREEZE WIND SPINNER

Review all assembly and care information before using this product. Save this manual for future reference.


Assemble components on a soft, clean surface to avoid damaging the finish.

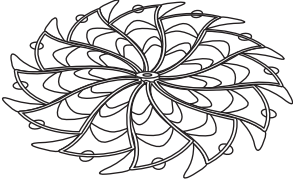

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

No.	PARTS	QTY.
A	 Step-in Stake	1
B	 2-Prong Stake	1
C	 Lower Pole	1
D	 Upper Pole	1
E	 T-Bar	1
F	 Blade	2
G	 M10x8mm Nut	2
H	 Ø38x7mm Spacer	2
I	 M10x14mm Cap Nut	2

 INCLUDED TOOLS



Spanner

 
WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY

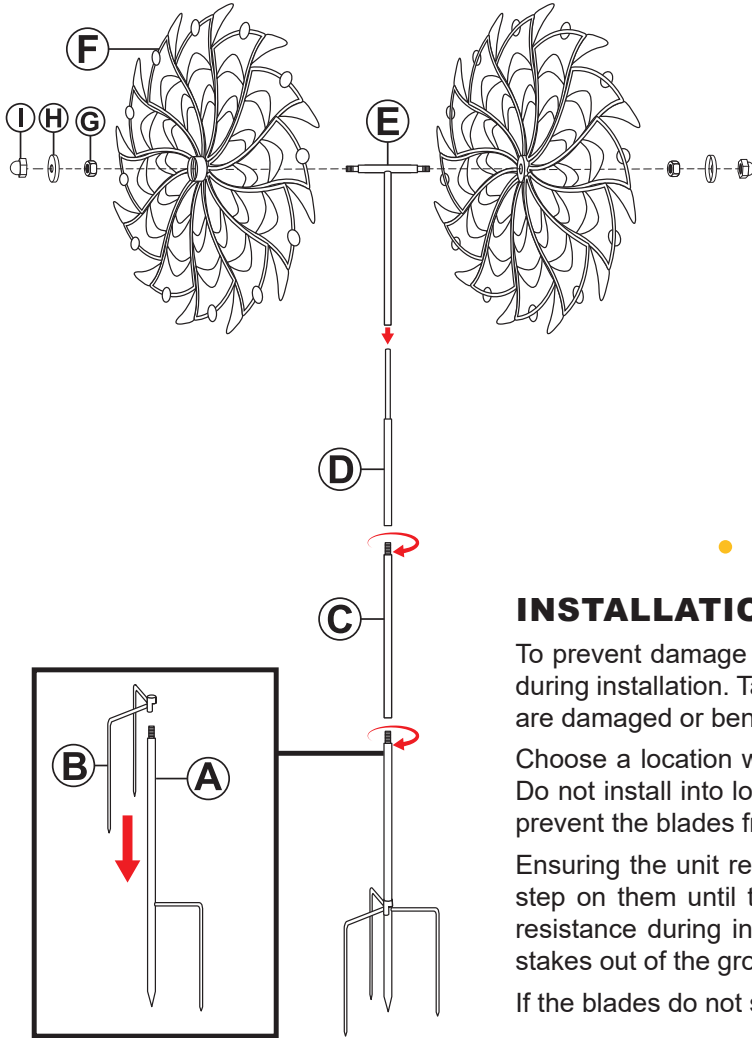

1. Slide 2-Prong Stake (B) over Step-in Stake (A), as shown.
2. Secure Lower Pole (C) to the step-in stake. Do not over-tighten.
3. Secure Upper Pole (D) to the lower pole. Do not over-tighten.
4. Slide T-Bar (E) onto the upper pole.
5. Place two Blades (F) onto the T-bar.
6. Secure each blade using Nut (G). Do not over-tighten.
7. Place Spacer (H) onto the blade and secure Nut Cap (I).

INSTALLATION

To prevent damage to the blades, we recommend removing the assembled top during installation. Take care when setting down the assembled top; if the blades are damaged or bent, they may not spin properly.

Choose a location with soil that is firm enough to support the unit while in use. Do not install into loose soil as doing so may cause the unit to lean, tip over, or prevent the blades from spinning correctly.

Ensuring the unit remains straight, push the step-in stakes into the ground and step on them until they are flush with the top of the ground. If you encounter resistance during installation, do not force the stakes into the ground; pull the stakes out of the ground and check for obstructions such as stones or tree roots.

If the blades do not spin freely, the nuts may need to be slightly loosened.

USE & CARE

- Avoid high-traffic areas such as locations where children and pets play.
- Water may seep into the connection points and cause the treaded components to rust. Periodically check connection points and clean them to prevent rust.

CLEANING

Wash components using a mixture of 4 parts water to 1 part white distilled vinegar. Scrub with a cloth or a soft-bristled brush.

Thoroughly rinse with clean water and dry with a clean cloth.

⚠ IMPORTANT INFORMATION ⚠

- Do not install into loose soil as the unit may lean or tip over.
- Do not use harsh chemicals or abrasive materials to clean the unit as they may damage the product and void the product warranty.
- Store this unit during freezing temperatures as exposure to freezing temperatures may damage the product.
- Manufacturer is not liable for damages or defects caused by exposure to weather elements.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.