 
 


Assembly Instructions

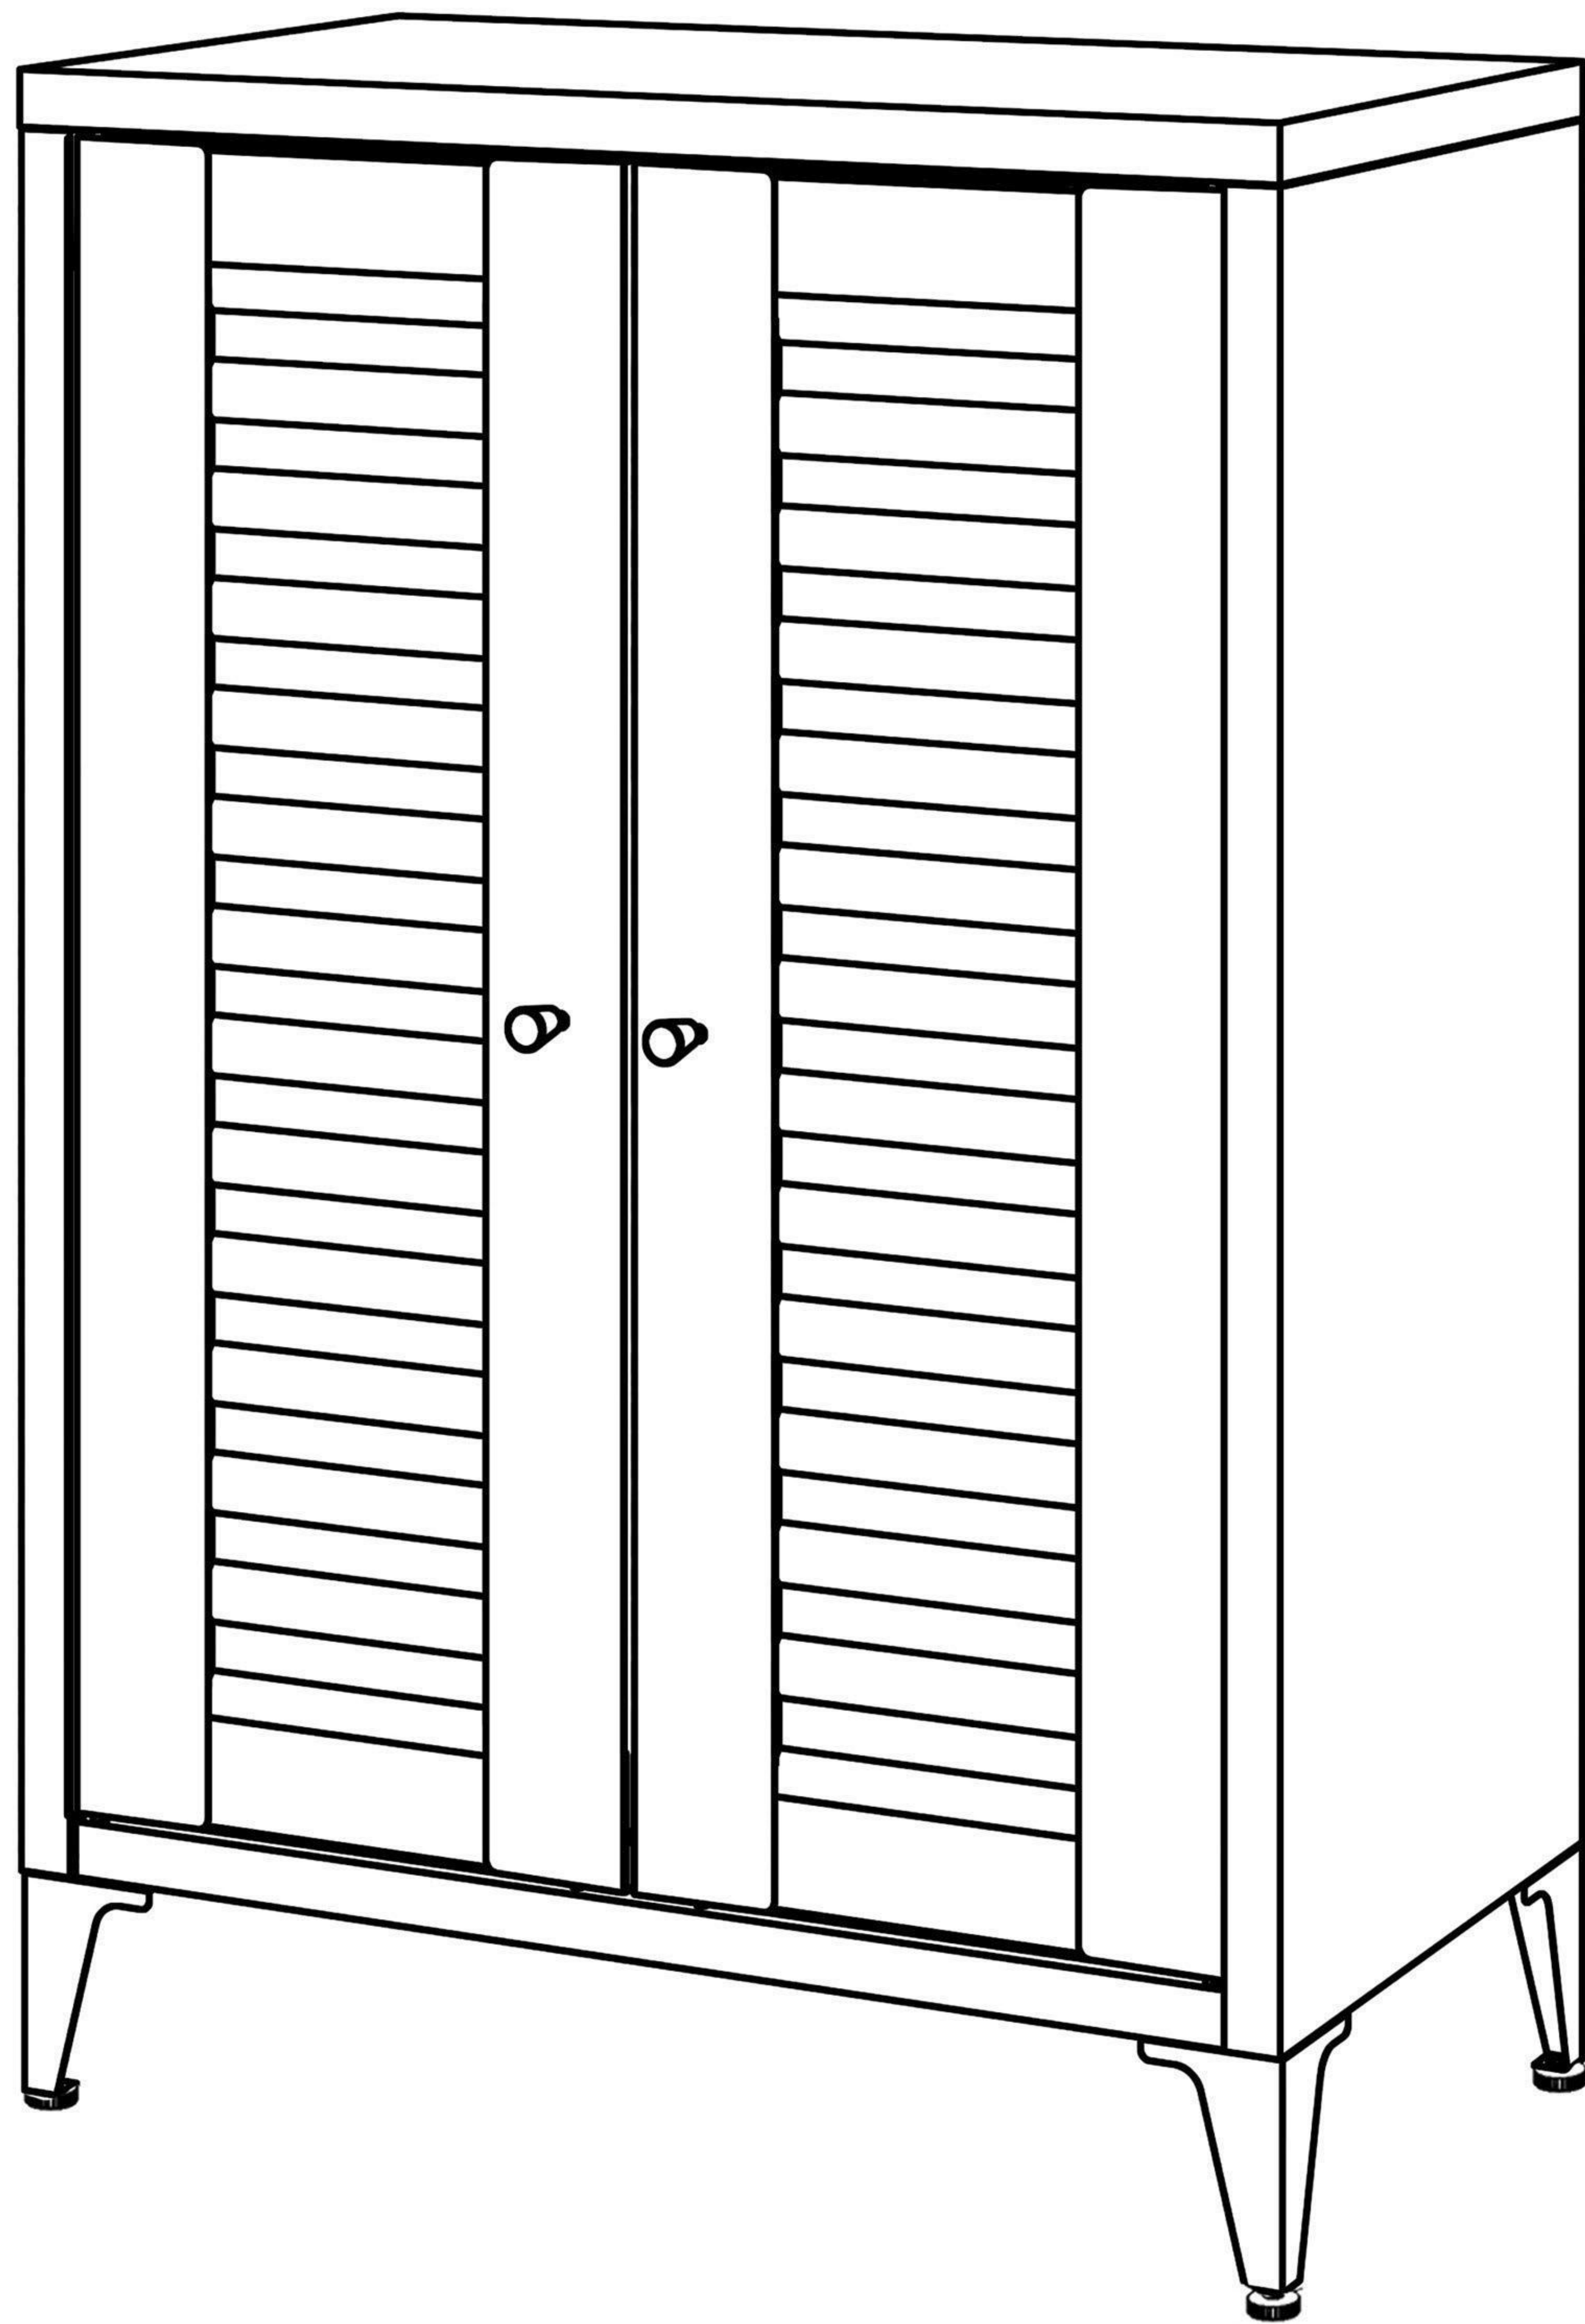

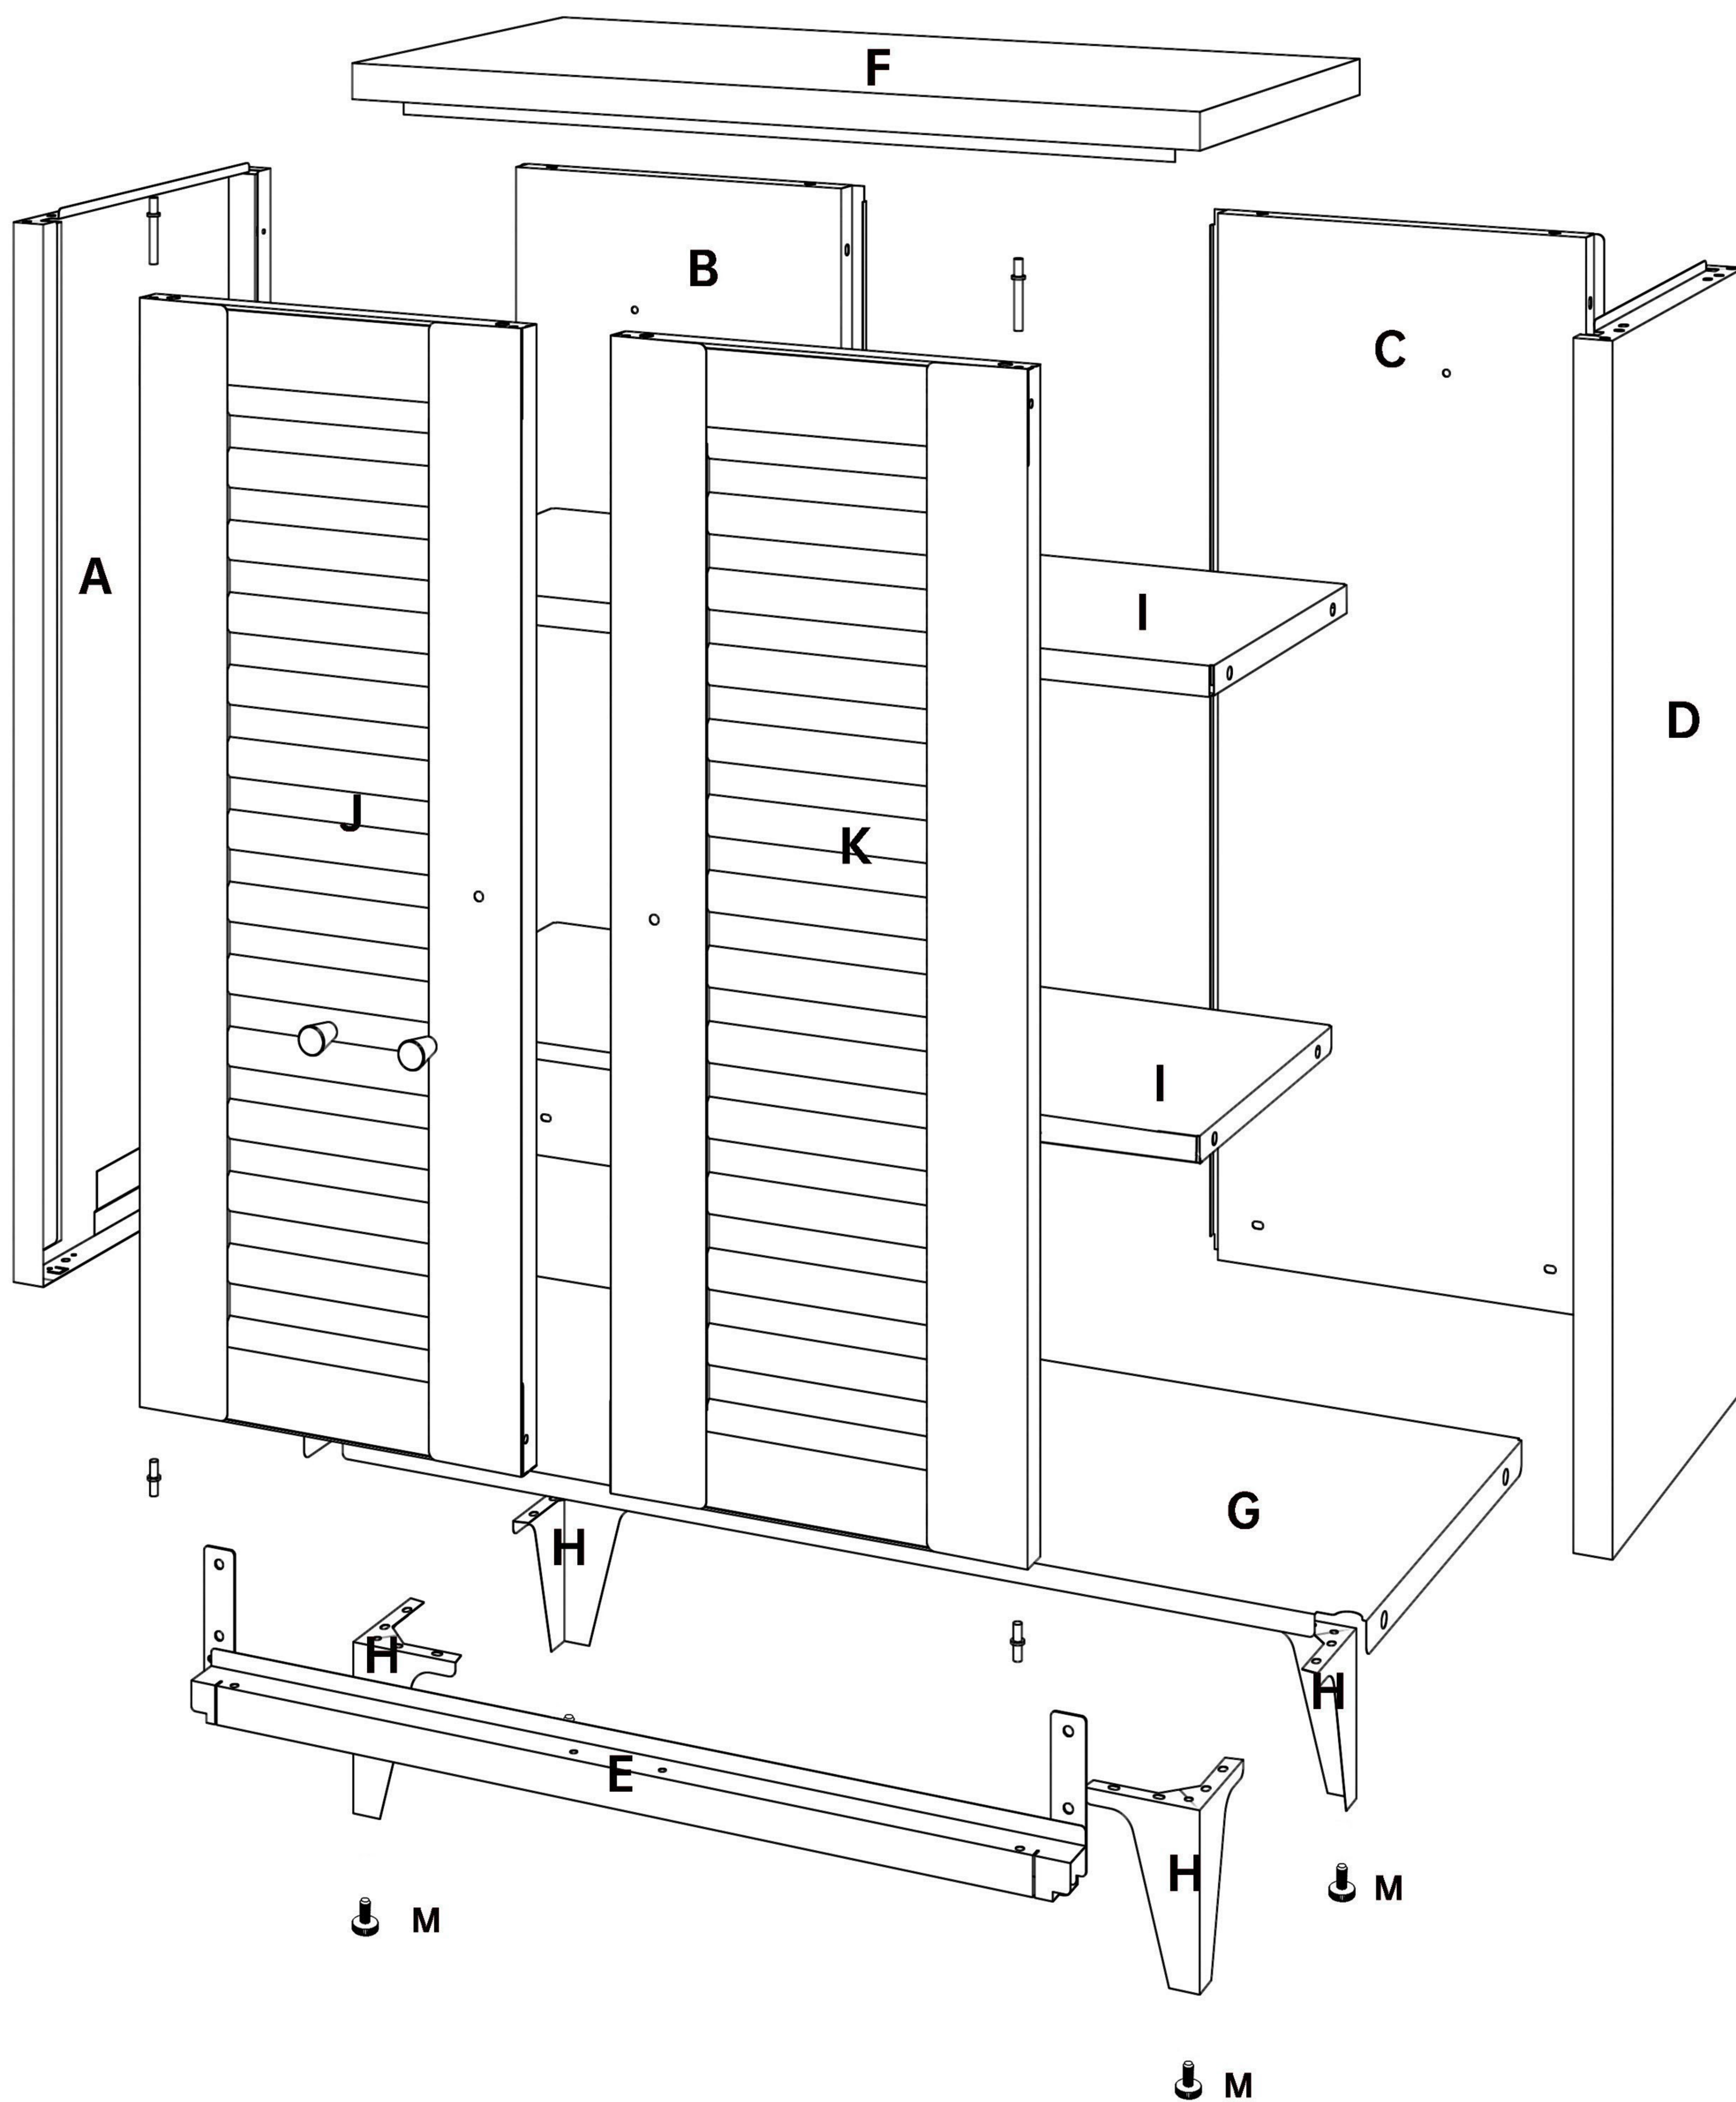

CAUTION


An assistant is required

CUSTOMER FIRST, SERVICE FOREMOST!
Questions? Issues?
CONTACT US
REPLY WITHIN 24 HOURS IN BUSINESS DAYS

Accessories


A-Left Side Panel

1PC

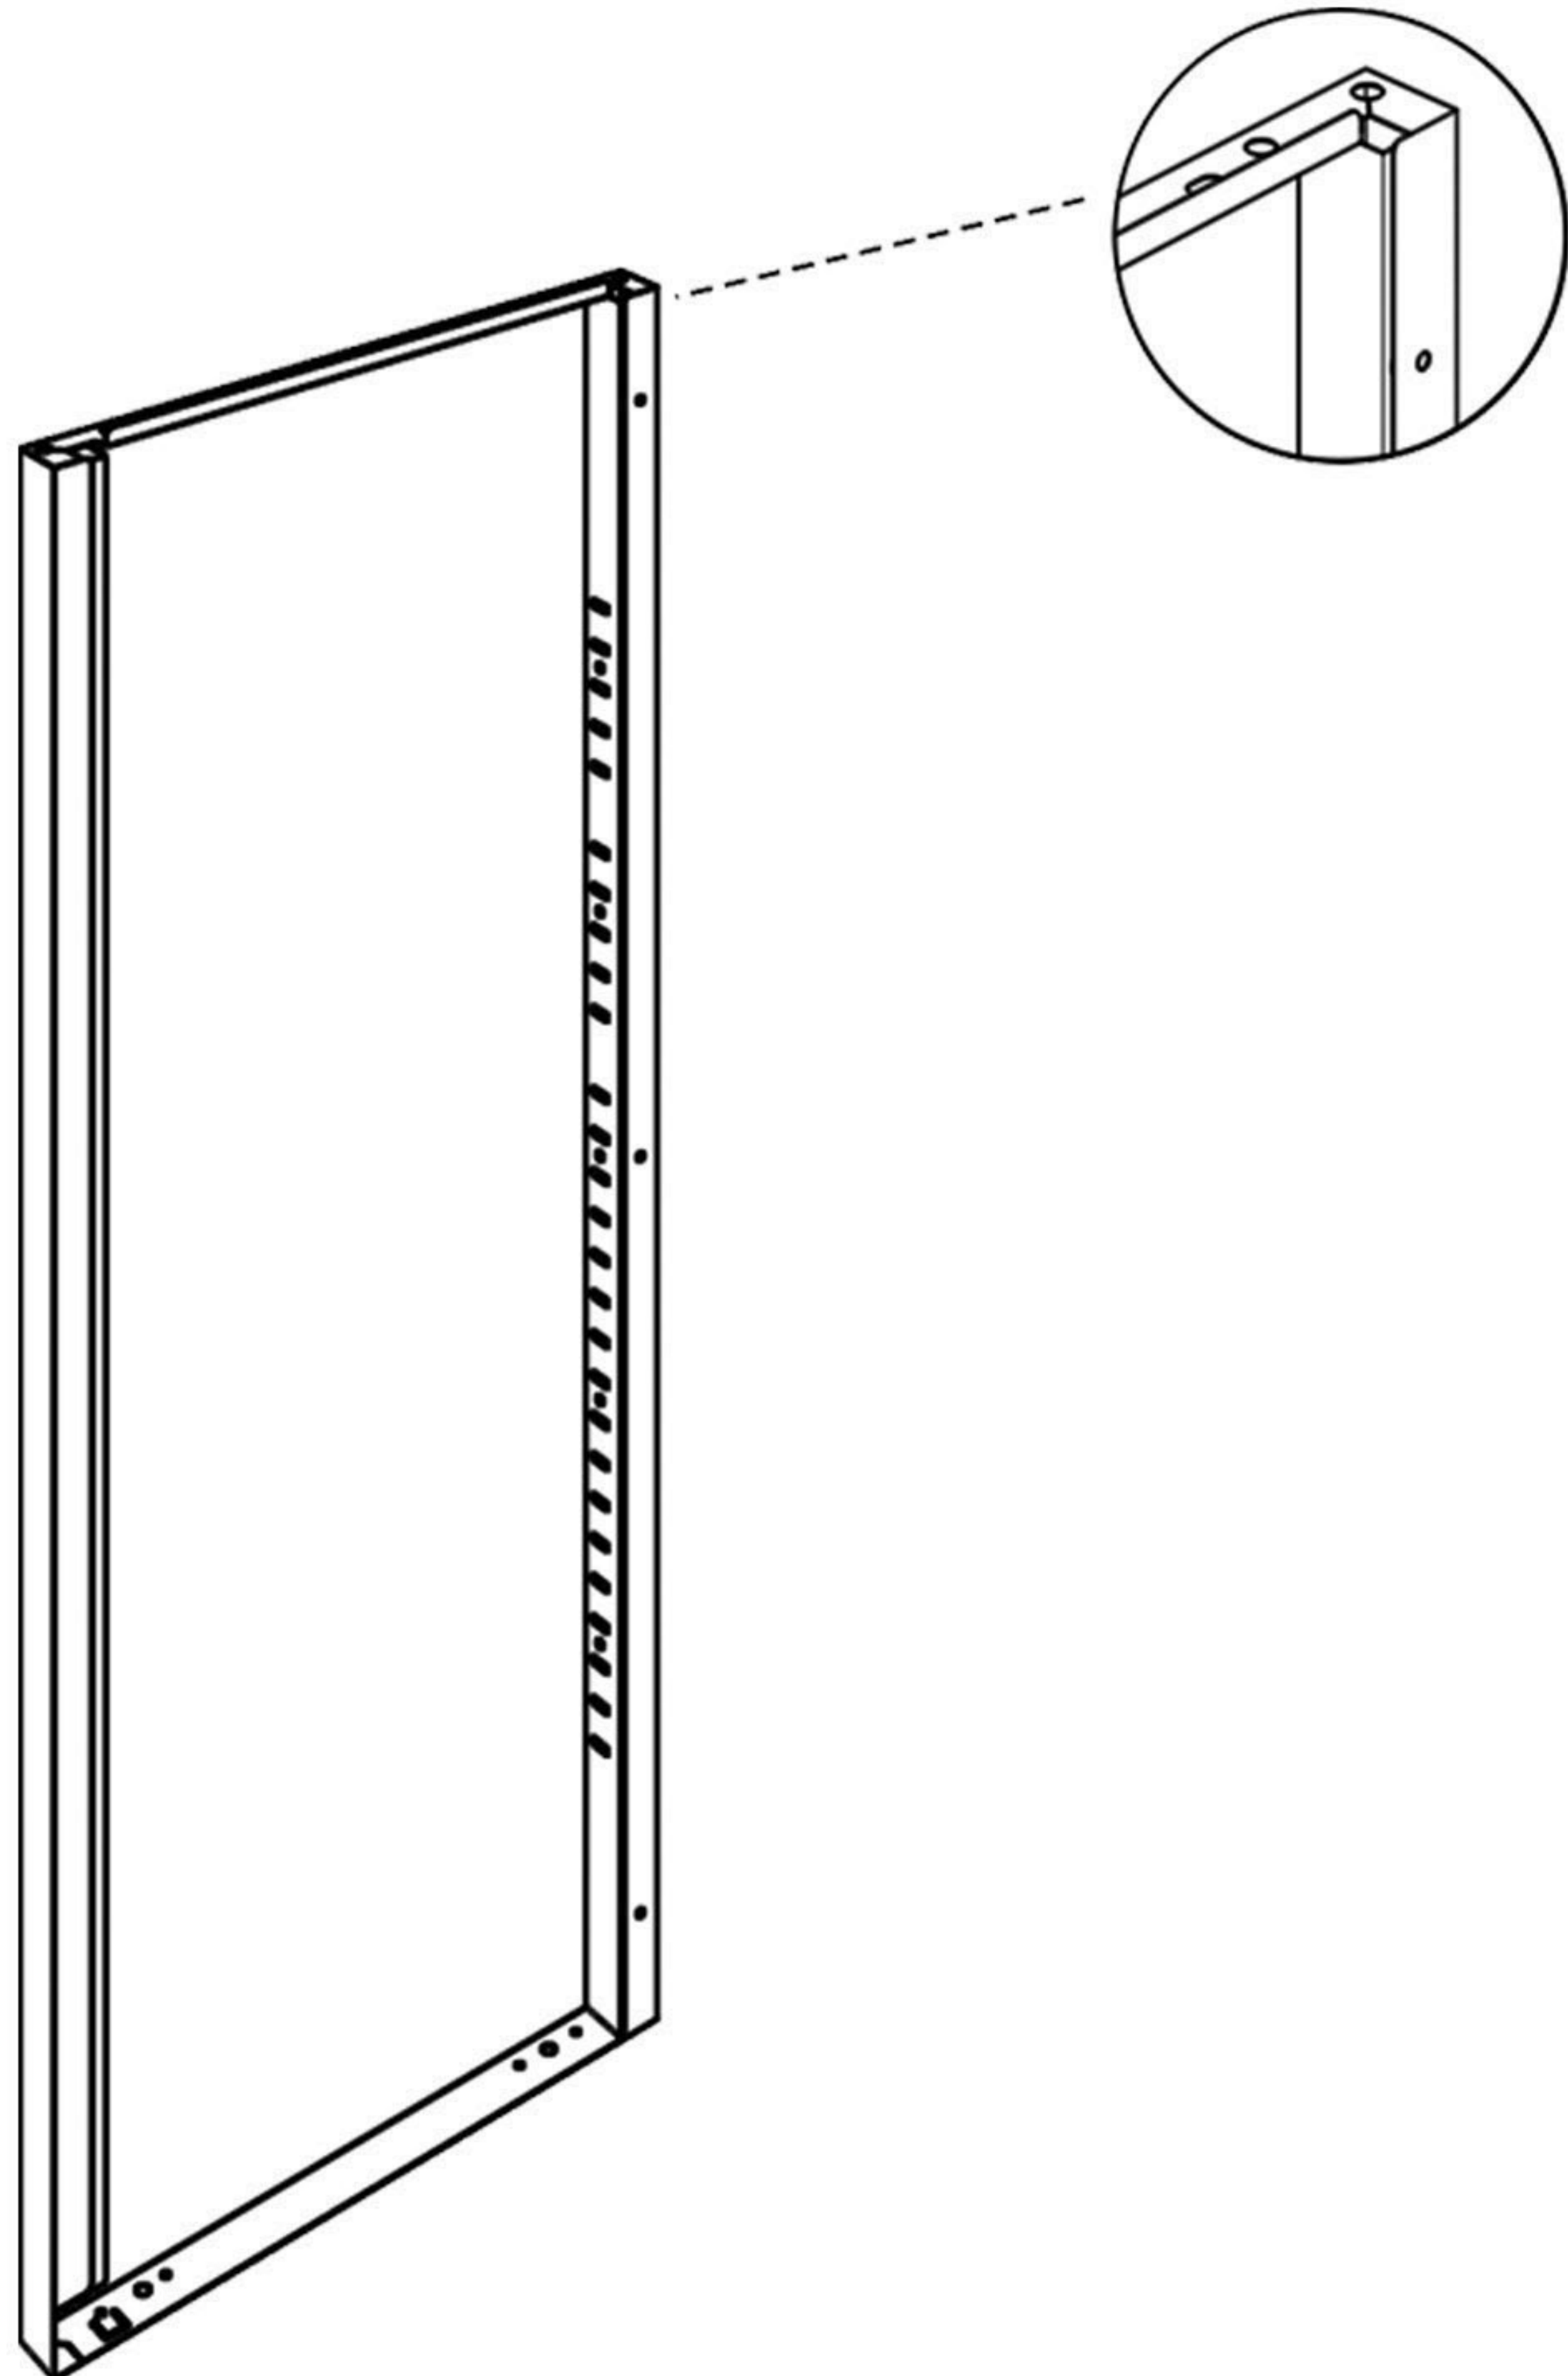


B-Left Back Panel

1PC

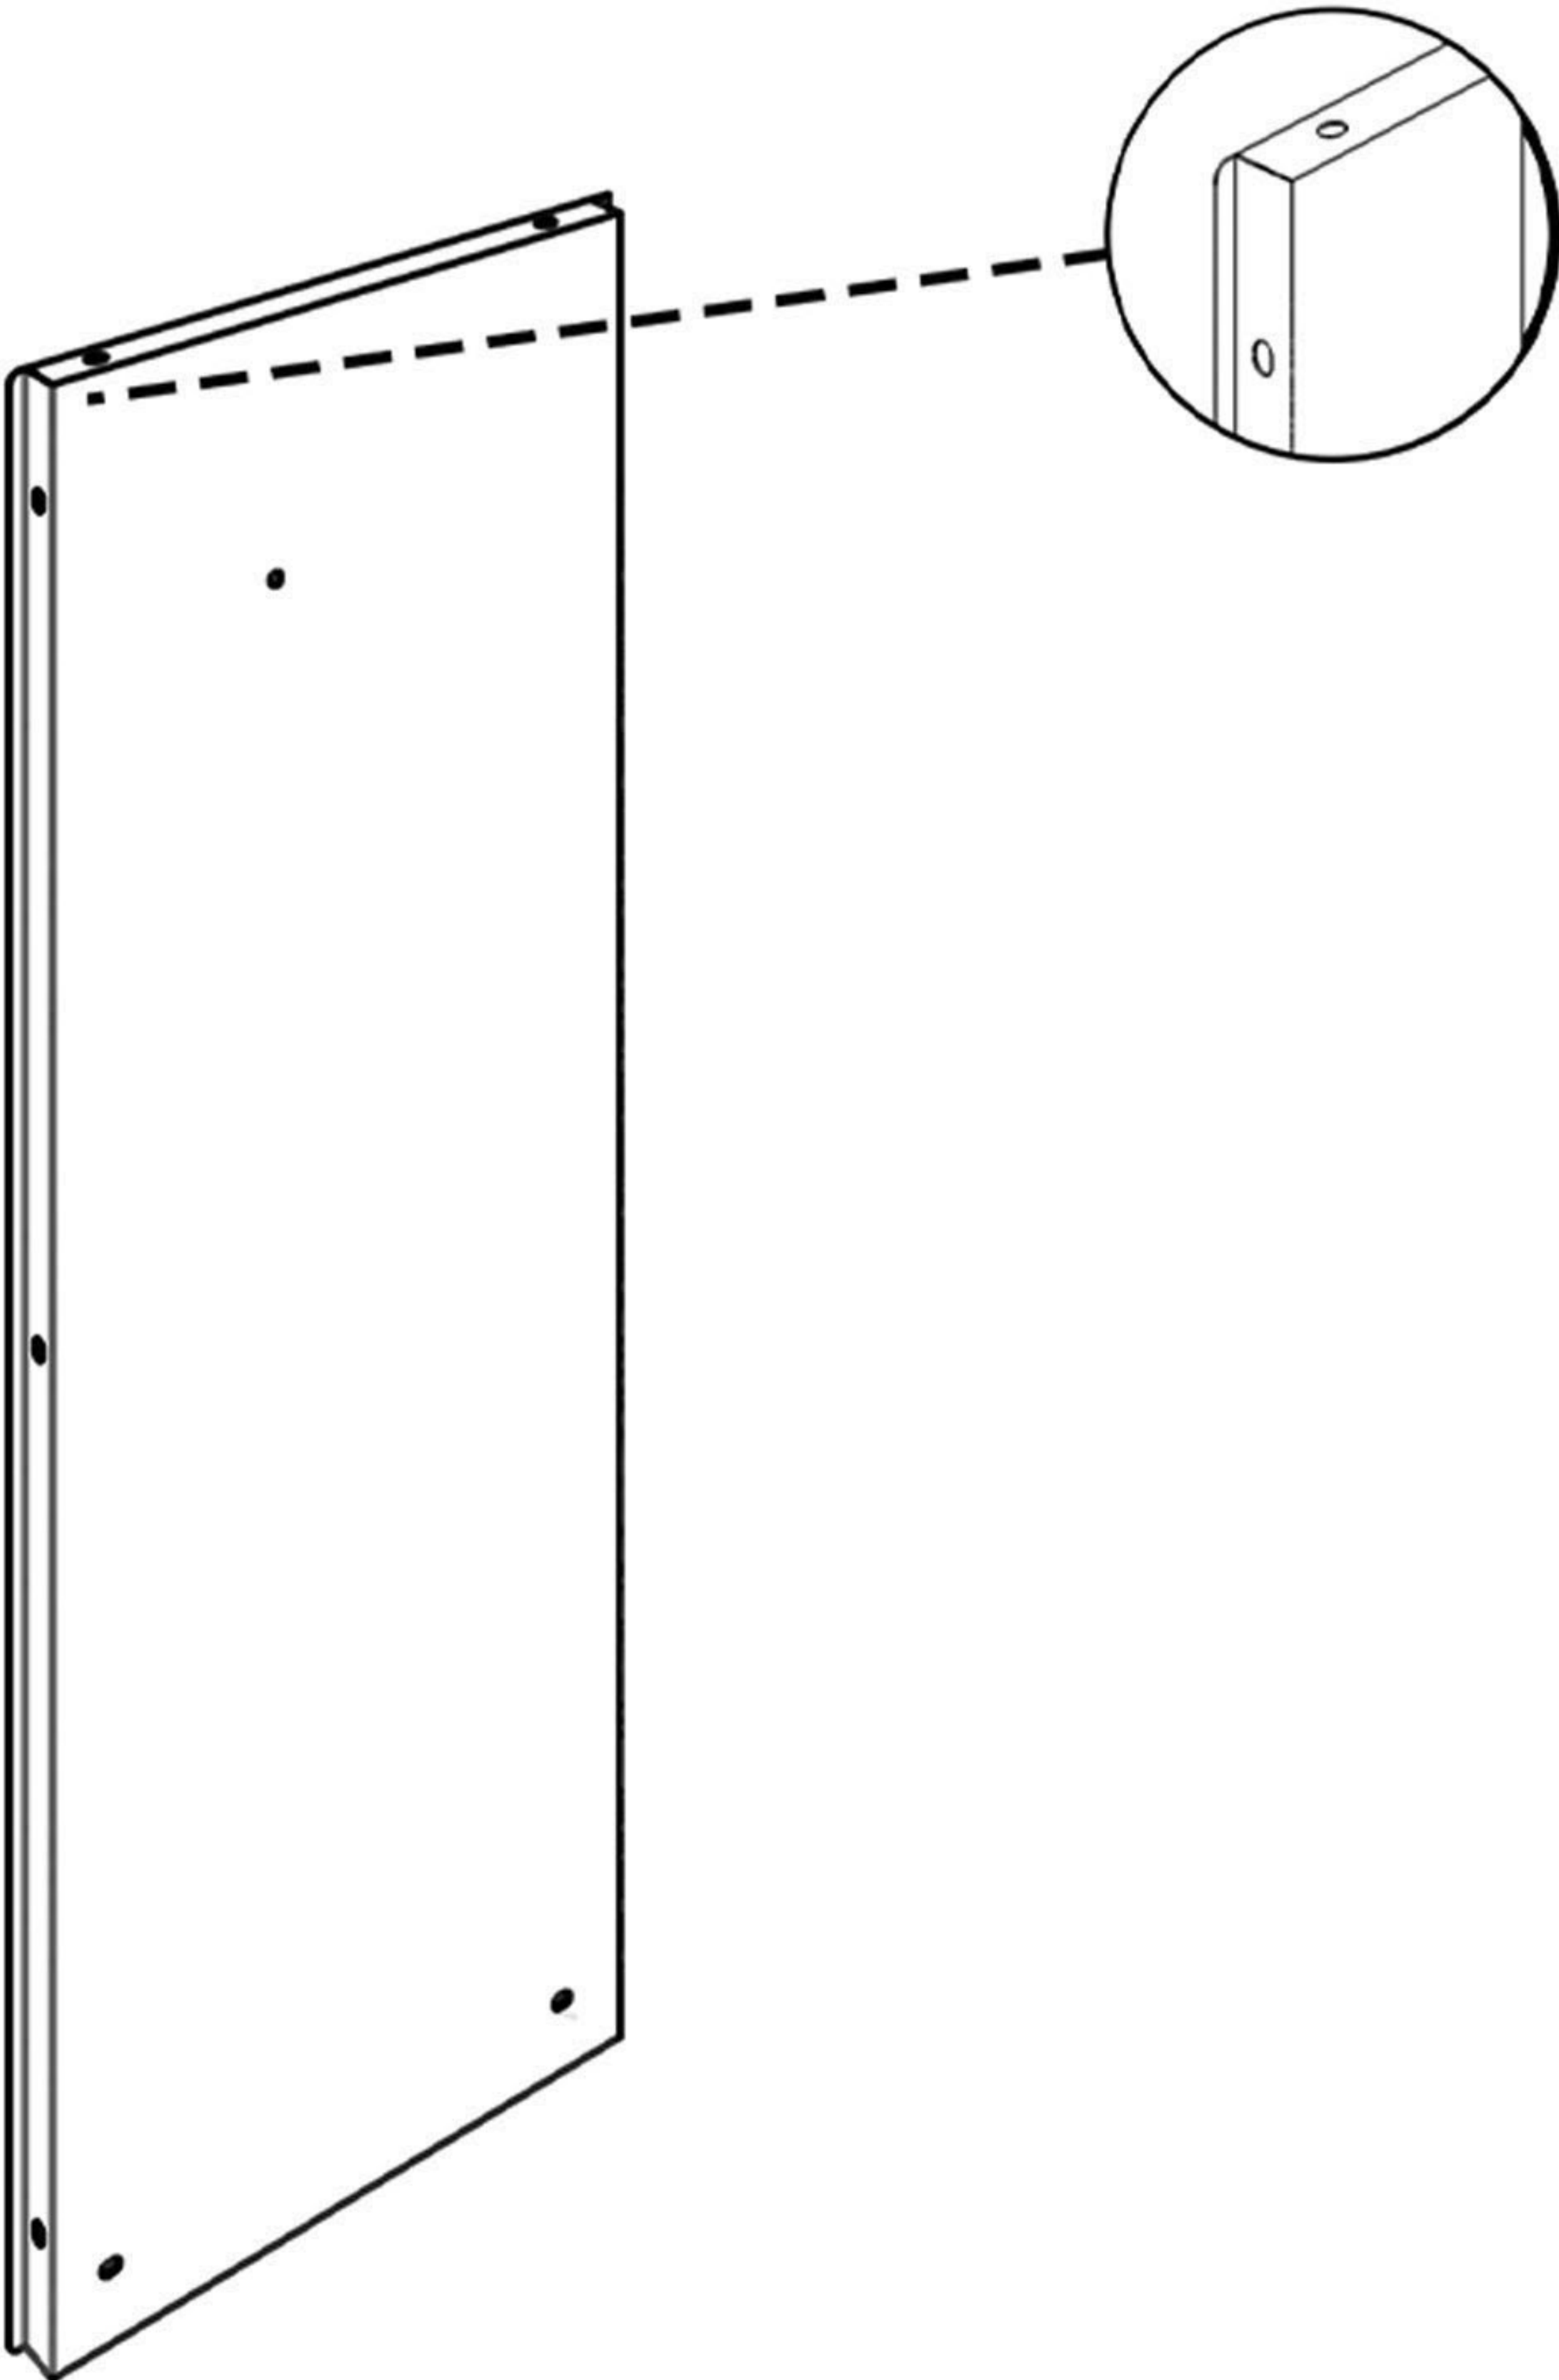


C-Right Back Panel

1PC




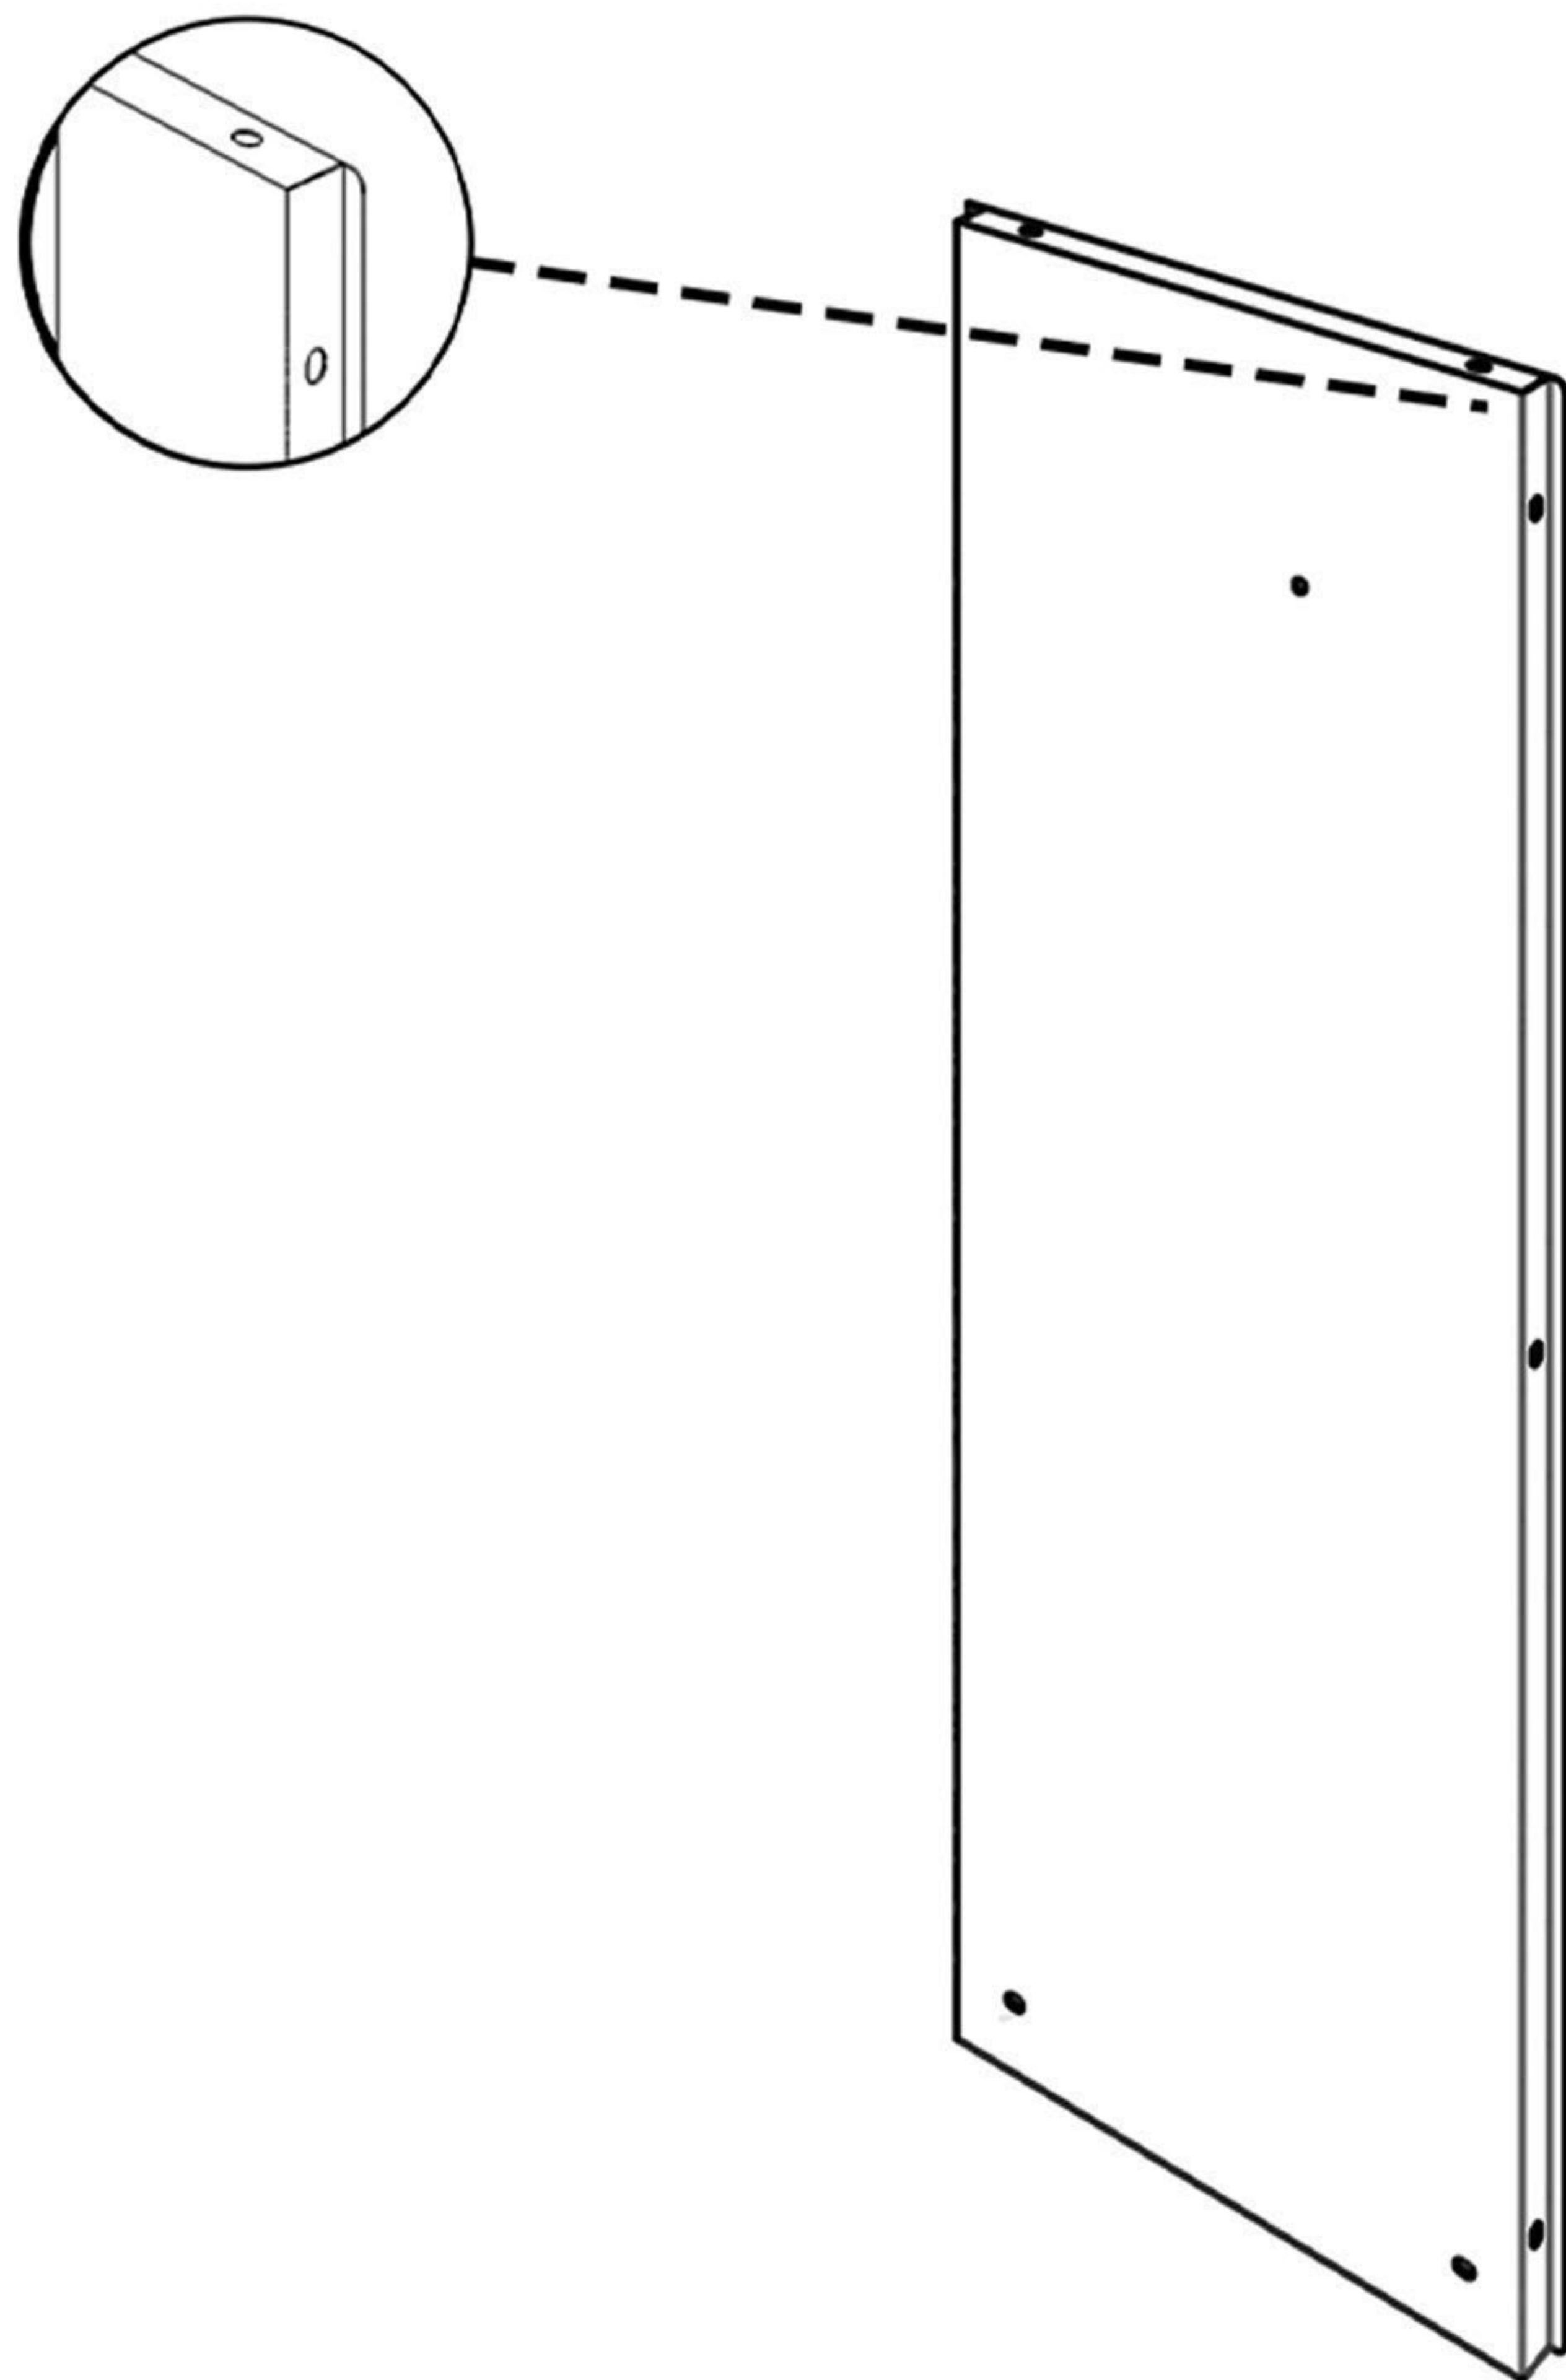


D-Right Side Panel





1PC

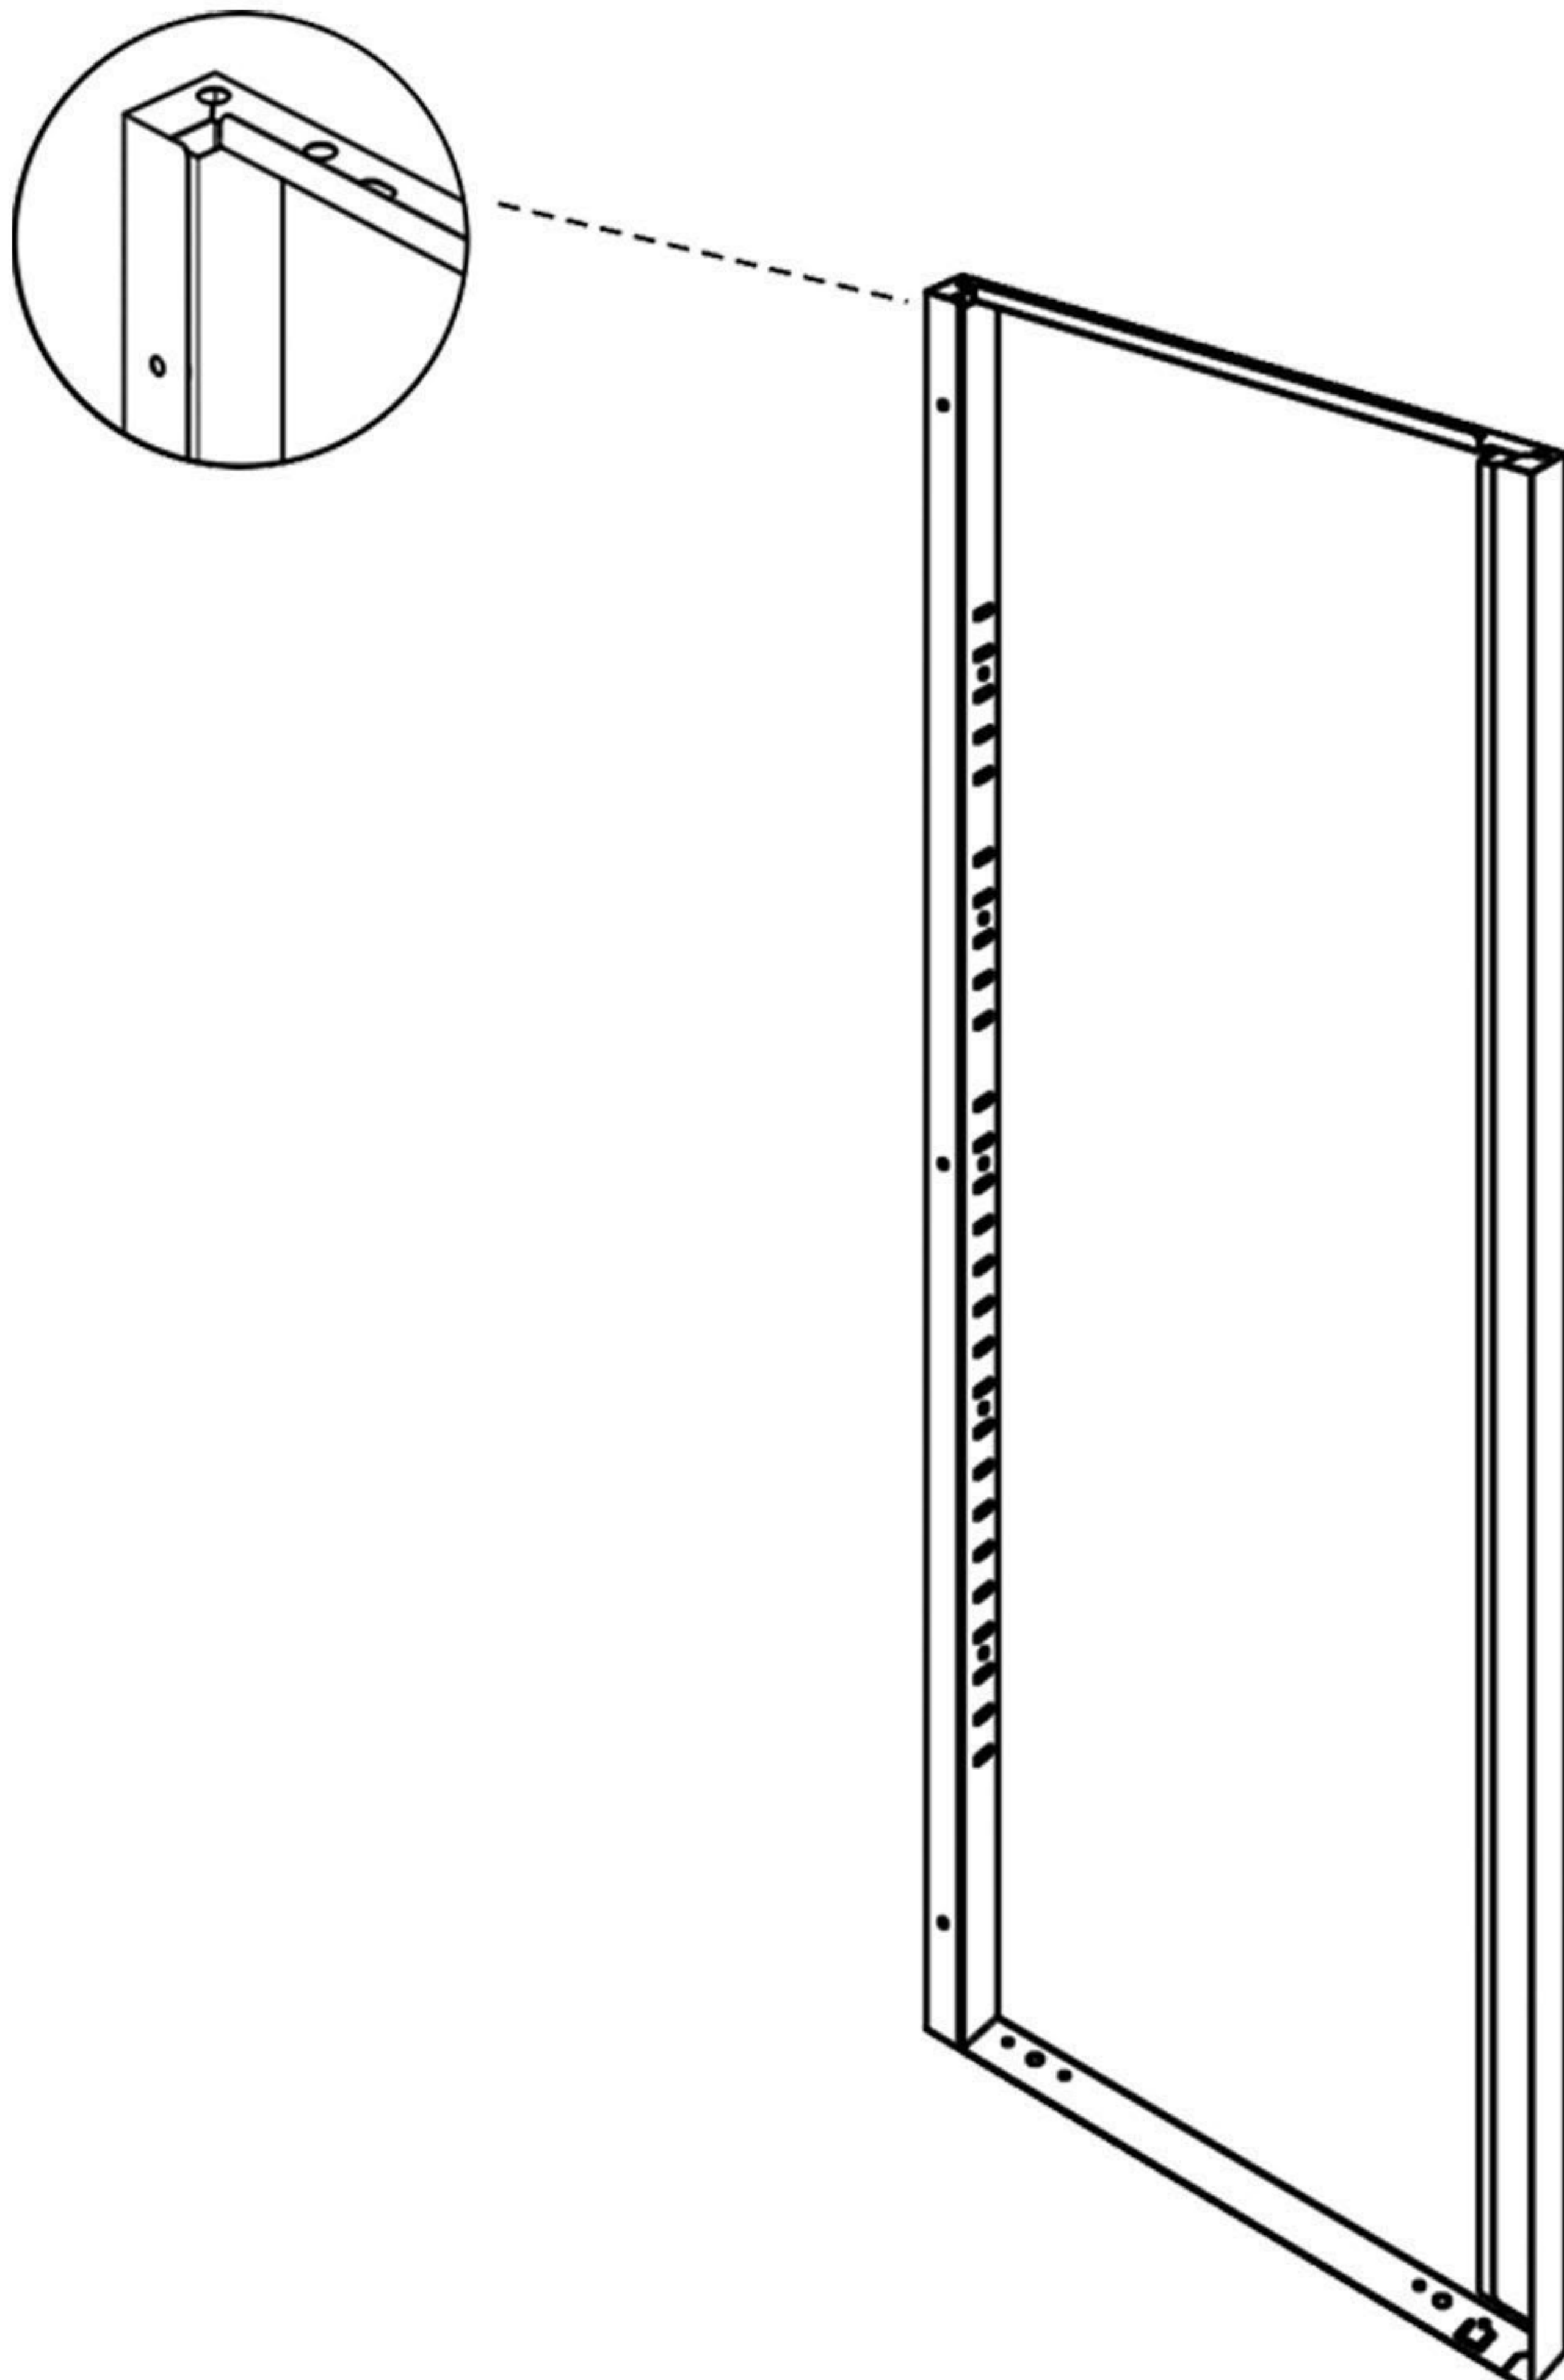









Accessories

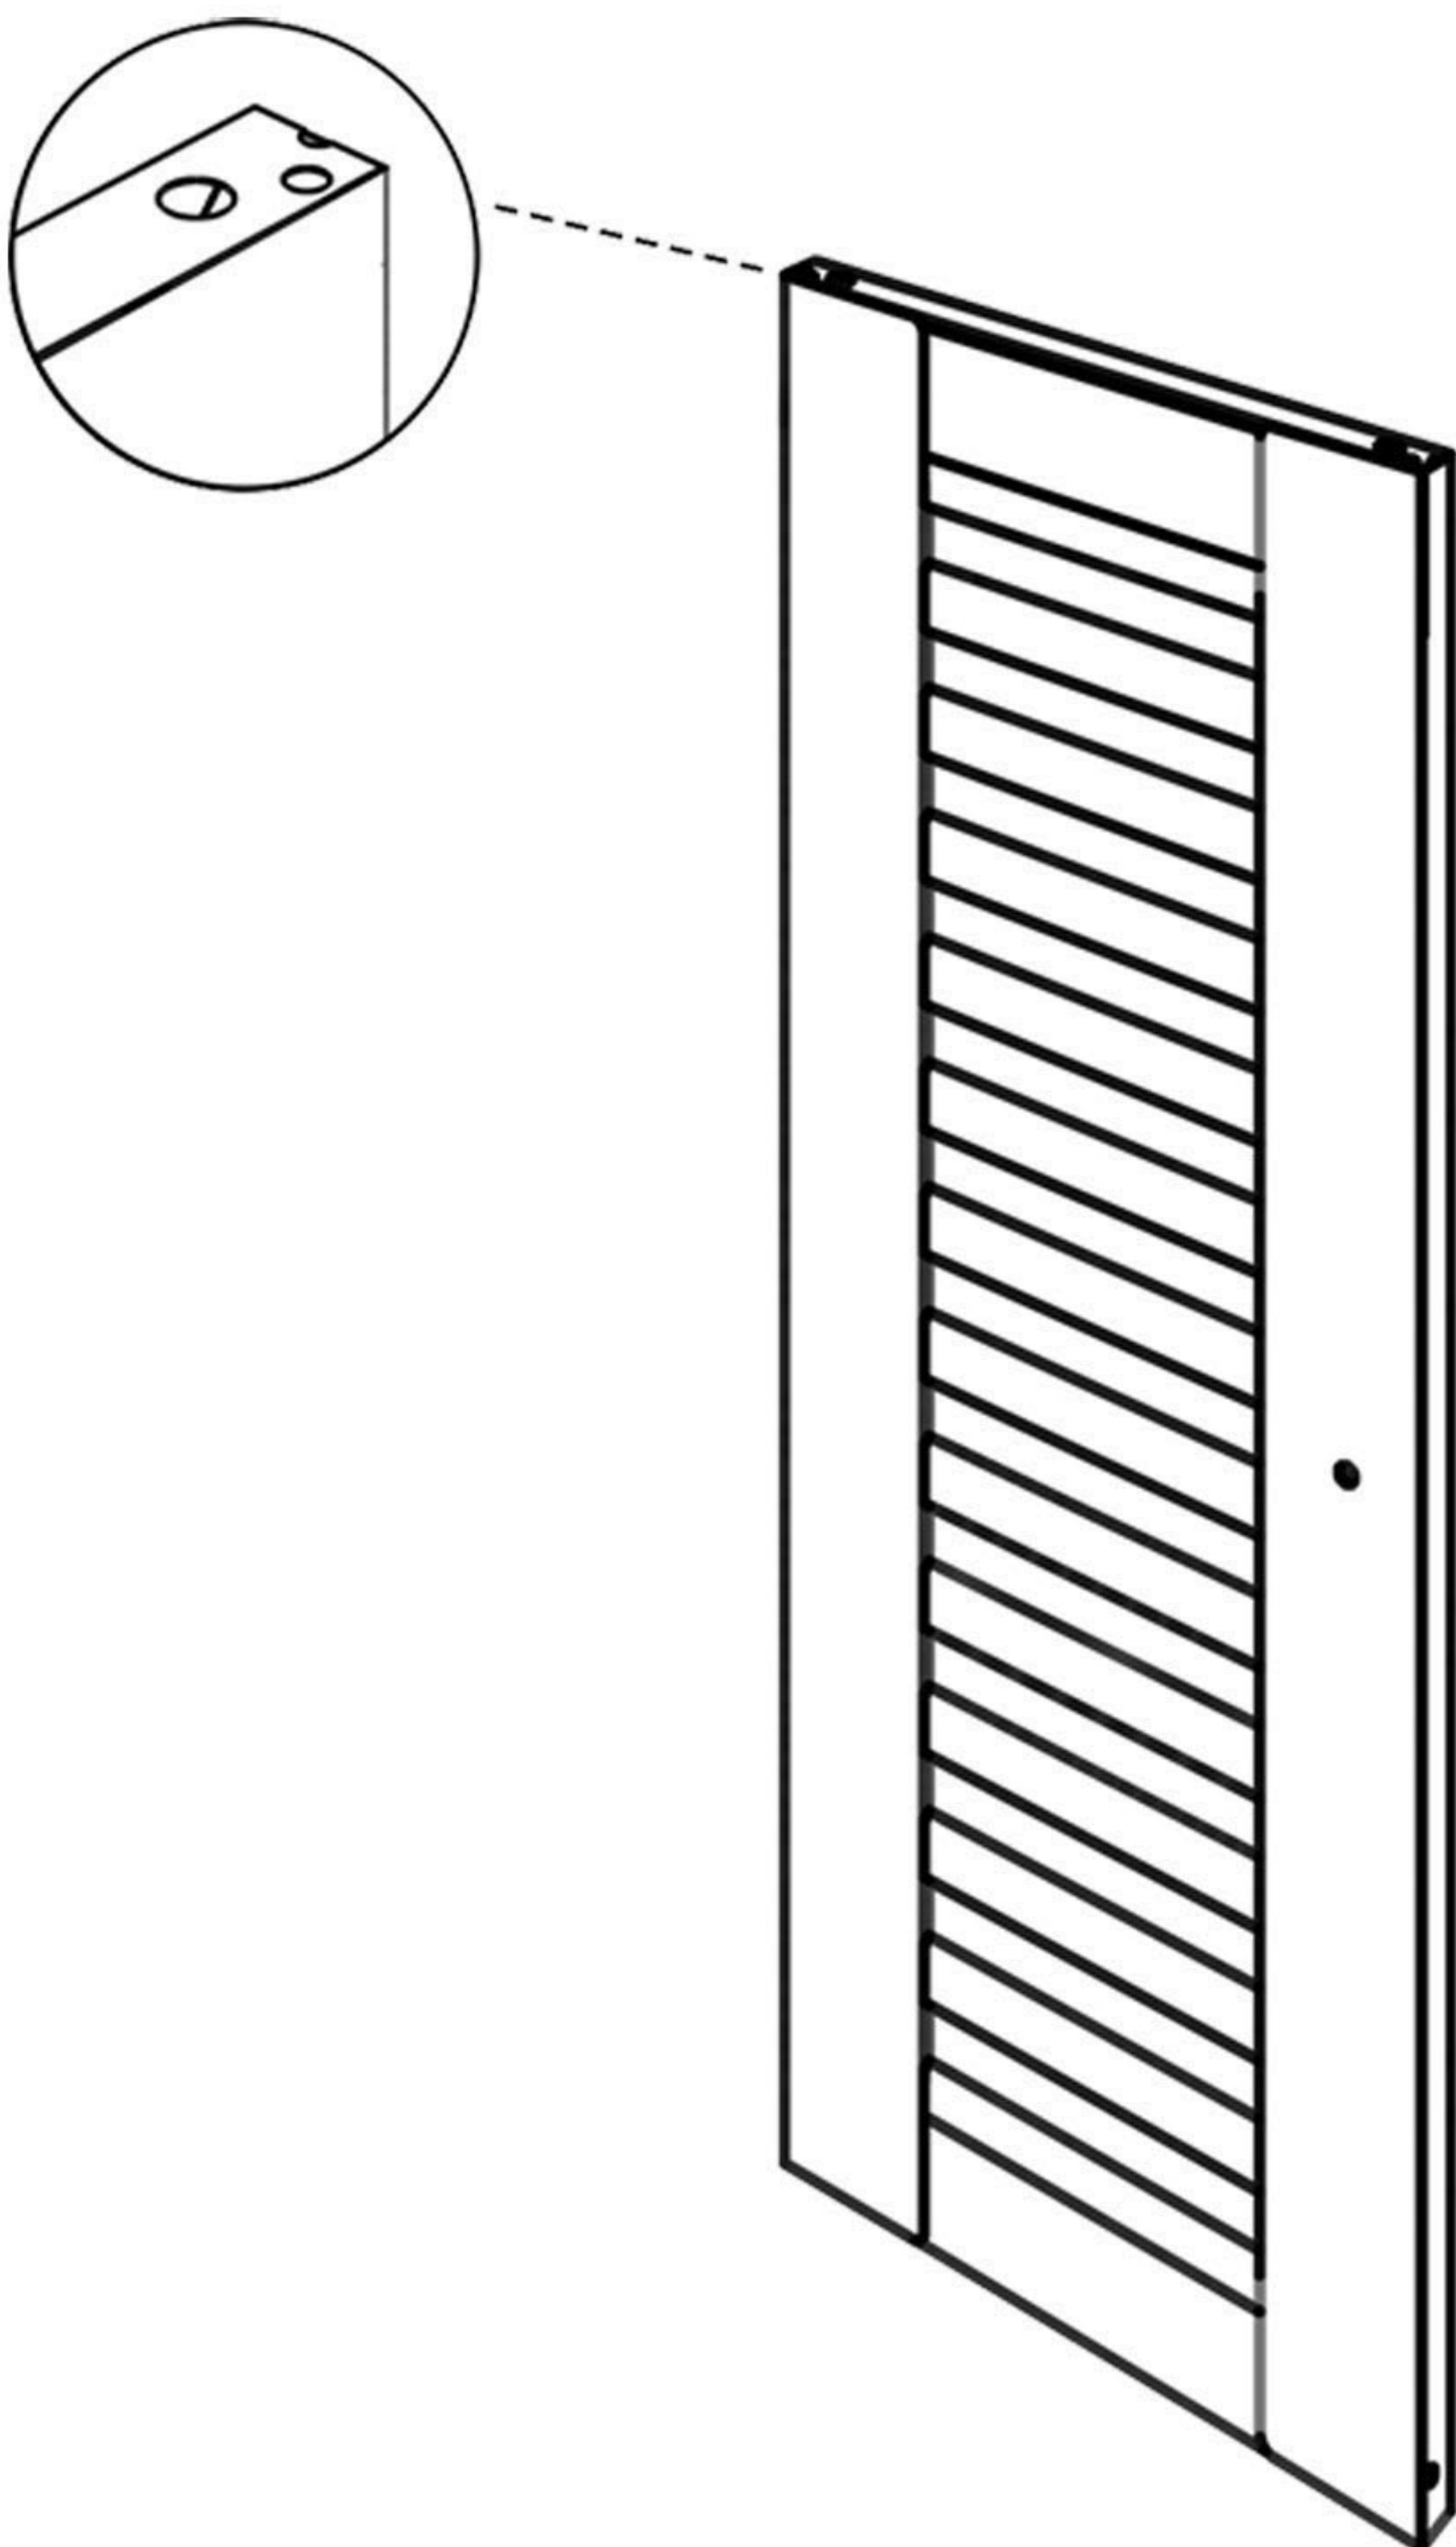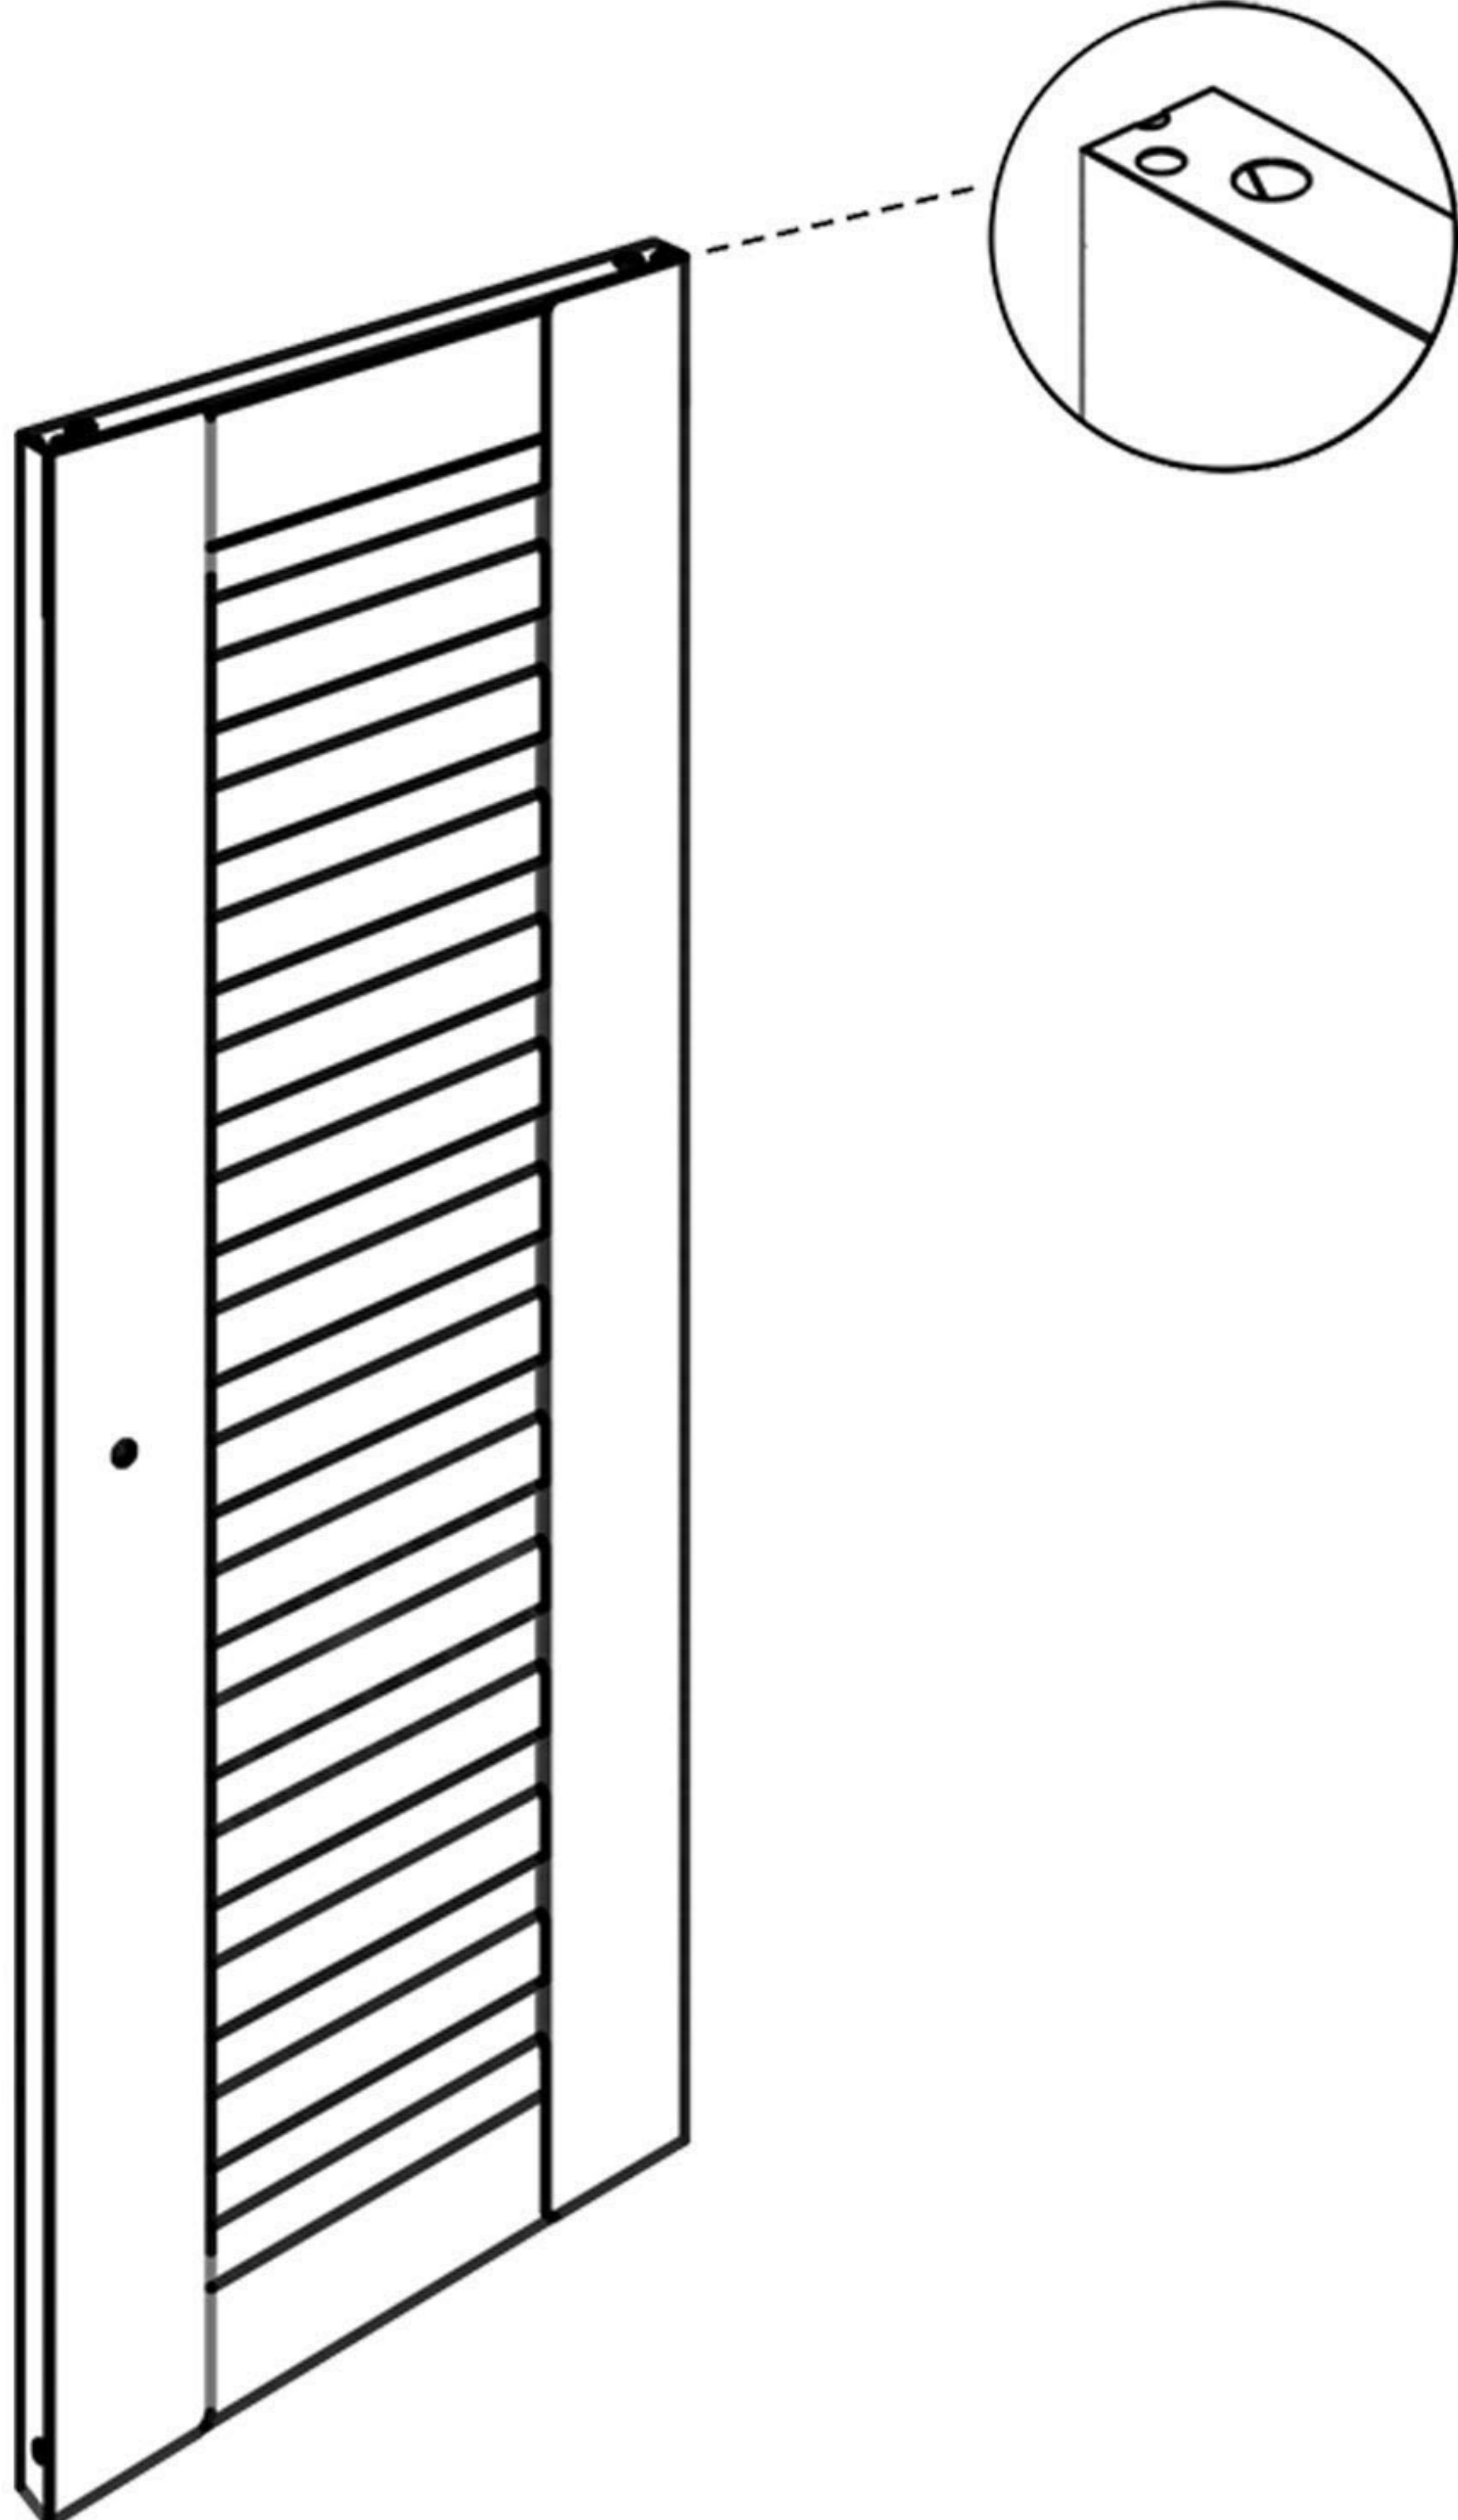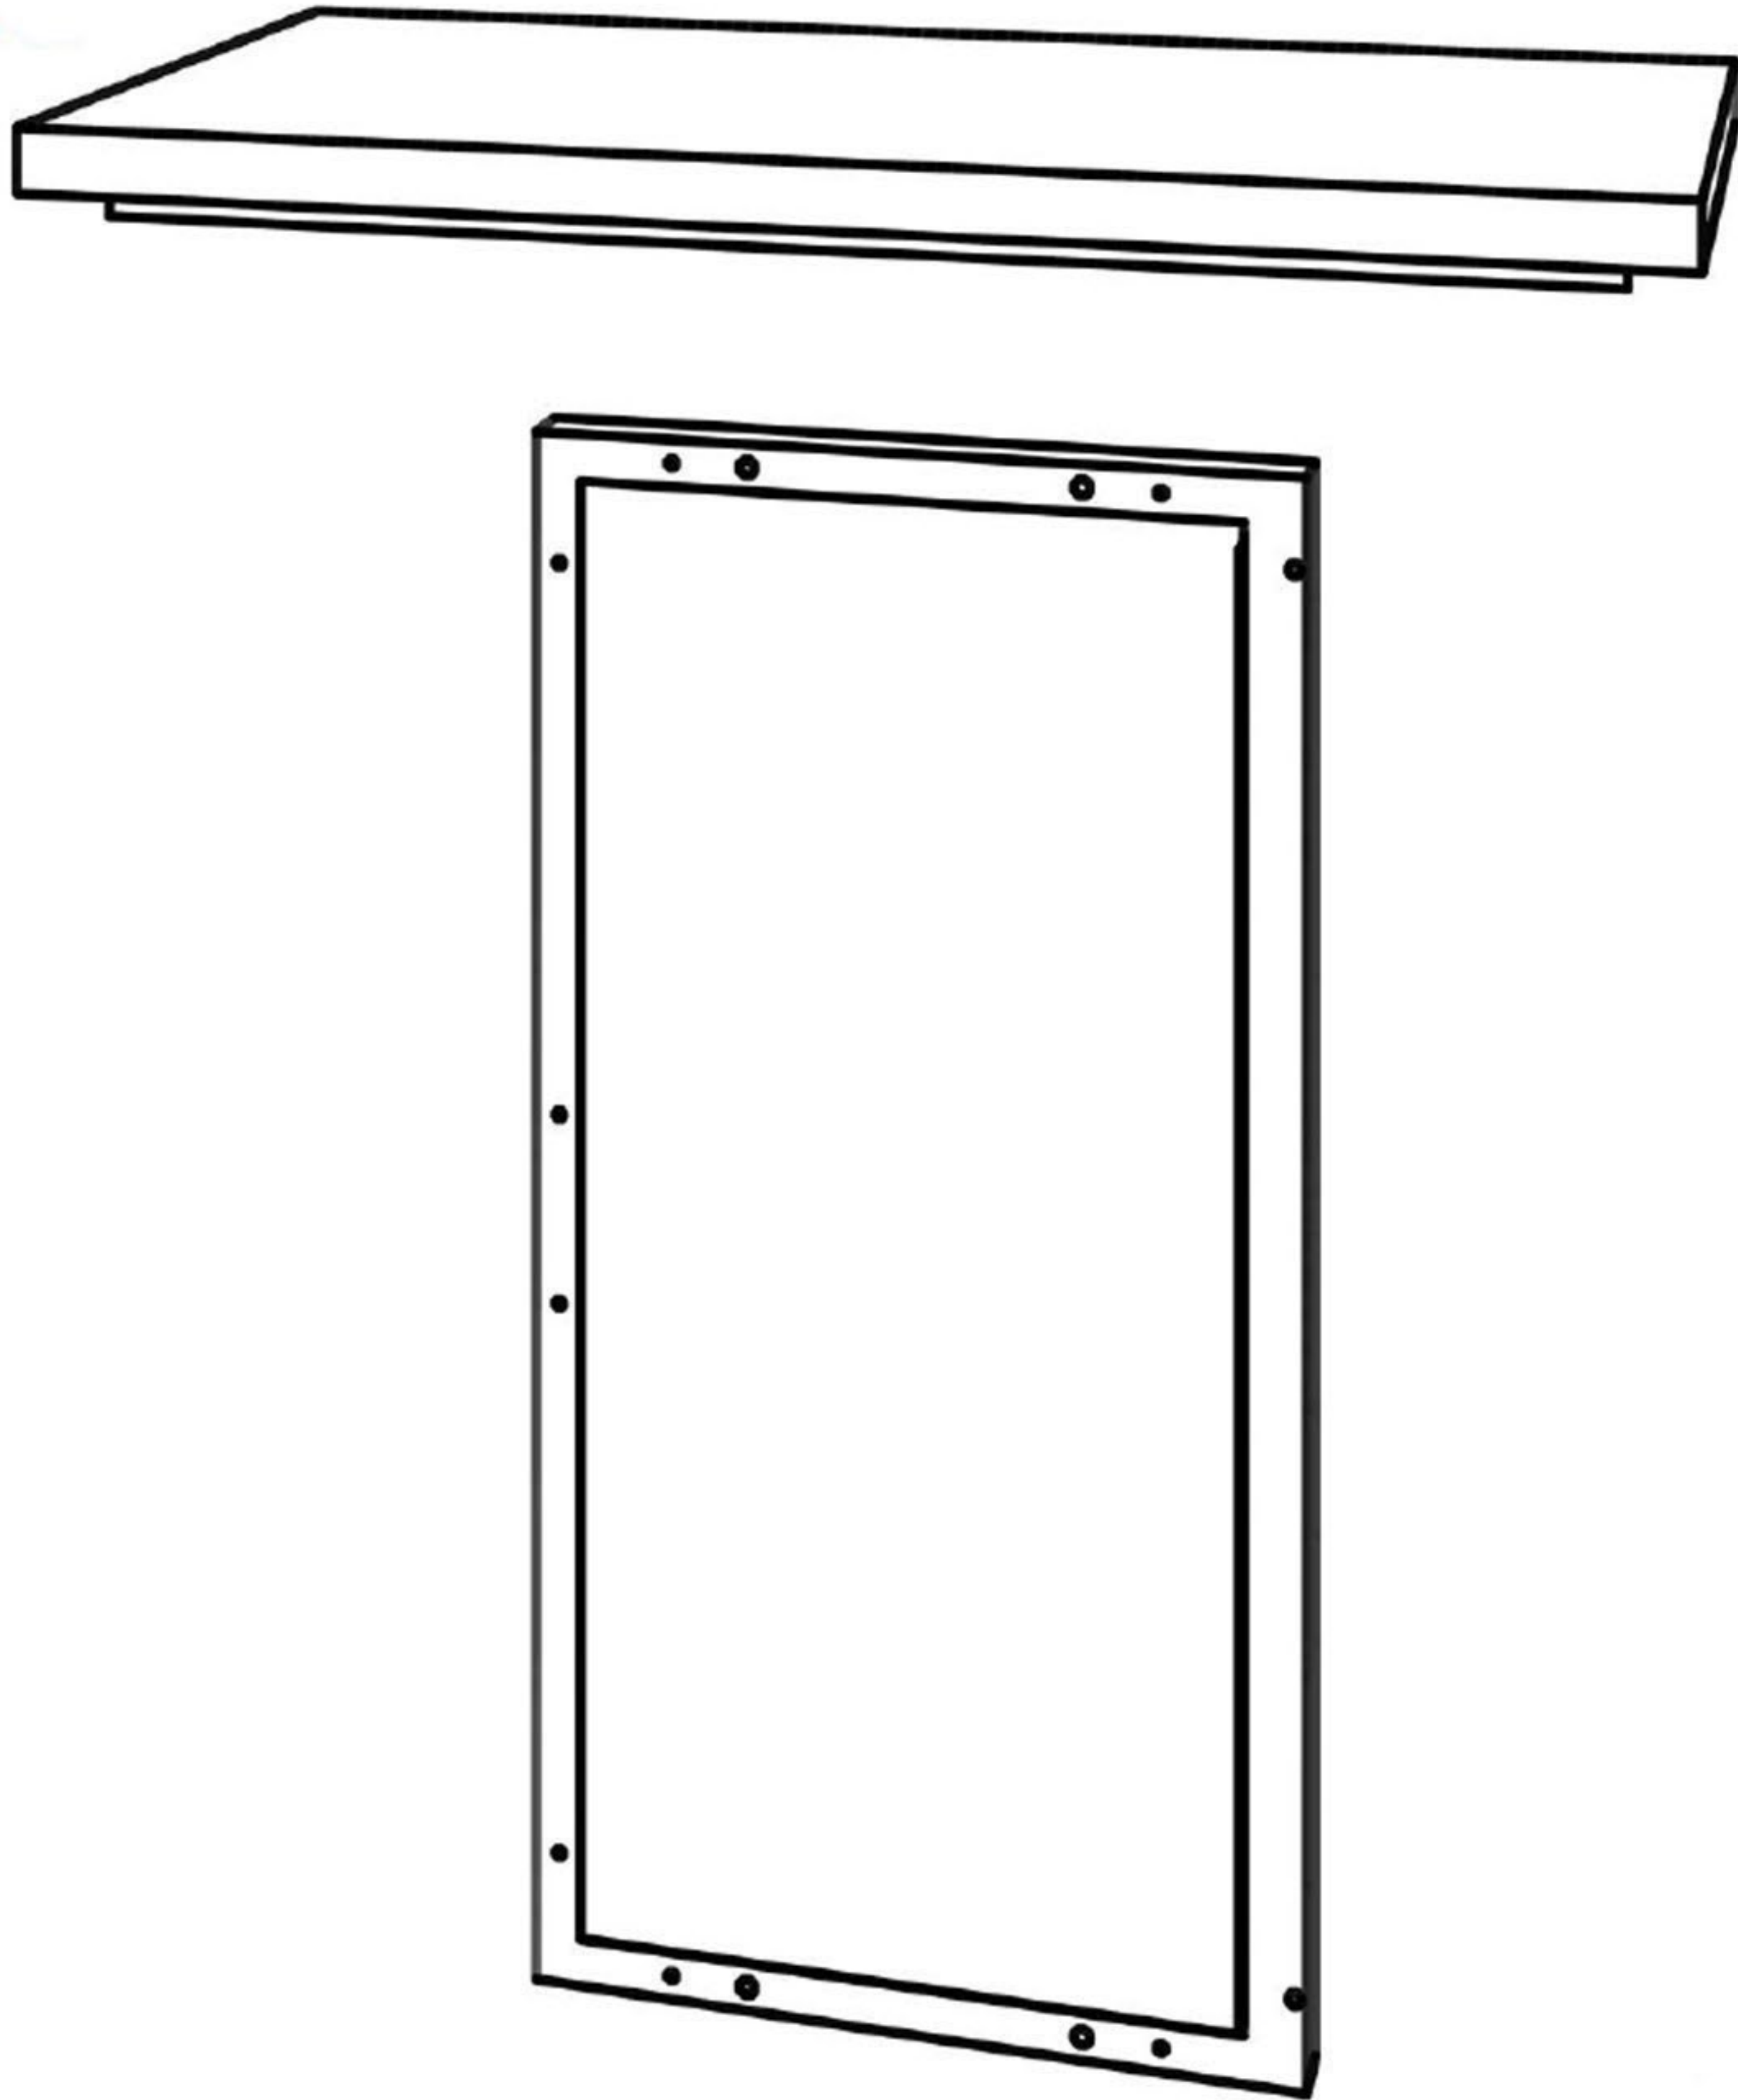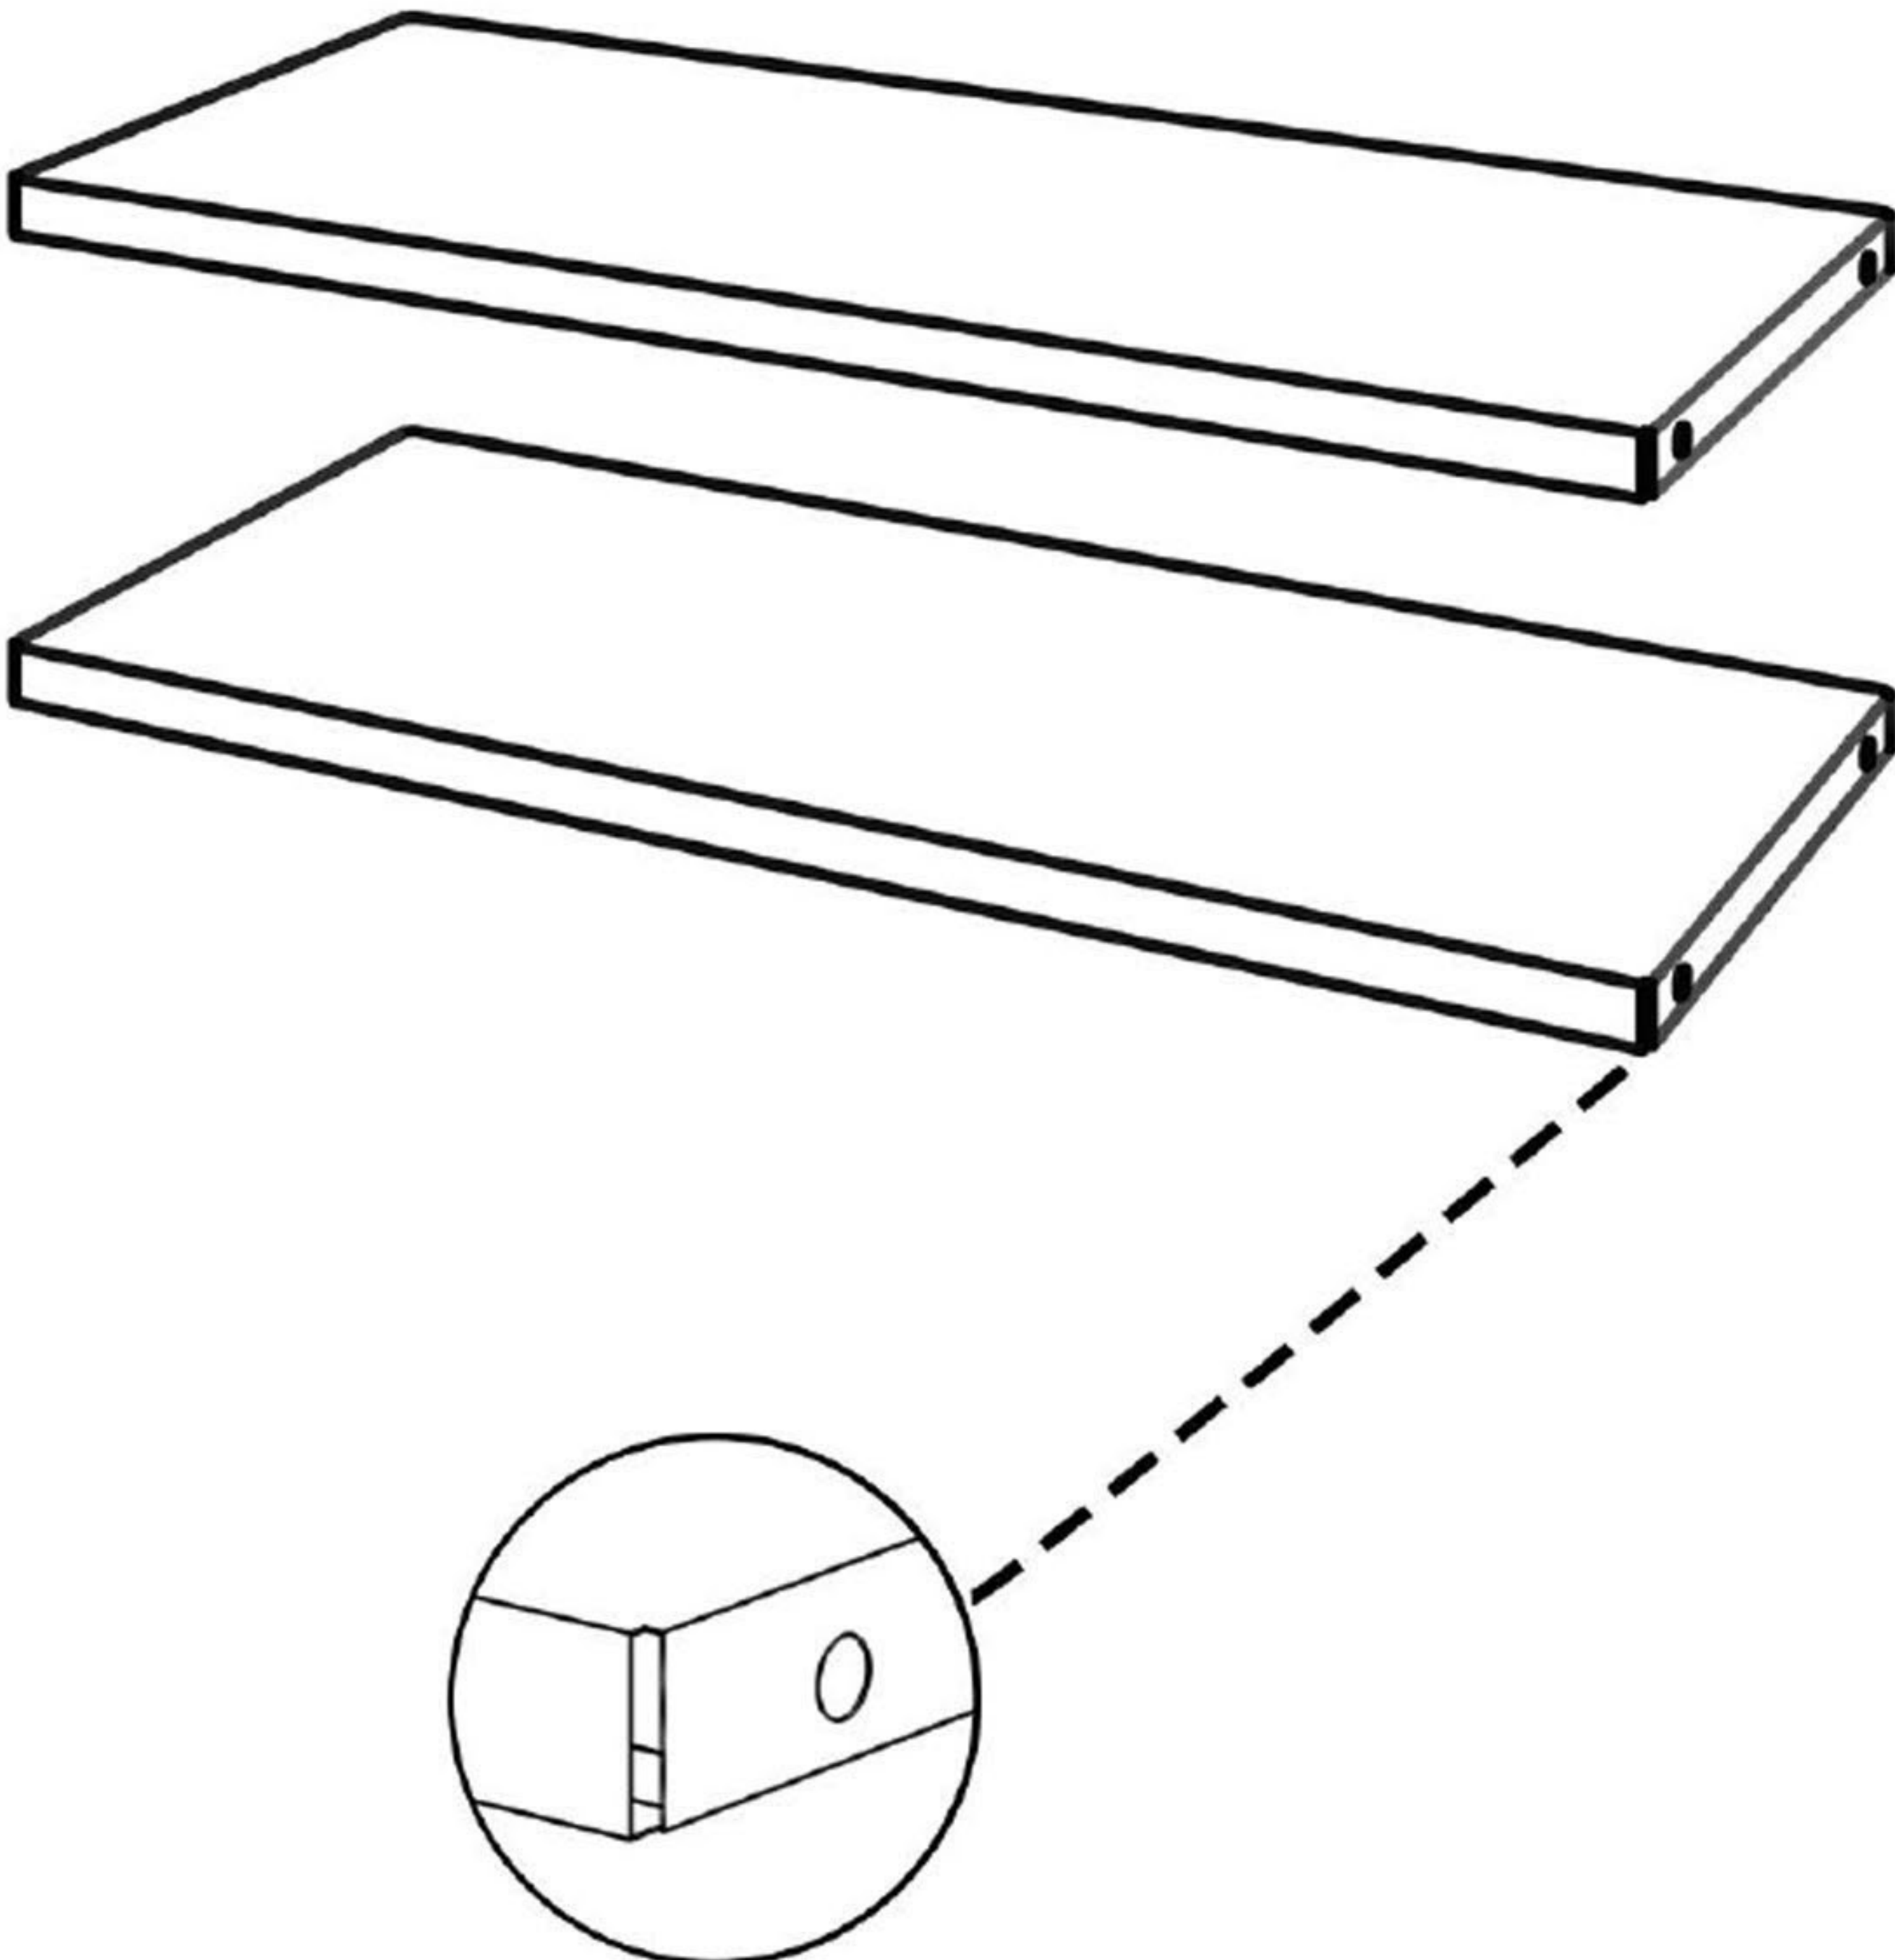J-Left Door	1PC	K-Right Door	1PC
			
F-Top Panel	1PC	I-Shelf	2PCS
			


Accessories

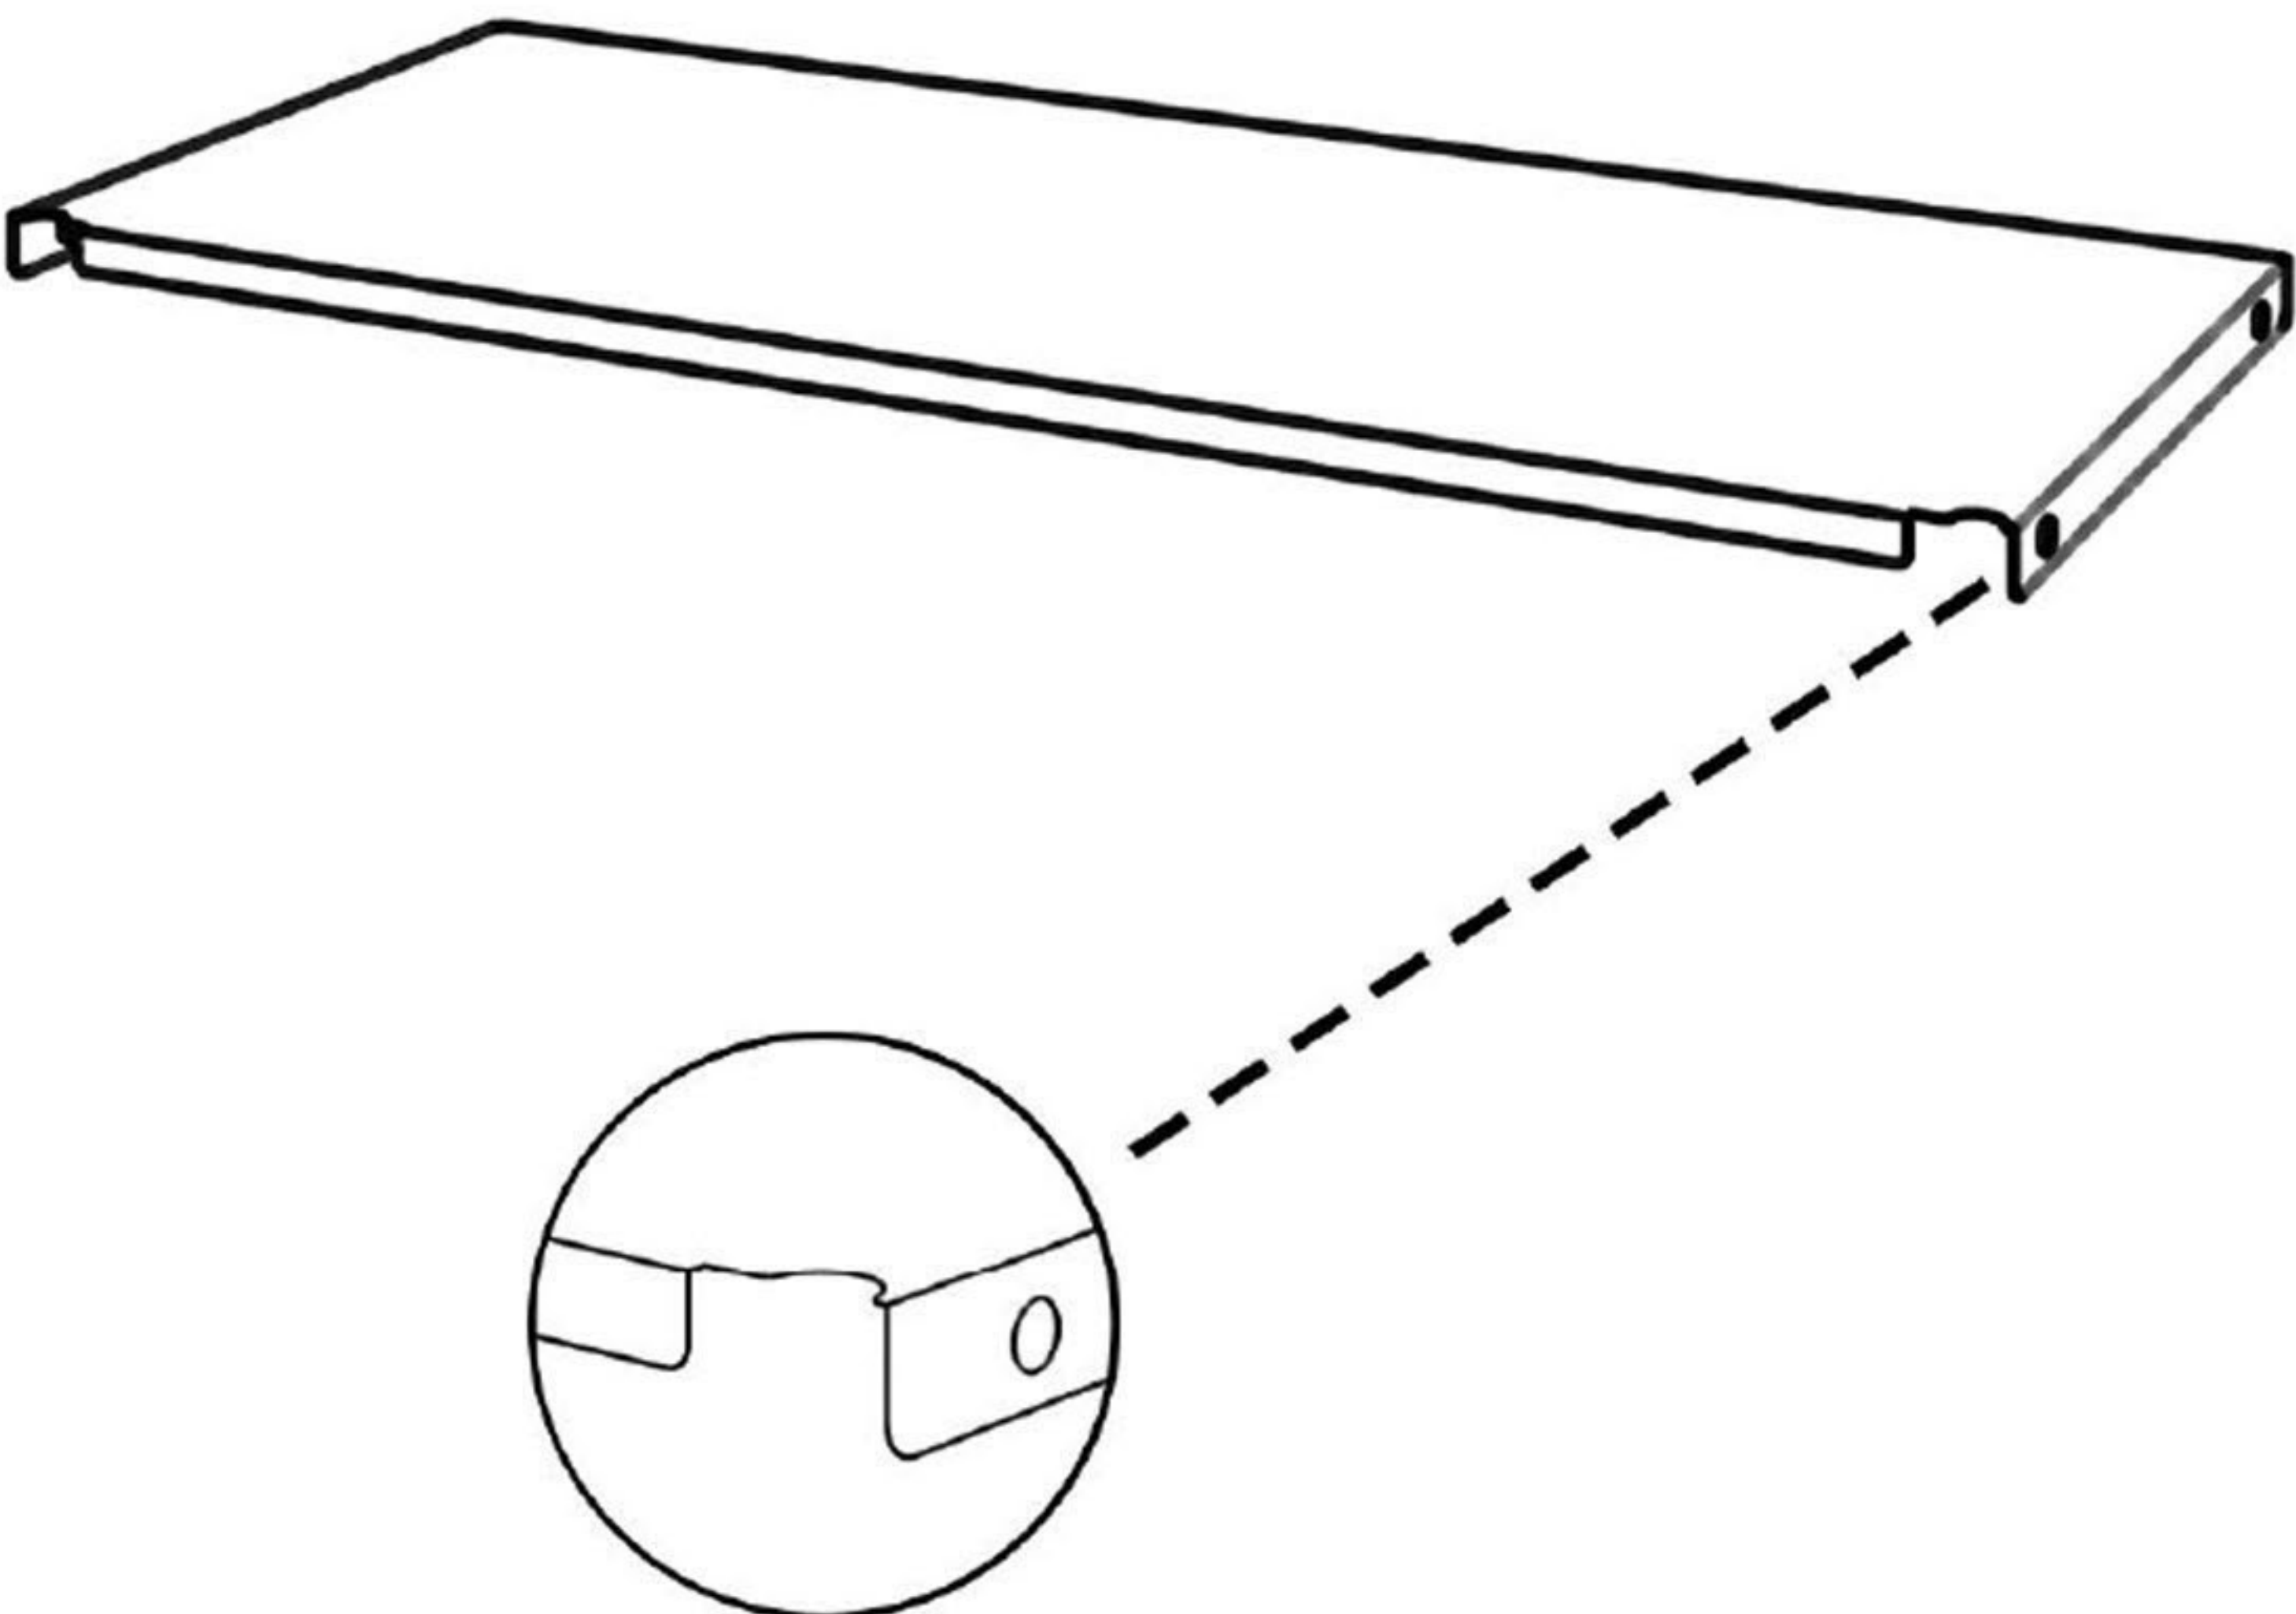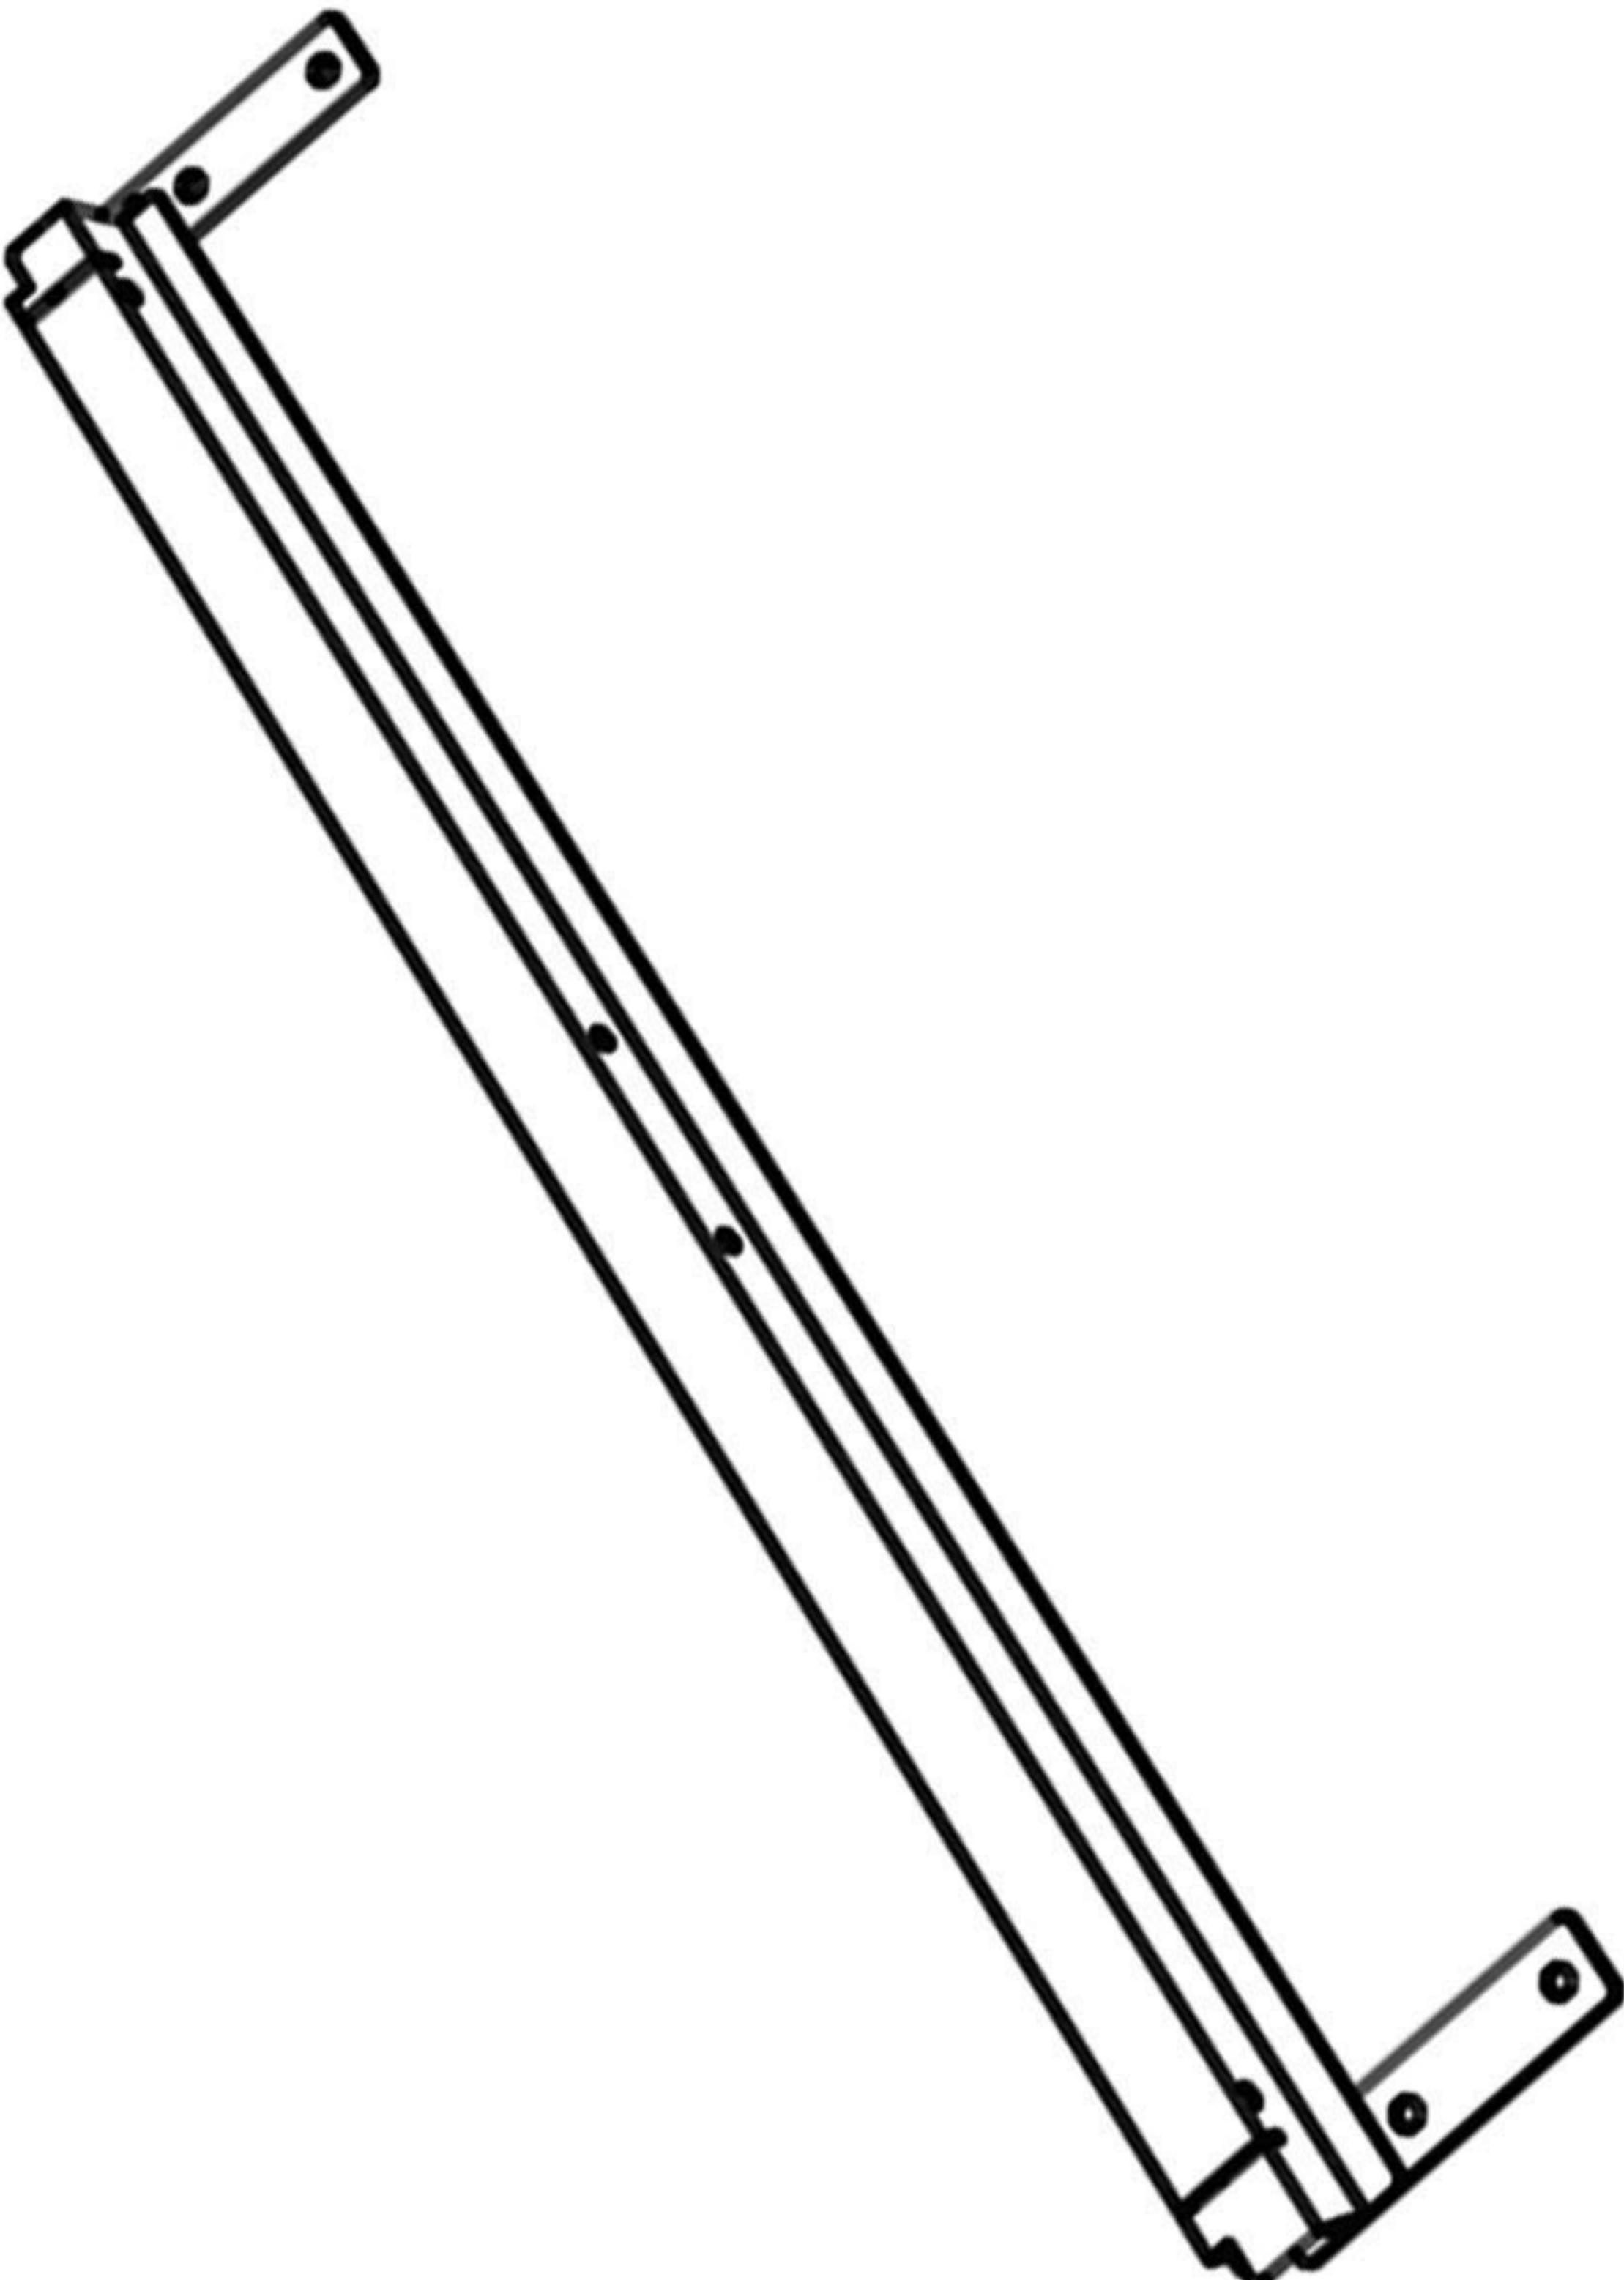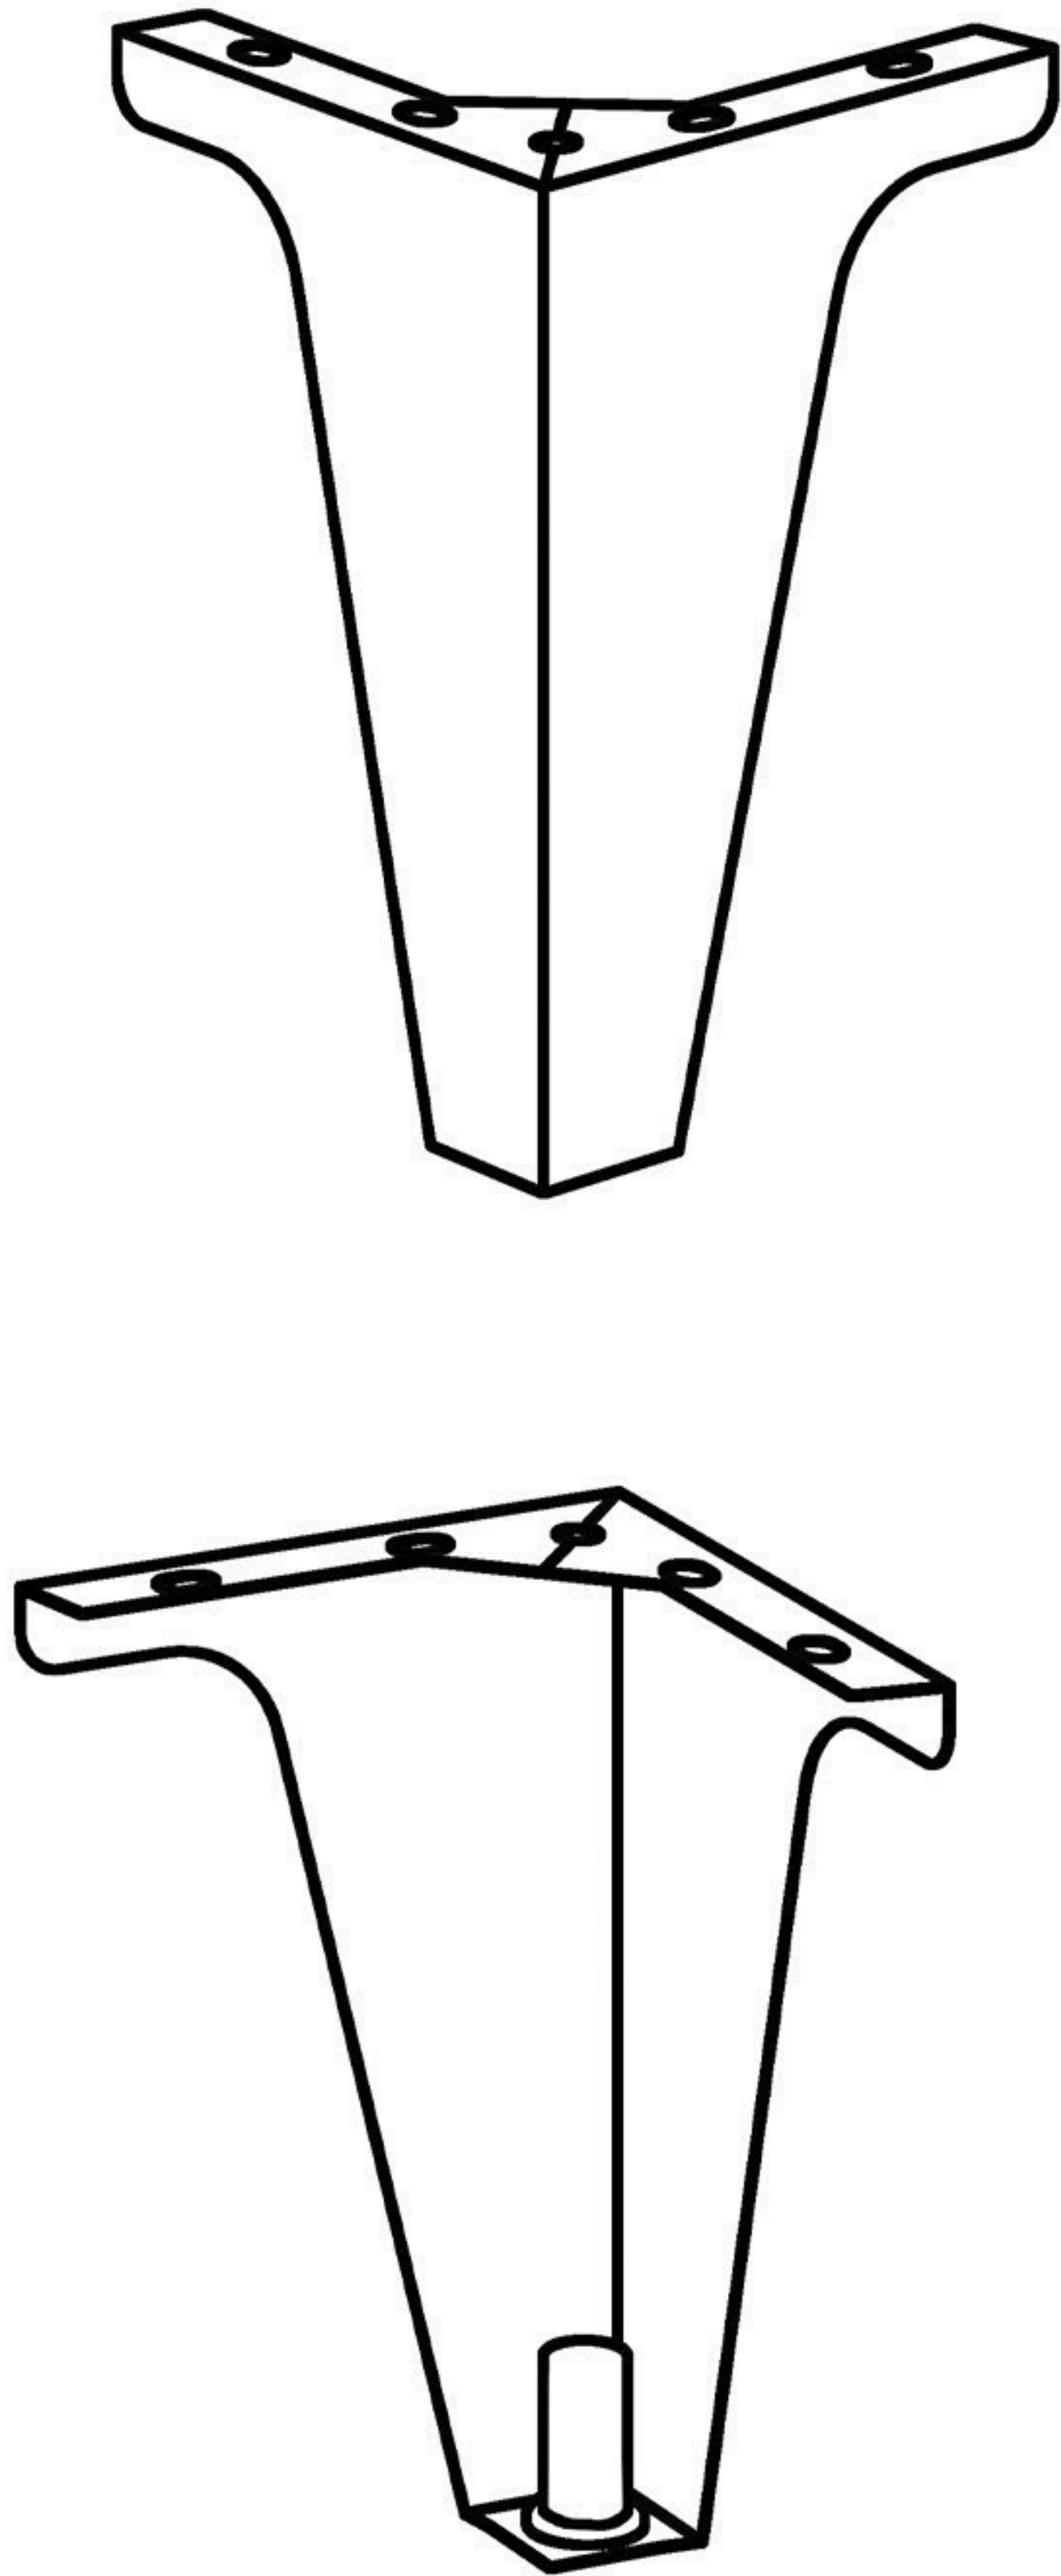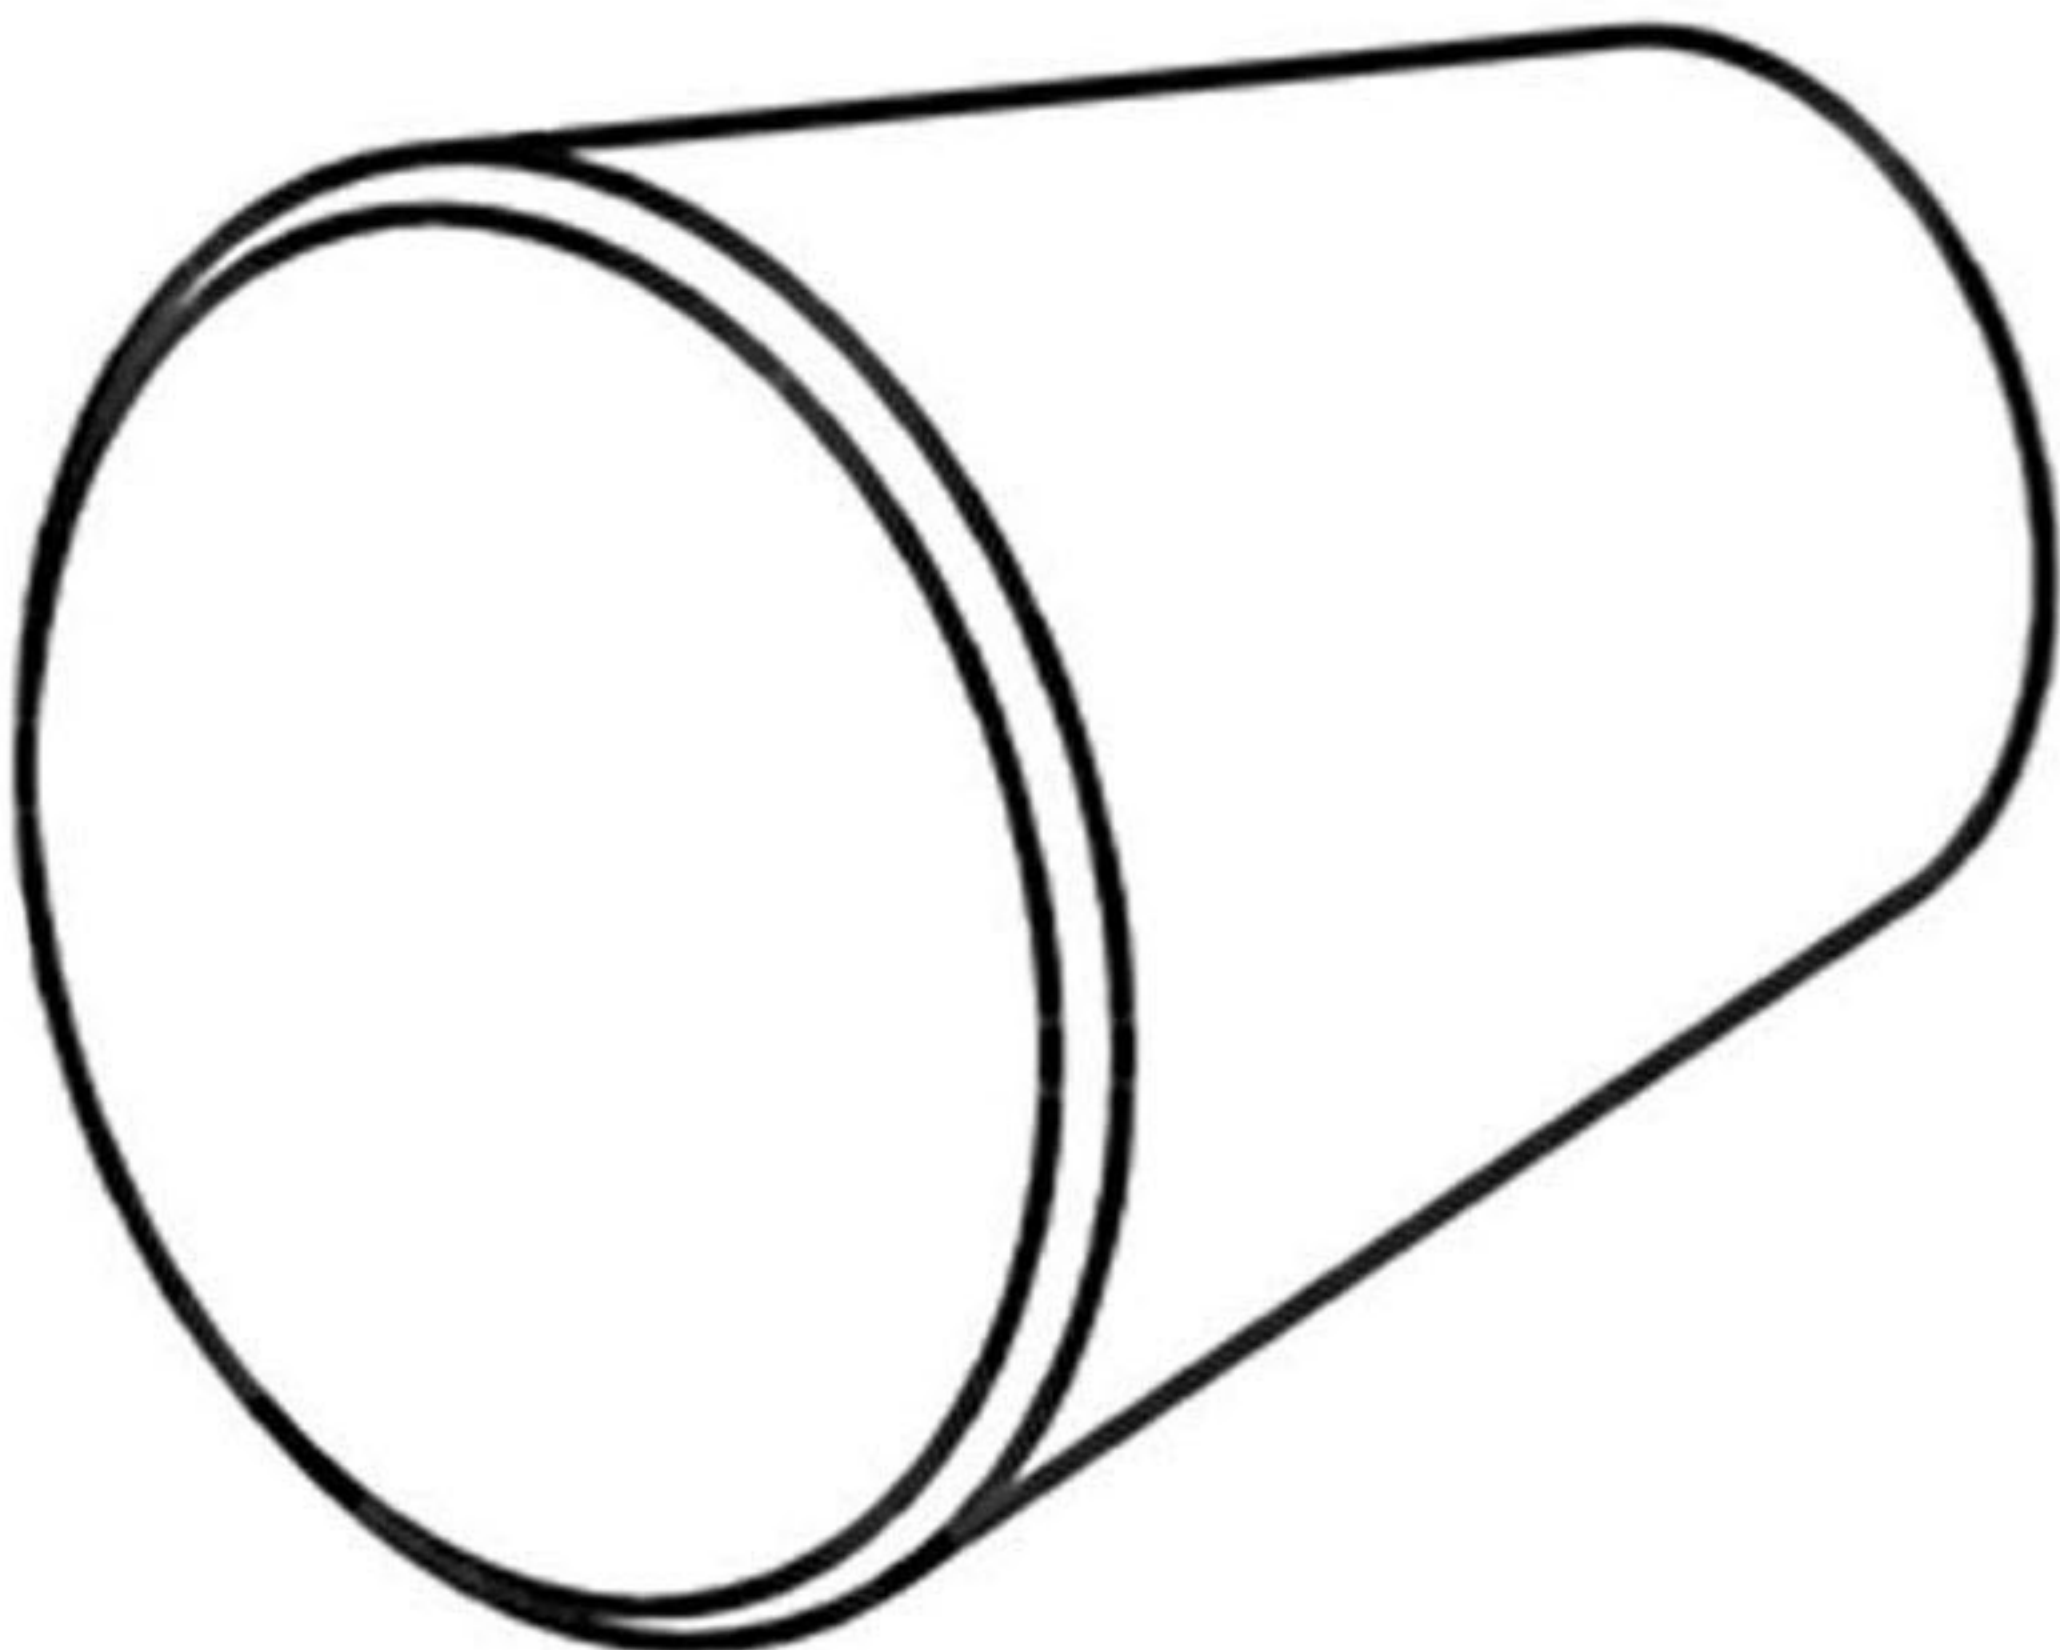G-Bottom Panel	1PC	E-Kick Plate	1PC
			
H-Support	4PCS	S-Round Handle	2PCS
			


Accessories

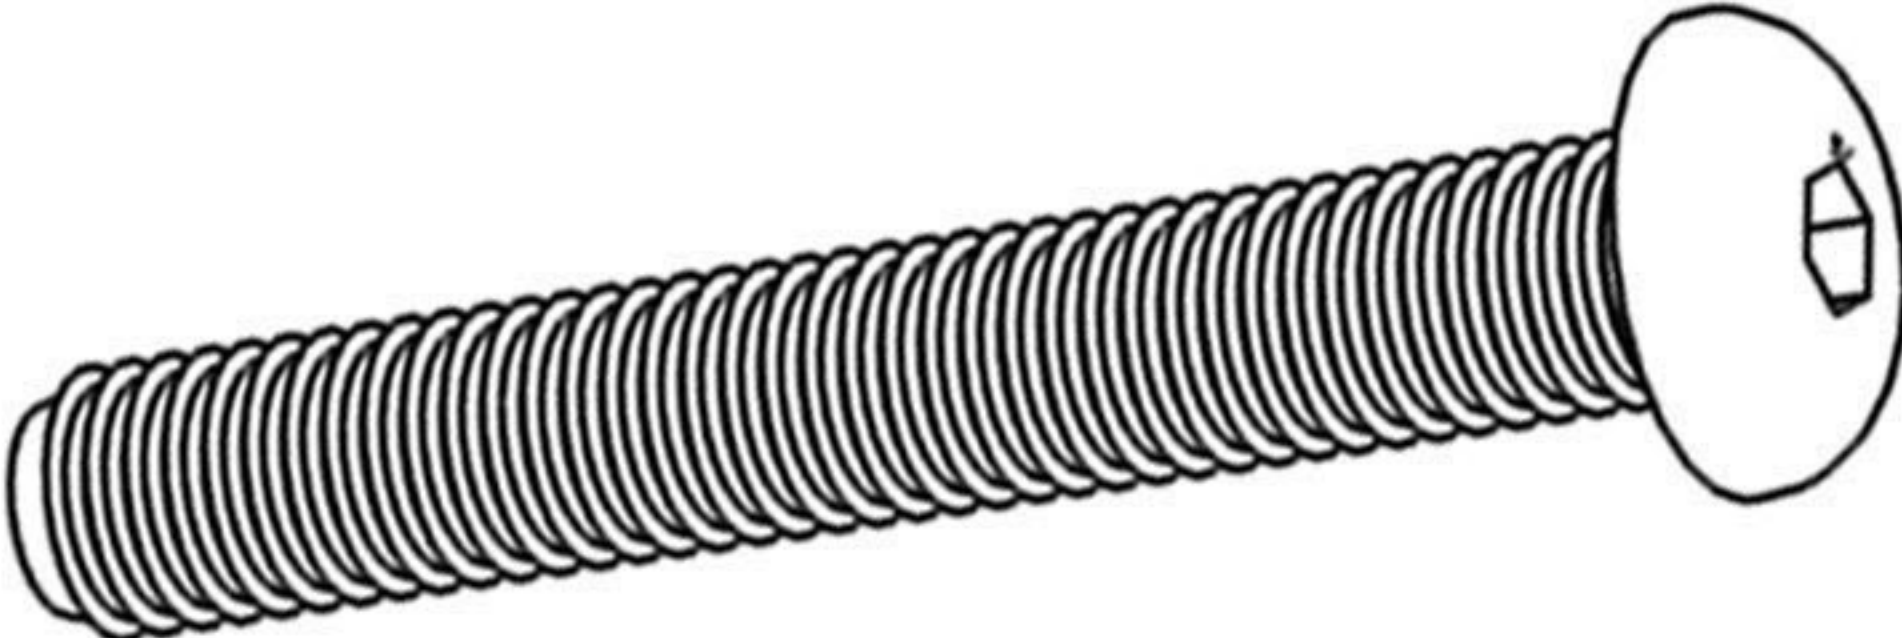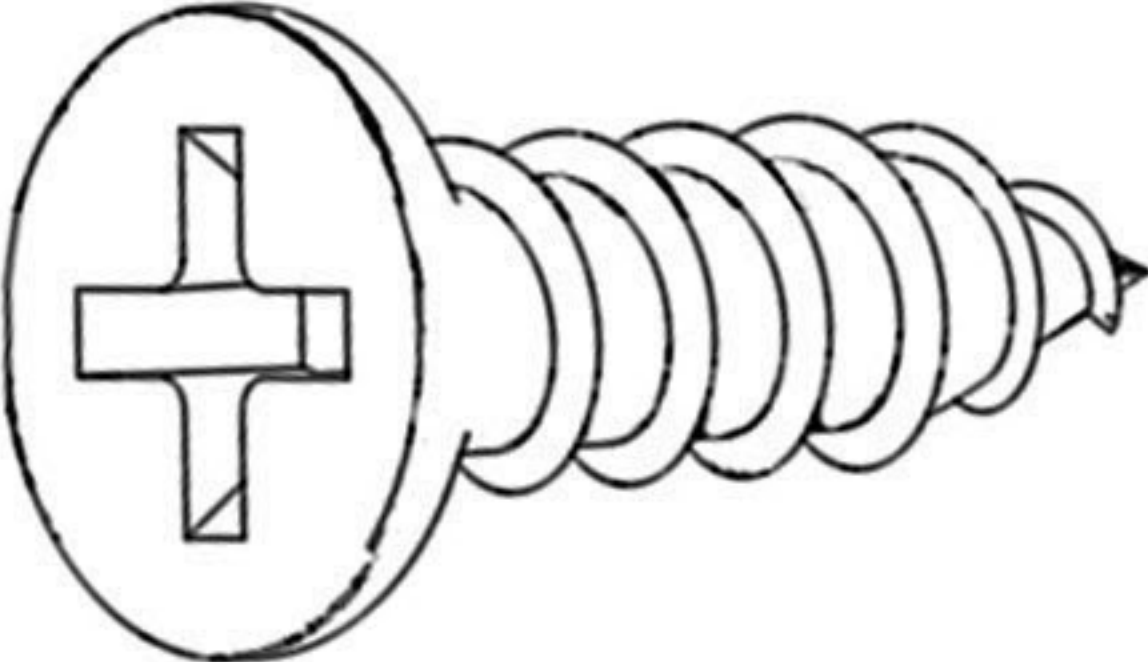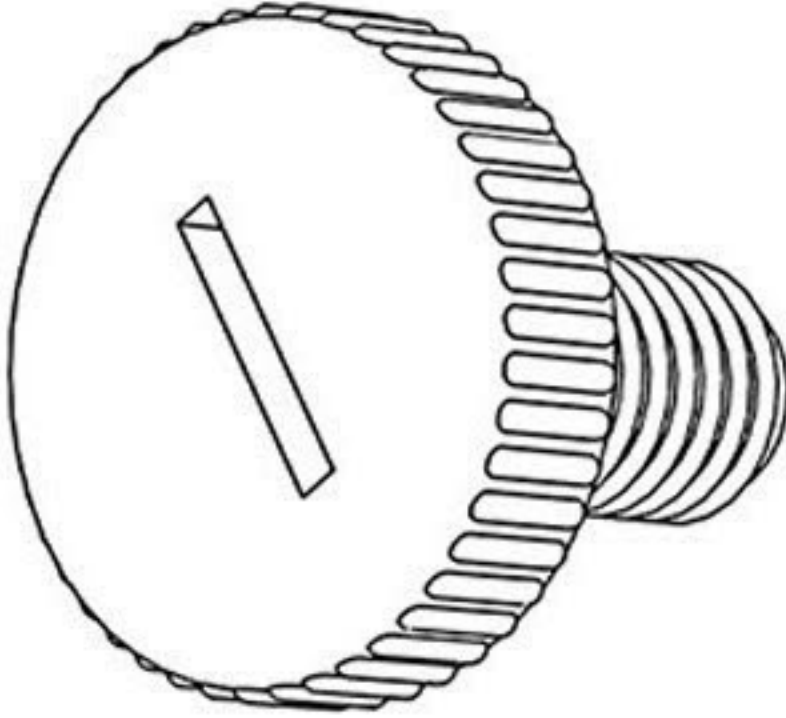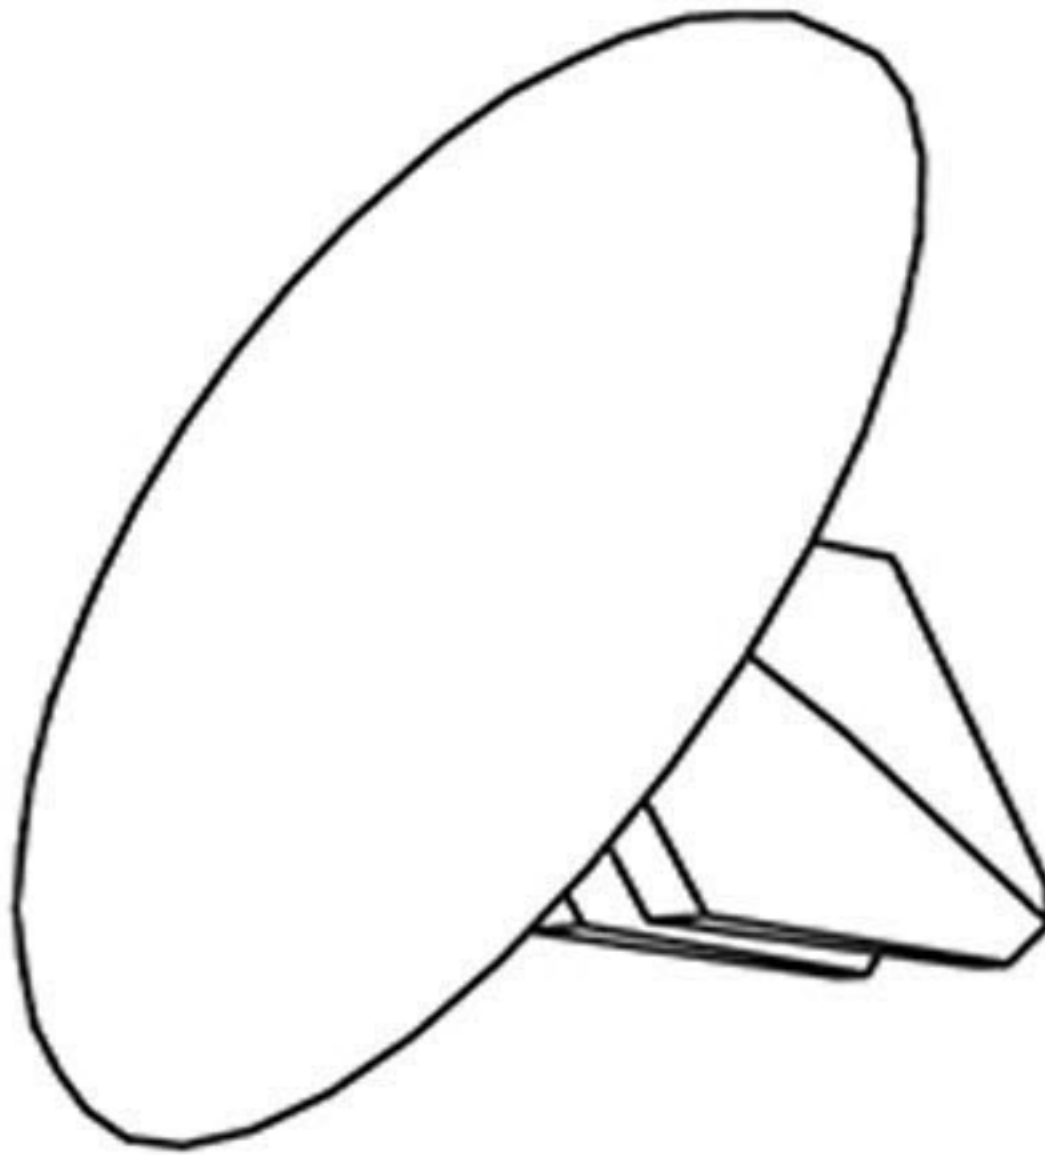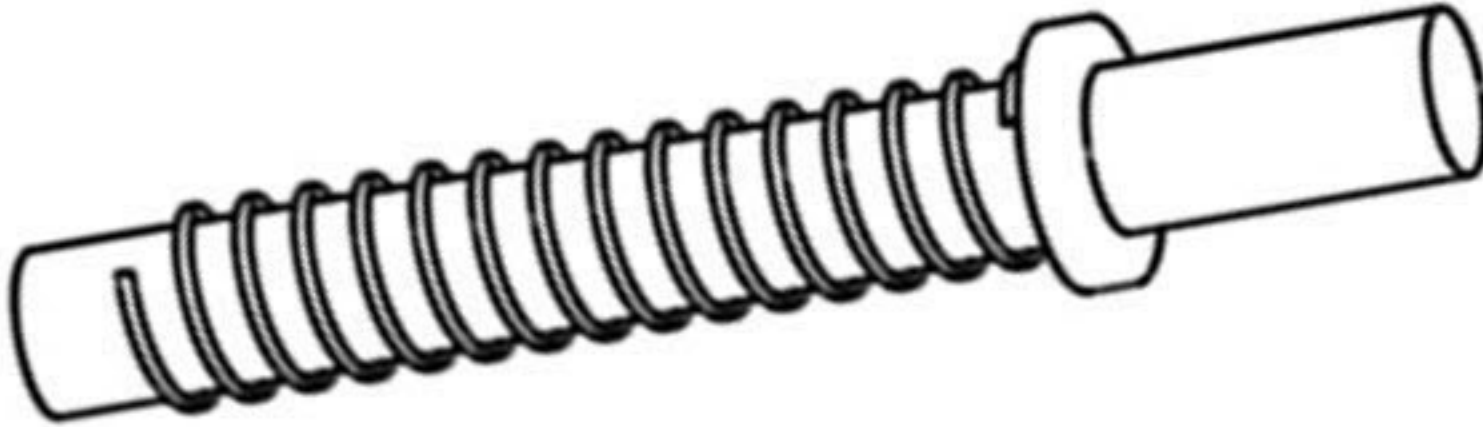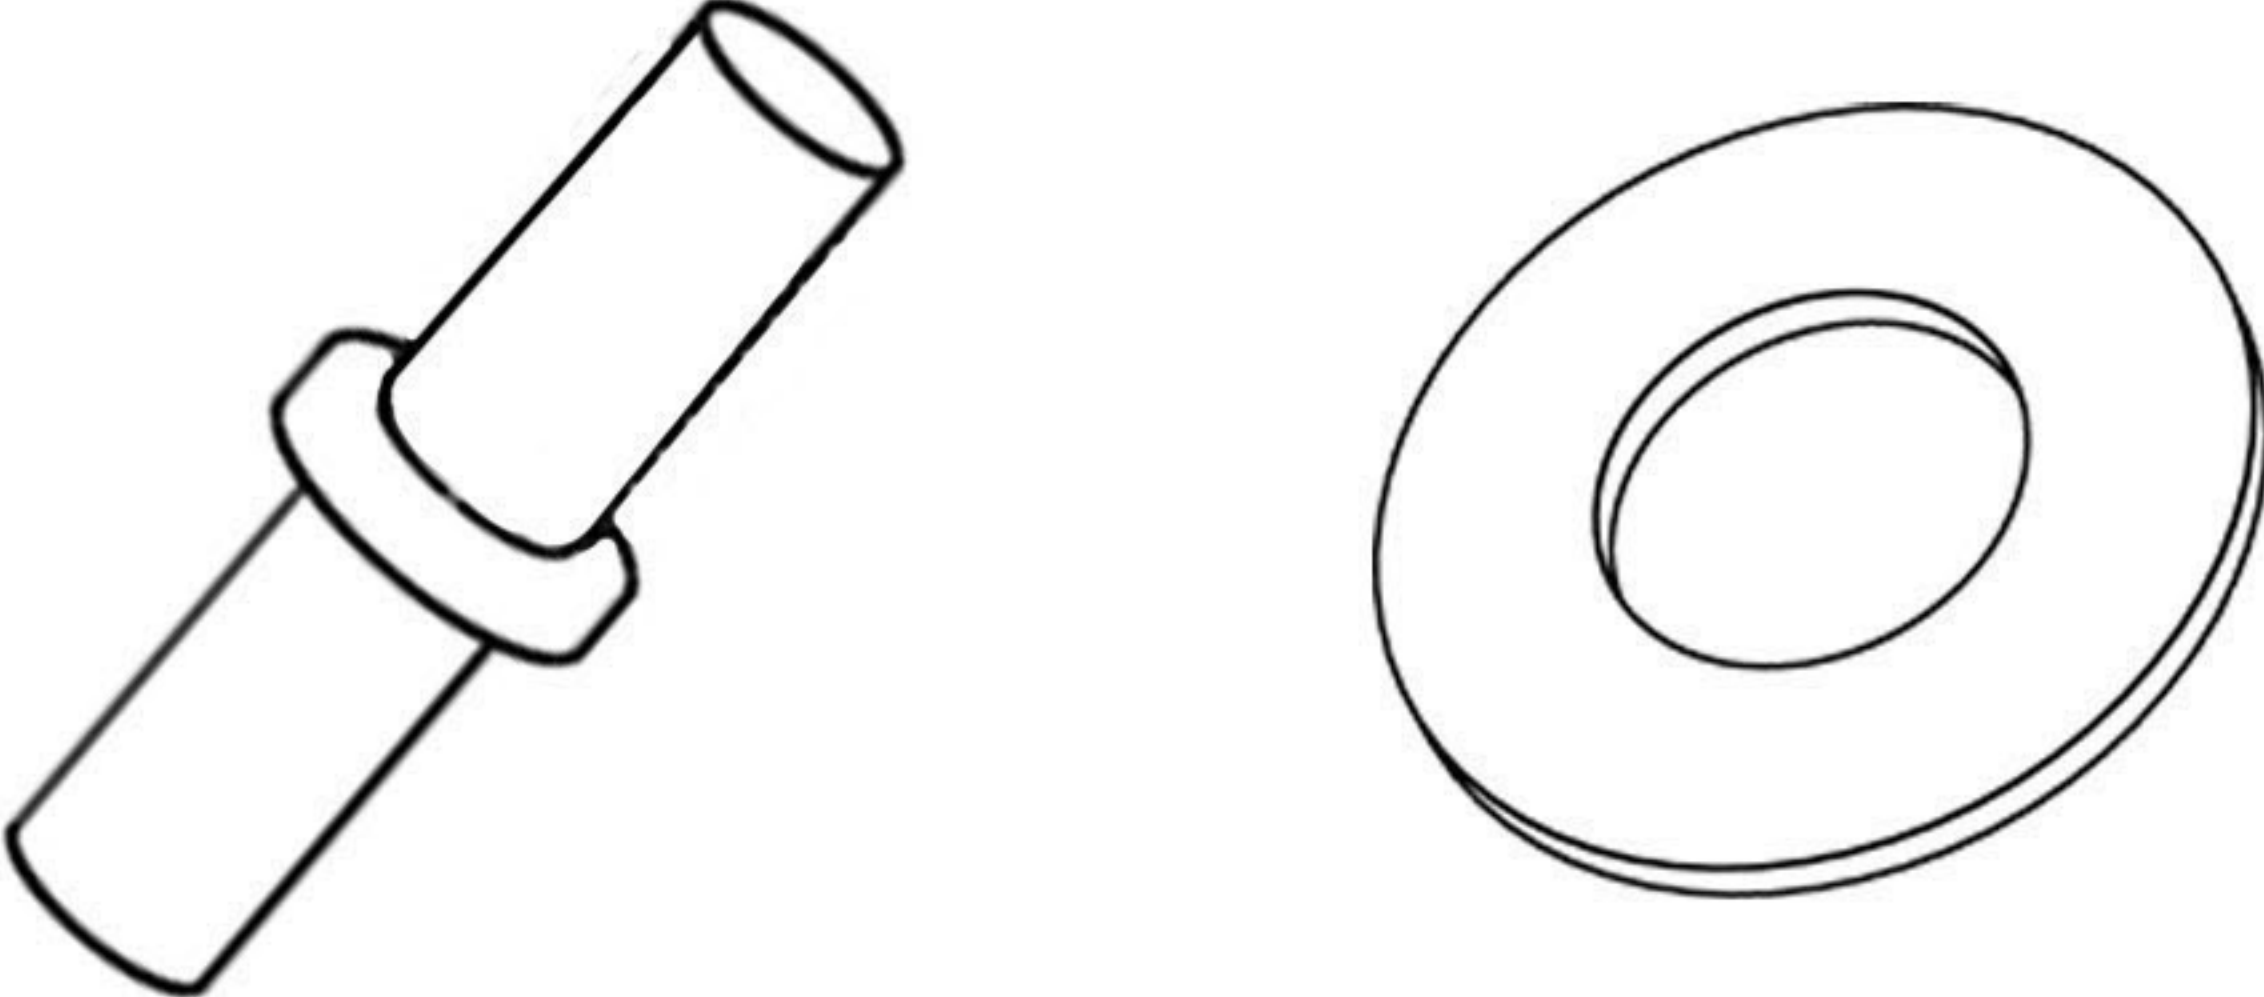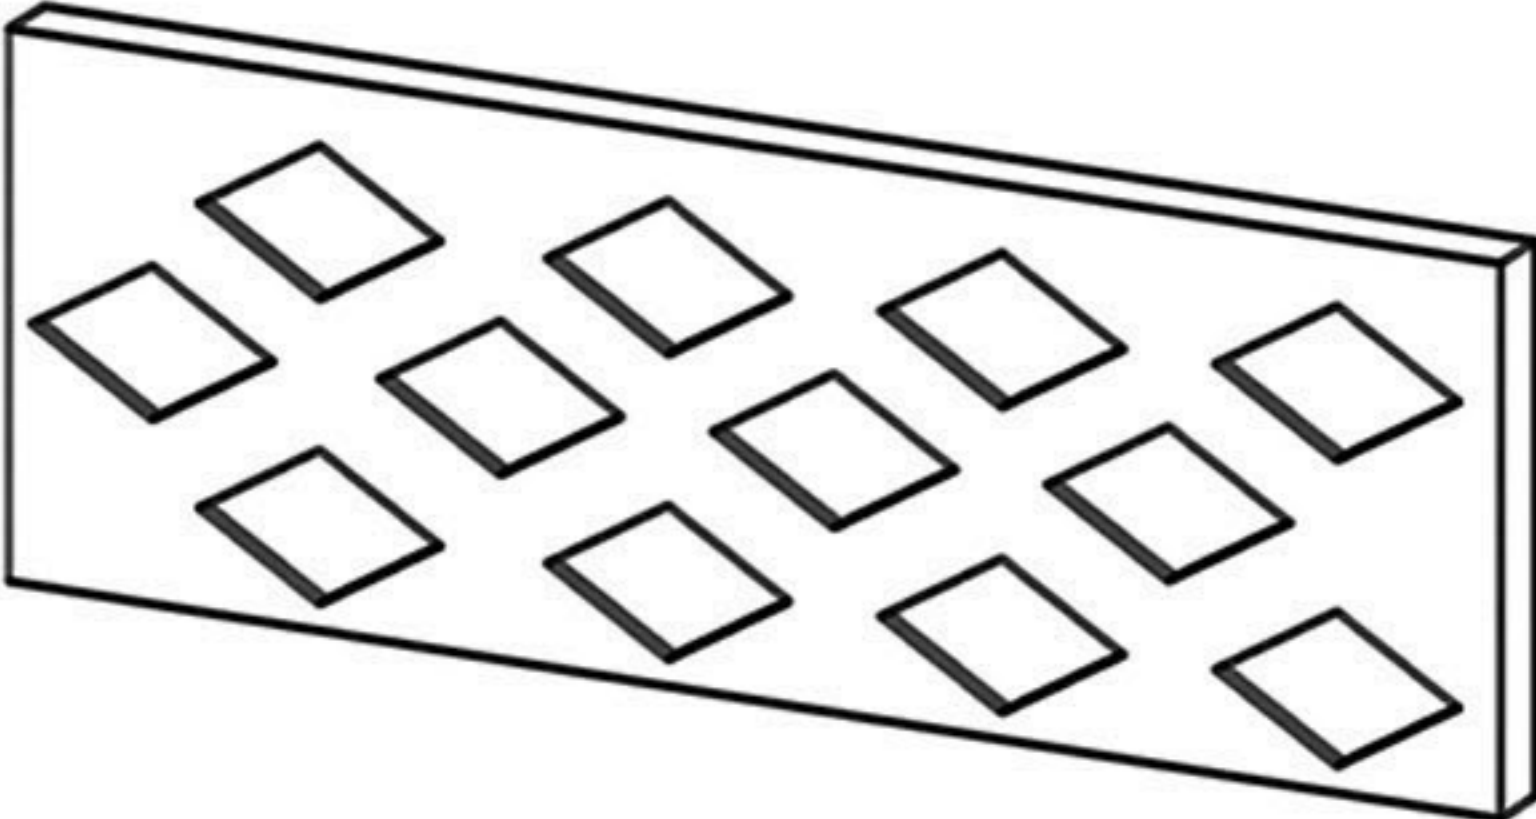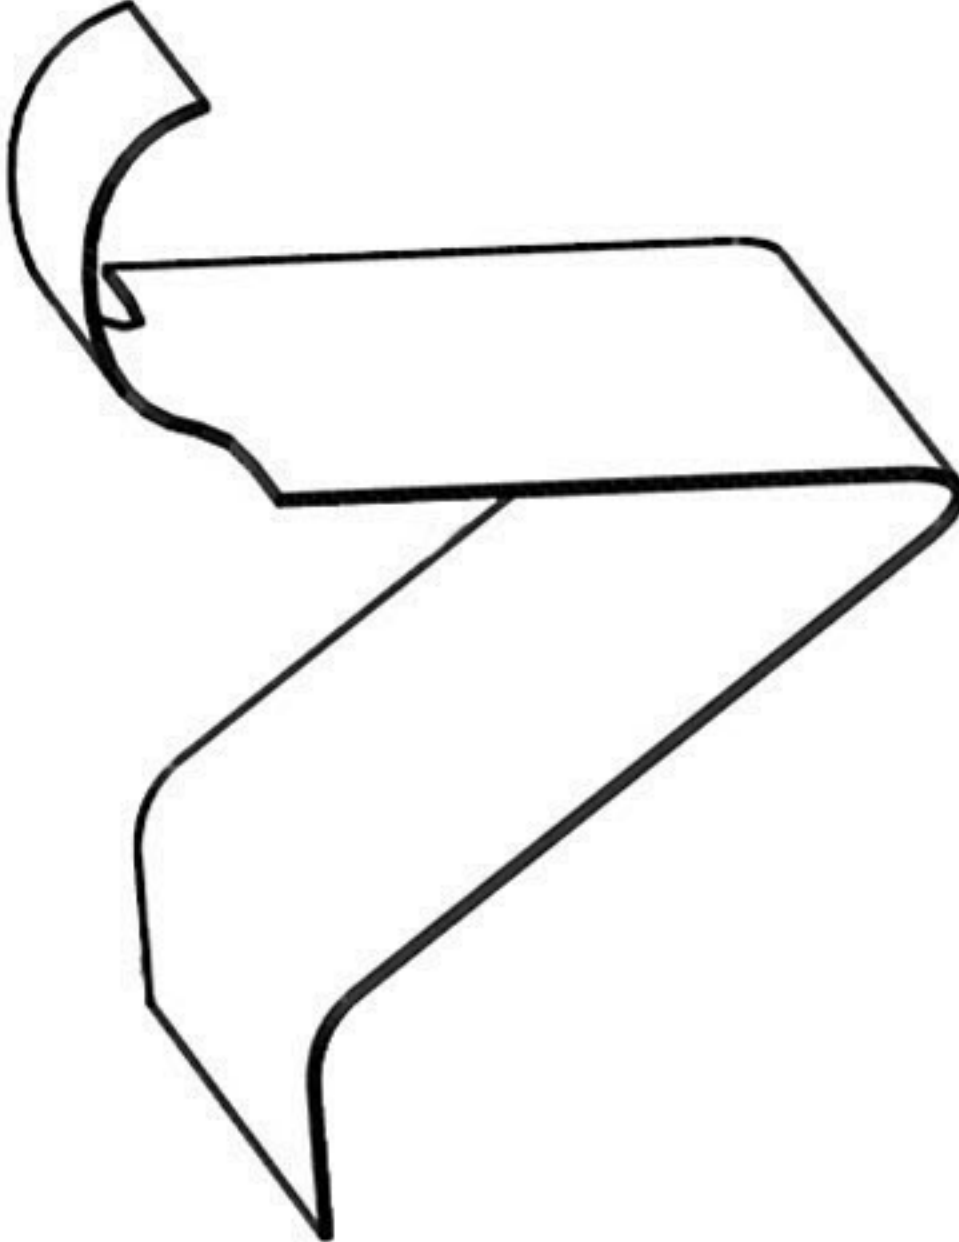N-M4*22 Screw	2PCS	O-M4* 8 Screw	41PCS
			
M-Foot	4PCS	P-Stop Pad	2PCS
			
Q-Spring shaft	2PCS	R-Door Pivot & Shim	2PCS
 Already pre-installed on the doors			
T-Magnet	4PCS	U-Shelf Clasp	8PCS
			
V-Expansion Screw	2PCS		
			

Step 1

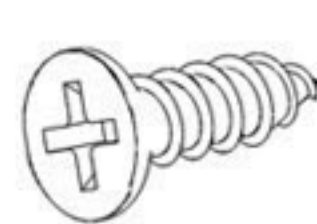O		3
---	---	---


Connect left side panel A and left back panel B with 3 screws O

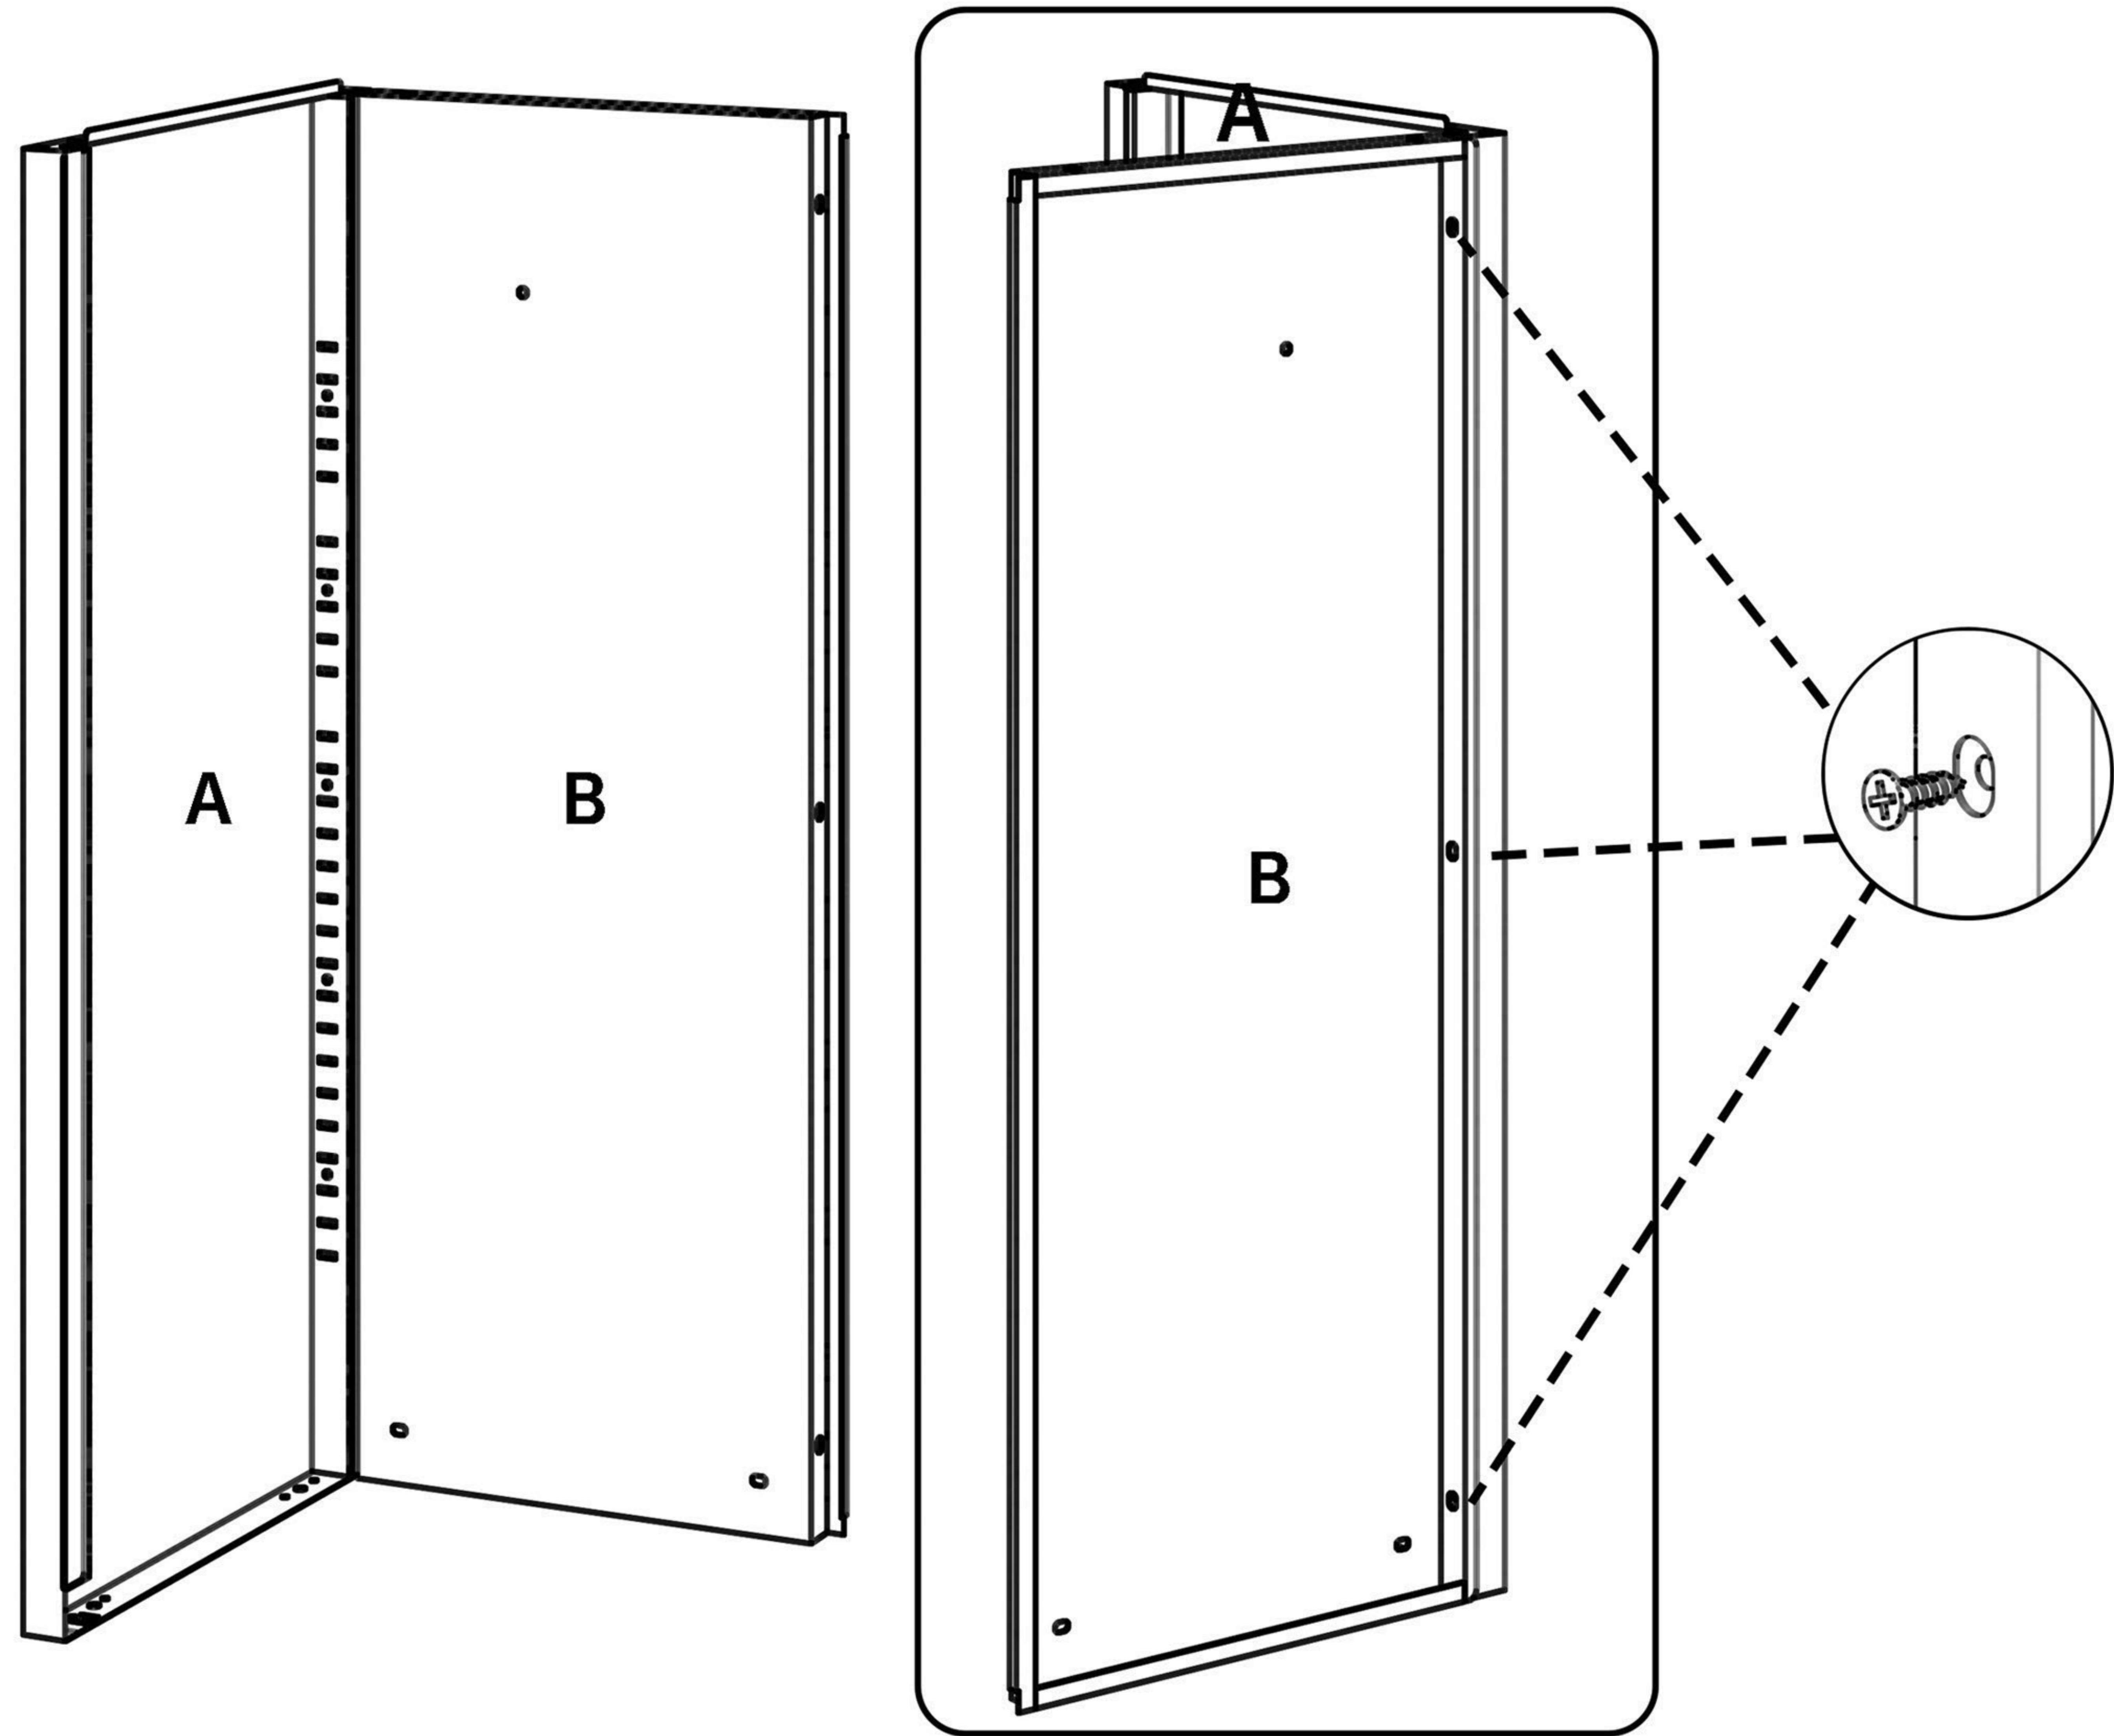

Step 2

O		3
---	---	---

Connect left back panel B and right back panel C with 3 screws O

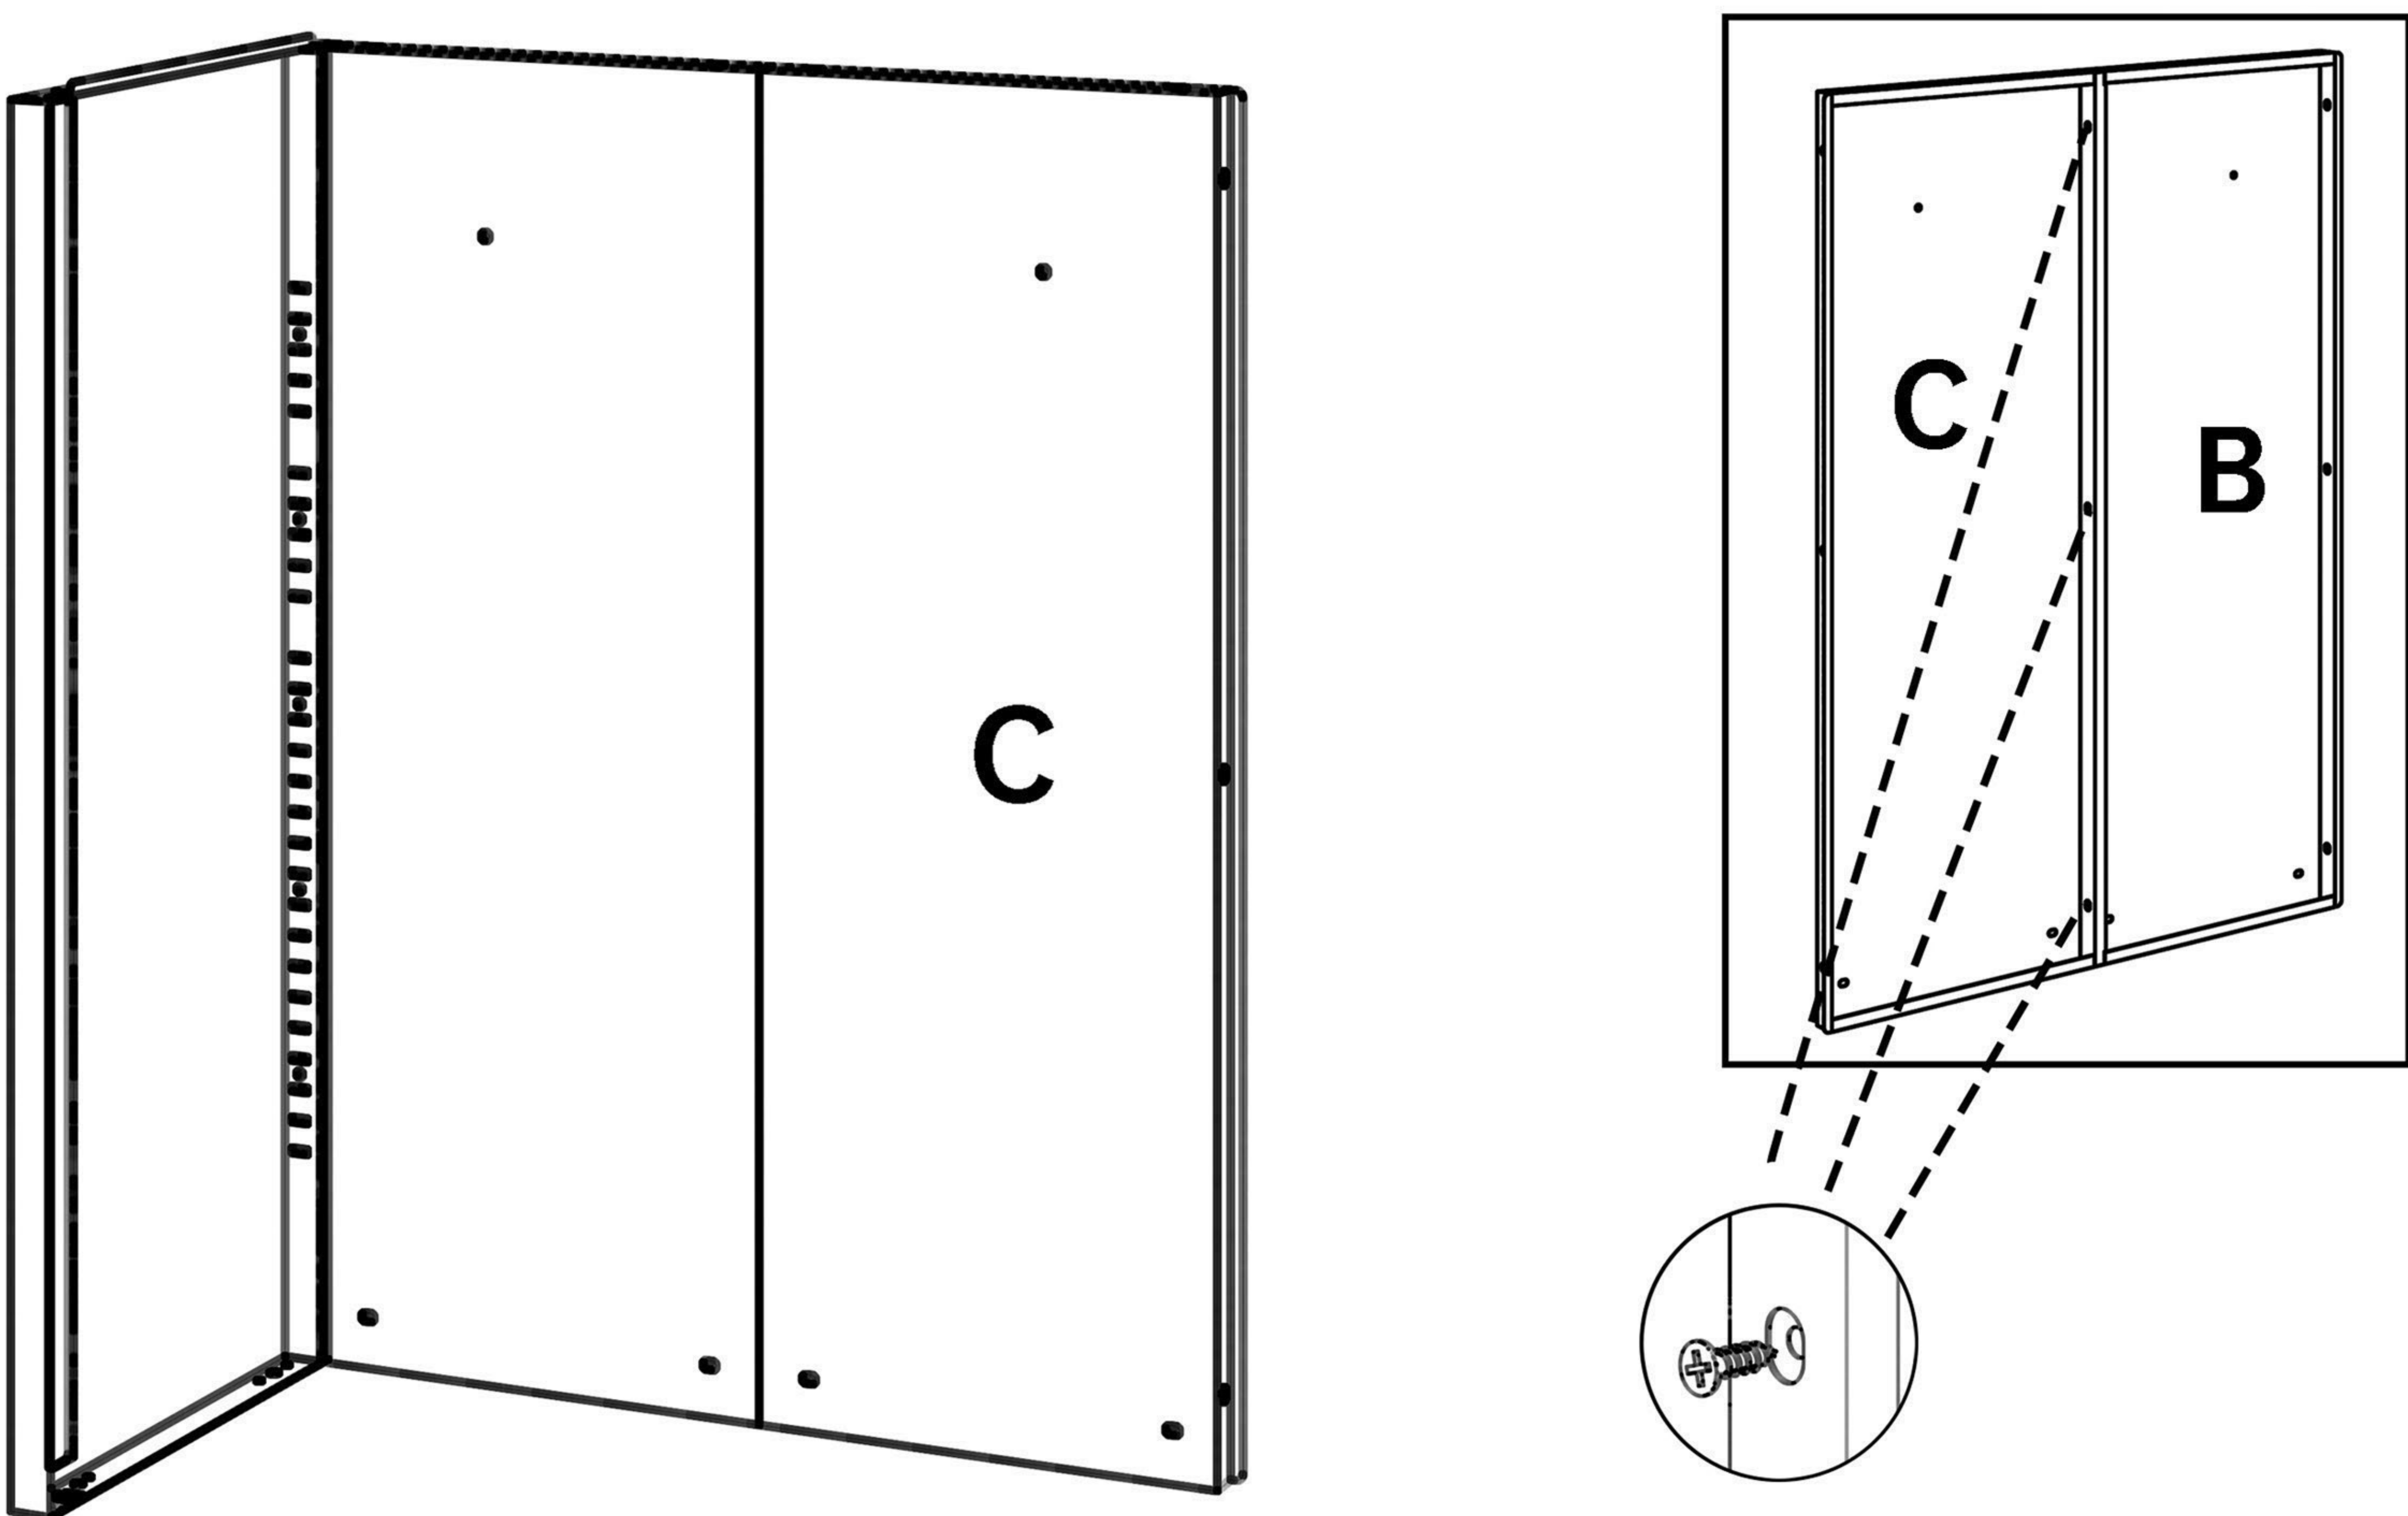



Step 3

O



3

Connect right back panel C and right side panel D with 3 screws O

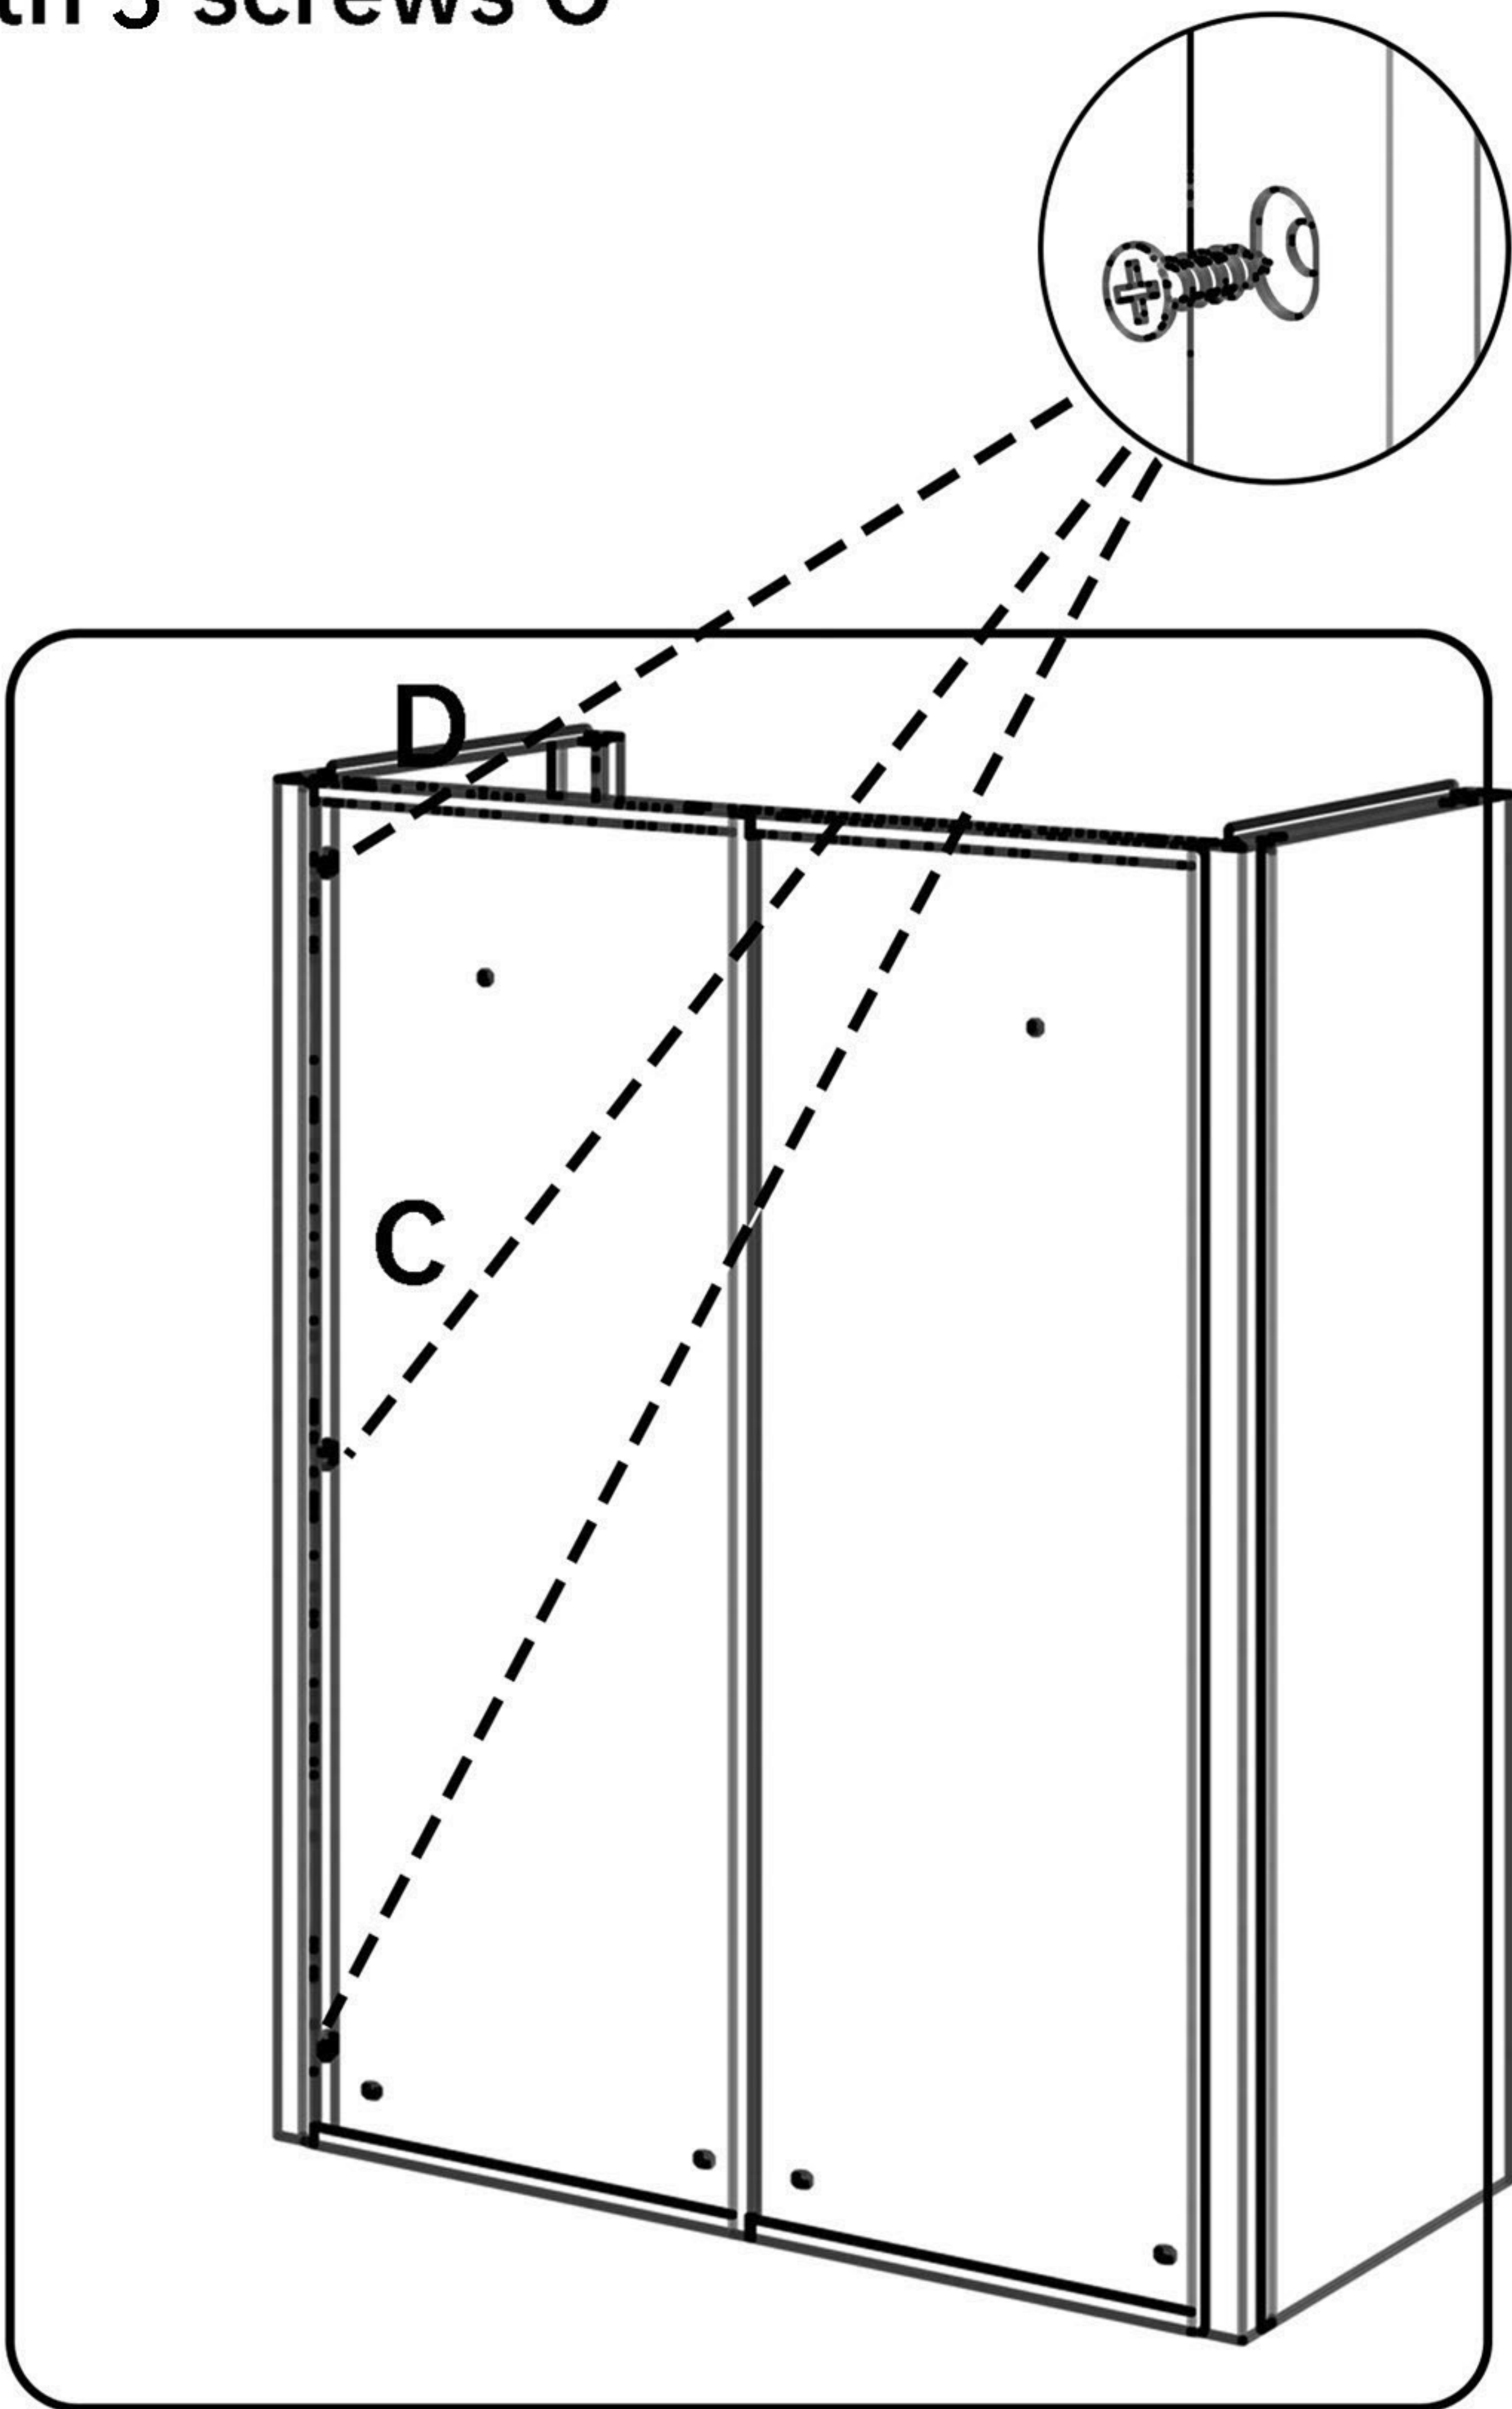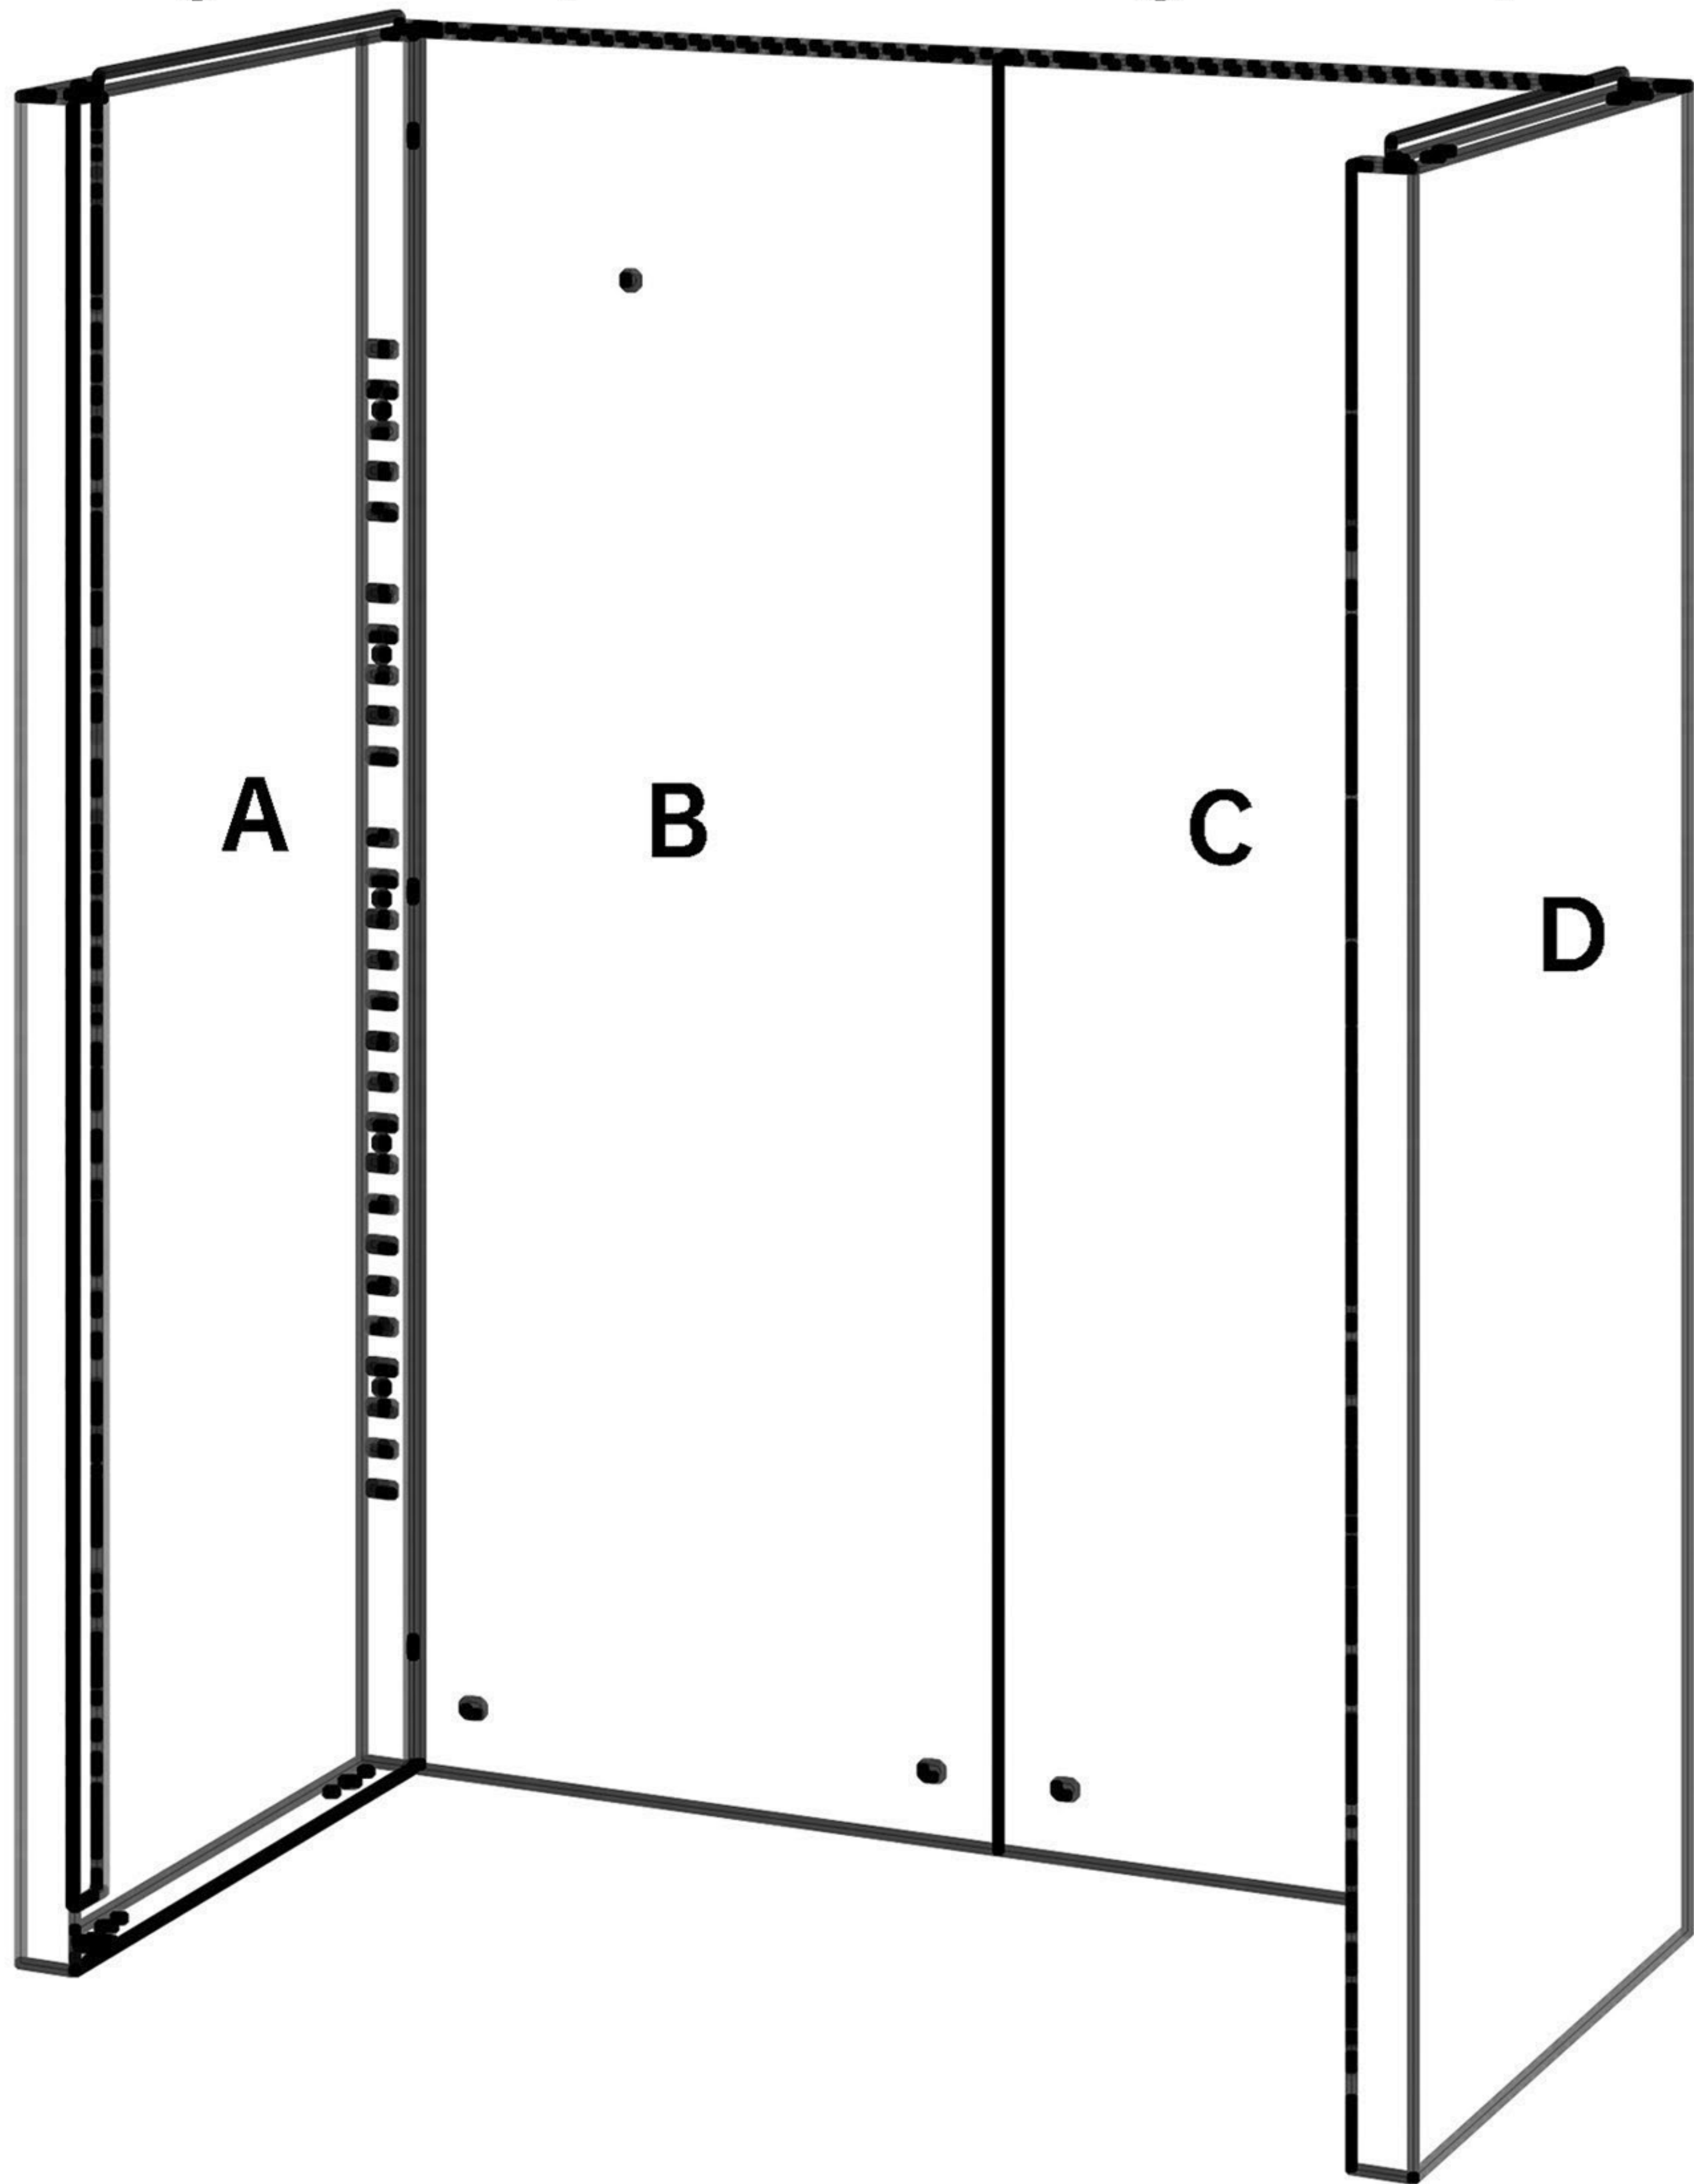



Step 4

O



4

Connect kick plate E with side panels and fix them with 4 screws O

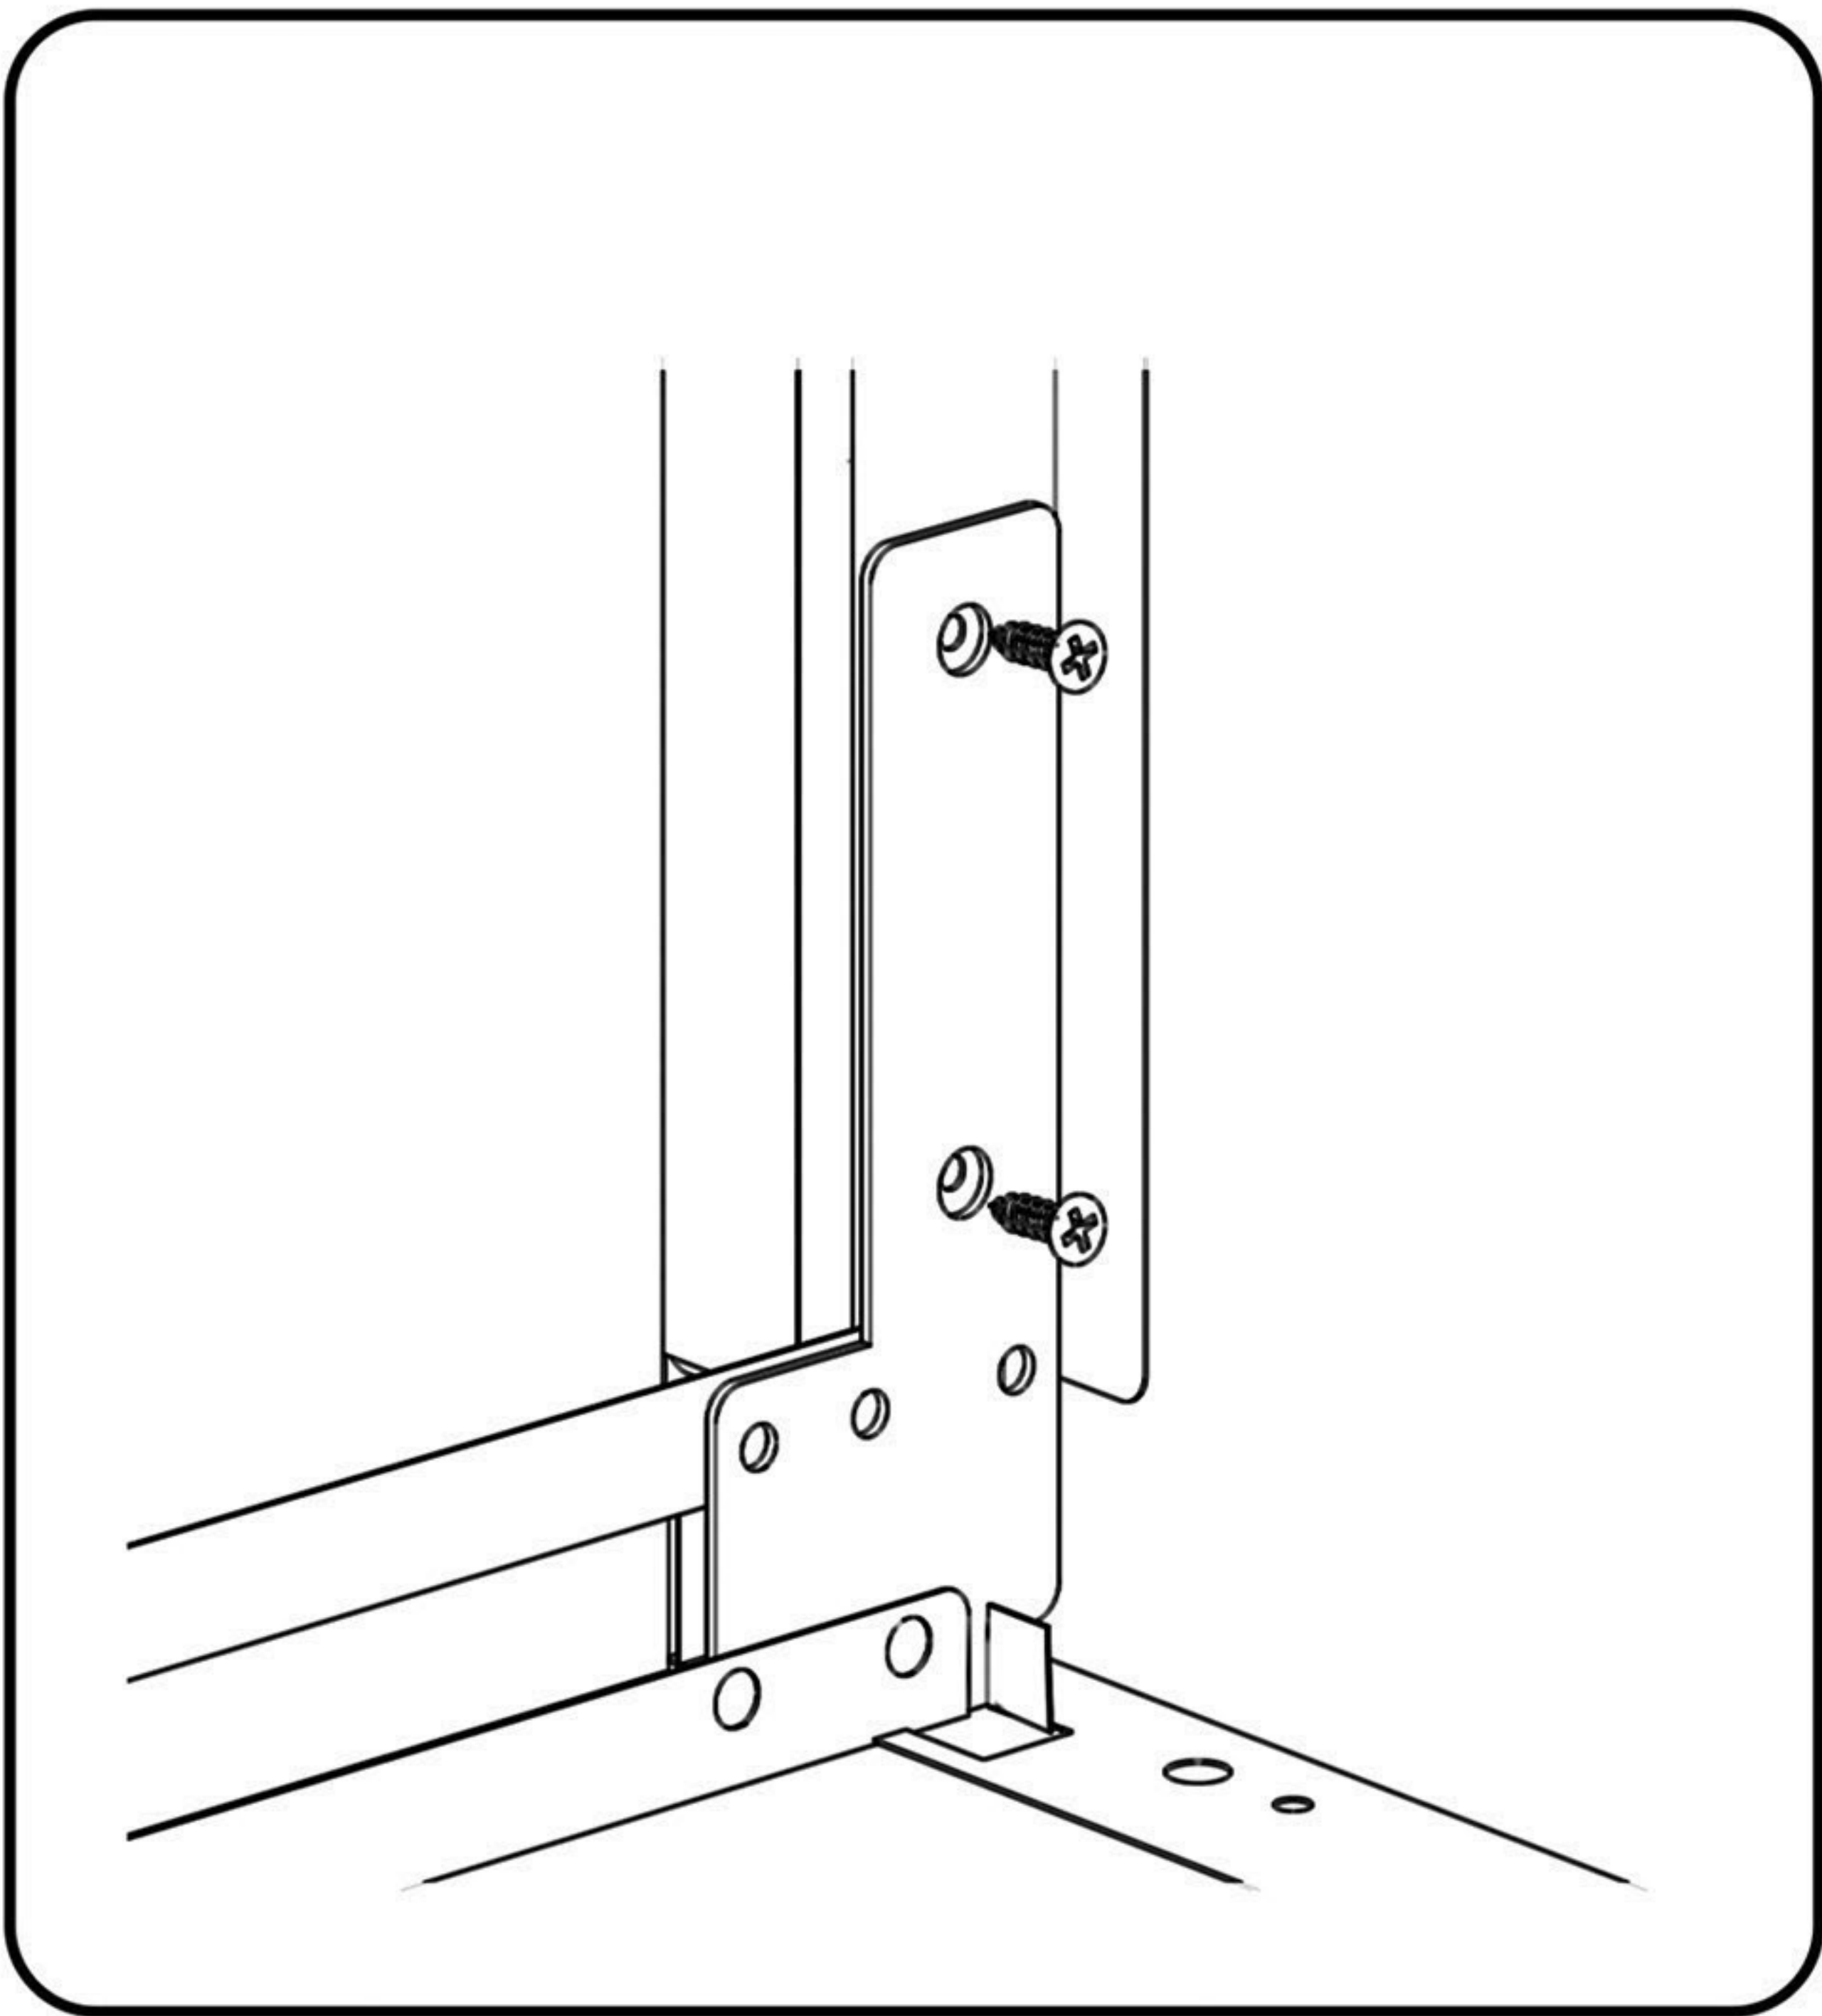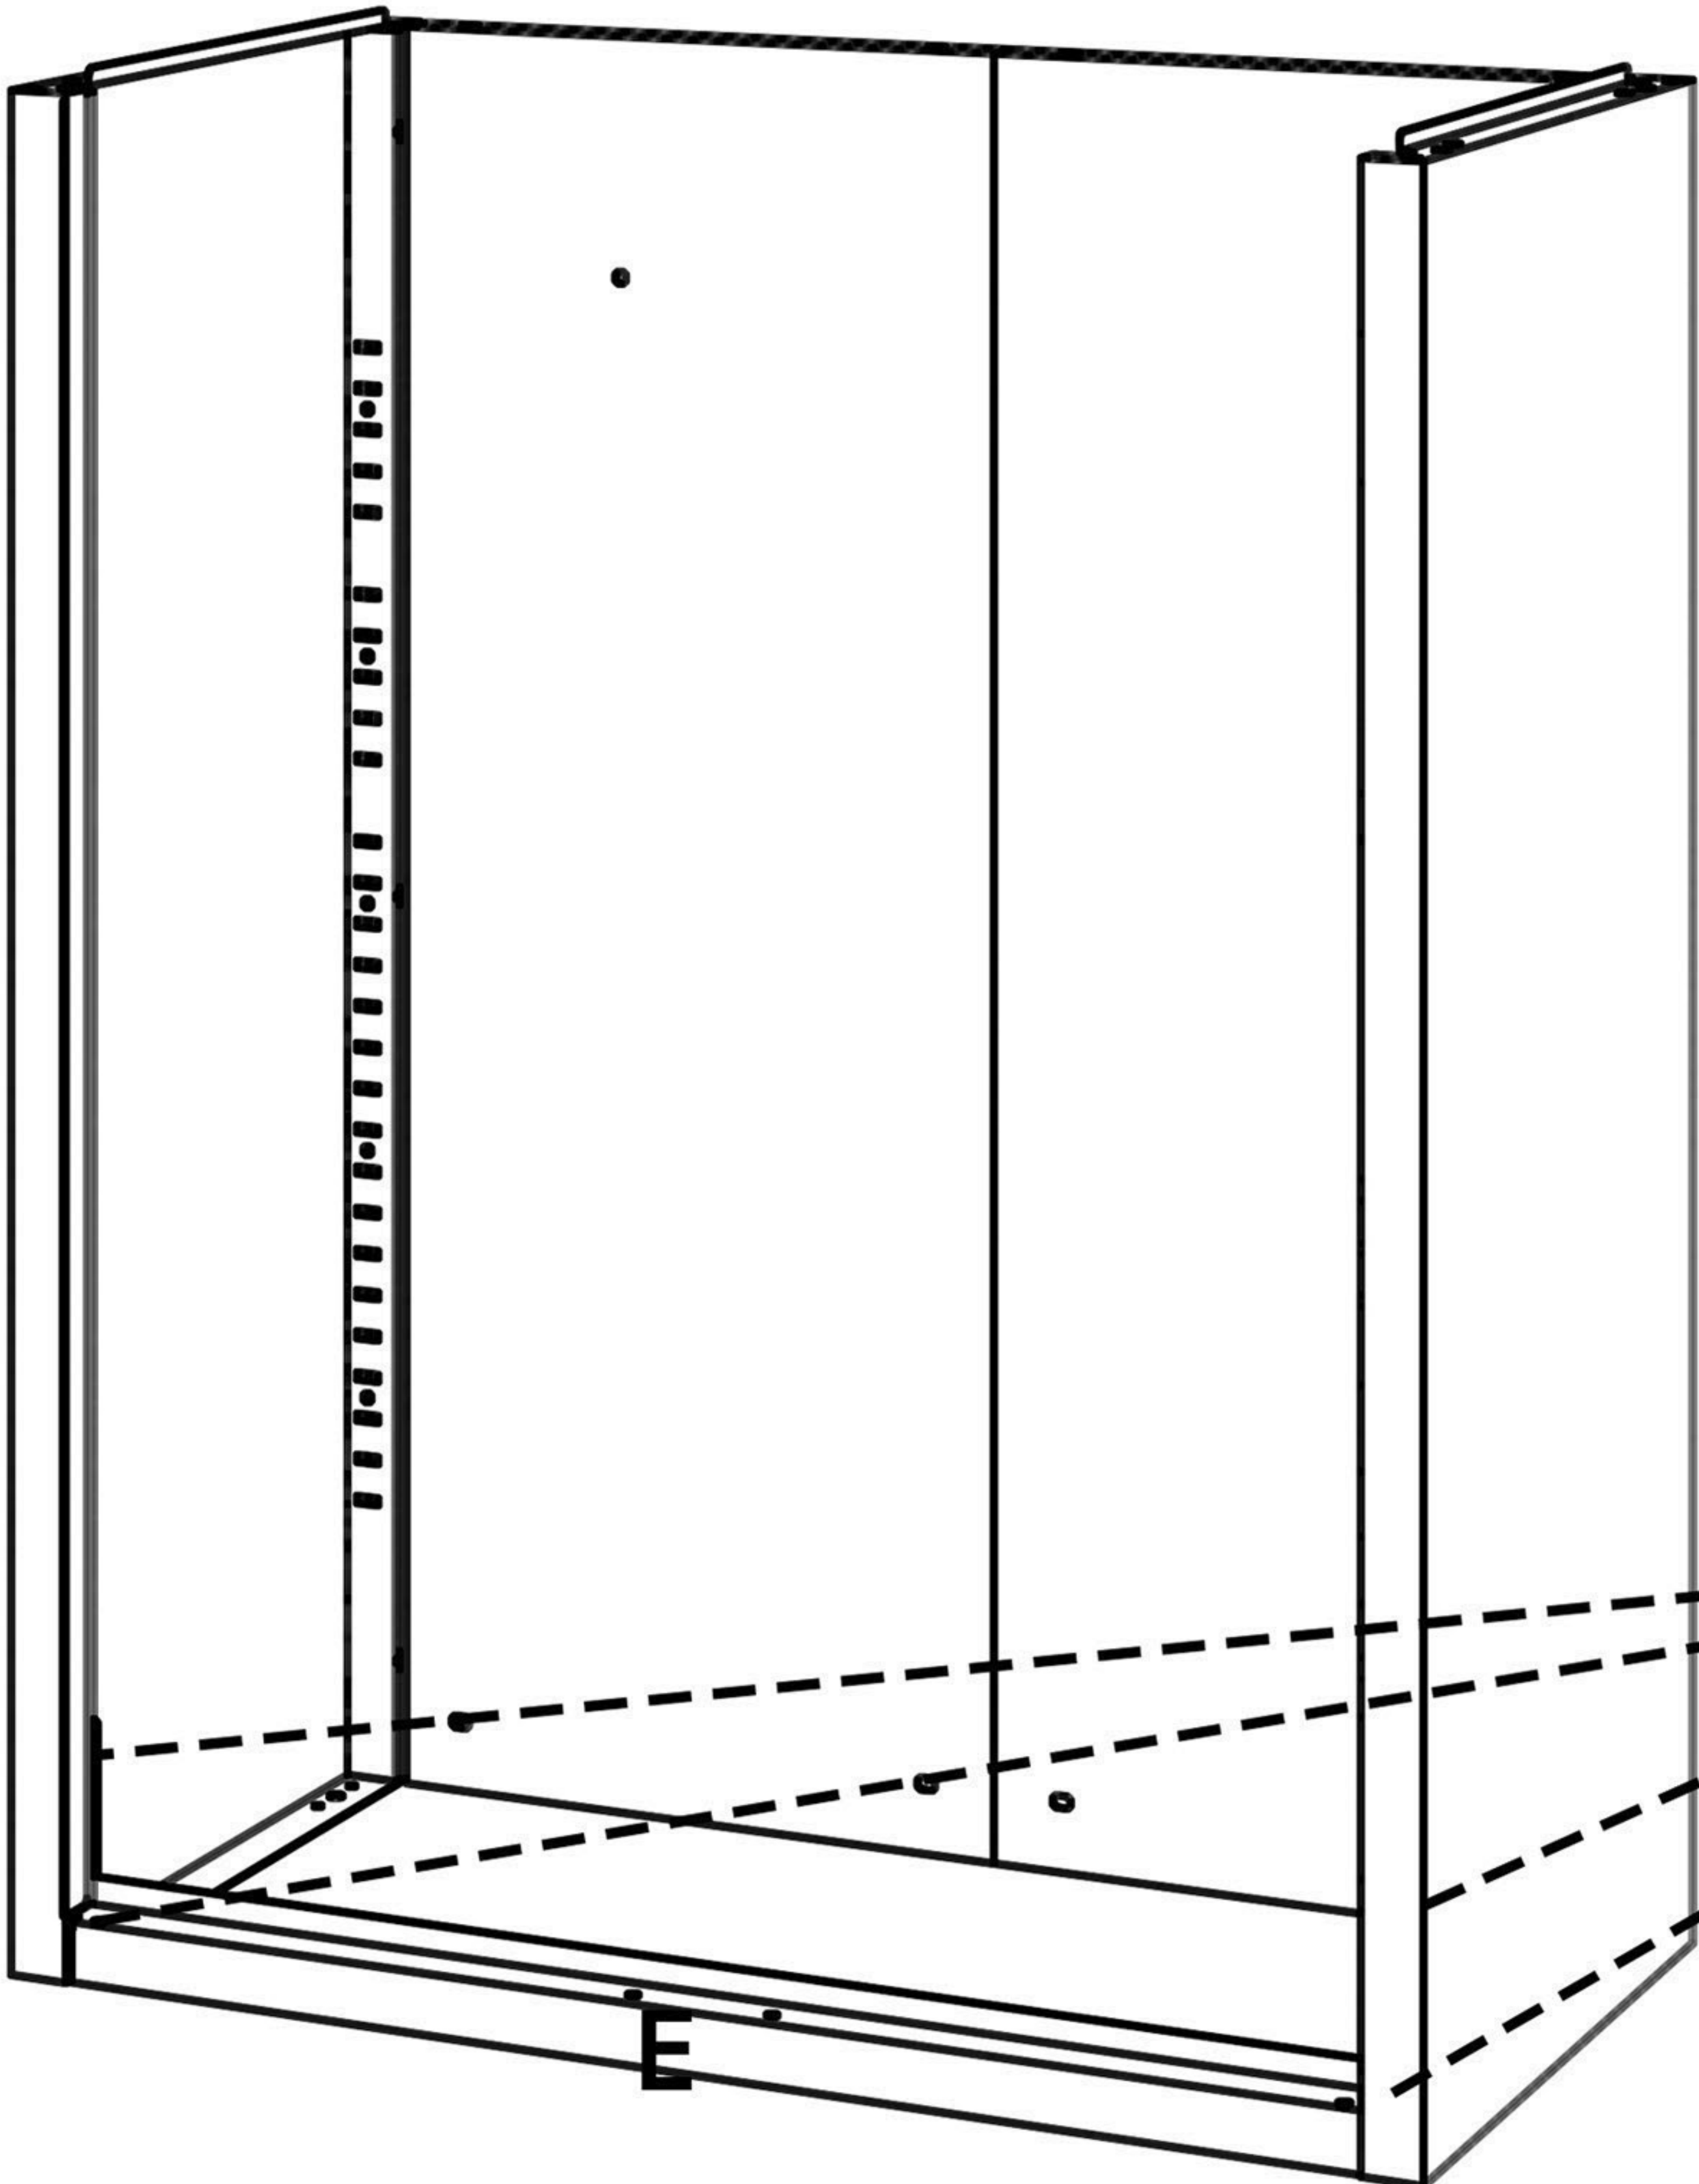



Step 5

O



8

Install top panel F and fix it with side panels and back panels by 8 screws O

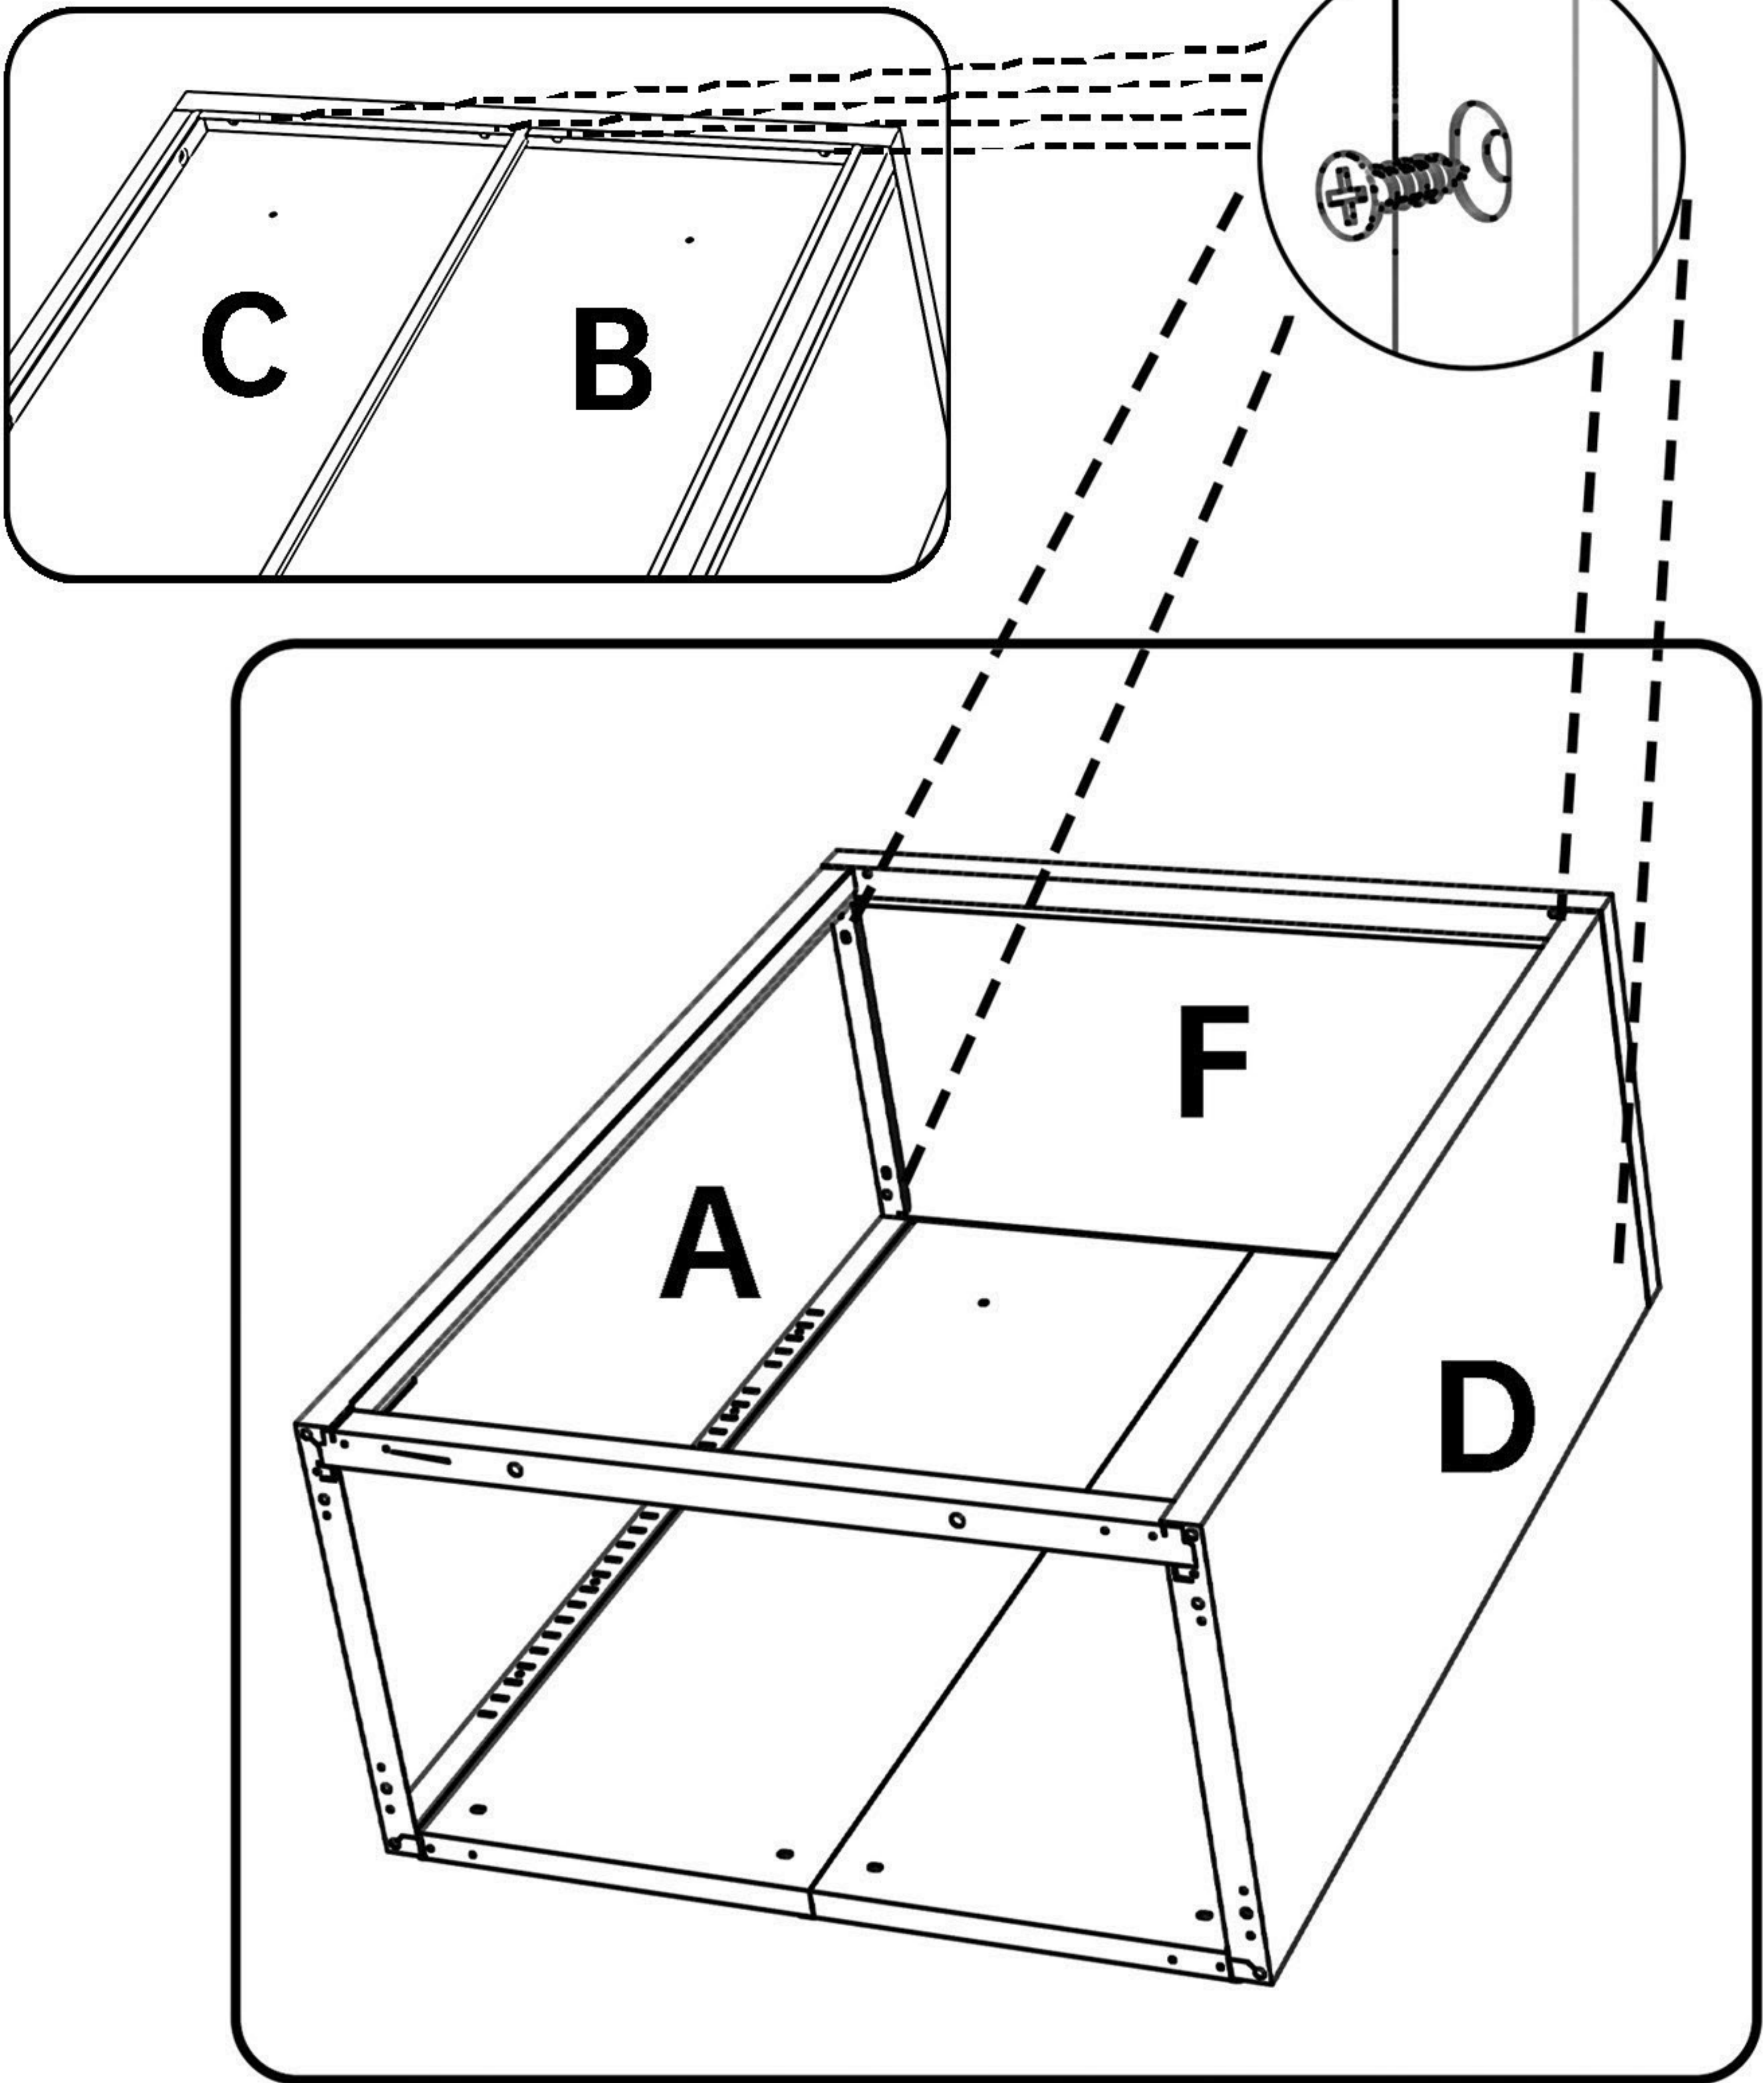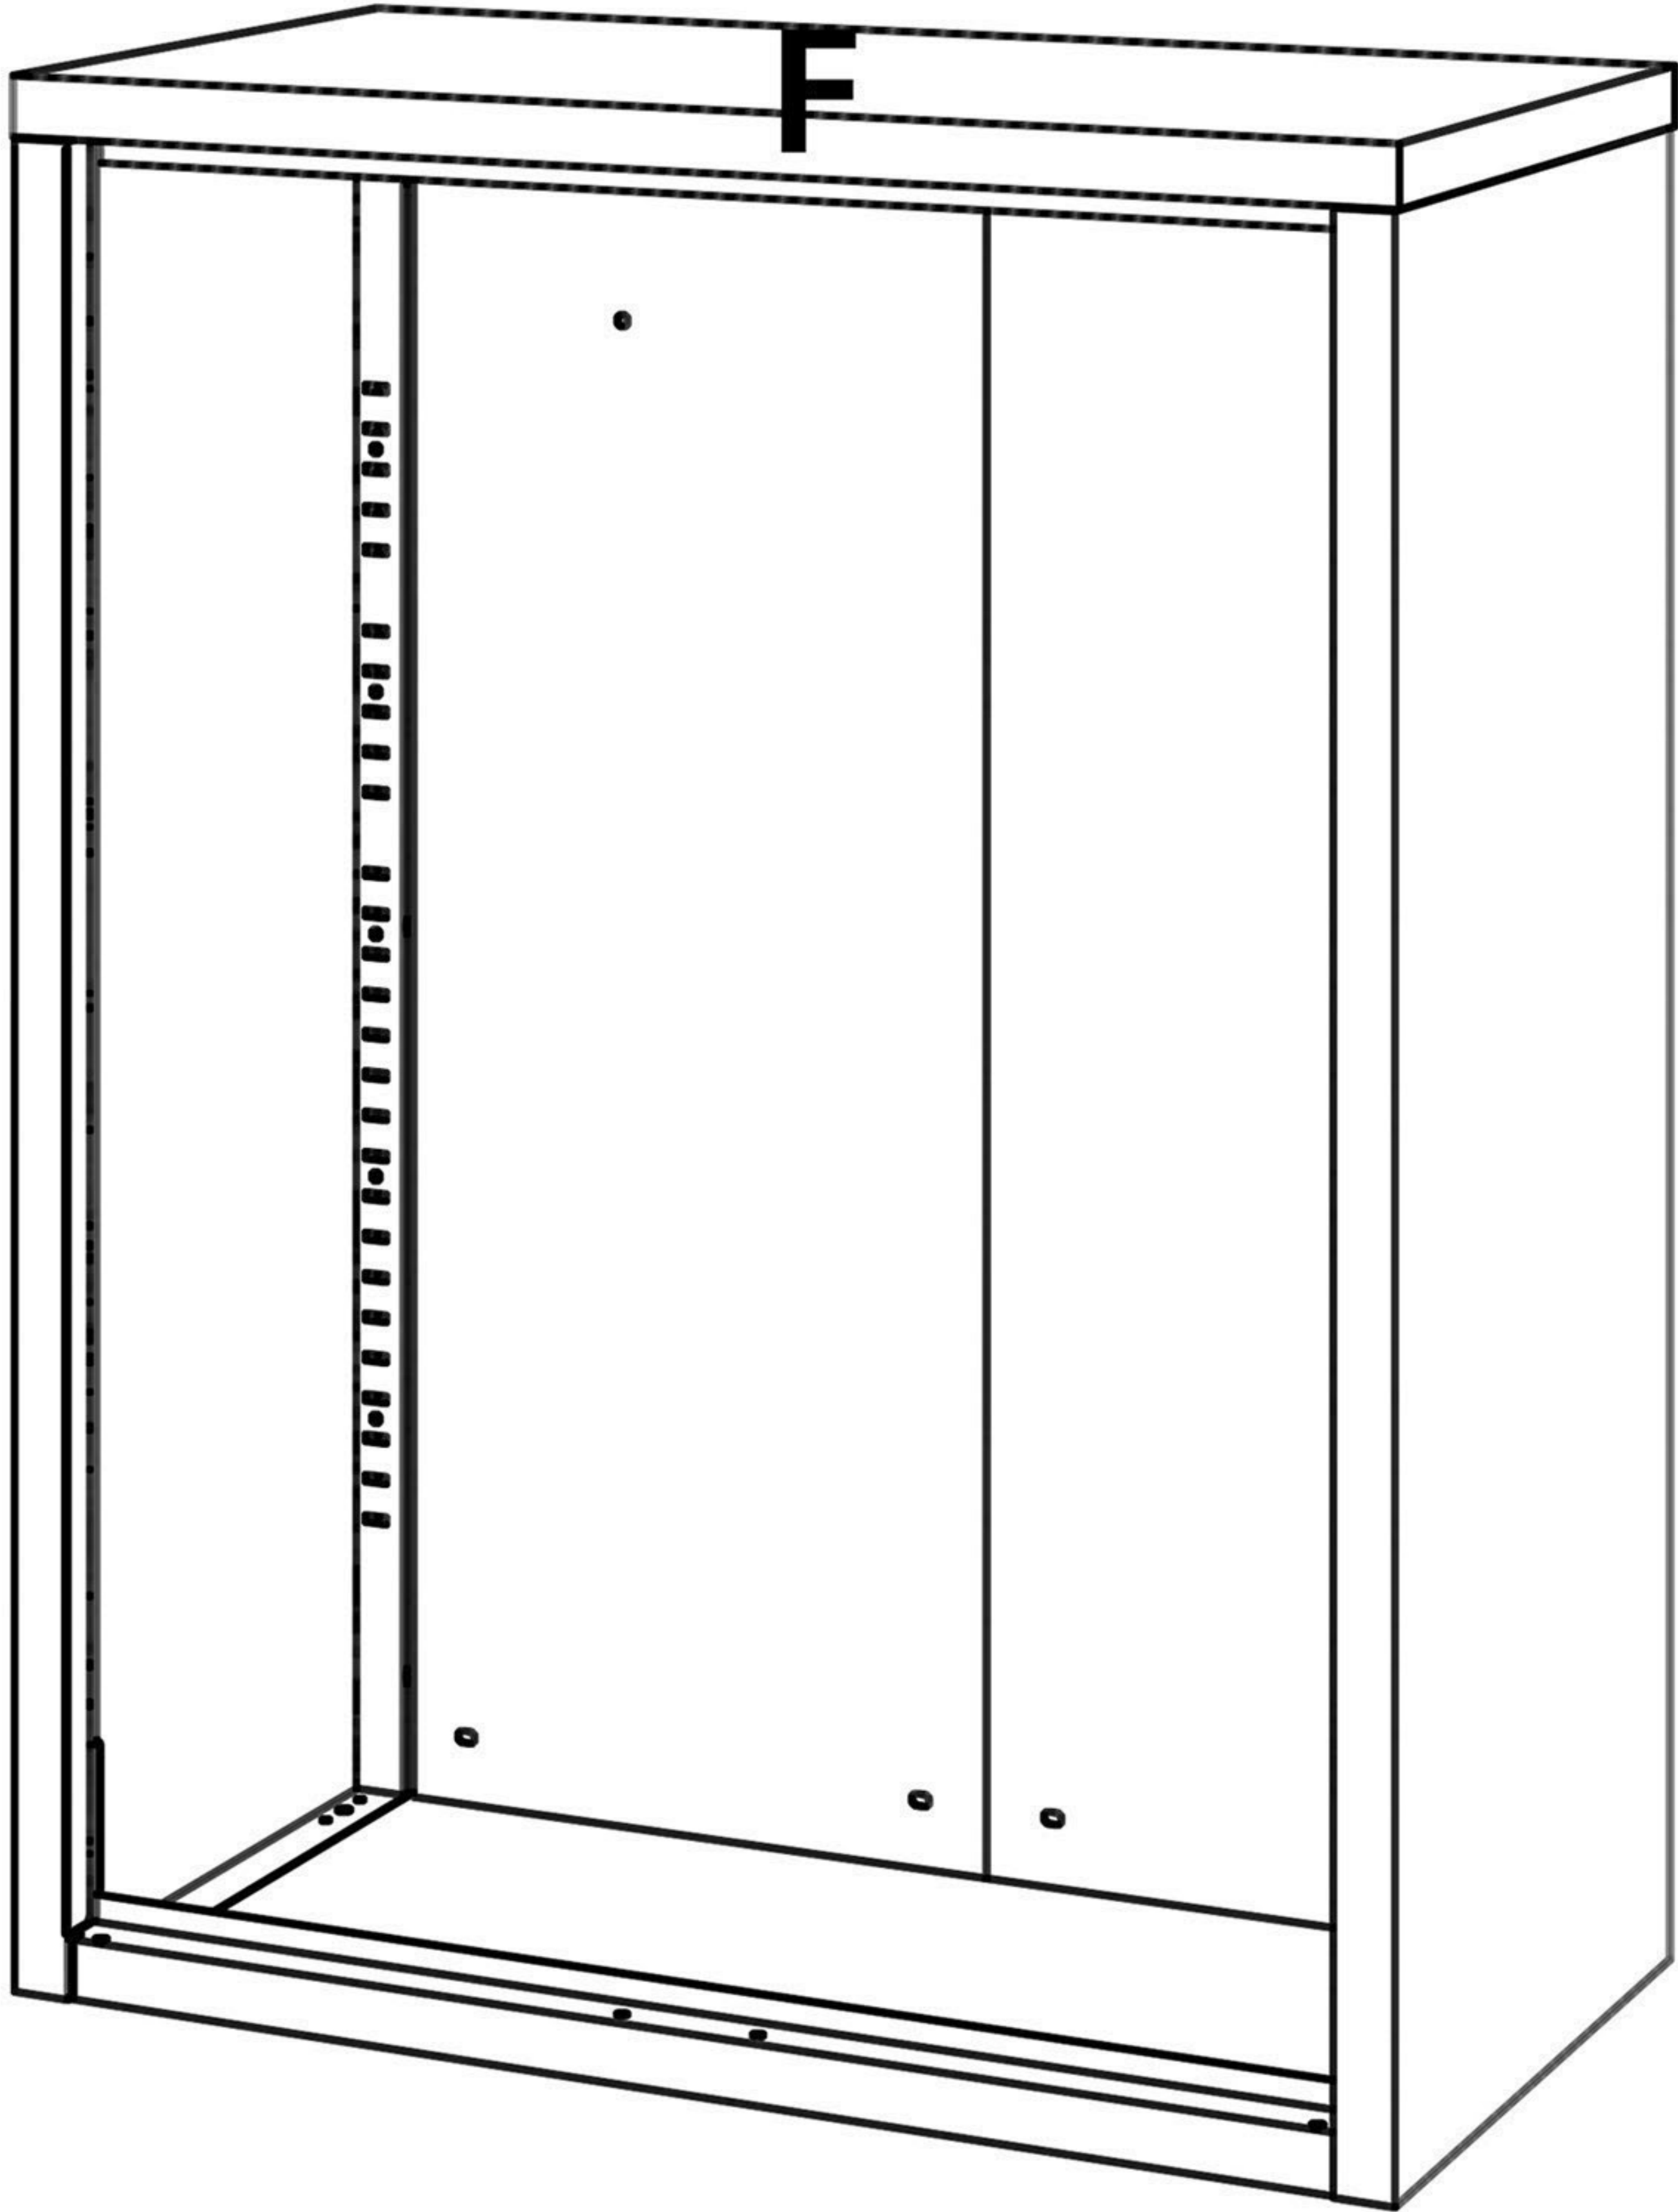



Step 6

O



4

Tilt bottom panel G into the cabinet and fix it with back panels by 4 screws O
(Ensure that the both sides of bottom panel are inserted into the slots of side panels)

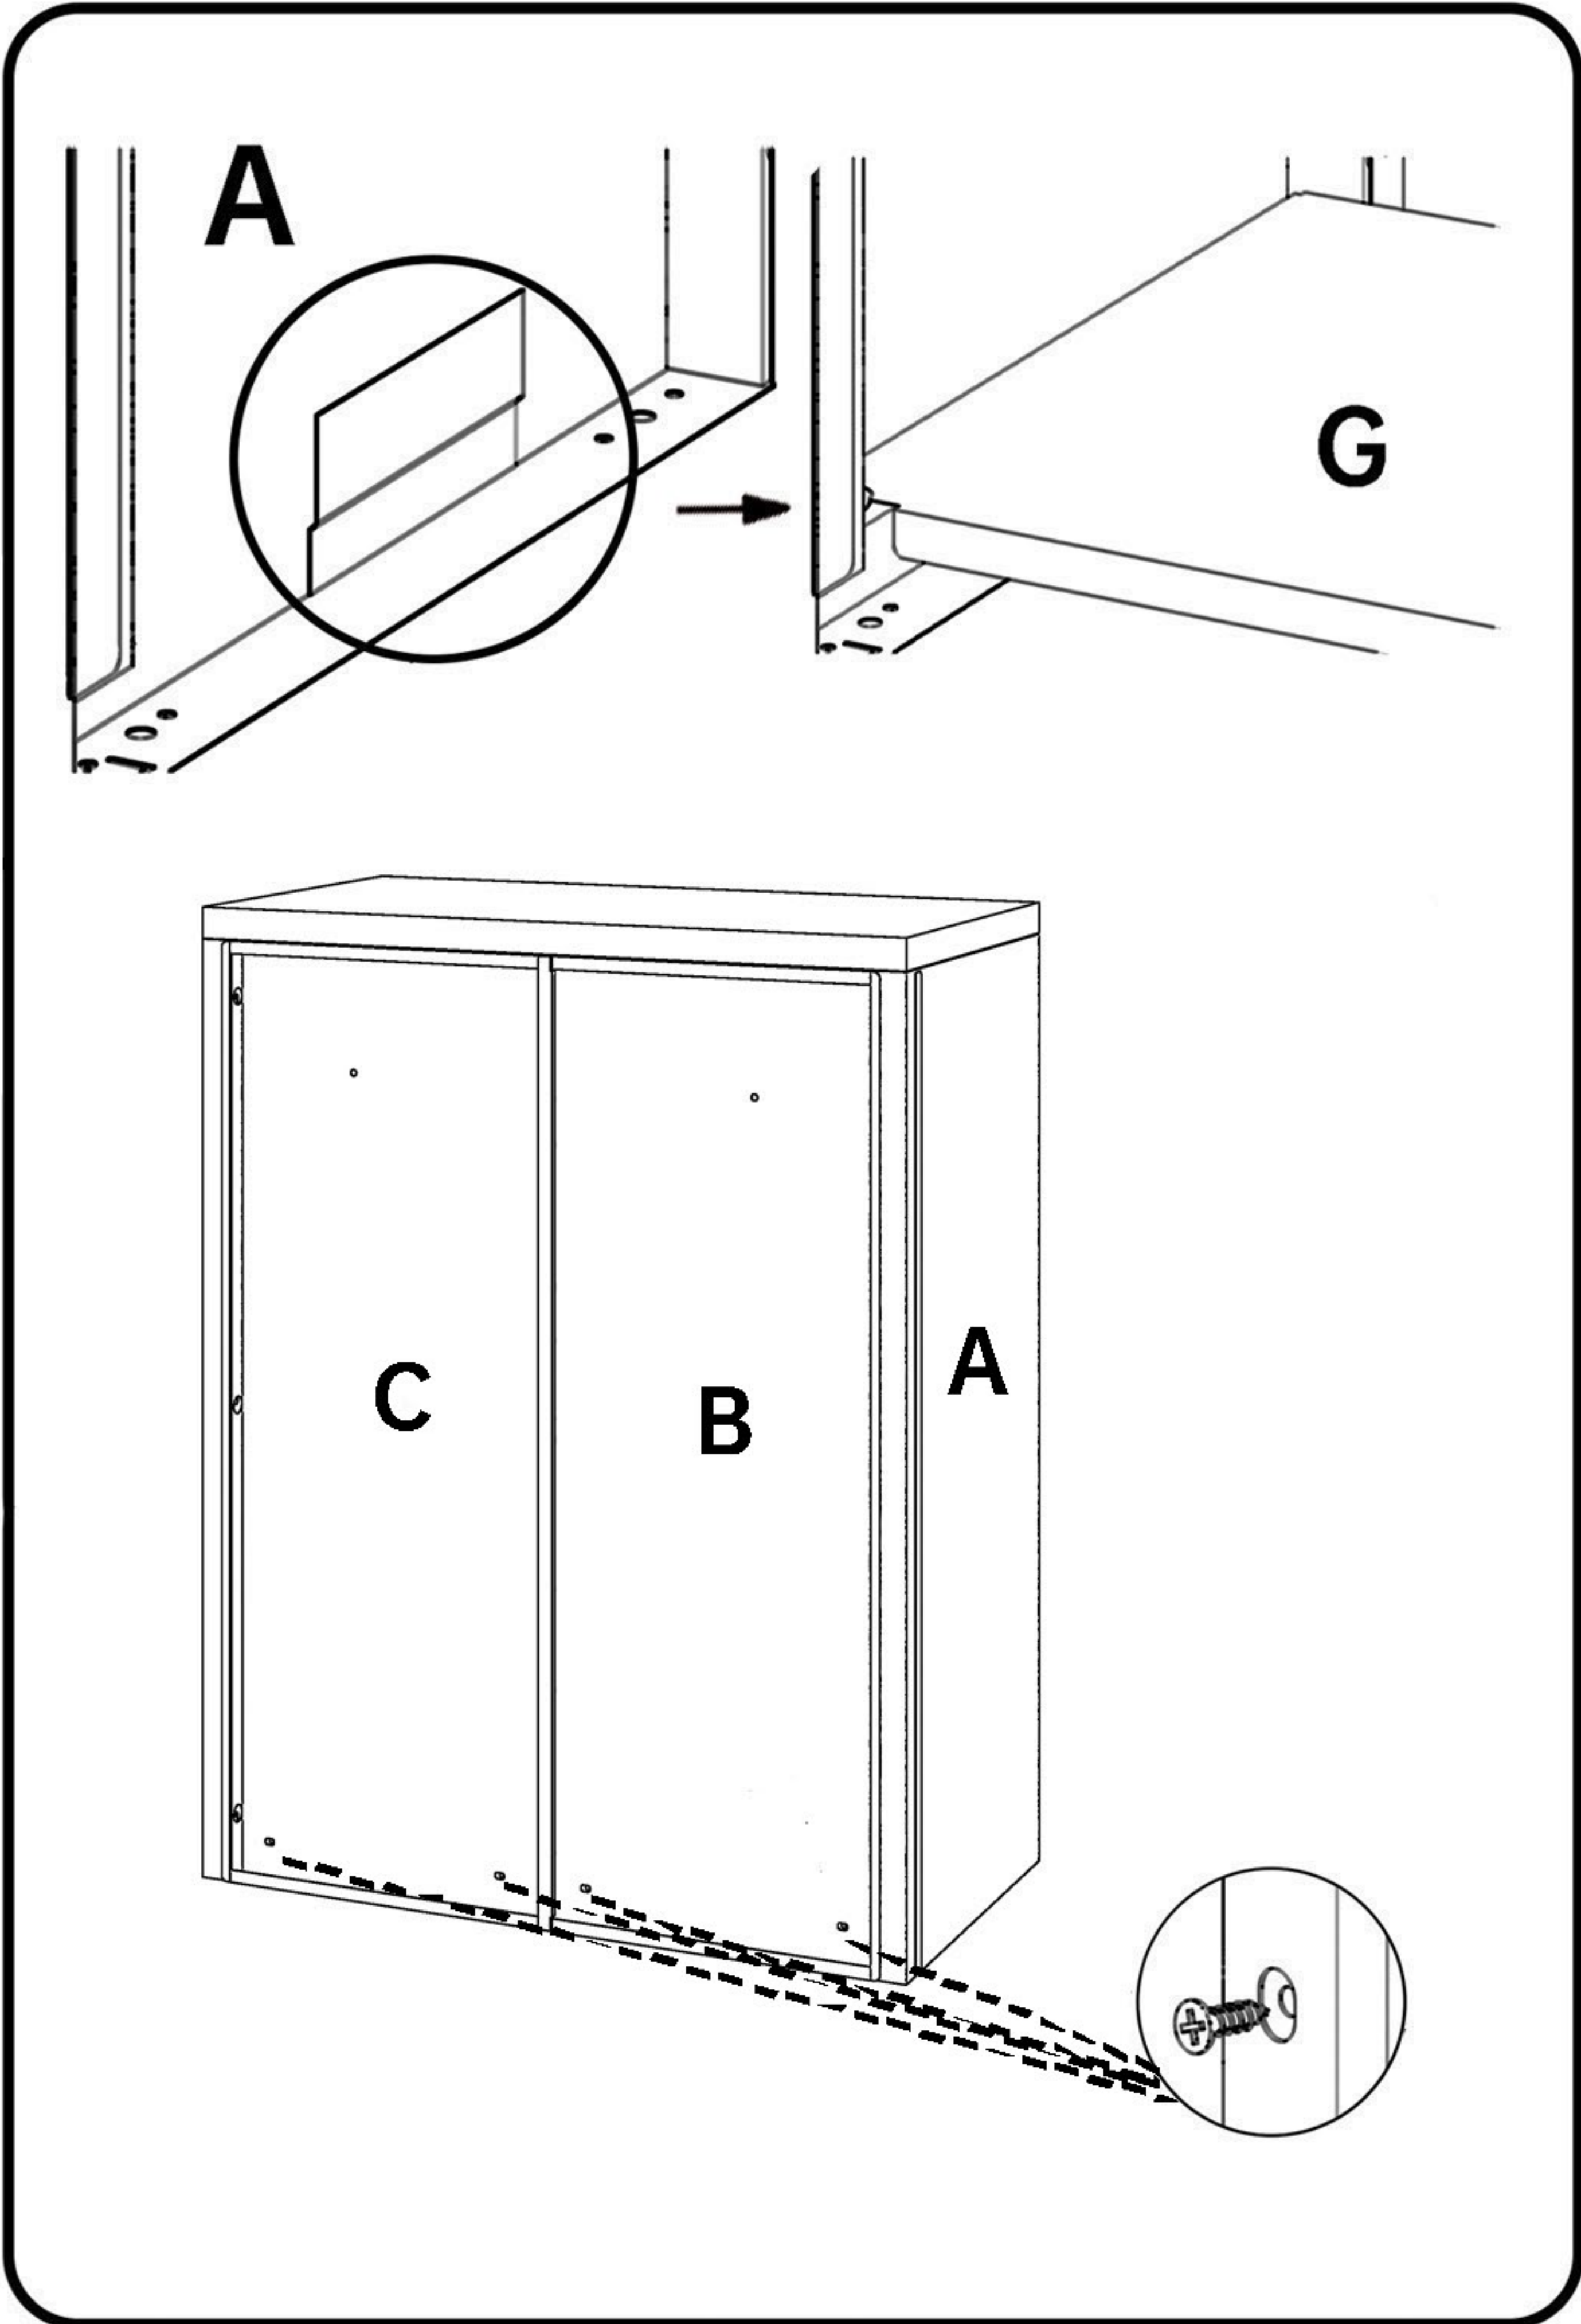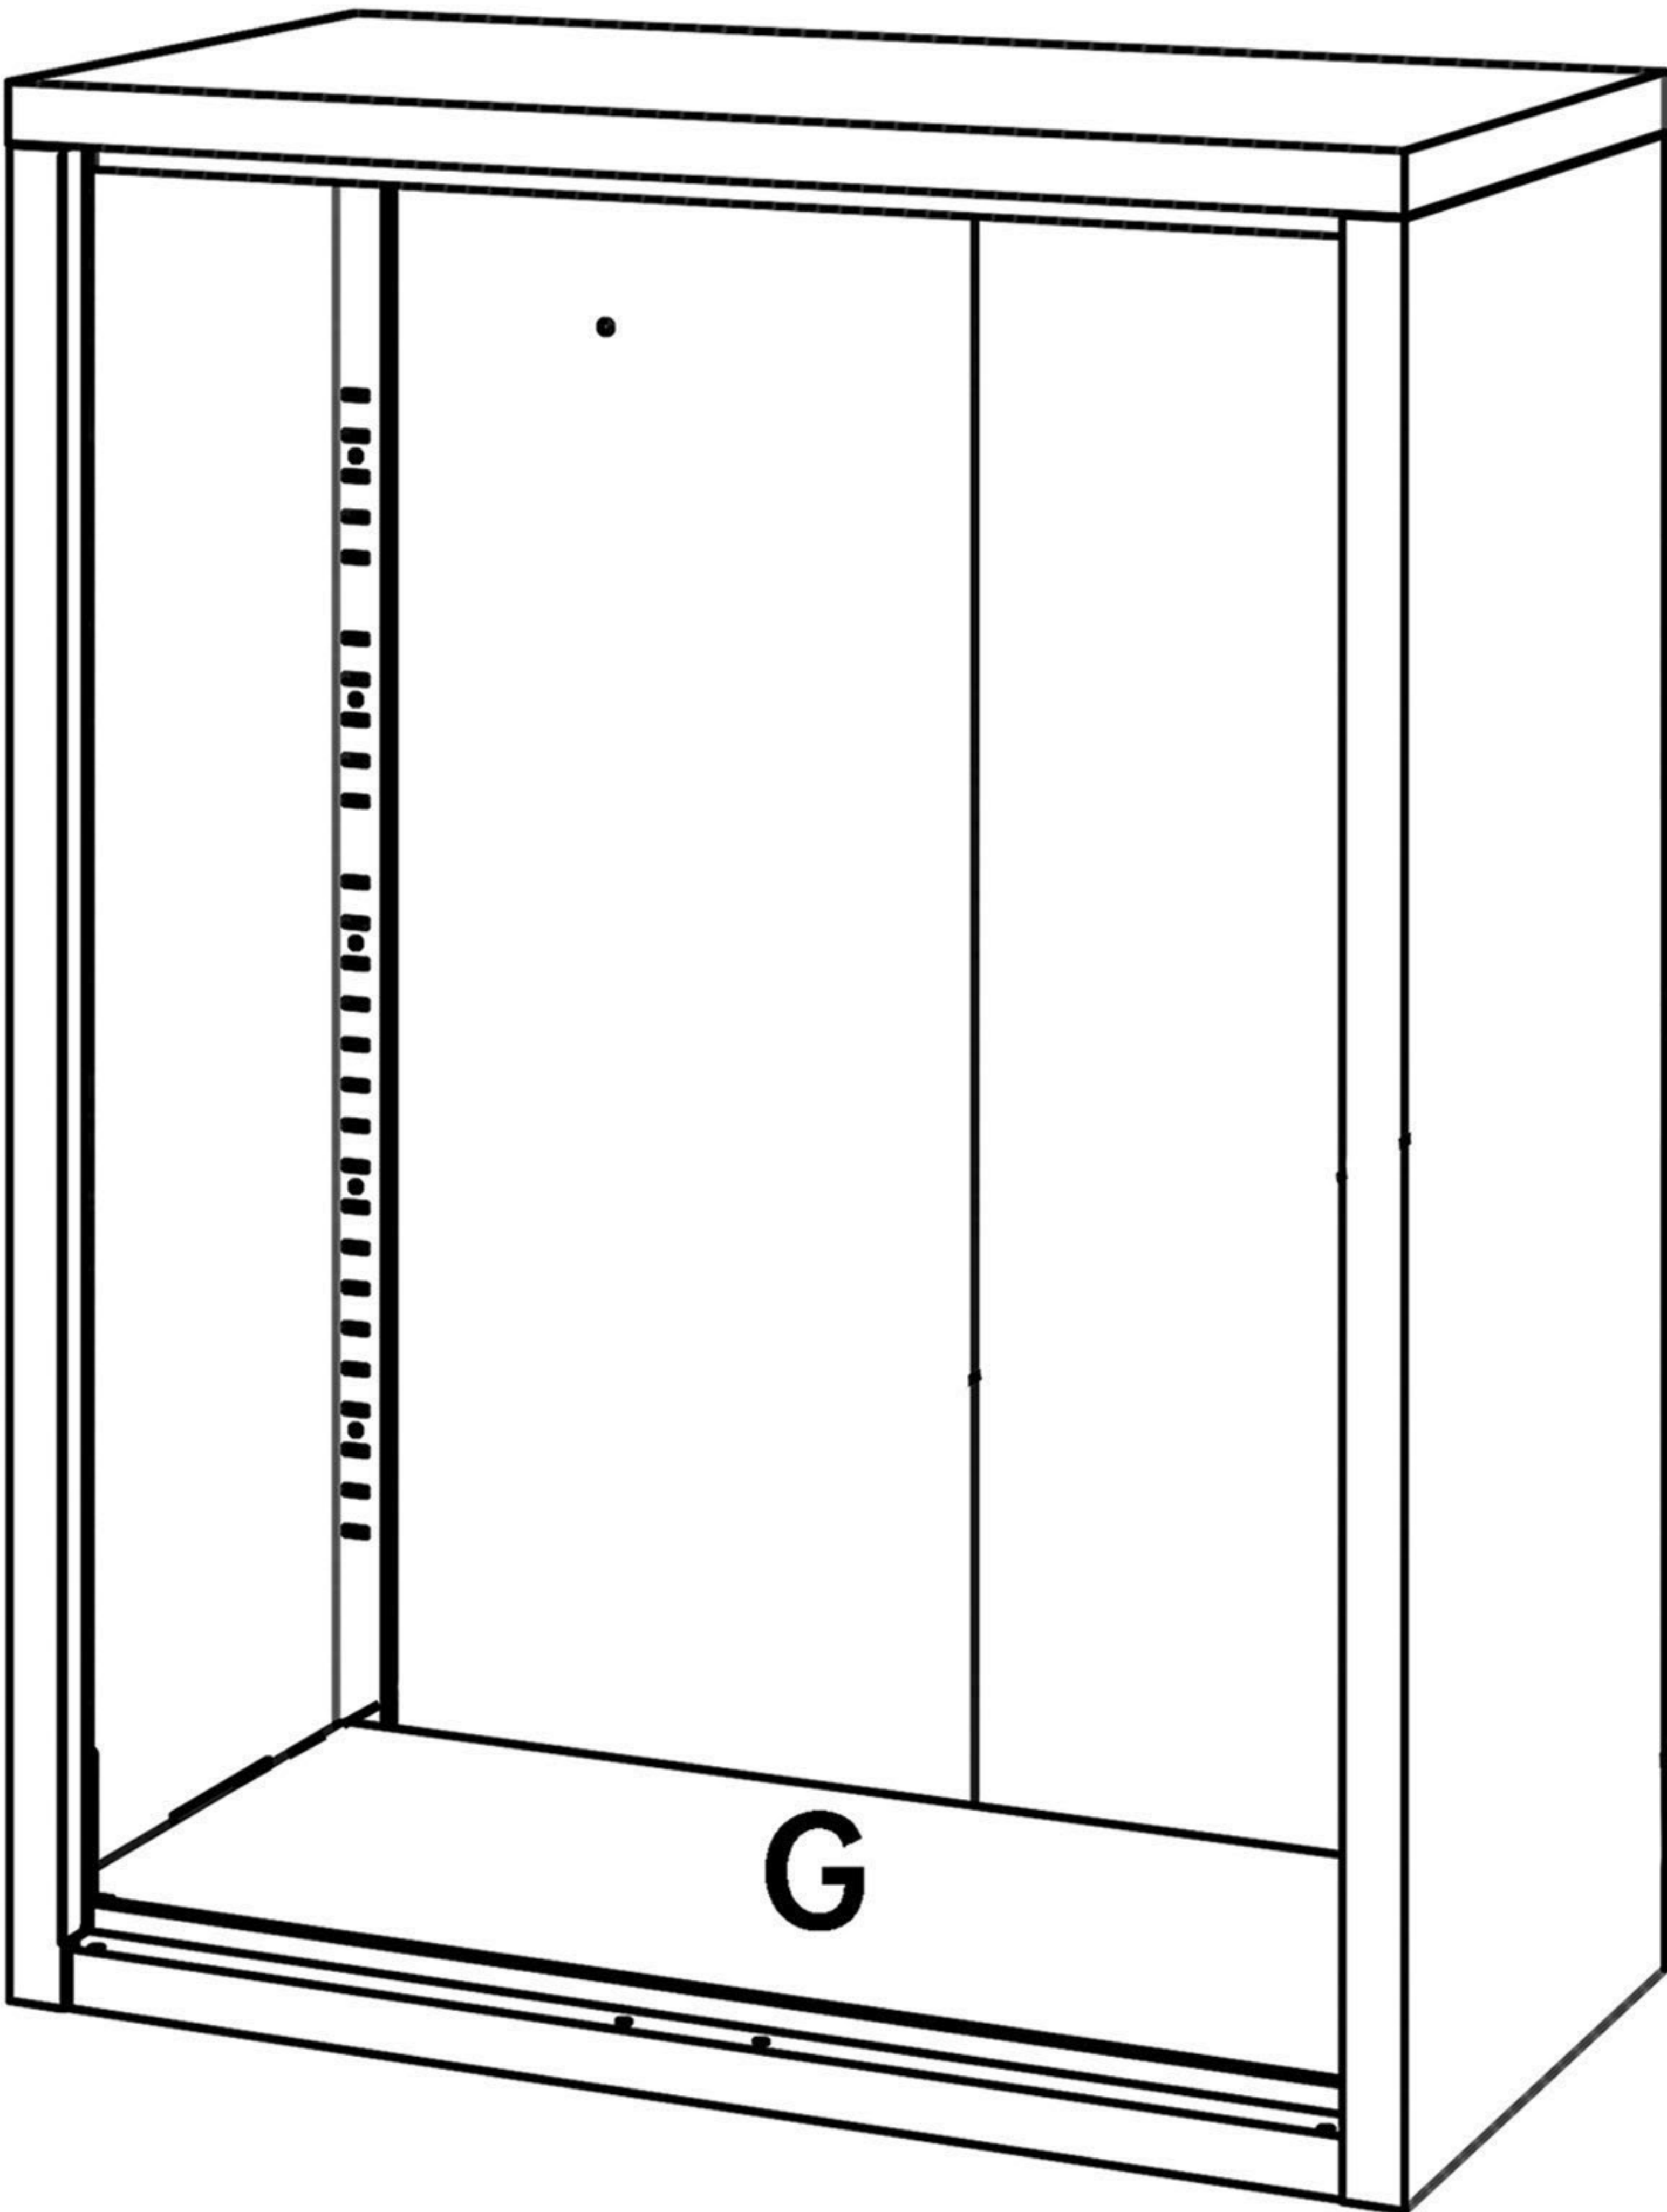


Step 7

Push 2 bottom small pieces upward, then install 4 supports H and fix them with 16 screws O

O



16

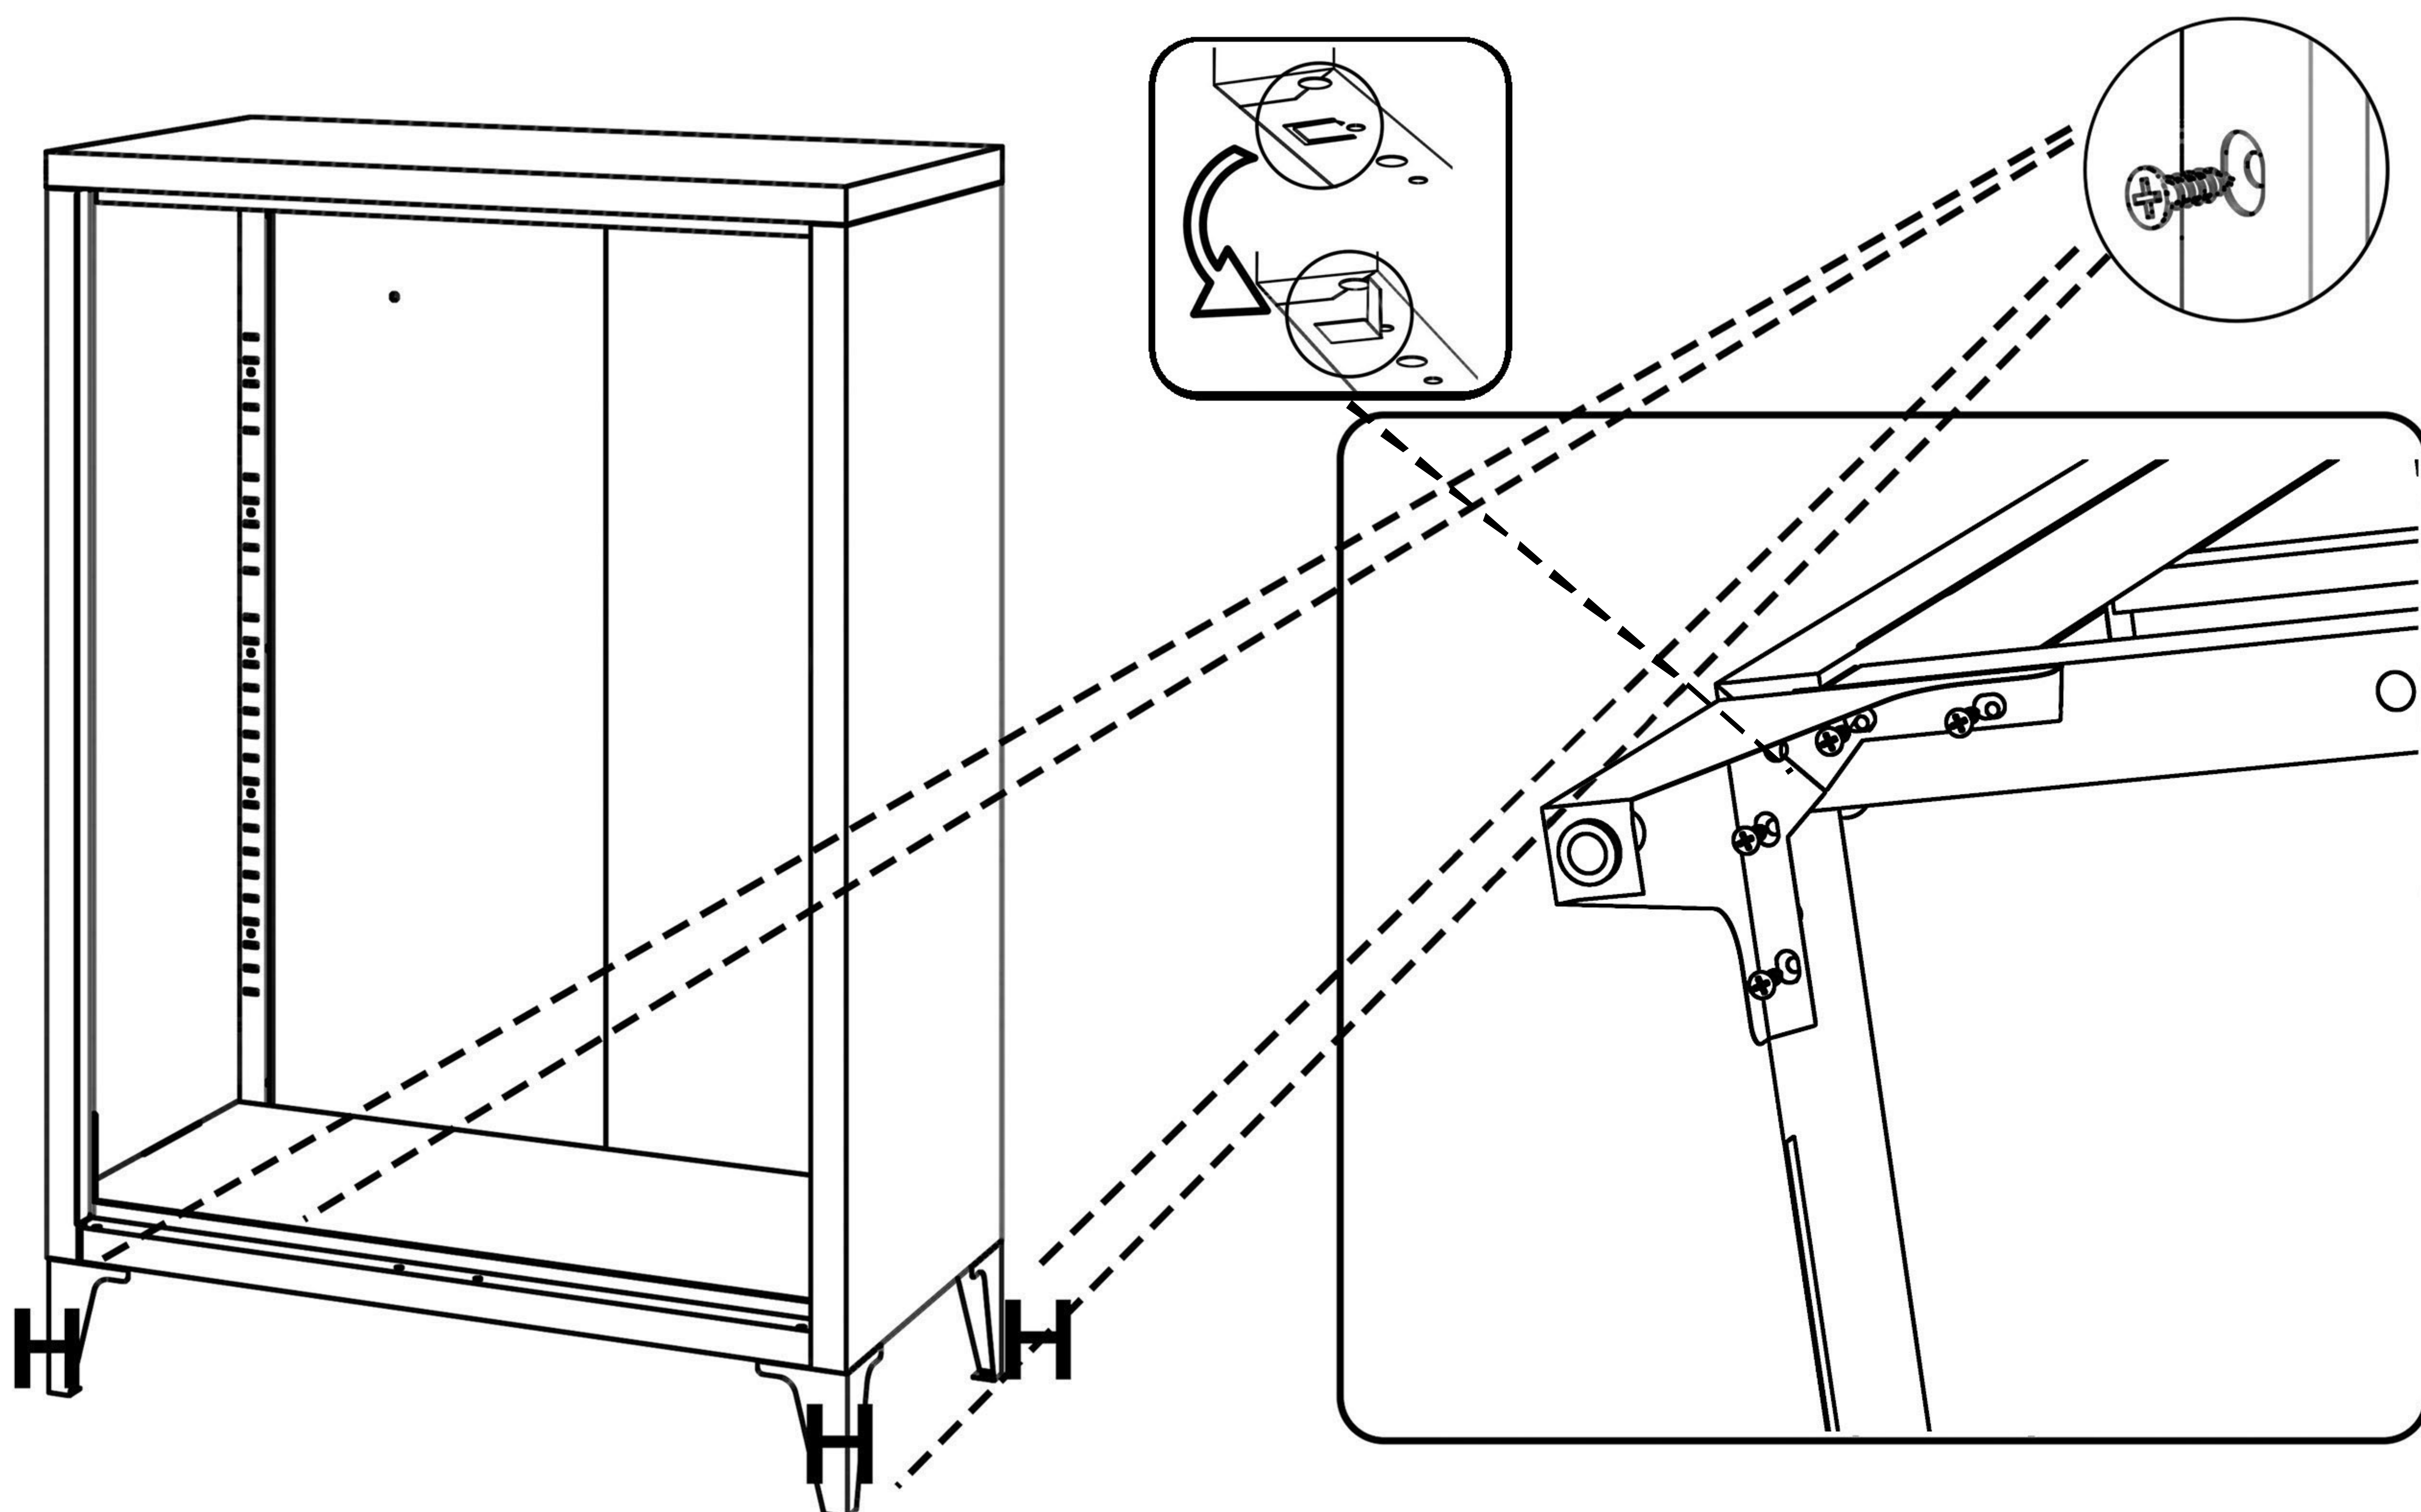


Step 8


Rotate and install 4 feet M on the supports H

Tips: If the ground is uneven, you can rotate the feet to adjust, which will solve the problem of the door not being easy to open or close.

M

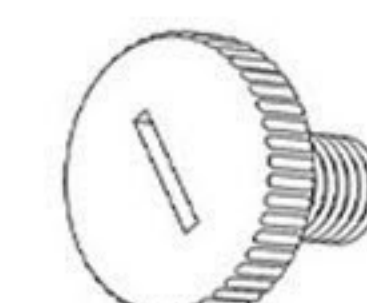


4

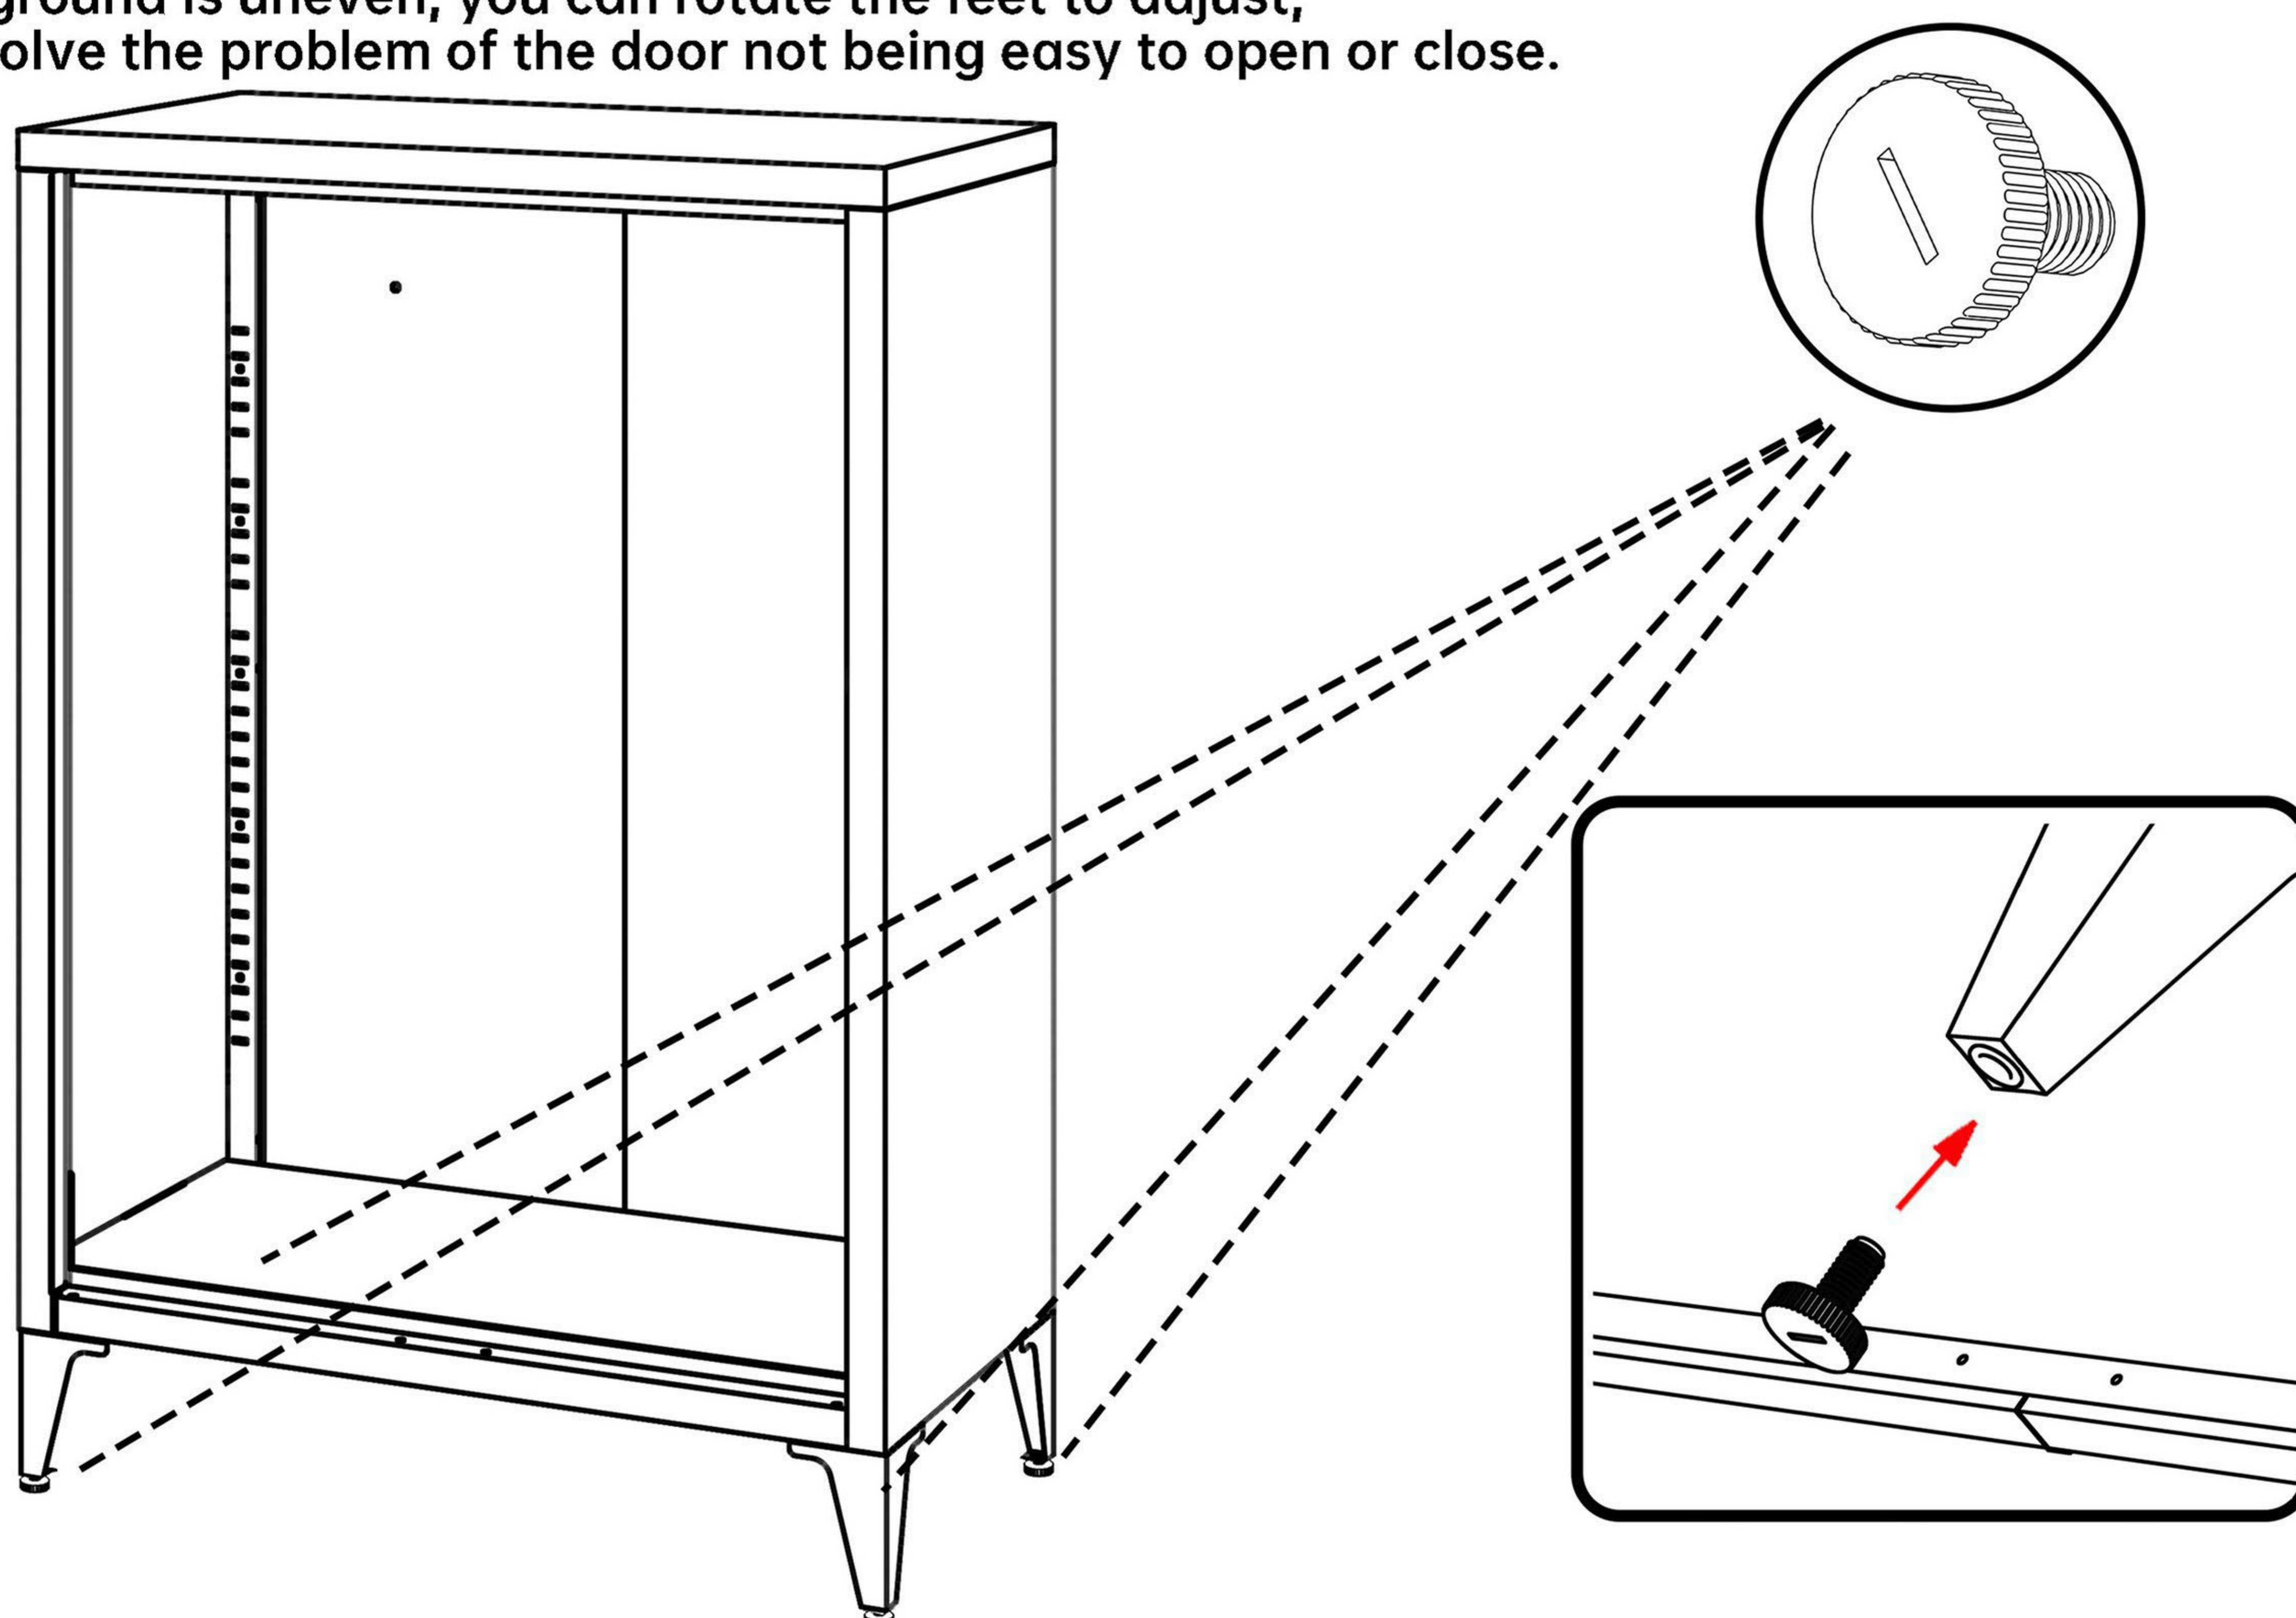




Step 9

U

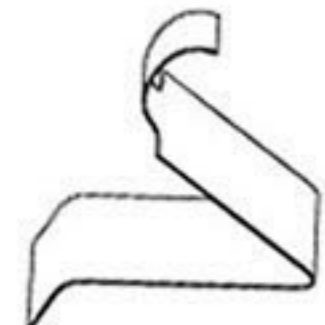

8


Install 8 shelf clasps U on the side panels and put 2 shelves I on them
(Ensure that 4 clasps for 1 shelf are at the same level)

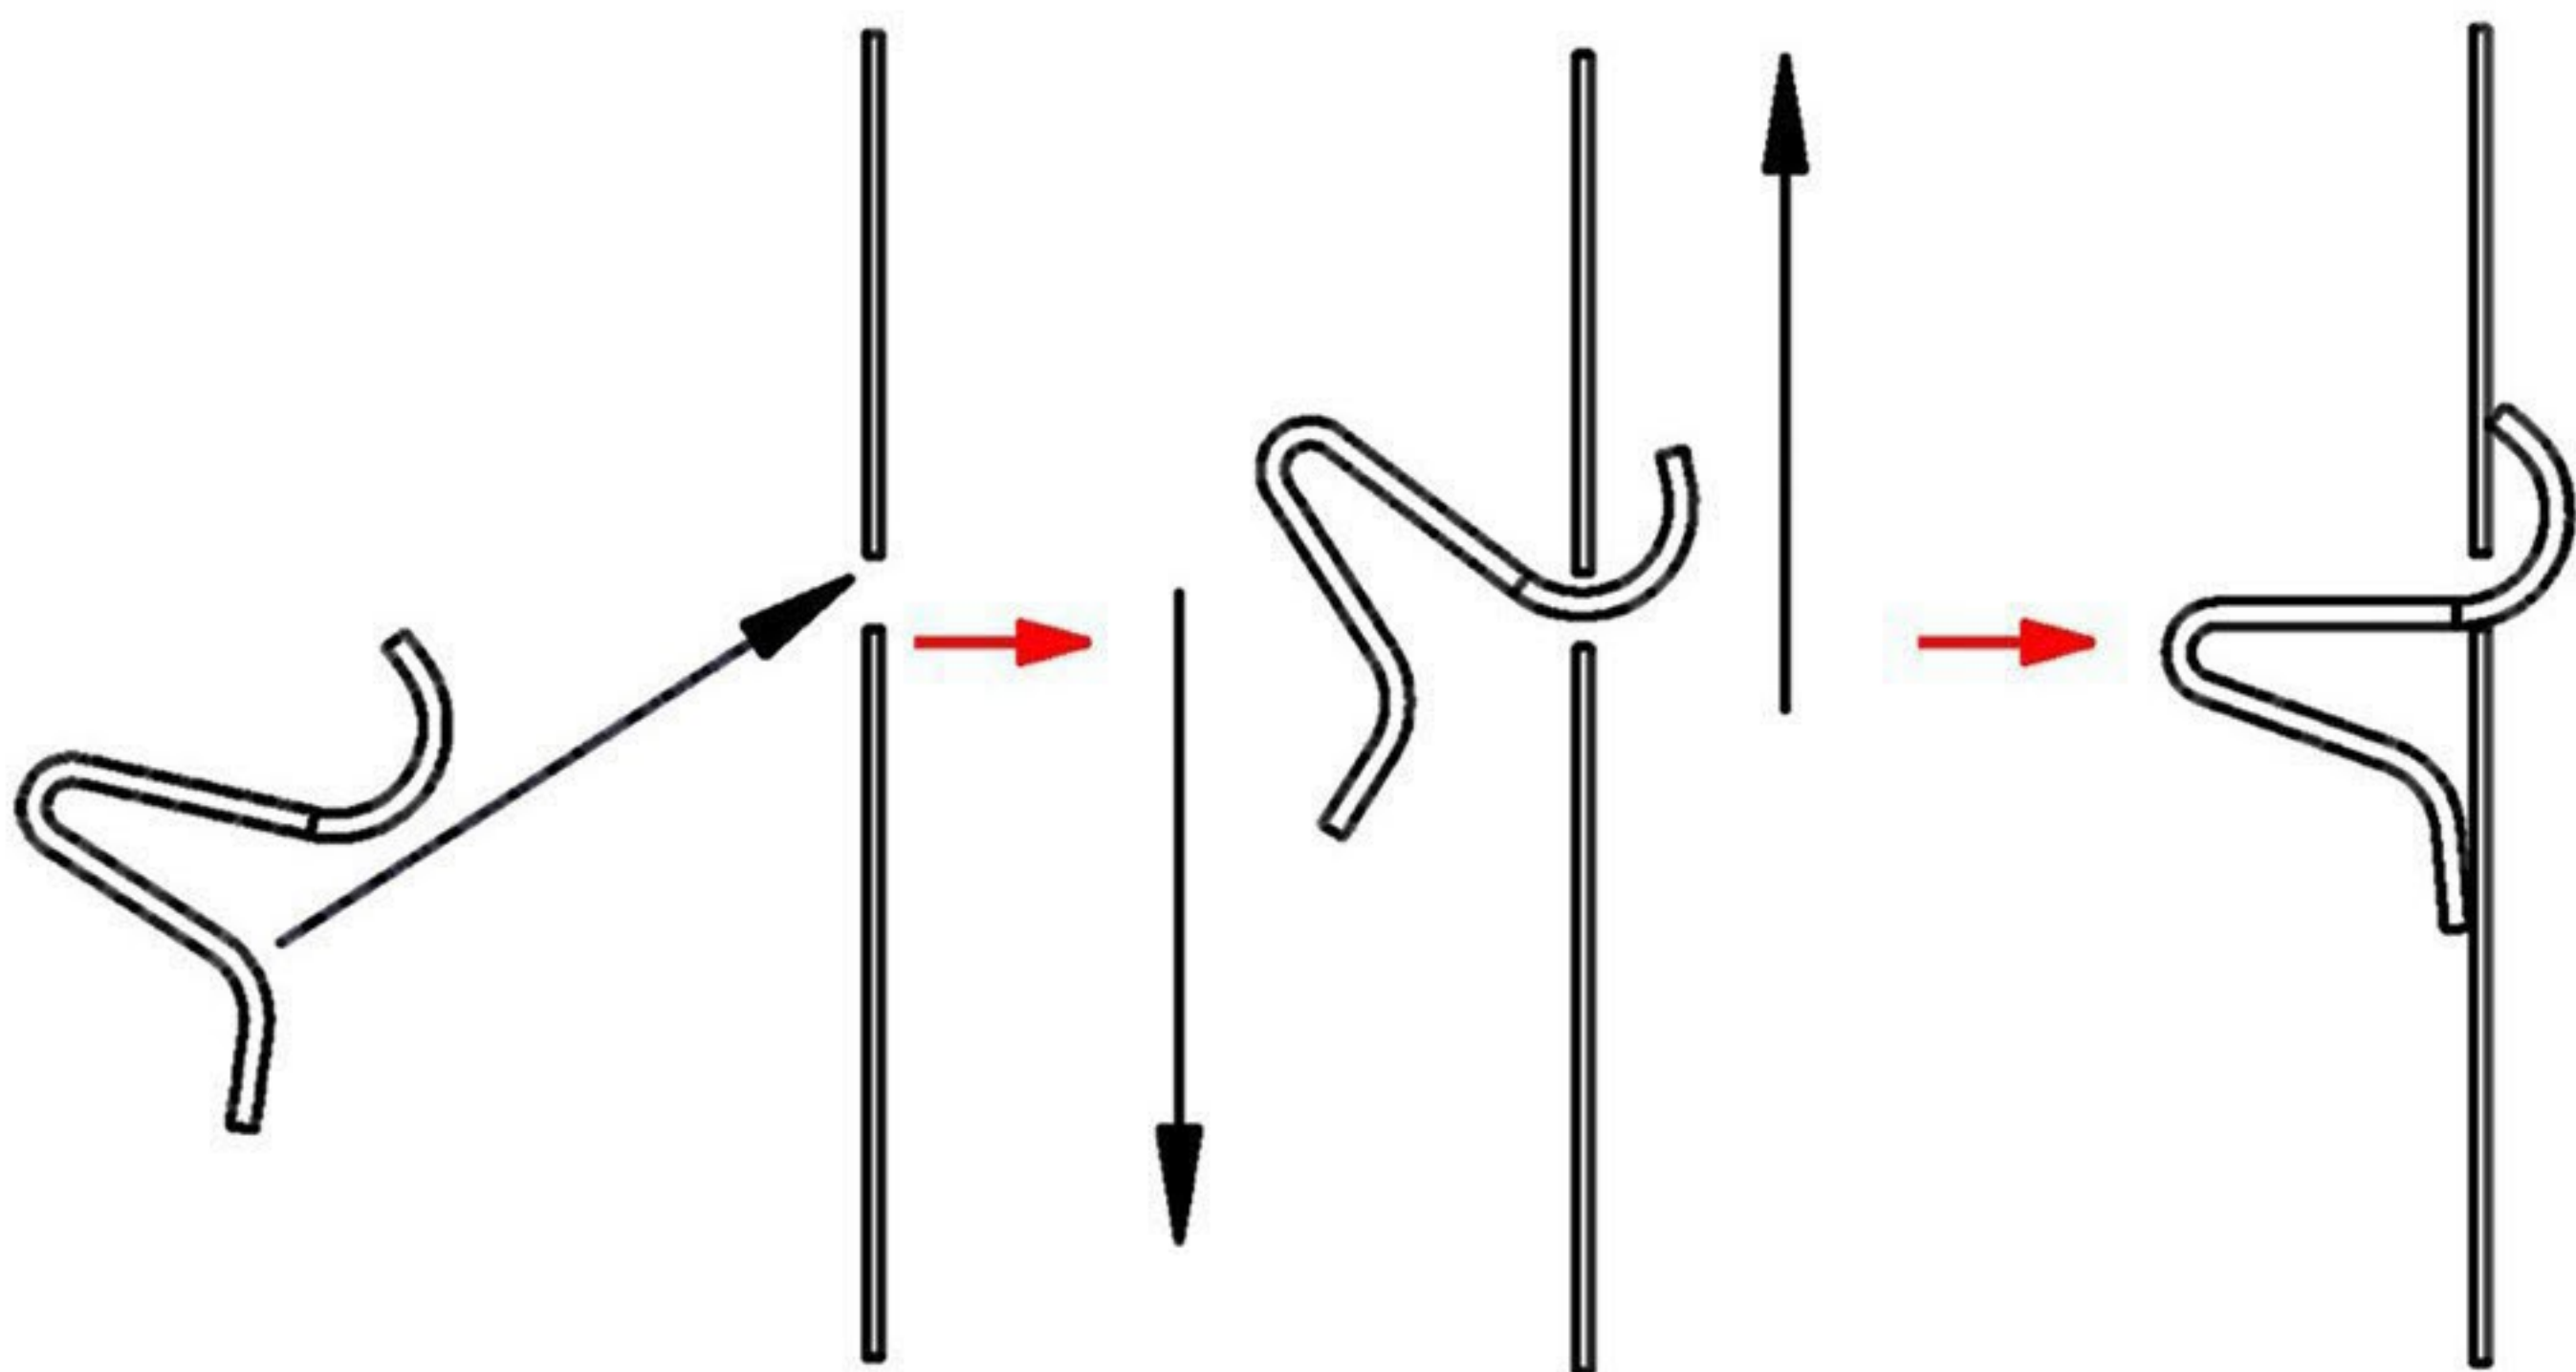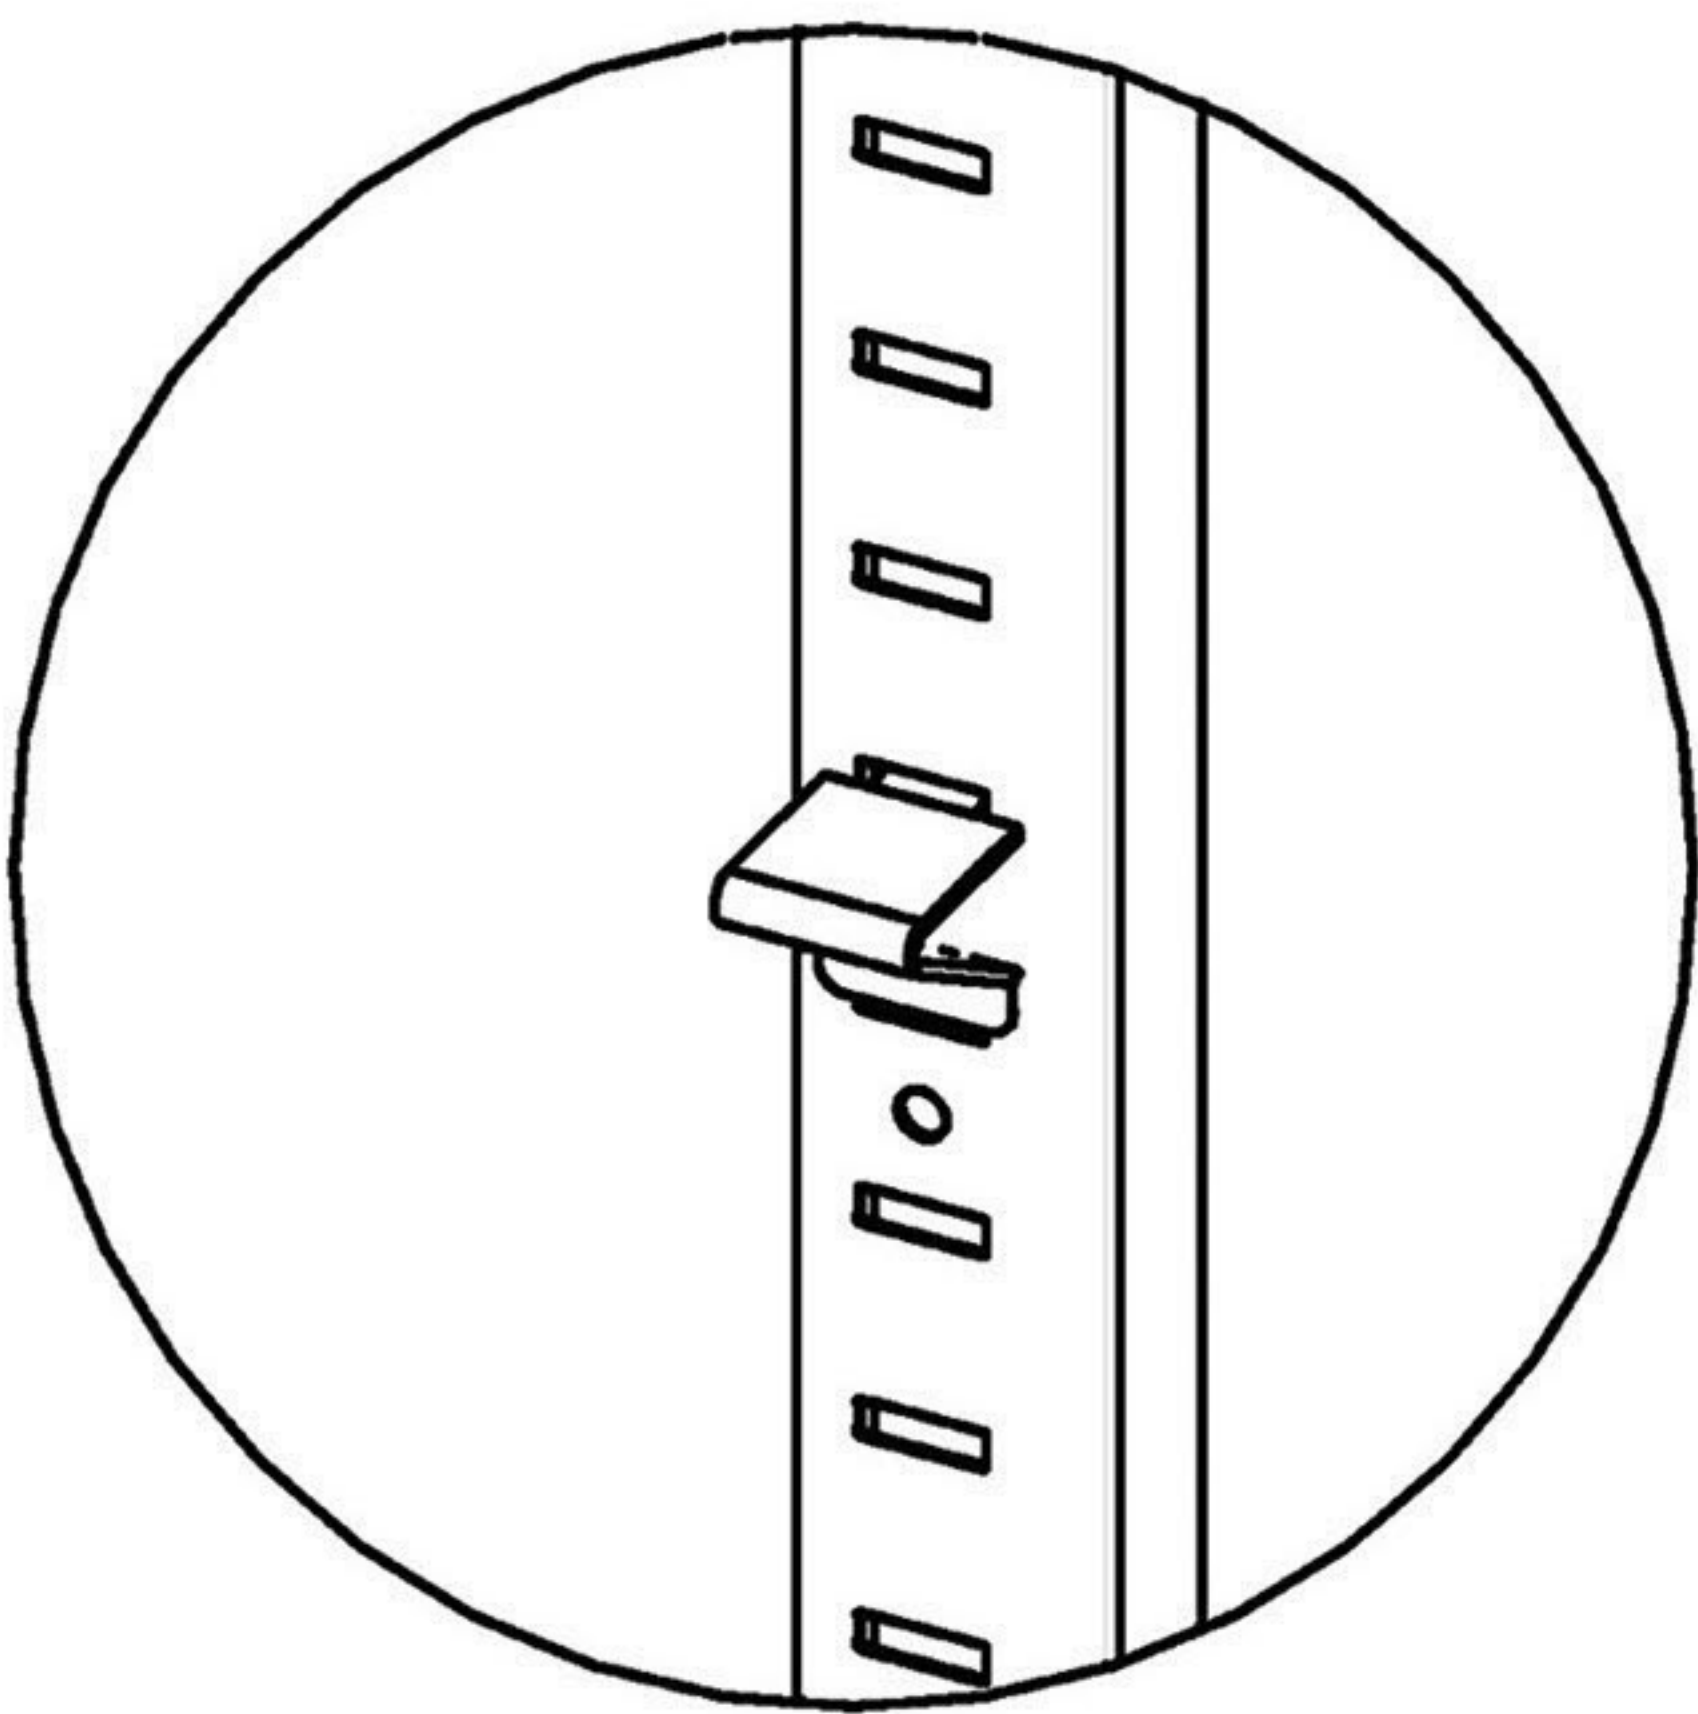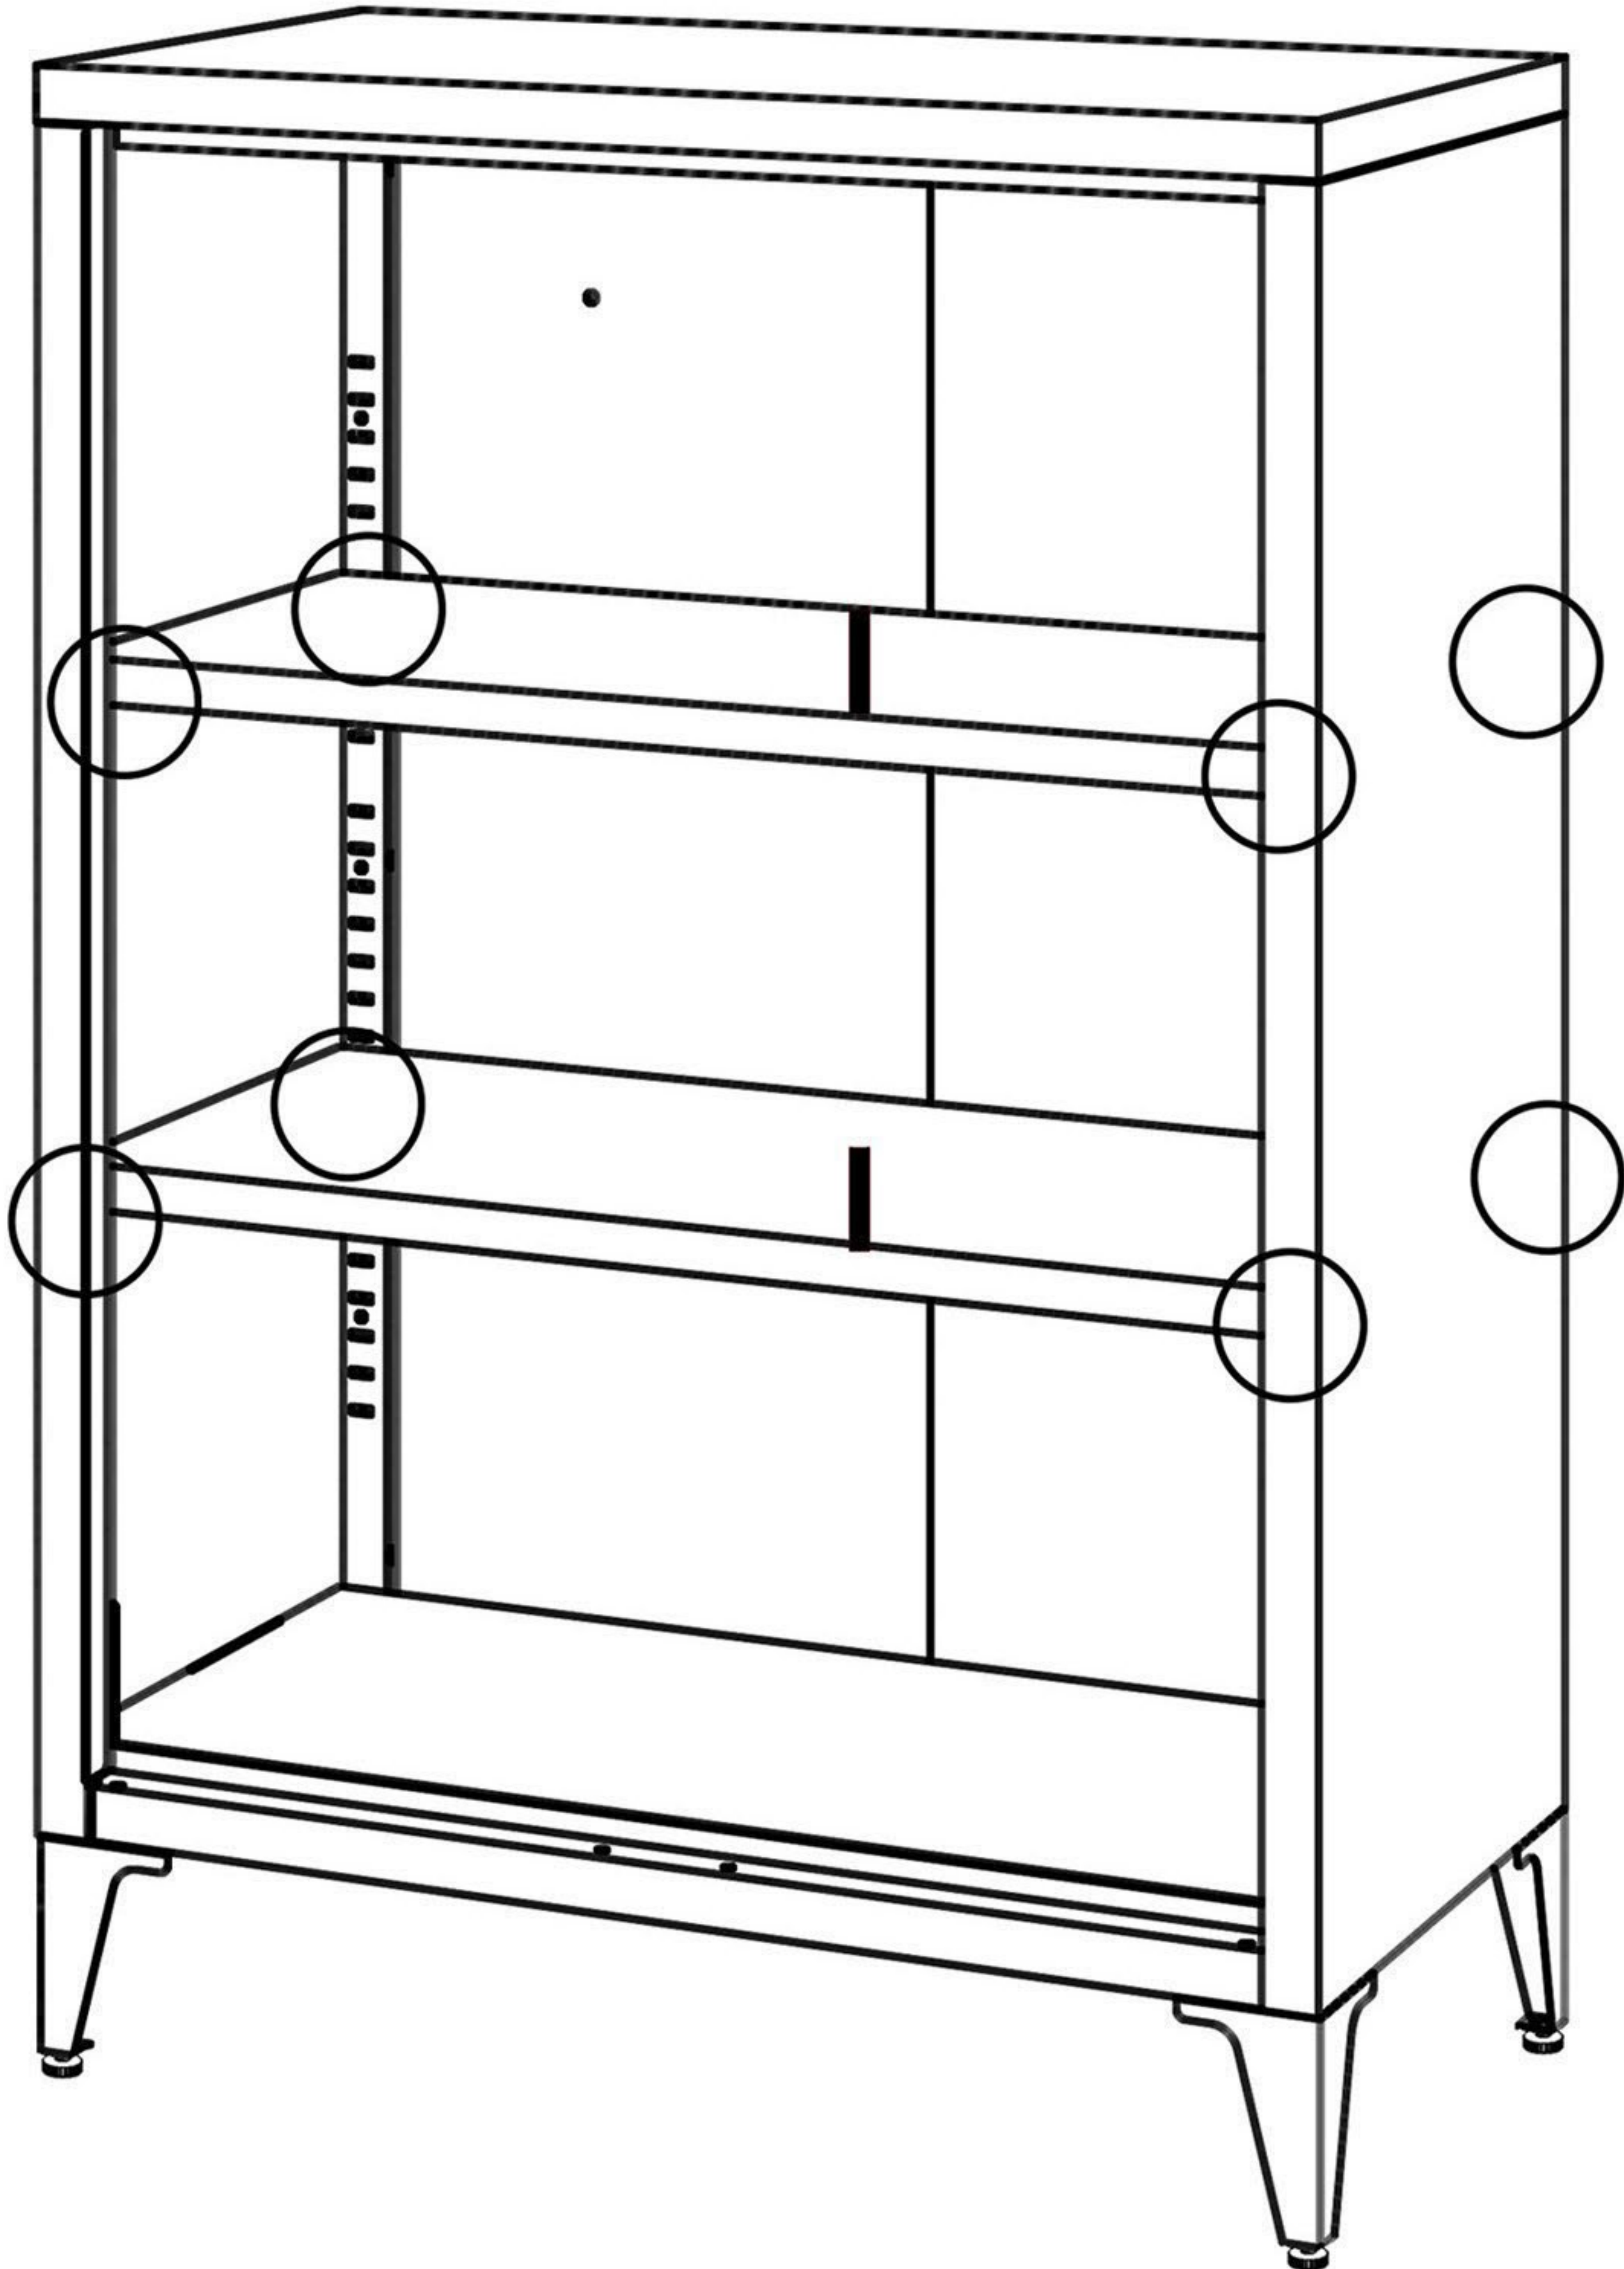

Step 10



R



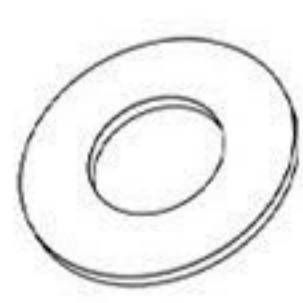


2

Install door pivots R into the bottom holes of the doors (0/1 shim can be used to adjust the seam),
then press the spring shafts Q to pop out

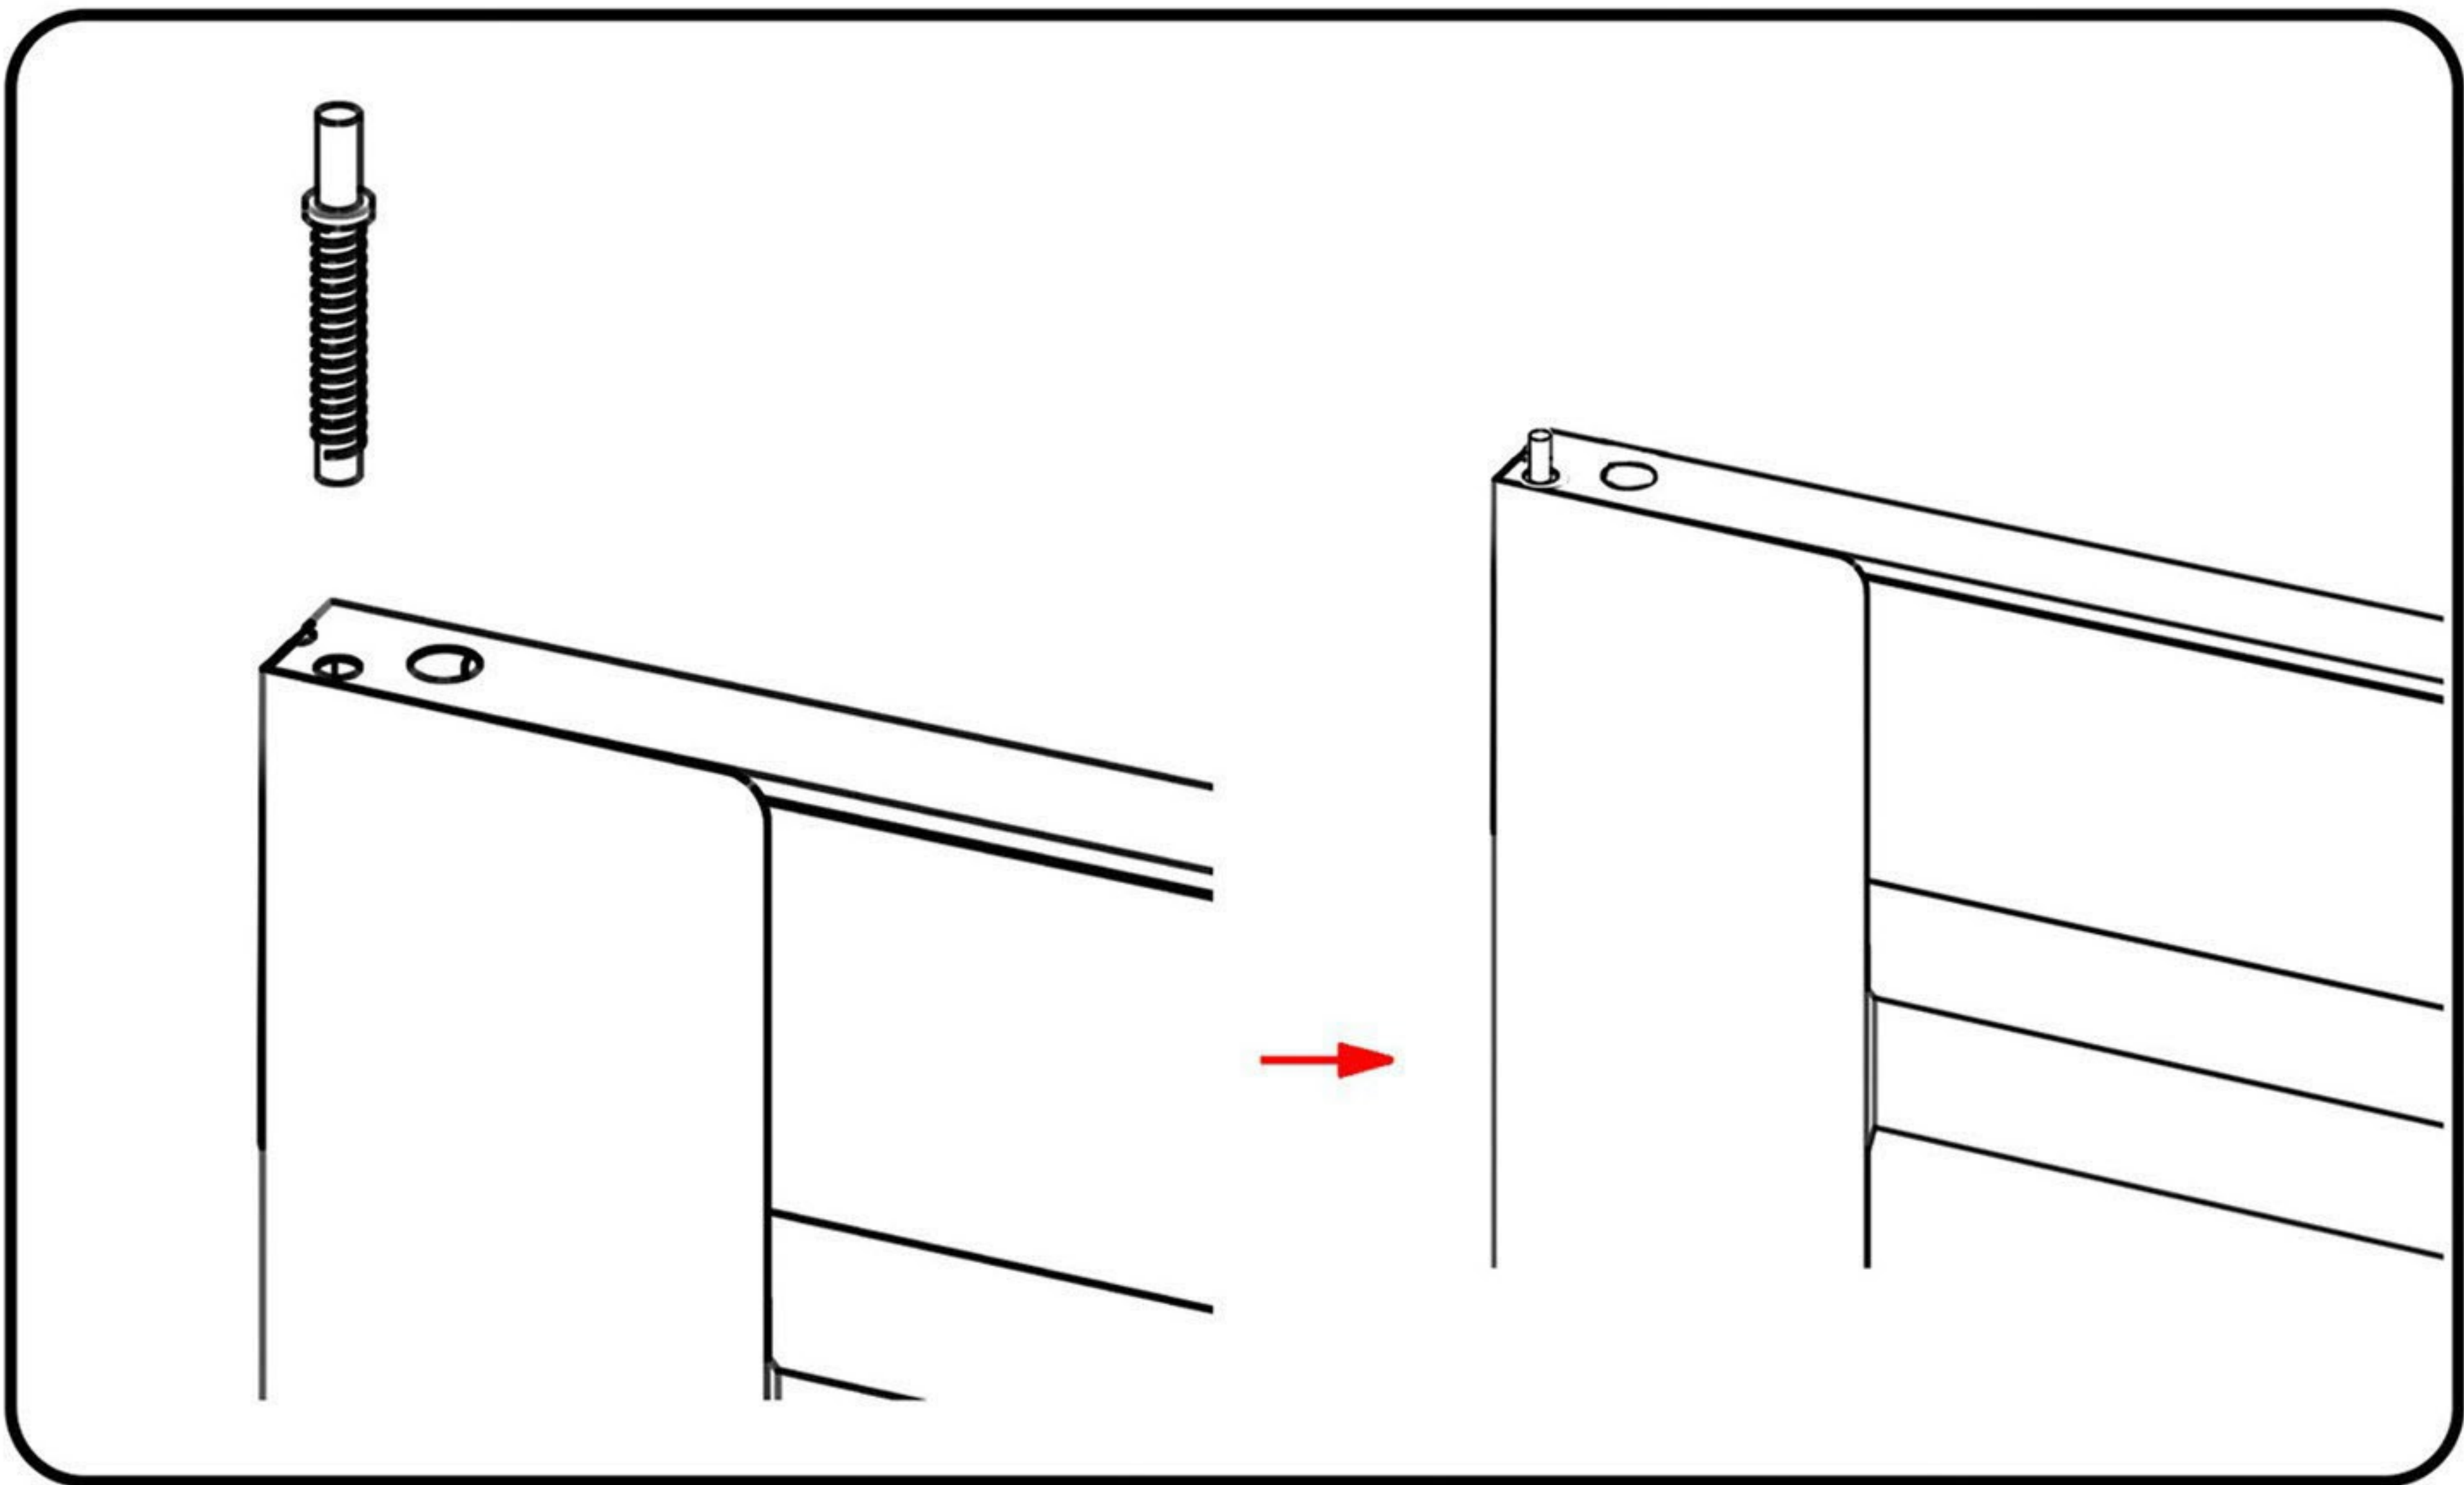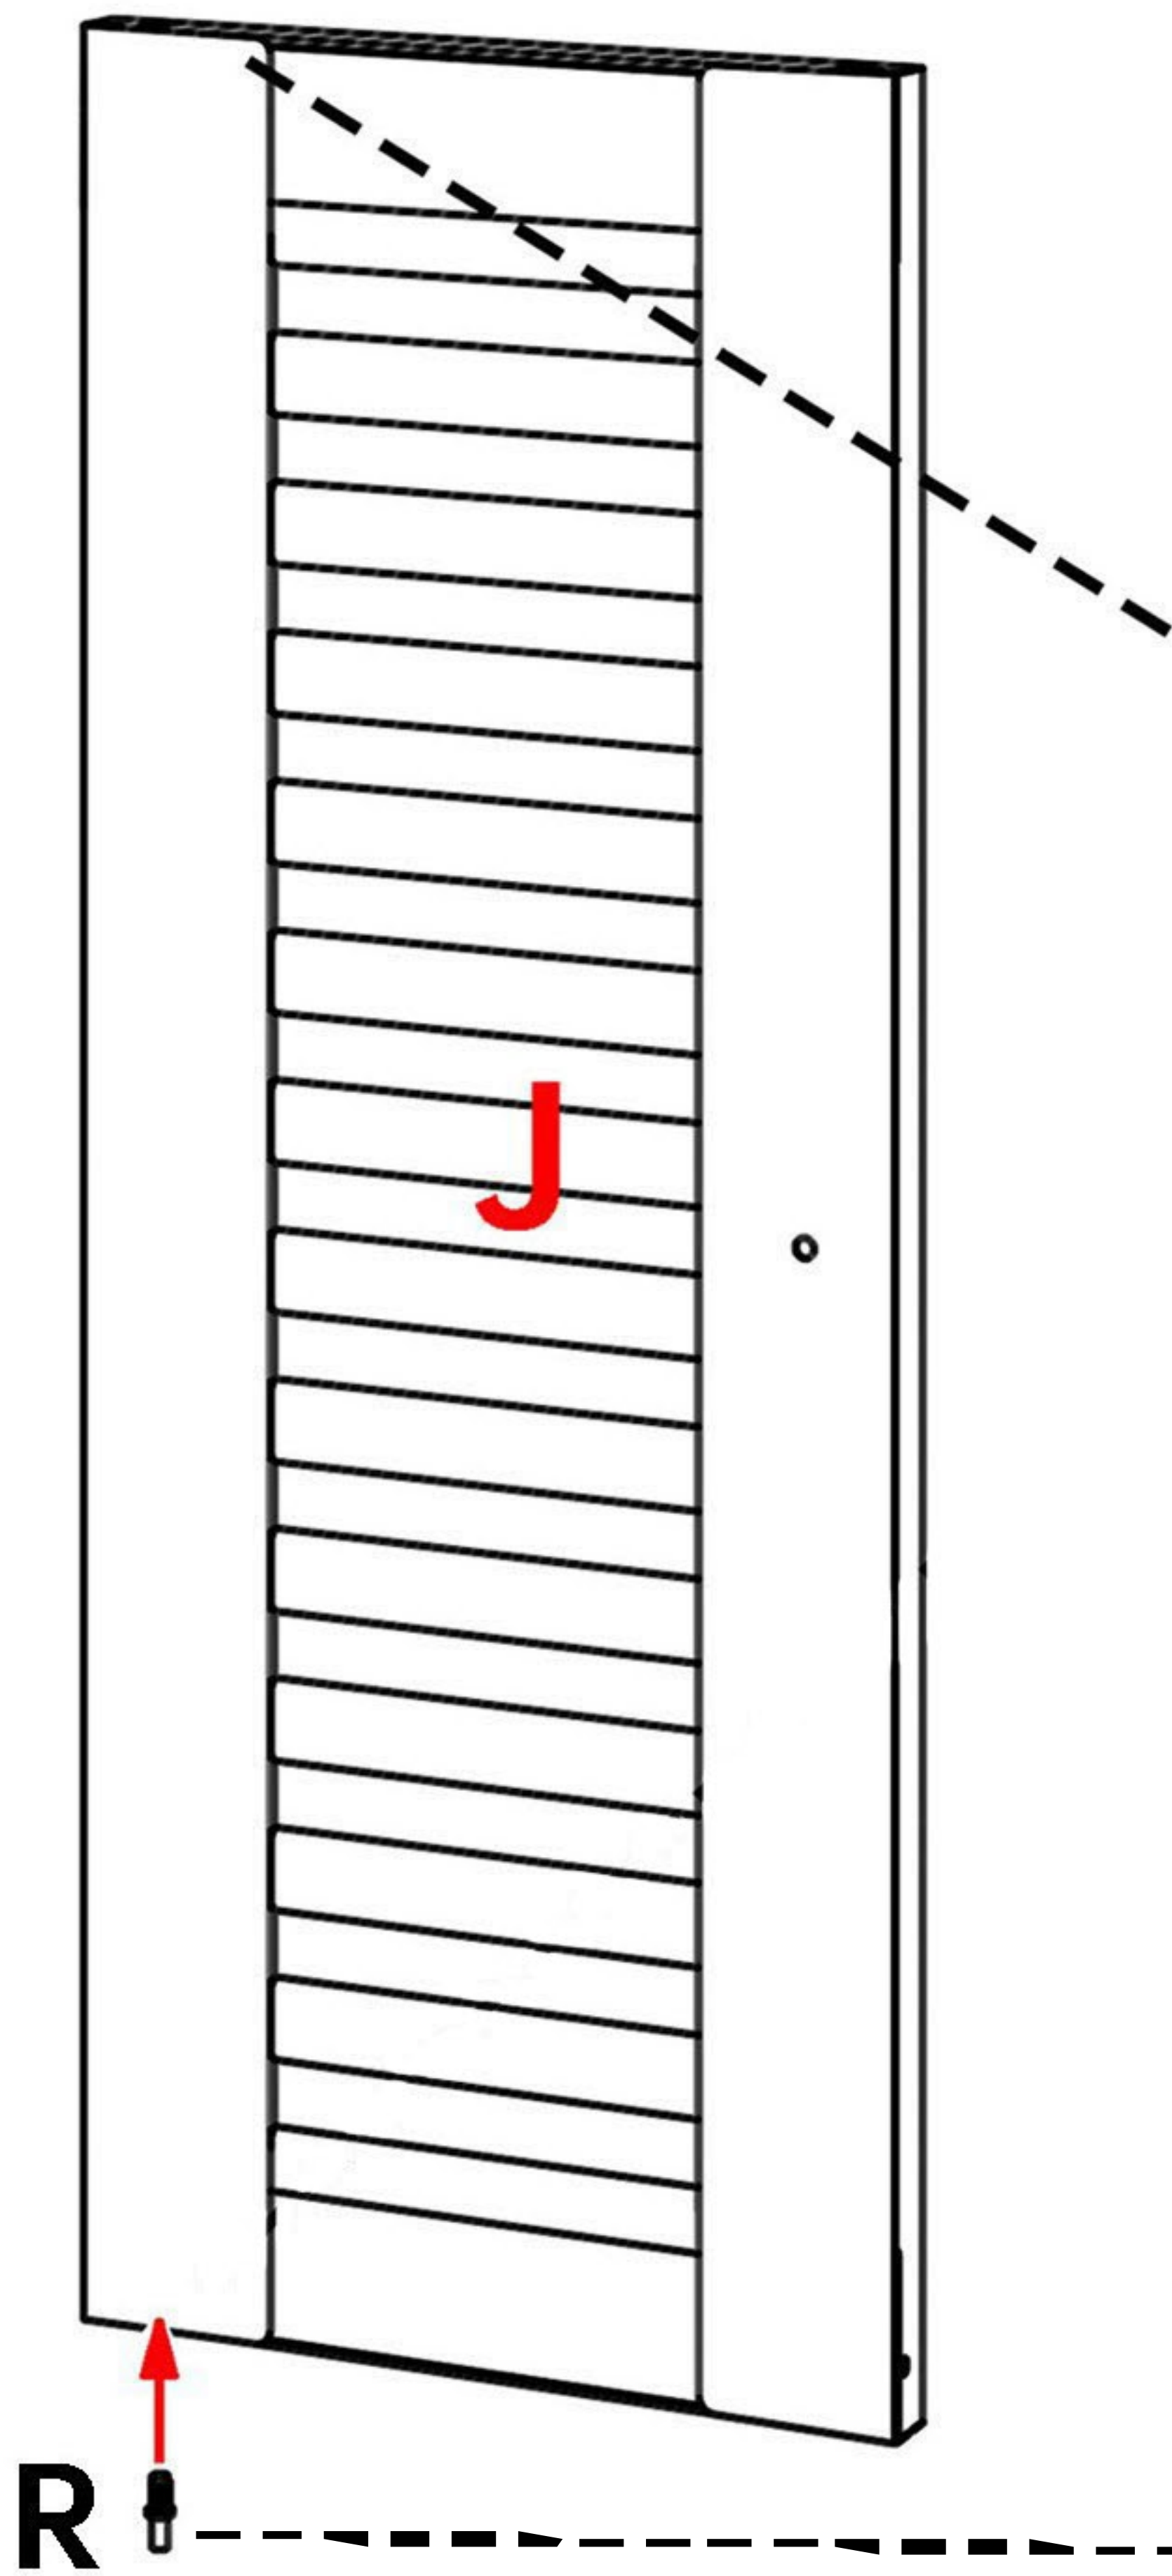



Tips: There are two holes at the top and the bottom of the doors, the spring shafts and door pivots should be inserted into the smaller one.

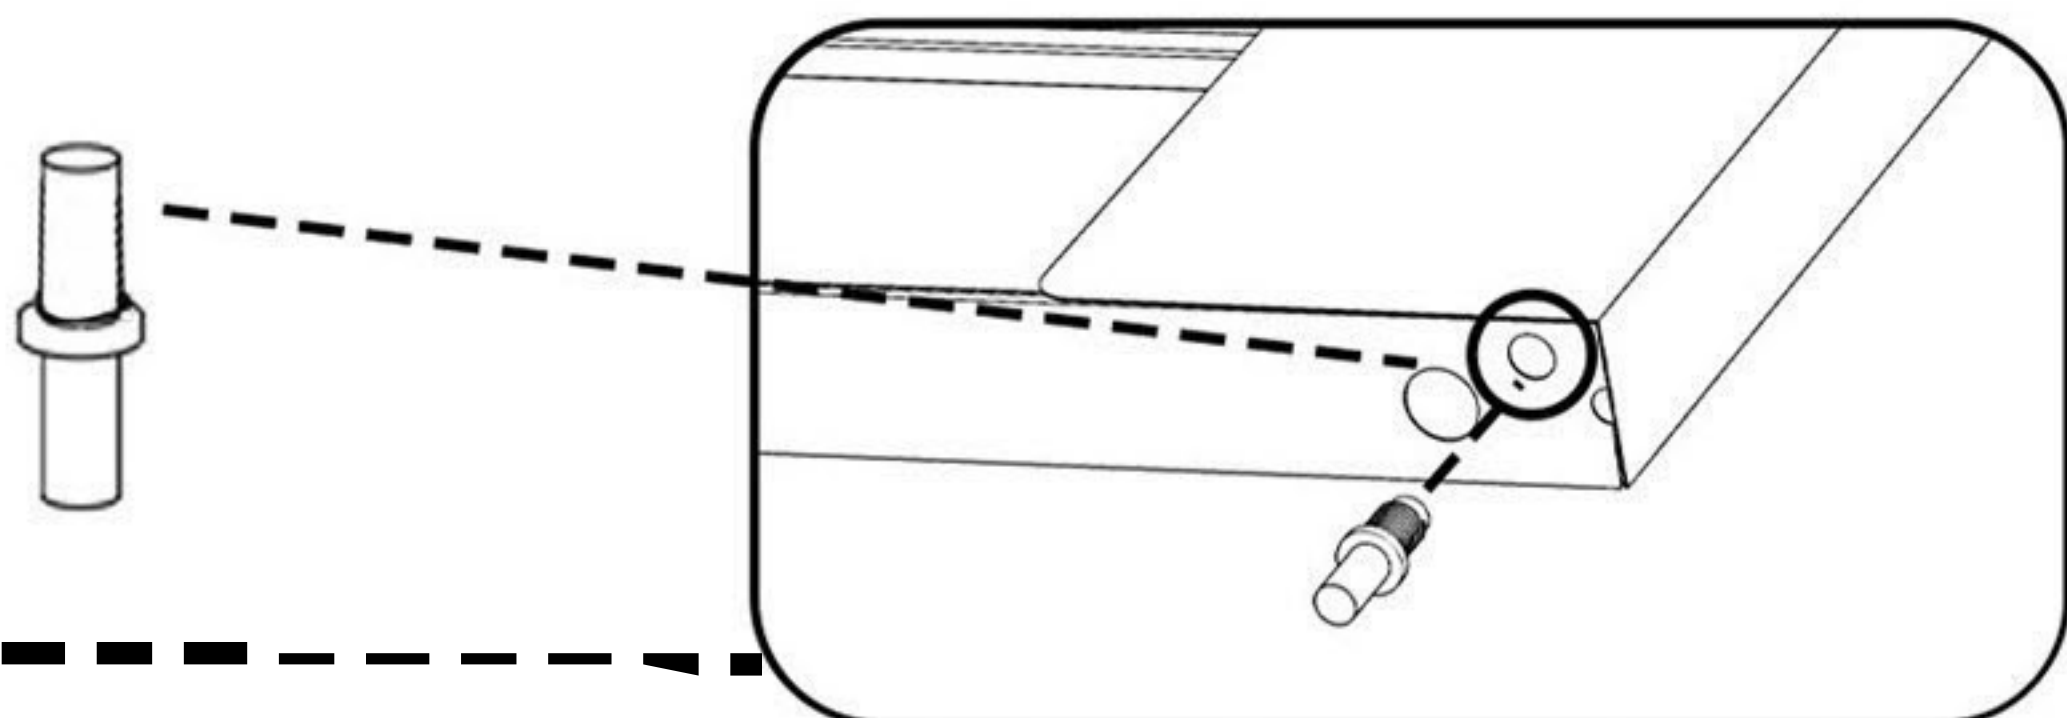

Step 11


Install 2 round handles P on the doors with 2 screws N

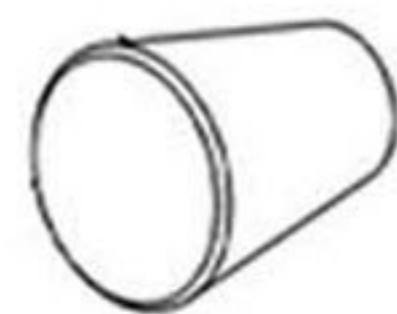
N		2
S		2

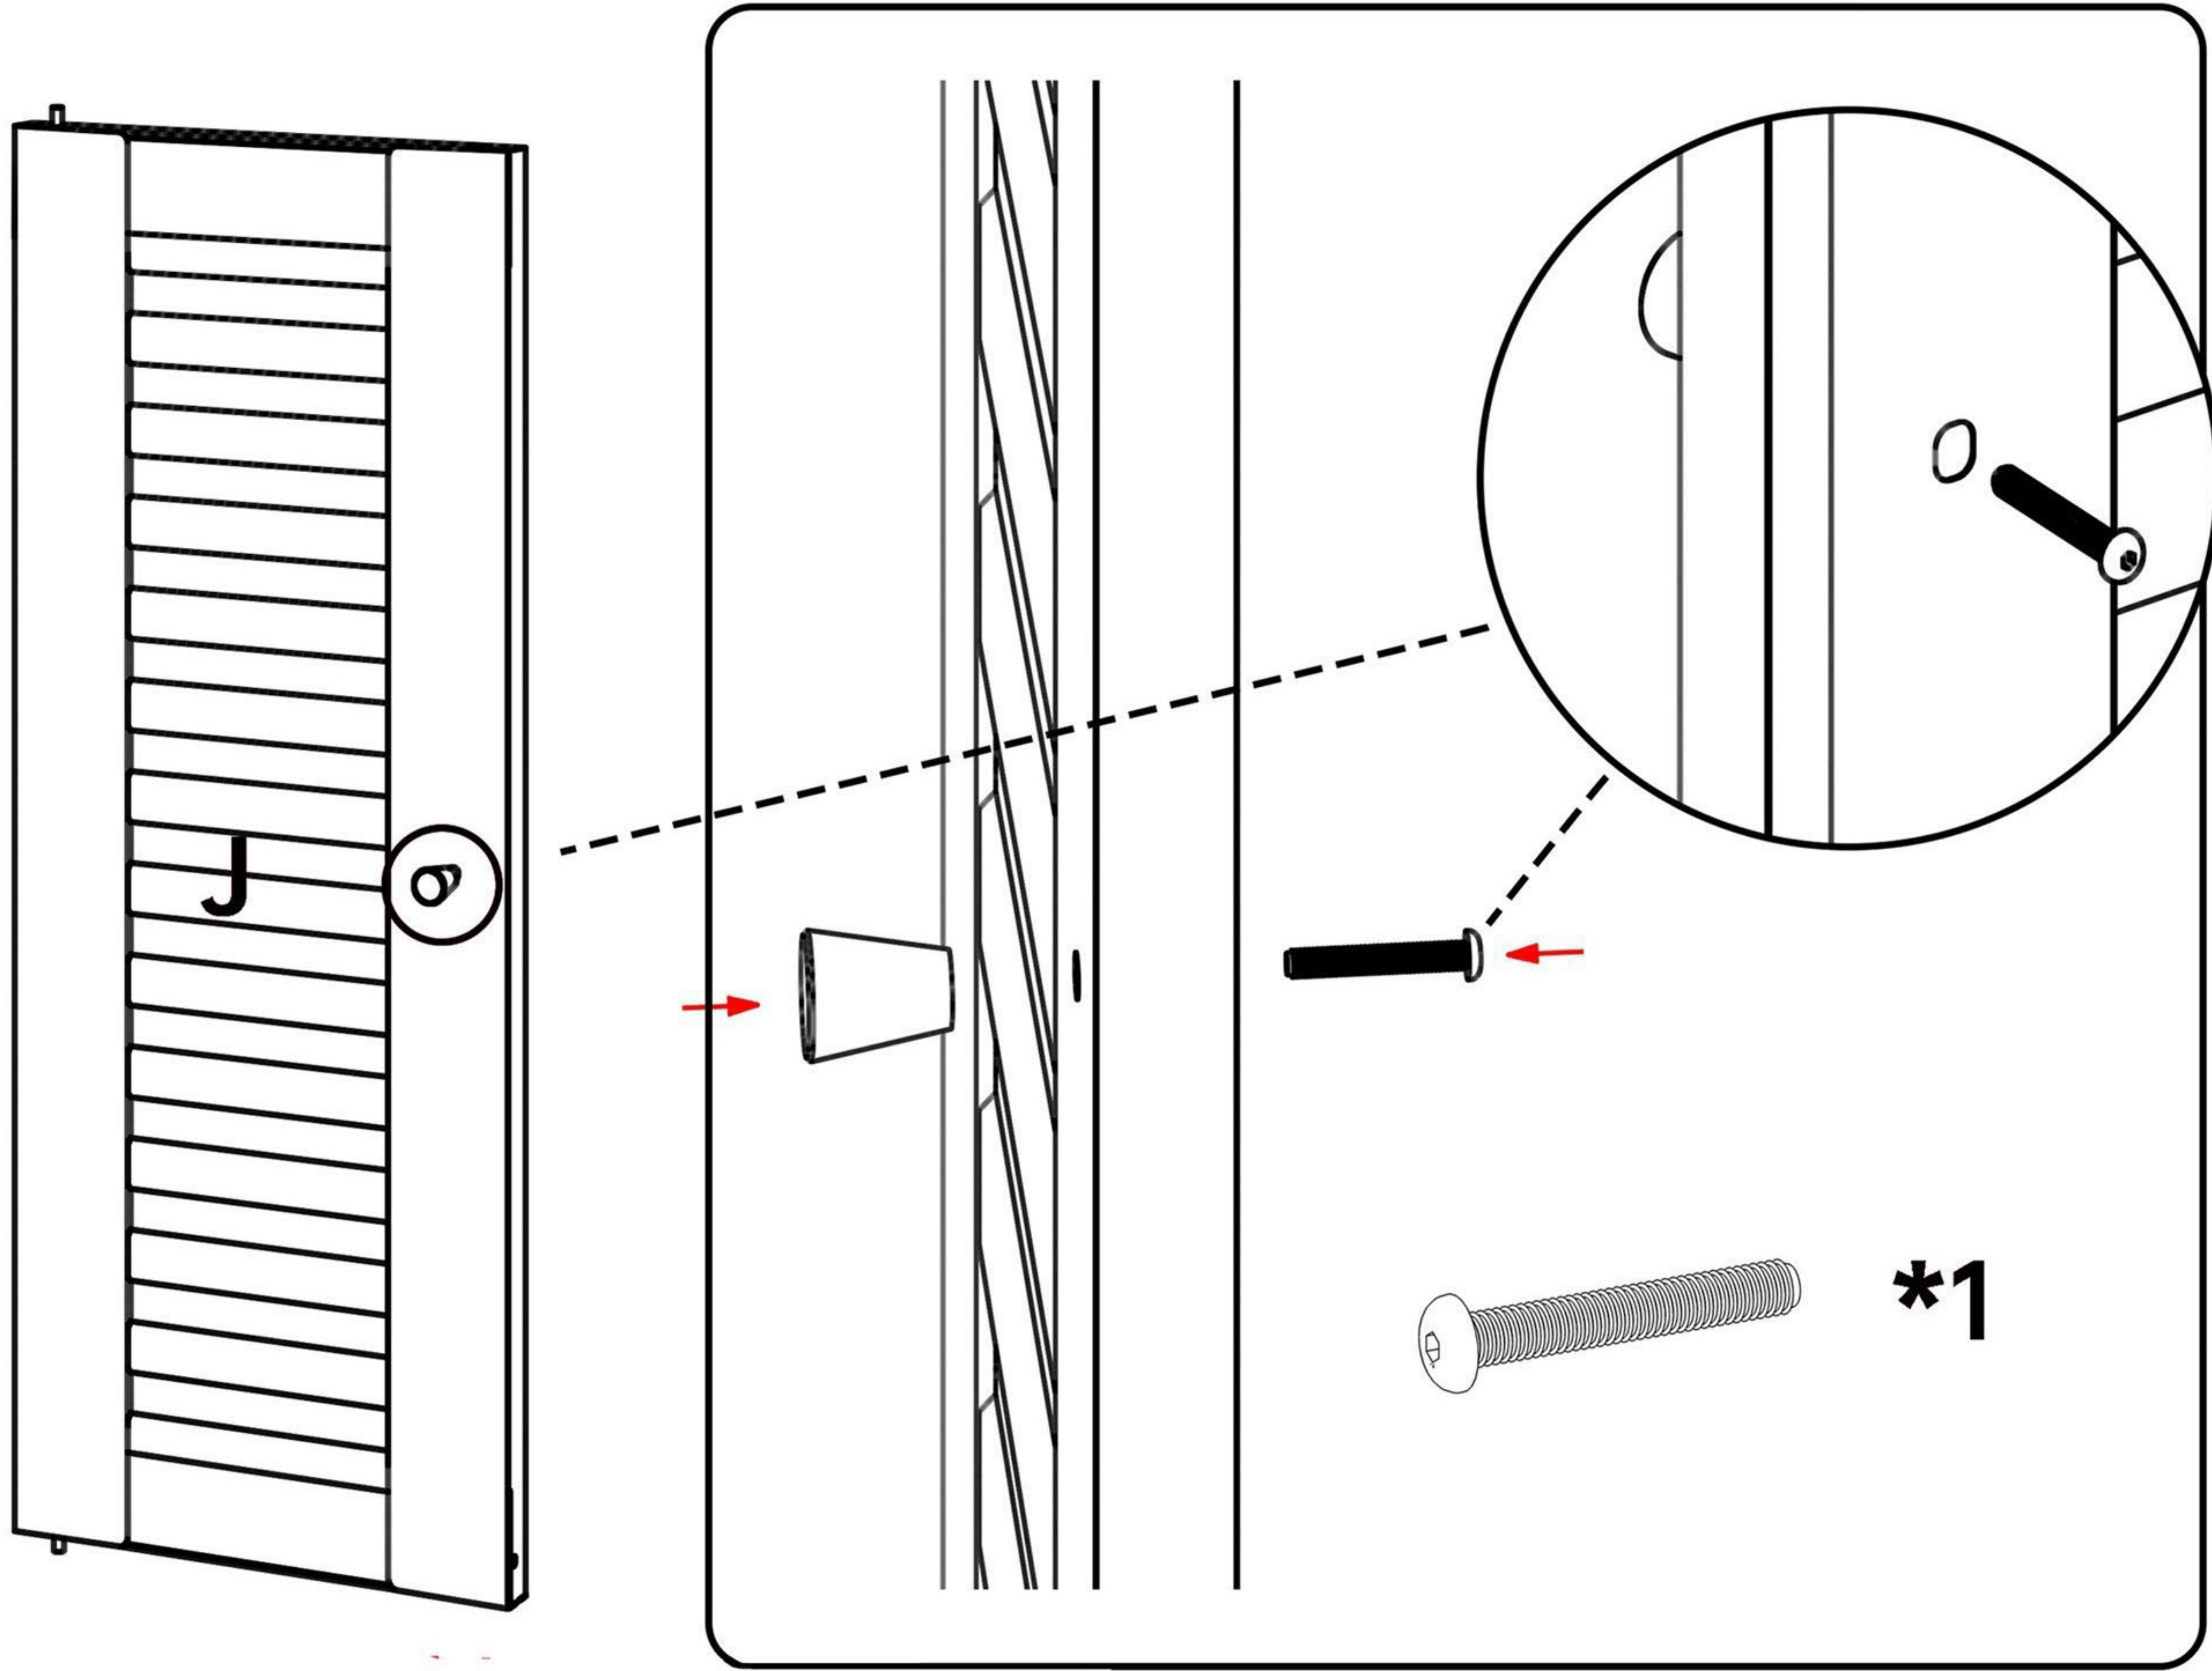

Step 12



Install 4 magnets T on the doors as shown

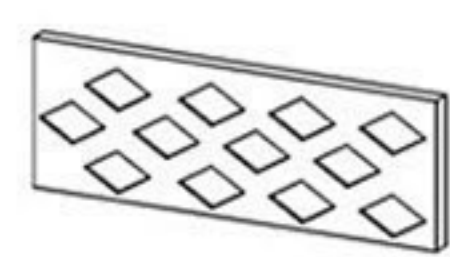T		4
---	---	---

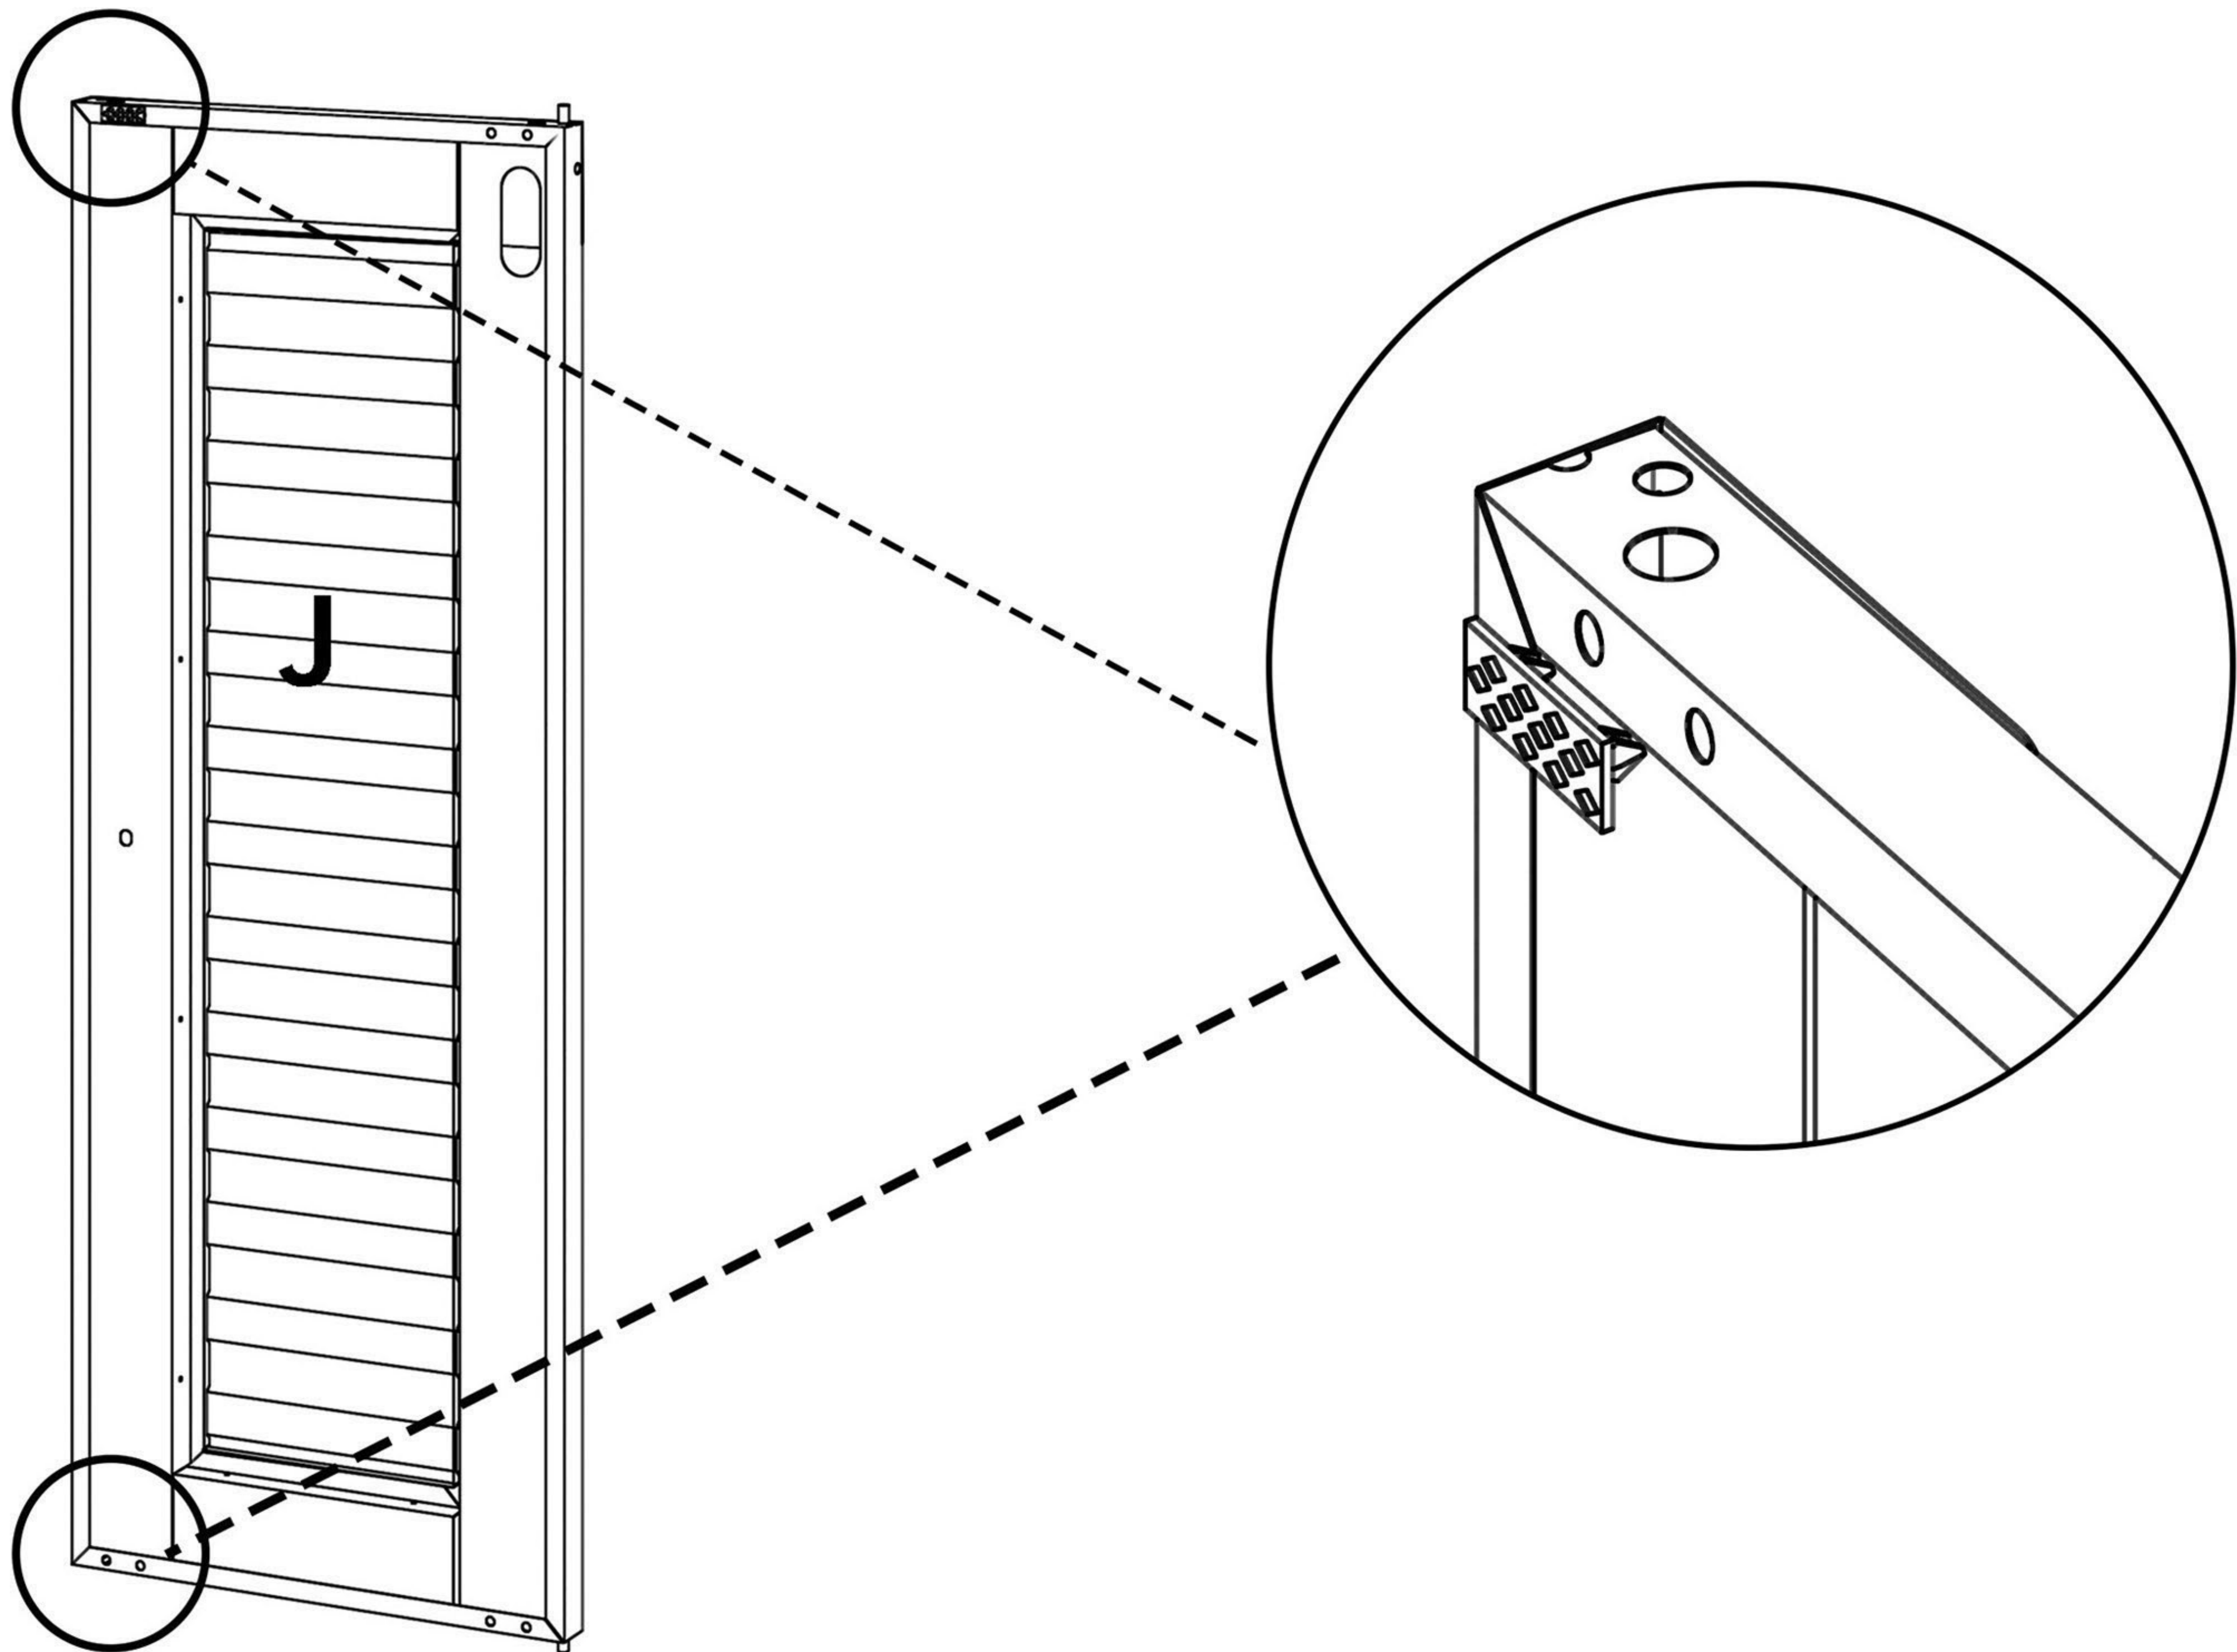


Step 13

Insert the door pivots R into the holes of the kick plate and adjust the spring shafts Q on the top to install the doors
Install 2 stop pads P

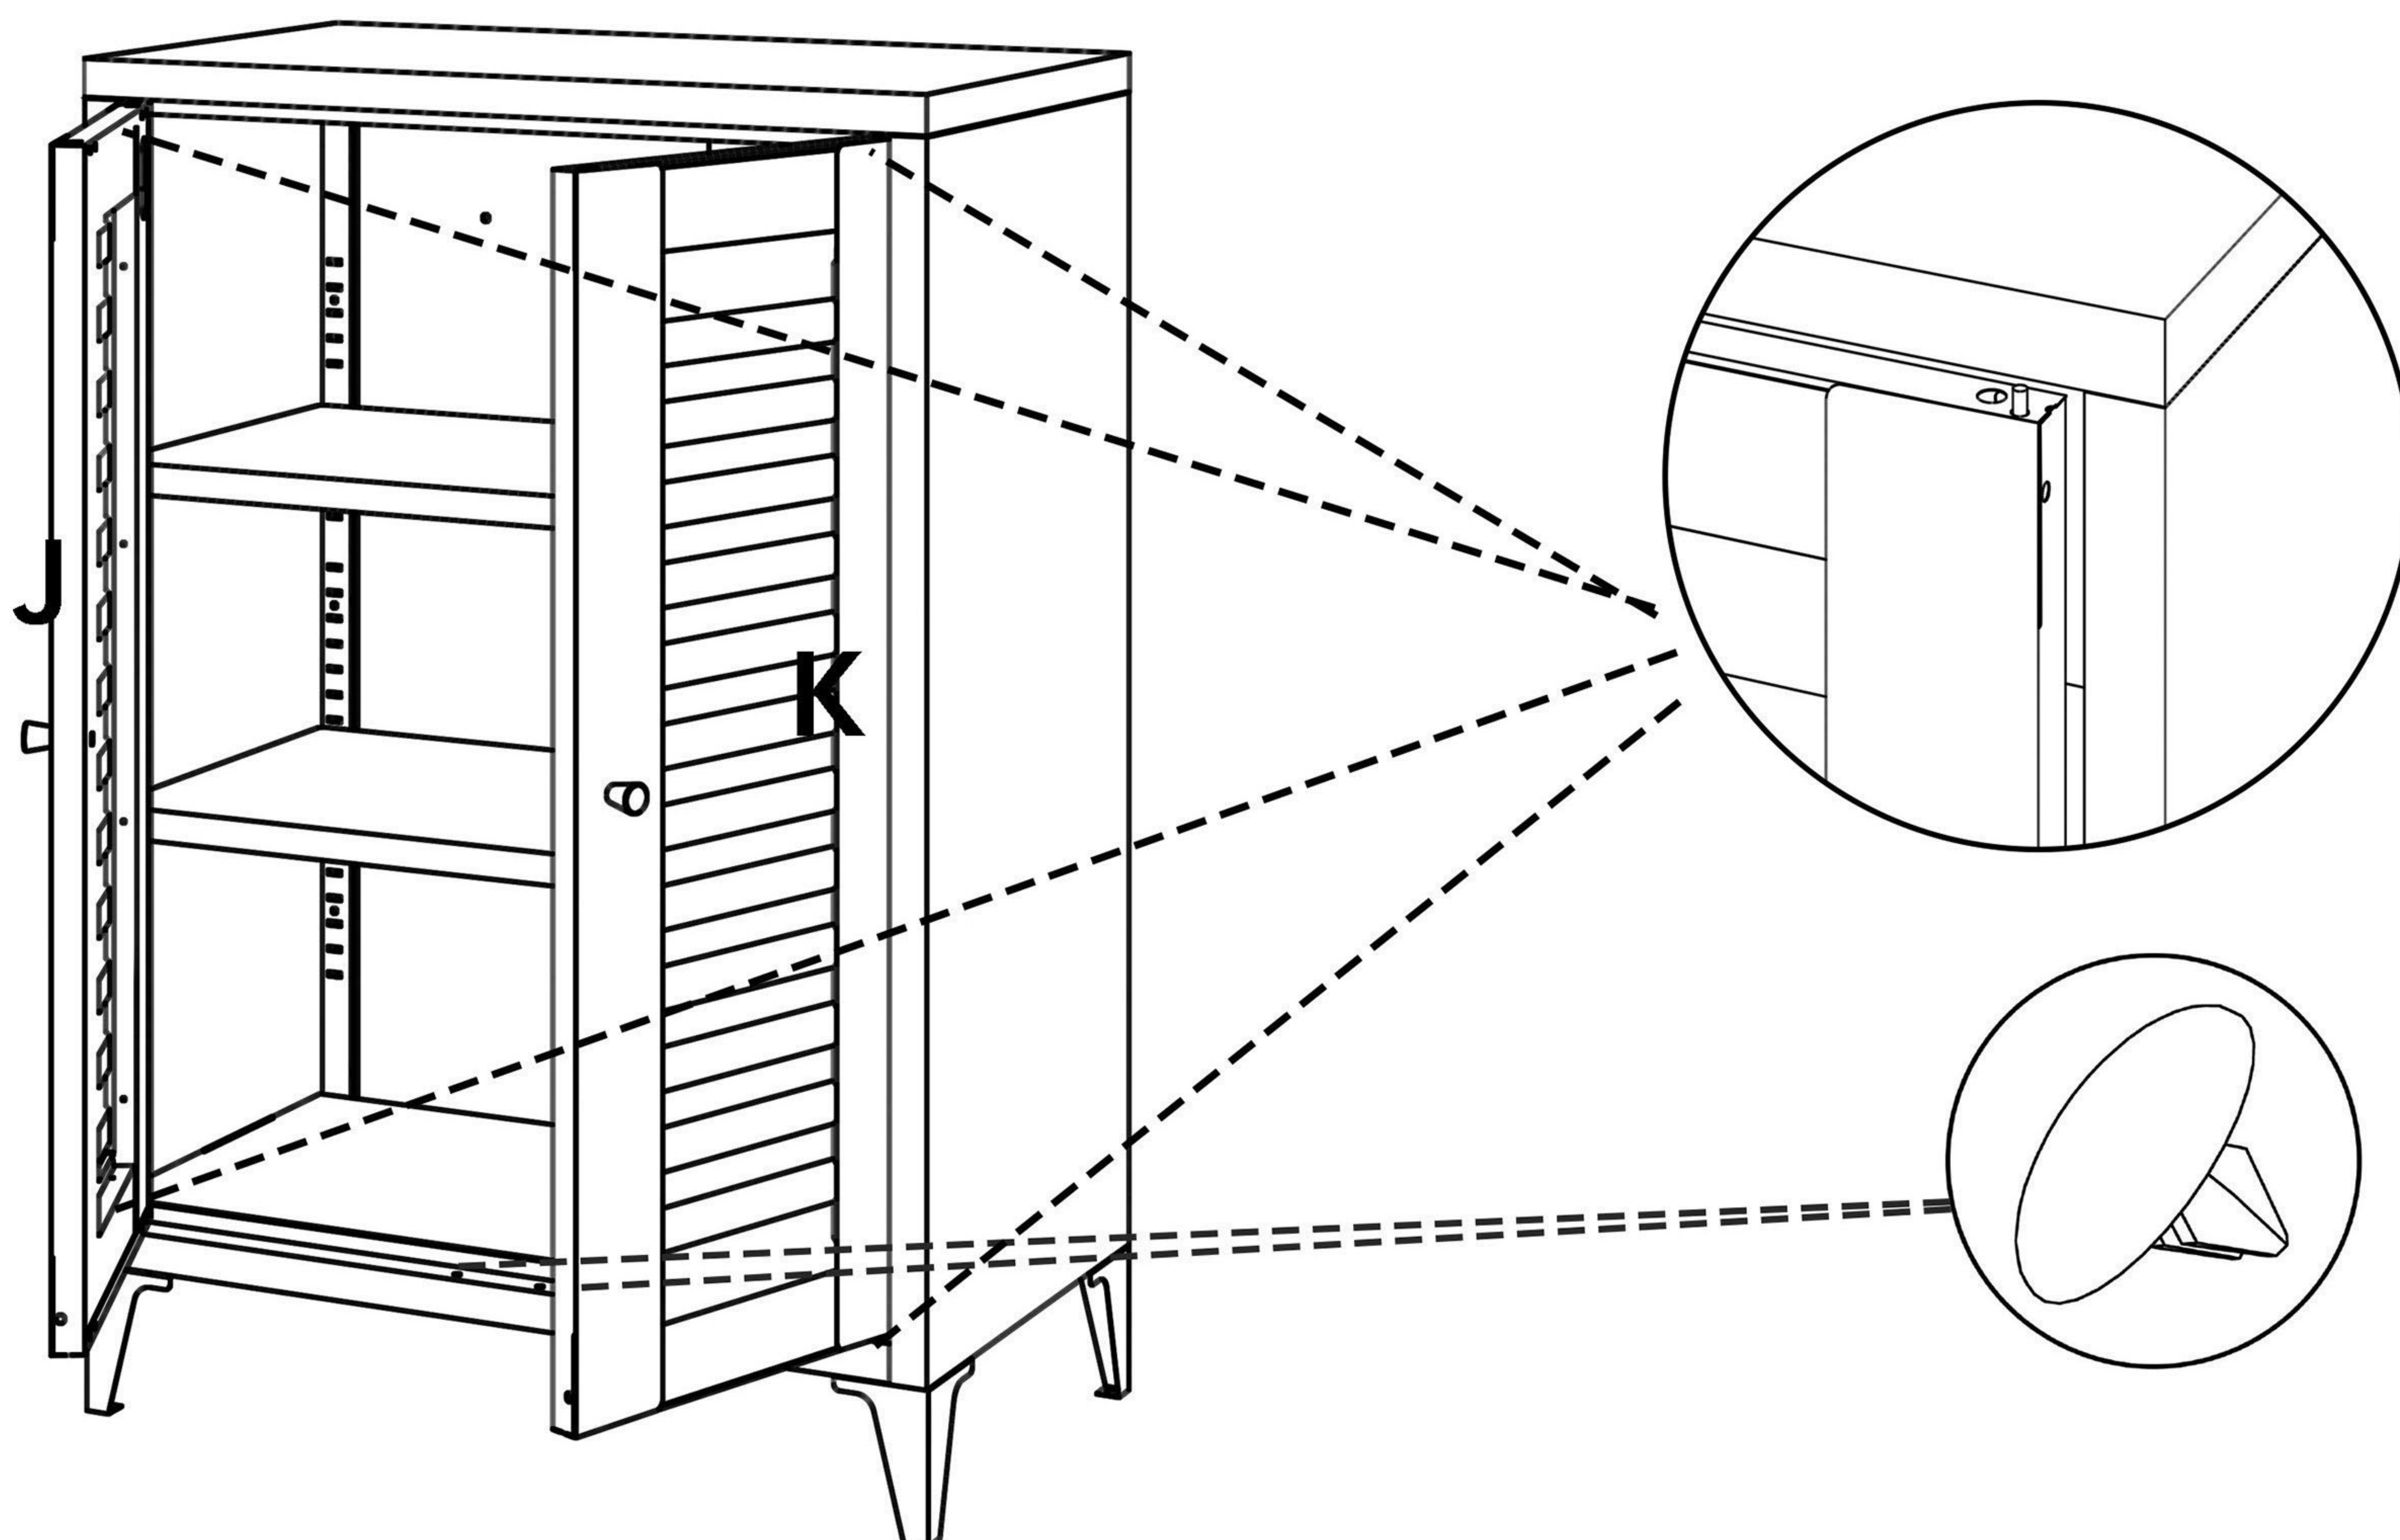
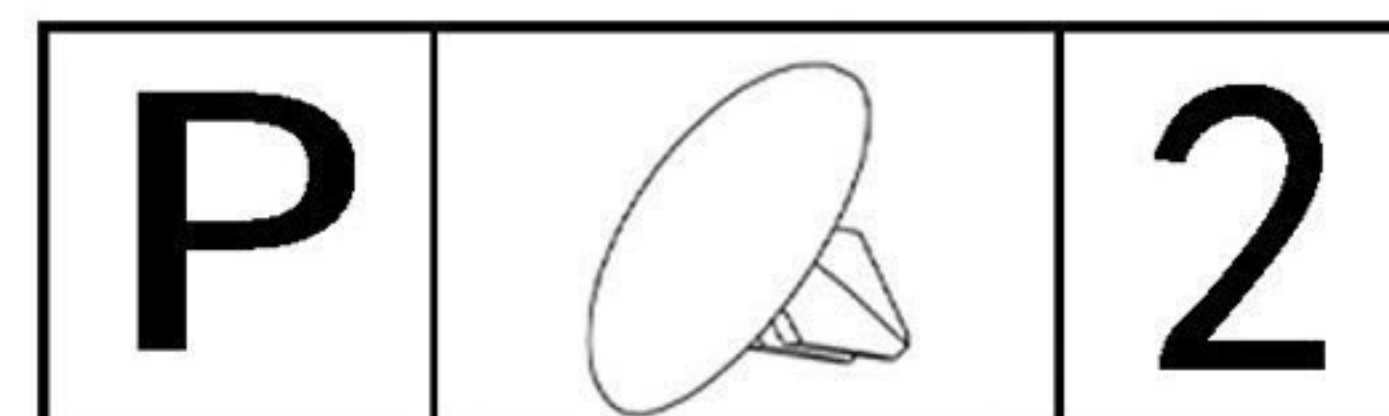


Step 14

Fix the cabinet on the wall with 2 expansion screws V to prevent tipping

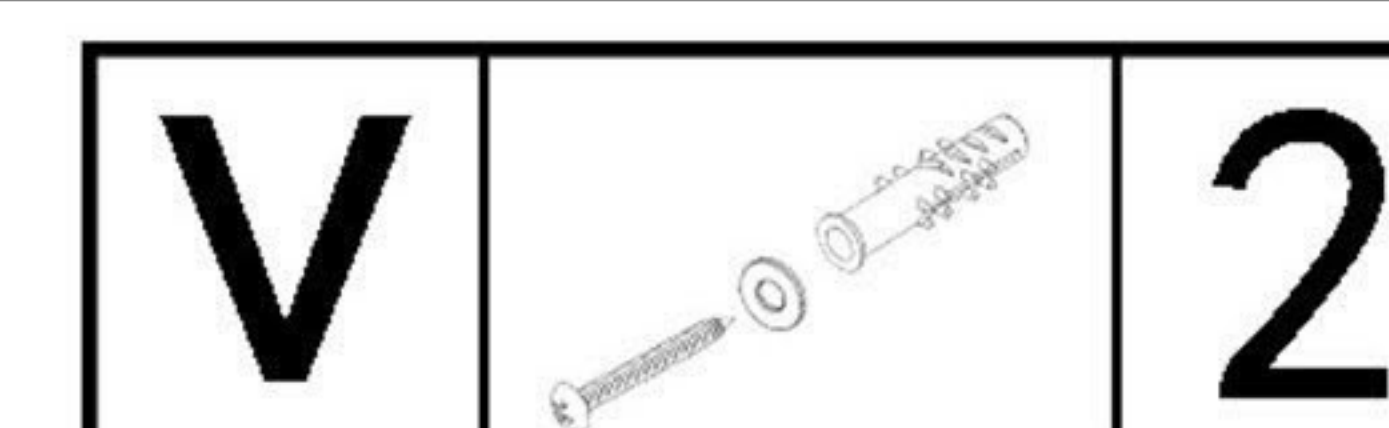

WALL

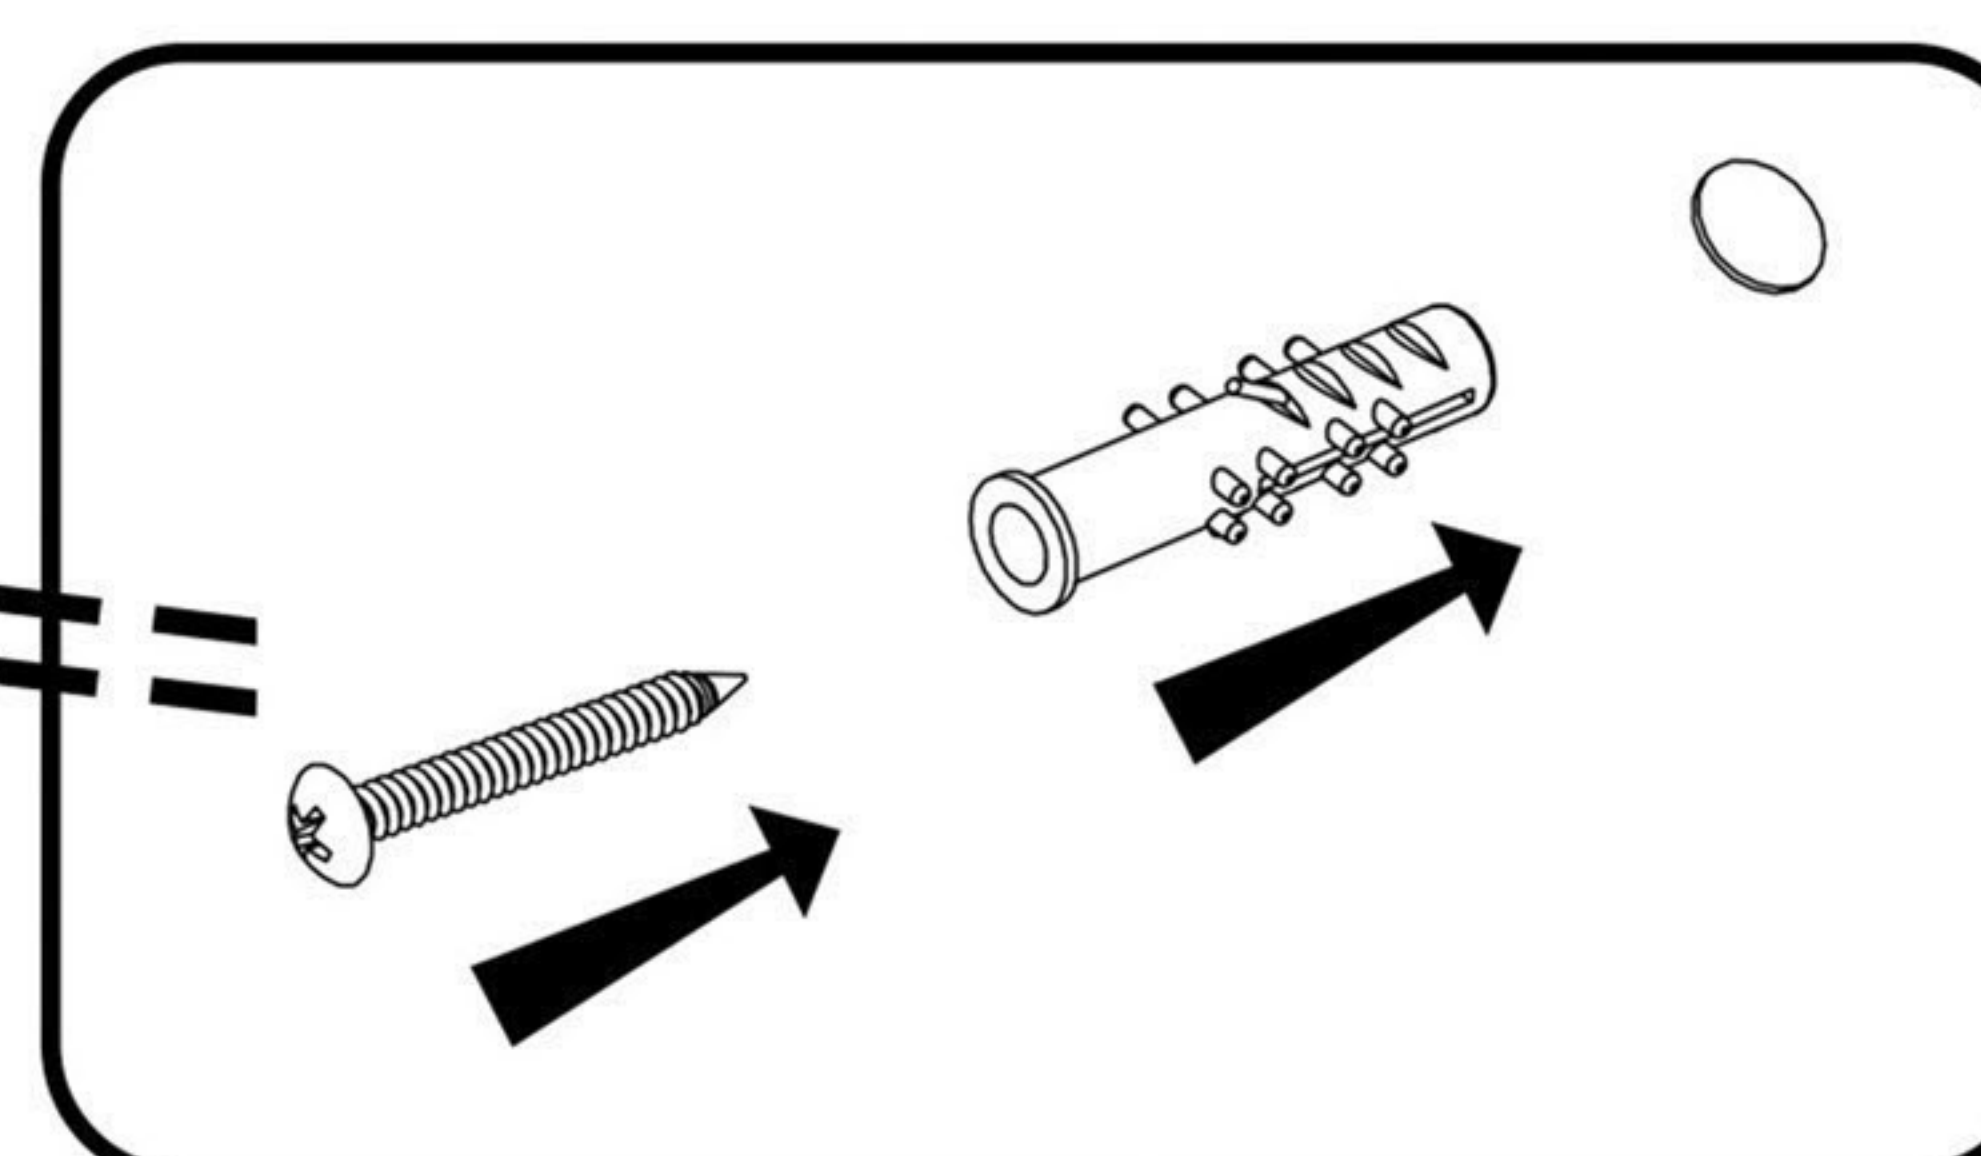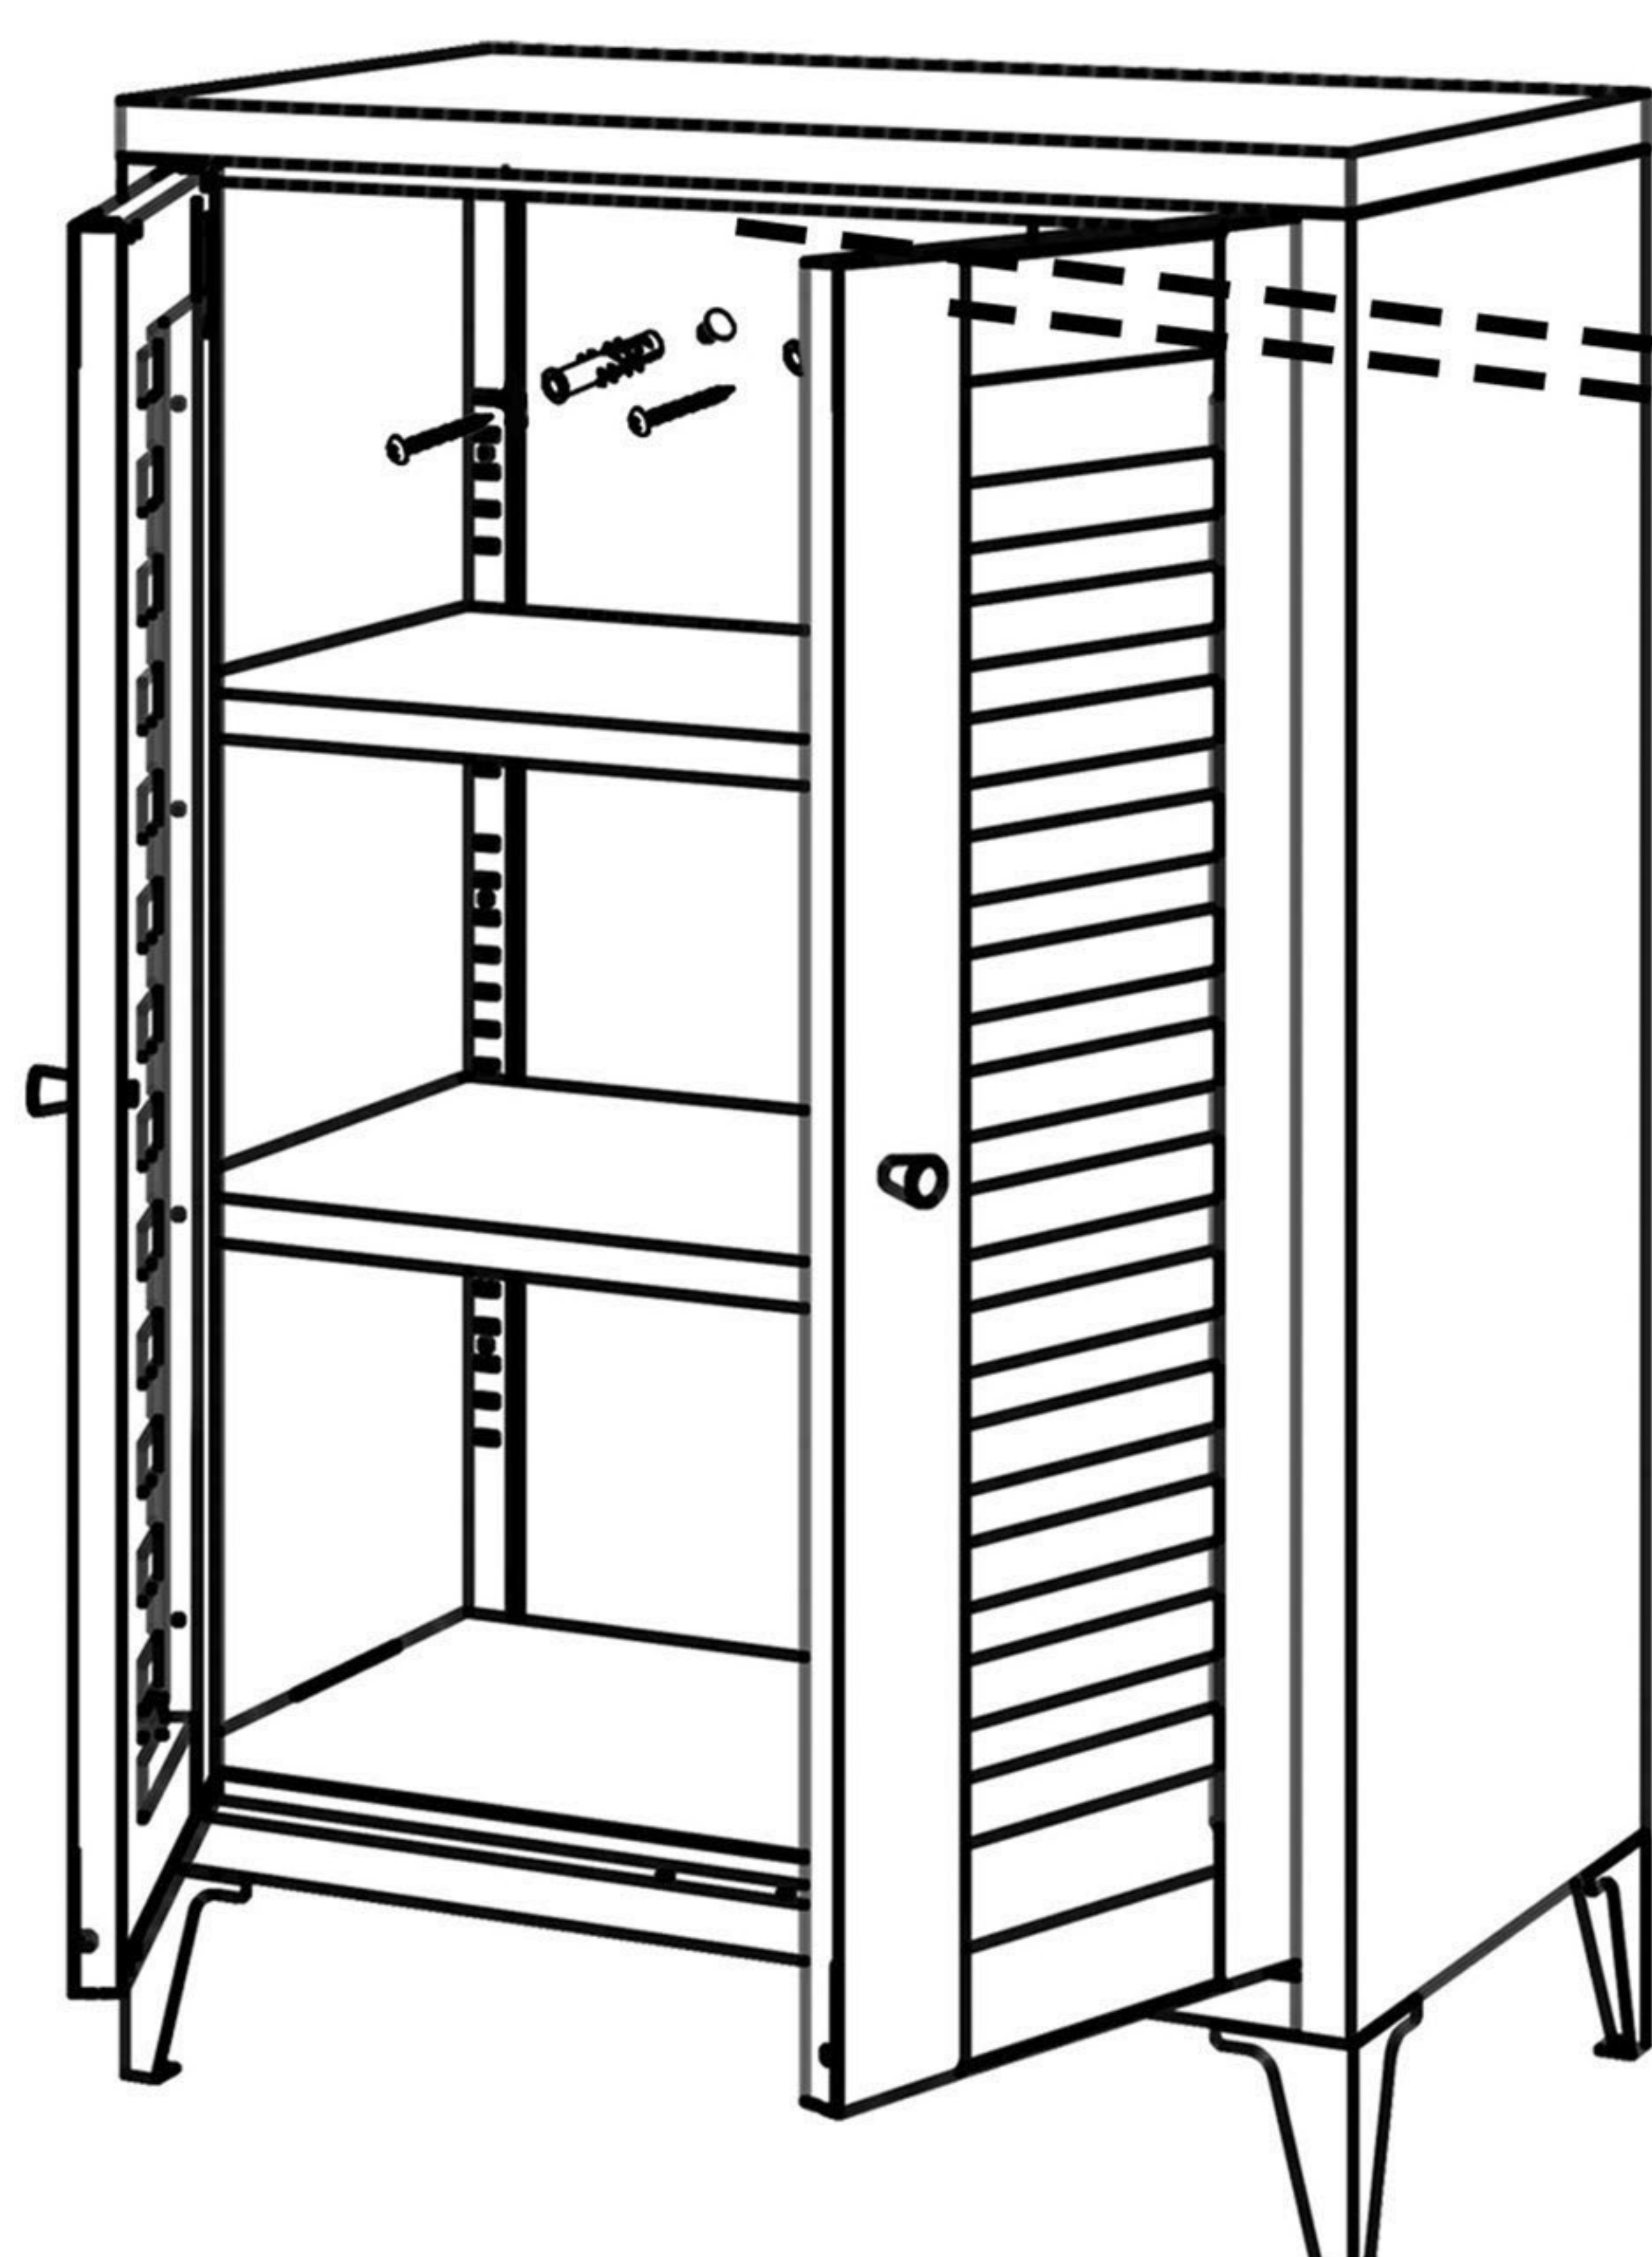

DANGER



Always secure this furniture with an anchor device.

Unsecured furniture can cause serious injury or death to children.

Never allow children to stand, climb or hang on drawers, doors or shelves.

Never open more than one drawer or door at a time.

Place the heavy items on the lower position.

Never place a television on this furniture.

This is a permanent label. Do not remove!