



NACHO CHIP WARMING STATION

Keeps Nachos Warm and Fresh!

- DURABLE STAINLESS STEEL CONSTRUCTION
- HEAVY DUTY PLATE GLASS
- NON-MAR COUNTER FEET
- LARGE EASY ACCESS DOOR
- EXCLUSIVE MAIDS TRAY



- EASY SETUP & OPERATION
- 40 WATT MINI FLOOD LAMP
- DIRECT PRINT GRAPHICS
- HEAVY DUTY 5' 6" CORD
- HOLDS 5 Lb. OF CHIPS



INSTRUCTION MANUAL

Your new Nacho Warming Station will enhance your counter top drawing in hungry nacho lovers. The stainless steel, thick plate glass and heavy duty construction will give you years of maintenance free service. Please read and understand all instructions and safety precautions before use. Do not allow others to use this equipment without reading and understanding the instructions and safety precautions.



Safety Precautions



It is important for your safety that you **read all instructions** before using this appliance. Always exercise basic safety precautions, including the following:

1. Use this appliance only for its intended purpose as described in this operation manual.
2. The Nacho Warming Station must be properly installed before using it. Follow the installation and precautions carefully.
3. **Only** connect to a electrical outlet with the correct electrical supply and proper grounding to reduce the risk of shock and fire. Do not cut or remove the grounding pin. If you do not have a three-prong electric receptacle outlet available, have a certified electrician install a proper outlet. **DO NOT** use a wall receptacle that is not properly grounded.
4. **DO NOT** abuse cord by pulling it from the wall. Always grasp the plug firmly and pull straight out from the outlet. Immediately replace worn power cords, loose plugs and power outlets. If the supply cord is damaged, contact the manufacturer or its service agent or a qualified repair service .
5. **DO NOT** cover the electrical cord. Keep cord away from traffic areas. **DO NOT** attempt to operate this unit with a damaged cord or plug. **DO NOT** use extension cords or adapters to connect the unit to an electrical power source.
6. **Unplug** your appliance before cleaning or making any repairs. **DO NOT** immerse in water.
7. This appliance should not be enclosed into a cabinet. It is designed for freestanding installation only to allow proper ventilation.
9. **DO NOT** operate your appliance near explosive fumes.
10. Temperature is precision calibrated at factory, **DO NOT** change, modify or tamper with this equipment.
11. **DO NOT** operate this appliance with missing or broken parts. Contact manufacturer for OEM replacement parts.
12. This appliance is intended for indoor use only. **DO NOT** use this piece of equipment near open water, swimming pools, hot tubs or wet environments.
13. **DO NOT** allow children to play in or near this appliance. Close supervision is necessary when the appliance is used near children.
15. This appliance is not intended for use by minors or un-informed persons without supervision.



Shipper Inspection



Upon receiving this piece of equipment immediately inspect outer shipping container for damage. Report any damage to outer box to carrier. Unpack the Nacho Warmer and inspect for damage. Report damage to carrier and manufacturer. Check box to insure all pieces are included. Read the warranty information included in this booklet for RMA instructions.



Proper Location



The Nacho Warmer is a freestanding design for use on a stable counter or table top. It should not be placed in a built-in or recessed area. It should not be place on cloth or leather material. To ensure that your Nacho Warmer works to the maximum efficiency it was designed for, keep it in a location where there is proper air circulation and proper electrical outlets. Choose a location where the Nacho Warmer will be at least 10" away from other equipment and will not be exposed to direct sunlight. The Nacho Warmer is designed for indoor use only. It should not be operated in a damp or wet environment. It should not be placed near sinks, swimming pools, showers or hot tubs/jacuzzi.

Nacho Warmer unit dimensions: 15"W x 13"D x 23"H

It is Recommended that you allow 12" above Nacho Warmer for easy loading. Allow a minimum of 5" on each side of unit.



Electrical Requirements



Model No.:5900 83-DT5596 GNP Nacho Warmer

Voltage: AC 120V-60Hz Wattage 150

Use only NEC section 210-52 duplex receptacle rated at a minimum of 15 amps, properly grounded. Make sure this appliance does not exceed circuit load recommendation when paired with other appliances. Always avoid using an extension cord because of potential safety hazards in certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug with No. 14 AWG minimum size wire and rated not less than 15A / 125V. Never cover cord with any material or carpet, rugs, cloth or paper. Keep cord out of traffic area. keep children away from electrical appliances and outlets. Do not allow pets or animals to chew on cords. If cord is damaged in any way discontinue use immediately. Unplug this unit before cleaning or repair. Only authorized service personnel should open panels or replace parts. Use only OEM replacement parts. For more information contact www.greatnorthernpopcorn.com



Operating Instructions



The Nacho Warming Station is a top loading appliance. Remove the easy to use plastic lid for filling. We suggest you keep the warming unit at least 2/3 full for the most pleasing look. Refrain from pouring chips from bag or box to avoid chip breakage and pouring in crushed chips and crumbs caused by manufacturing and shipping. Filling is best accomplished by hand. We recommend you wash your hands with soap and water and use rubber food safe gloves to handle chips. Gently transfer chips from bag or box to Nacho Warmer by cupping both hands and scooping up chips and setting them into the unit. At least once a day turn unit off and allow 15 minutes to cool, clean crumbs and broken chip from unit. Scrape crumbs across holes located on floor of unit. Remove and empty maids drawer. Be sure to replace drawer before resuming operation.

Plug in and turn unit on. Heating strips in the bottom panel will keep chips warm and ready to serve. The mini flood lamp located in upper corner provides a bright pleasing appetizing look to fresh nacho chips. The heat from the lamp adds to the warming of the chips and keeps the air dry to prolong freshness of chips.

Abide by local food handling regulations. Serve chips from back fold down door using the scoop provided with this unit. Keep door shut when not serving to keep chips warm and fresh. Do not allow children or un-informed person in or around this unit. Avoid touching bottom or floor of this unit while in operation. It may be hot.

Do not use appliance for anything other than the indicated usage.



Cleaning



Before cleaning this unit unplug from electrical outlet and allow unit to cool for at least 15 minutes. Do not use abrasive cleaning agents, steel wool or abrasive cleaning pads on stainless steel surface. Do not use Abrasive cleaning agents, steel wool or abrasive cleaning pads on printed graphics on door and on glass panels. Do not submerge unit in water or spray water into unit. Use only brush or plastic scraper to move crumbs and food debris from unit floor.

Clean unit using mild food safe dish soap. Rinse with a water dampened sponge. Clean glass with a food safe glass cleaner.

Dry with soft towel. Allow Nacho Warming Station to thoroughly dry before loading chips. Plug in and switch to on.

CUSTOMER SERVICE - WARRANTY AND RETURN POLICY

Customer service and product support are available online at www.greatnorthernpopcorn.com. The Nacho Warming Station is warranted against defects in material and workmanship for a period of one year. Our return policy allows 30 days from the date of delivery to return products, provided it is new, unused and in the original packaging as received. We highly recommend that the buyer thoroughly inspect the purchased product before using it. We charge a 20% restocking charge on all returned items. Return shipping is the responsibility of the buyer. We cannot accept returns for any reason after 30 days from the date of delivery. A credit will be issued after the item is inspected and accepted. All shipping damages must be claimed with the designated shipper. Check the shipping carton damage before signing the

bill of lading. If an item is opened and deemed to be defective within 30 days from the date of delivery, please contact us at www.greatnorthernpopcorn.com for return instructions. A Nacho Warming Station RMA is required when returning defective merchandise. When returning your order, please include a copy of your order number with date purchased, your Nacho Warming Station RMA and the reason for the return. Warranty shall not apply to: products which are used for a purpose other than which they were designed for or which have been altered in any way that would be detrimental to the performance or life of the product. Misapplication, misuse, altering, modification or negligence will revoke the warranty.



www.greatnorthernpopcorn.com